

AQ-101(D)LV

Arc flash protection unit



Table of contents

1 Document information	5
2 Abbreviations	6
3 General	7
3.1 Unit features	7
3.2 Dimensions and installation	9
3.3 Simplified block diagram	11
3.4 Wiring	12
4 Operation and configuration	13
4.1 LED indicator functions	13
4.2 LED operations guide	13
4.3 Push button (SET)	14
4.3.1 System setup (auto-configuration)	14
4.3.2 Reset	15
4.3.3 Input connection check	15
4.4 DIP switch settings	15
4.4.1 Scheme selection	16
4.4.2 Available logic schemes	17
4.5 Non-volatile memory	19
5 Arc sensors	20
5.1 Arc light point sensor AQ-01	20
5.2 Arc light and pressure point sensor AQ-02	21
5.3 Arc light fiber optic loop sensor AQ-06	21
5.4 Arc light fiber optic loop sensor AQ-07	21
5.5 Arc light fiber optic loop sensor AQ-08	22
5.6 Sensor—unit dependencies	22
5.7 Connecting sensors	22
6 System self-supervision	24
7 Connections	25
7.1 Outputs	26
7.1.1 Trip relays	26
7.1.2 Binary outputs	27
7.1.3 System failure relay	27
7.2 Inputs	27
7.2.1 Arc sensor channels	27
7.2.2 Binary inputs	27
7.3 Auxiliary voltage	27
8 Testing	28
8.1 Testing the light-only mode	28
8.2 Testing the light and current mode	28
8.3 Testing the CBFP function	29
8.4 Testing the unit operation time	29
8.5 Test plan example	29
9 Troubleshooting	31
10 Technical data	32
10.1 Operating times	32
10.2 Auxiliary voltage	32
10.3 Binary inputs	32
10.4 Trip relays	32
10.5 Binary output(s)	33
10.6 System failure relay	33
10.7 Sensors	33
10.8 Disturbance tests	34
10.9 Voltage tests	35
10.10 Mechanical tests	35
10.11 Environmental conditions	35

10.12 Casing.....	35
11 Ordering information	36
12 Contact and reference information.....	38

Disclaimer

Please read these instructions carefully before using the equipment or taking any other actions with respect to the equipment. Only trained and qualified persons are allowed to perform installation, operation, service or maintenance of the equipment. Such qualified persons have the responsibility to take all appropriate measures, including e.g. use of authentication, encryption, anti-virus programs, safe switching programs etc. necessary to ensure a safe and secure environment and usability of the equipment. The warranty granted to the equipment remains in force only provided that the instructions contained in this document have been strictly complied with.

Nothing contained in this document shall increase the liability or extend the warranty obligations of the manufacturer Arcteq Relays Ltd. The manufacturer expressly disclaims any and all liability for any damages and/or losses caused due to a failure to comply with the instructions contained herein or caused by persons who do not fulfil the aforementioned requirements. Furthermore, the manufacturer shall not be liable for possible errors in this document.

Please note that you must always comply with applicable local legislation and regulations. The manufacturer gives no warranties that the content of this document is in all respects in line with local laws and regulations and assumes no liability for such possible deviations.

You are advised to notify the manufacturer in case you become aware of any errors in this document or of defects in the equipment.

The manufacturer reserves the right to update or amend this document at any time.

Copyright

Copyright © Arcteq Relays Ltd. 2021. All rights reserved.

1 Document information

Table. 1 - 1. History of Revision 1.

Revision	1.00
Date	September 2020
Changes	- The first revision of the manual.
Revision	1.01
Date	October 2021
Changes	<ul style="list-style-type: none"> - The contents of Chapter 1 rearranged - Dimension values updated, new dimensions images, new installation image - Push button image added - Note about the small difference between the 101 and the 101D DIP switches - Fiber sensor descriptions updated (images removed, some text removed) - New connections images - Light and current mode testing text updated (typos, small mistakes corrected) - New test plan image added - Technical data: visual update to all tables, tables rearranged, two new tables added, content fixes ("Sensors": point sensor mechanical protection classes updated; "Disturbance tests": title and unit typos fixed; "Casing": dimension values updated, packaging weight removed)

2 Abbreviations

BI – binary input

BO – binary output

CB – circuit breaker

CBFP – circuit breaker failure protection

CT – current transformer

EPROM – erasable, programmable read-only memory

HSO – high-speed output

LED – light emitting diode

LV – low-voltage

MV – medium-voltage

NC – normally closed

NO – normally open

PCB – printed circuit board

QD – quenching device

RF – radio frequency

Rx – receiver

SAS – standard arc scheme

SF – system failure

Tx – transceiver

μP - microprocessor

3 General

The AQ-101LV (AQ-101DLV) point sensor device is a sophisticated microprocessor-based arc flash protection unit that includes complete self-supervision. The device is designed to minimize the damage caused by an arcing fault (arc flash) by tripping the circuit breaker which supplies current to the fault. The complete system self-supervision functionality of AQ-101LV (AQ-101DLV) provides the highest level of dependability as it continuously monitors all internal system functions as well as all external connections.

The AQ-101LV (AQ-101DLV) device is designed according to the latest protection relay standards and is therefore suitable for installations in rough environments. These include utilities and power plants (both traditional and renewable), various heavy industry applications (off-shore, marine, oil, gas, mining, steel, etc.) as well as commercial and institutional electrical systems. While AQ-101LV (AQ-101DLV) is suitable for MV use, it is designed for LV switchgears and for motor control center applications in both new and retrofitted installations.

3.1 Unit features

AQ-101LV is a multipurpose arc flash protection unit and can be applied to a variety of applications. It can be used on its own as a stand-alone unit, or it can be a part of a more complex arc protection system through a binary bus.

The following list presents the main features of the unit:

- 92...265 V AC/DC auxiliary power supply or 18...72 V DC auxiliary power supply (optional)
- four (4) arc point sensor channels
- one (1) fiber loop channel (optional)
- two (2) binary inputs with nominal operation voltage of 24 V DC
- three (3) normally open trip relay outputs
- one (1) normally open trip relay output or one (1) normally closed trip relay output (electronic lock-out)
- one (1) binary output (24 V DC)
- one (1) system failure output
- twelve (12) indication LEDs
- one (1) push button.

AQ-101LV comes in two variants. The AQ-101LV variant is door and panel-mounted, while the AQ-101DLV variant is mounted on a DIN rail.

Figure. 3.1 - 1. Arc protection unit AQ-101LV.


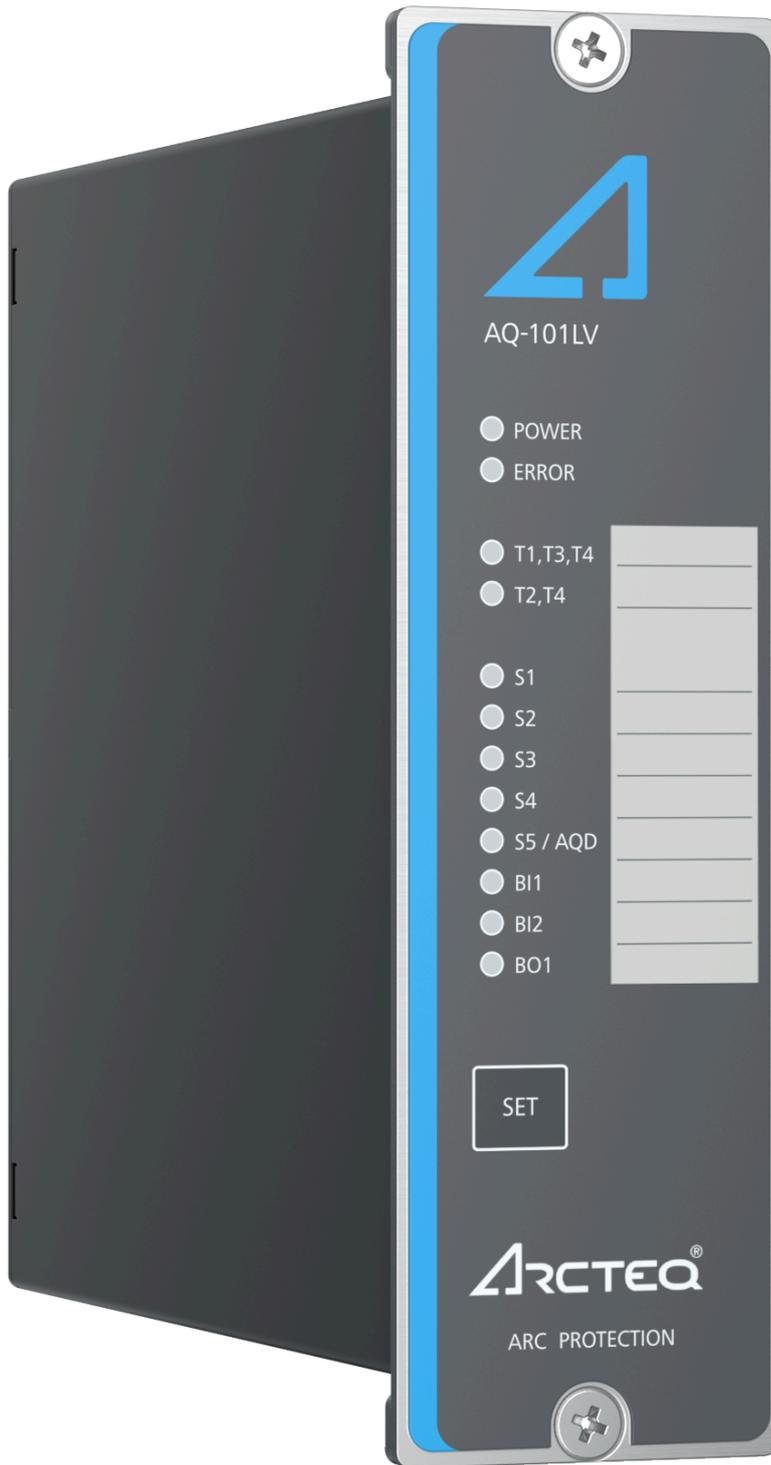


Figure. 3.1 - 2. Arc protection unit AQ-101DLV.

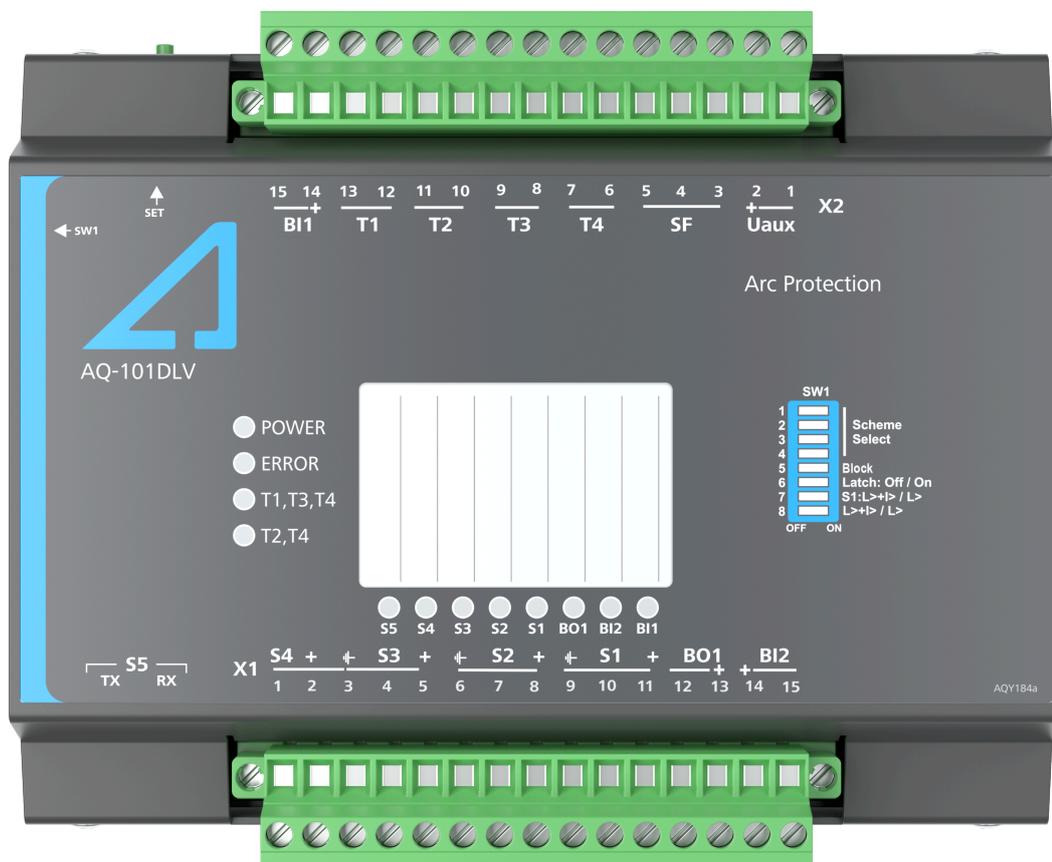

3.2 Dimensions and installation

AQ-101LV can be either door-mounted or panel-mounted in a standard 19 inch rack. The unit's dimensions (without cards) are as follows:

- Height: 157 mm (6.18 in)
- Width: 50 mm (1.97 in)
- Depth: 160 mm (6.30 in).

The dimensions of the AQ-101DLV variant are as follows:

- Height: 109 mm (4.29 in)
- Width: 145 mm (5.71 in)
- Depth: 34 mm (1.34 in).

The figure below presents the dimension of the unit visually. It also shows the dimensions of the cut-out (bottom-left) required when mounting the unit on a panel.

Figure. 3.2 - 3. Dimensions of the device and its cut-out panel.


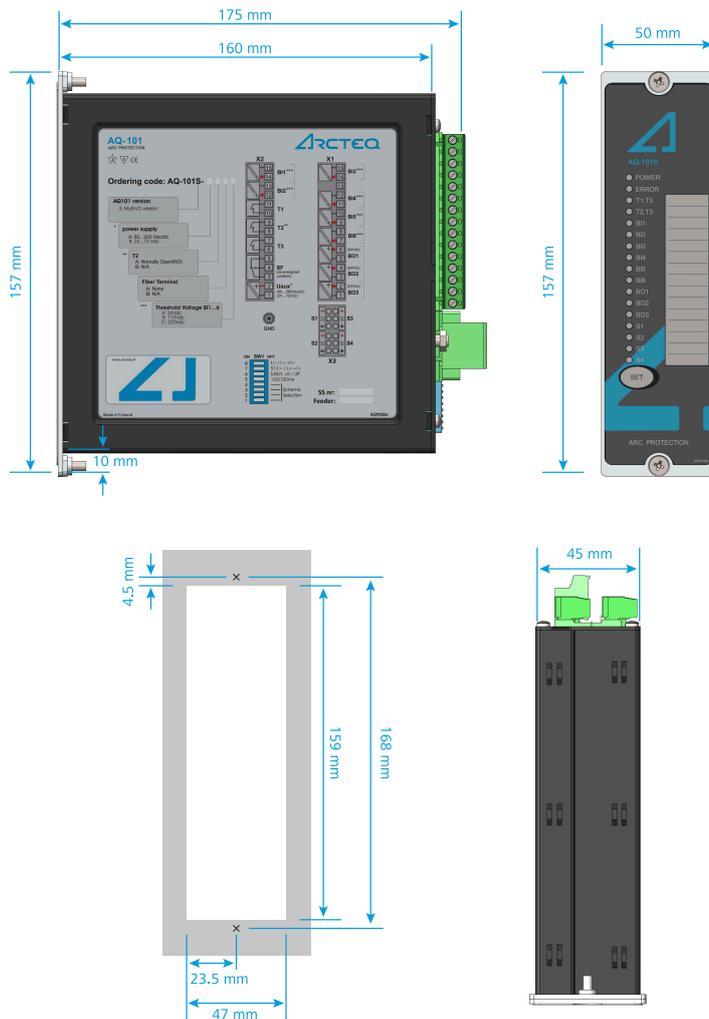


Figure. 3.2 - 4. Dimensions of the DIN rail variant of the device.



The following image illustrates how a unit is installed into a cut-out. Please note that as AQ-101 and AQ-101LV are narrower than the unit in the image, they are connected to the cut-out panel by a single screw on both the top and the bottom of the front panel instead of the two depicted below.


Figure. 3.2 - 5. Installing a unit into a cut-out.

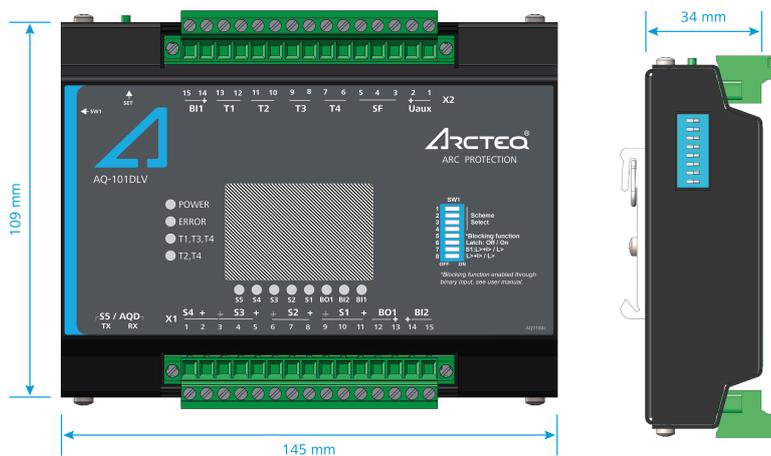

3.3 Simplified block diagram


The figure below presents the main components that can be found in both the AQ-101LV unit and the AQ-101DLV variant.

Figure. 3.3 - 6. Simplified block diagram of AQ-101LV and AQ-101DLV.

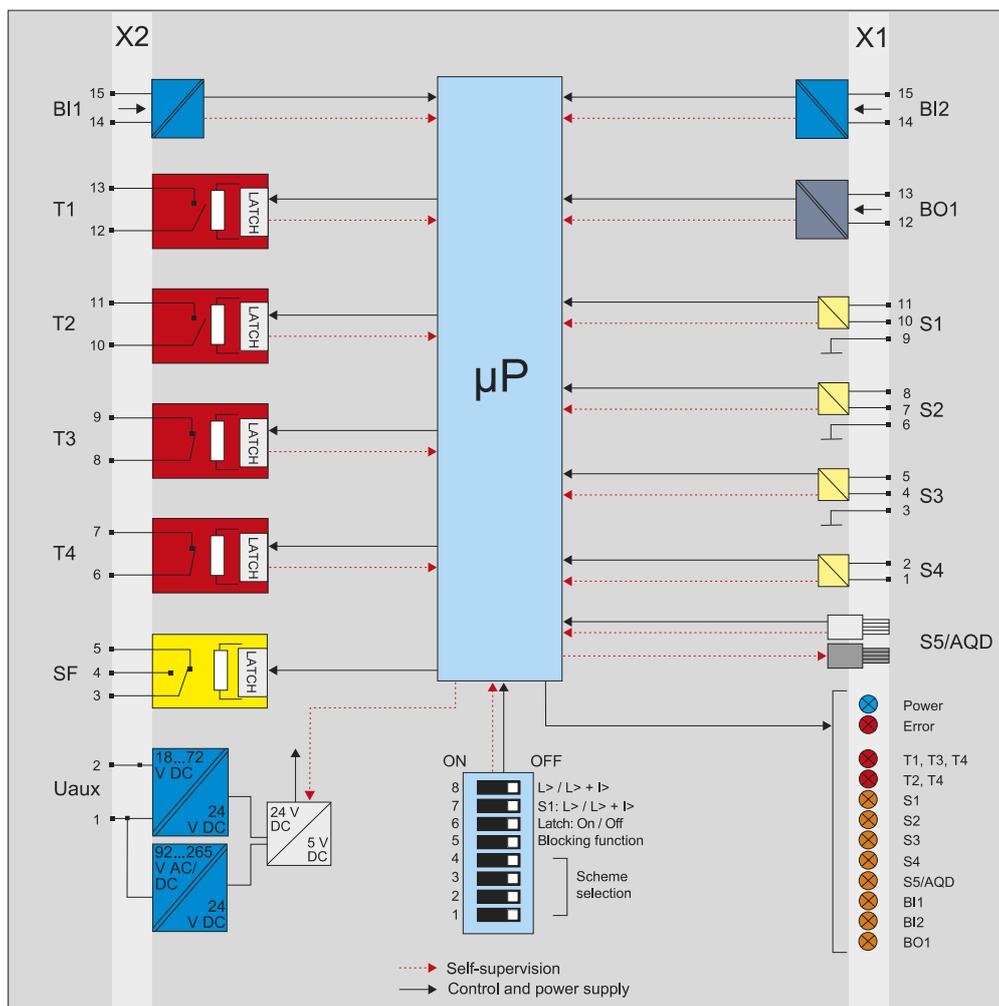

3.4 Wiring

Figure. 3.4 - 7. Wiring diagram for AQ-101LV and AQ-101DLV.

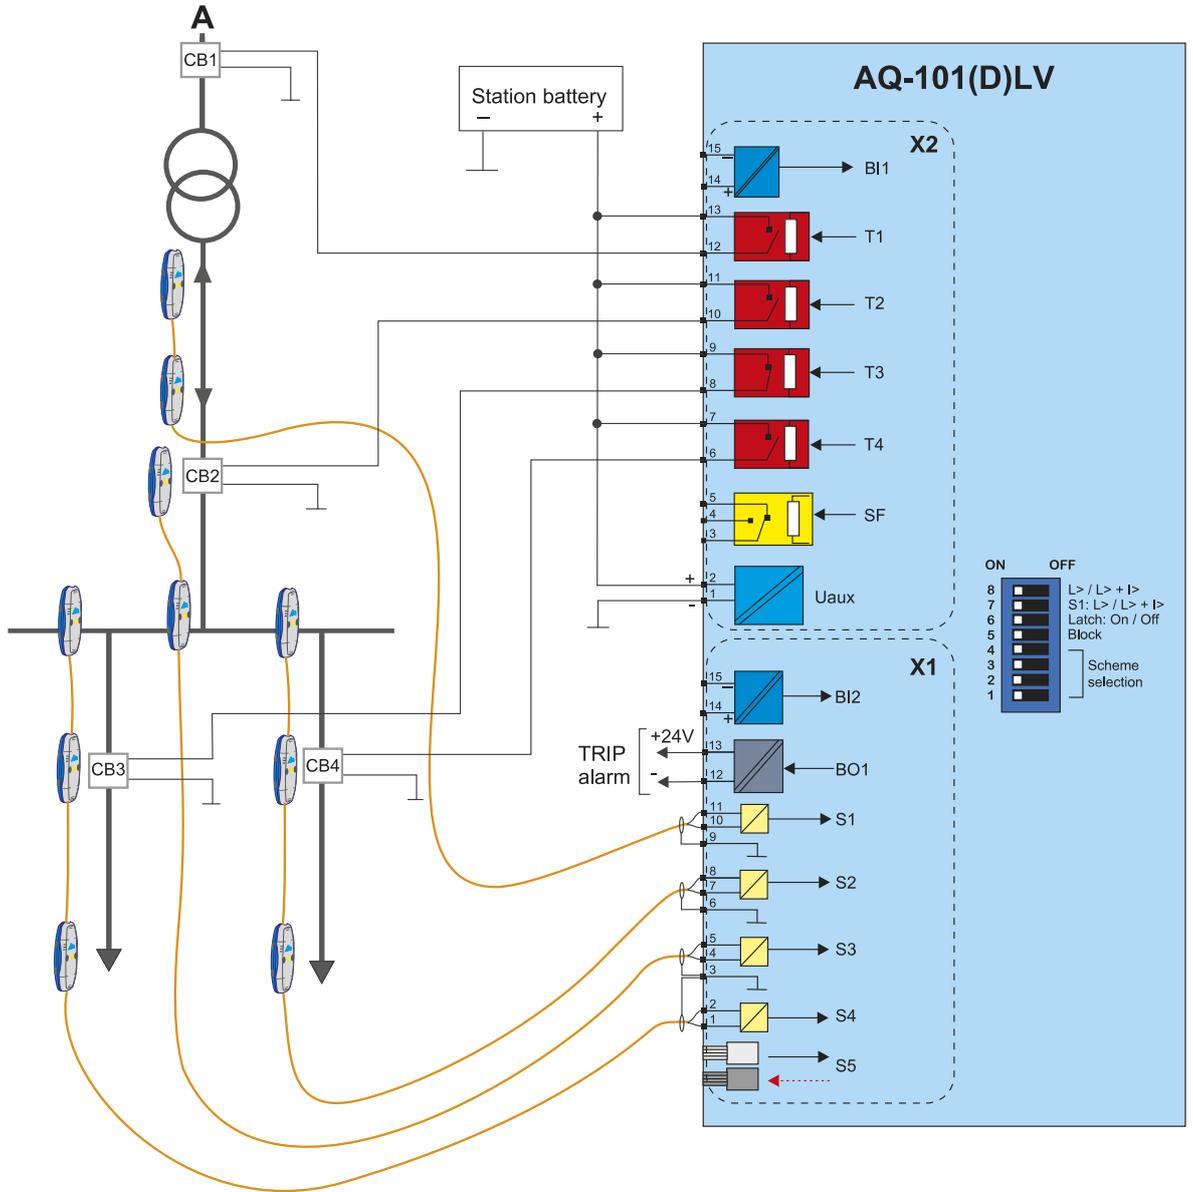

4 Operation and configuration

4.1 LED indicator functions

Both the AQ-101LV and its AQ-101DLV variant have twelve (12) indication LEDs. Apart from the "Power" and "Error" LEDs, the user can write their own identifications for each of the remaining LEDs on the text insert located in the transparent pocket next to the LEDs. The LEDs are on the unit's front panel to allow for a clear view without a separate need to open doors.

When the unit is powered up, it performs an LED test. All LEDs turn on for two (2) seconds and then turn off; only the blue "Power" LED stays on.

When the unit operates normally, only the blue "Power" LED is lit.

The LEDs of inactive sensors are off. If an arc sensor is activated for longer than 1.5 ms, its corresponding LED turns on. The activation function of the sensor LEDs is latched when the LED's light is not blinking.

If there is a loose sensor wire or if the self-supervision function detects a configuration mismatch (that is, a new sensor has been attached but the auto-configuration system setup has not been run), the corresponding LED starts flashing and the "Error" LED activates.

The binary I/O LEDs indicate the status of the input and output lines. If any of the lines become active for longer than 1.5 ms, the corresponding LED turns on (that is, they become latched). This also happens when a trip situation occurs. The trip outputs are controlled with DIP switch settings. All activation and trip indication LEDs are latched, even if the DIP switch settings are in the non-latched mode.

All LED indications are stored in the non-volatile memory (EPROM) to help identify the necessary trip information if auxiliary power is lost. When the unit is re-powered after a power supply loss, the front panel shows the status of all LEDs.

You can clear the LEDs by pushing the SET button.

4.2 LED operations guide

The table below describes the function of each indicator LED in detail.

Table 4.2 - 2. LED operations of AQ-101LV and AQ-101DLV.


LED name (color)	Light off	Steady light	Blinking light	Action if abnormal
POWER (blue)	The auxiliary power supply is disconnected.	The auxiliary power supply is connected.	(N/A)	Check the power supply.
ERROR (red)	The system is healthy.	A system failure has occurred.	A configuration mismatch has been detected. Protection is partially operational.	Verify the system condition (see the "System self-supervision" and "Troubleshooting" chapters).
T1-T4 (red)	Normal status.	The trip relay has activated.	(N/A)	Check what caused the trip, clear the fault and reset the indicator LEDs with the push button.

S1–S4 (amber)	Normal status.	Light information has activated the sensor channel.	There is a loose connection or a system setup has not been performed; or , pressure information has activated the sensor channel (when using an AQ-02 point sensor).	Check the sensor wire connection or perform a system setup (see the "System setup" chapter); or , check what activated the sensor.
S5/AQD (amber)	Normal status.	The fiber sensor channel has been activated. Or , if the unit has AQD control configured to this sensor channel, an arc flash has activated the channel.	There is a loose fiber sensor connection or a system setup has not been performed.	Check the sensor wire continuity or perform a system setup (see the "System setup" chapter); or , check what activated the sensor.
BI1–BI2 (amber)	Normal status.	The binary input has been activated.	The binary input has a loose connection.	Check the binary input wiring.
BO1 (amber)	Normal status.	The binary output has been activated.	(N/A)	—

4.3 Push button (SET)

The unit contains one push button, **SET**, and it can be used for all operational functions. The push button is used for setting up the system (also known as auto-configuration), for resetting the indicator LEDs and the latched output relays, as well as for checking the input connection.

Figure. 4.3 - 8. The "SET" push button on the device's front panel.

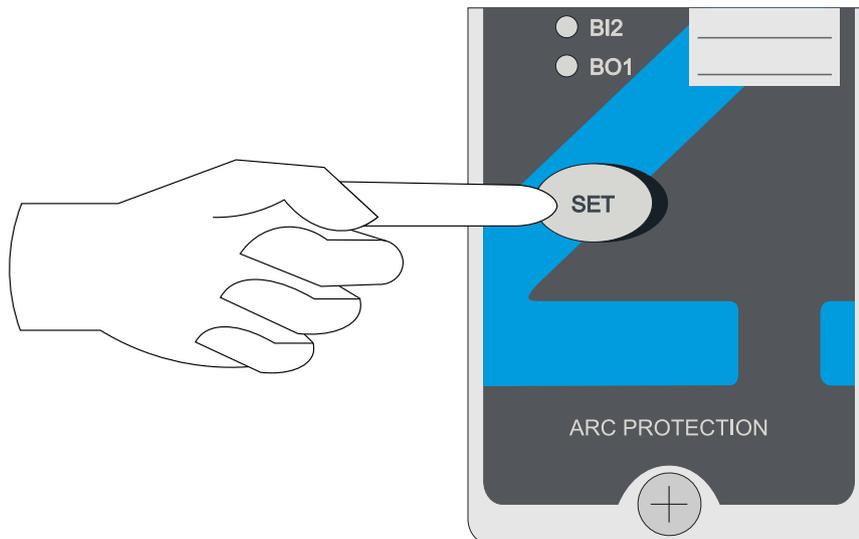

4.3.1 System setup (auto-configuration)

After all sensors and binary lines have been connected, a system setup procedure (also known as auto-configuration) must be performed. The sequence is initialized by pressing the **SET** push button for two seconds. This causes the sensor and binary LEDs to start blinking. The unit scans these inputs to see if they are connected; when an input is detected, the corresponding LED lights up to mark that a connection was found. All inputs that are not connected continue to blink for three more seconds. Then, all LEDs are turned off. Additionally, the DIP switch settings are stored in the non-volatile memory during this sequence.

All sensor inputs remain operational even when they have not been auto-configured. System setup is only used for self-supervision purposes.

Please note that to reconfigure a unit with fewer connections (BI/BO or sensors) than in the previously memorized setup, one of the DIP switches must be moved back and forth once before the system setup procedure is carried out. After this, you must wait one minute before you begin the new auto-configuration sequence.

You can reconfigure a unit with more connections at any time without the wait and without having to move one of the DIP switches.

4.3.2 Reset

All LED indications and latched trip relays can be reset by pressing the **SET** push button for one second.

Unless the button is pressed, the latched trip relays remain active until the auxiliary power is disconnected. All LED indications also remain active even when the auxiliary power supply is disconnected unless the button is pressed. Please refer to the "Non-volatile memory" chapter for more information.

4.3.3 Input connection check

After the system setup (auto-configuration) procedure is completed, you can verify the connectivity of all sensors and binary input channels by pressing the **SET** push button three (3) times within two (2) seconds. The LEDs of the corresponding sensors and binary input channels start blinking while the "Power" LED is already blinking. The LEDs blink as many times as there are connected sensors and binary output channels from other units.

4.4 DIP switch settings

The DIP switches are used to configure the unit's tripping logic and other functionalities. The various trip schemes can be programmed easily by selecting the appropriate DIP switch positions, which allows for more flexibility when changing the settings depending on the application. However, the most convenient way to set the unit or a more complex arc protection system is to use Standard Arc Schemes (SAS).

Tripping can be based on arc light only, or on both arc light and current thresholds, or on other tripping criteria (such as undervoltage, etc.). Current threshold and other tripping criteria can also be applied to BI1 to block tripping caused by natural light sources. The CBFP (circuit breaker failure protection) scheme can also be enabled with the DIP switches. The DIP switch's pins 1...4 are used for selecting schemes, and their numbering is based on binary arithmetic.

The DIP switches are located at the back of the unit for easy access. The figure below presents the DIP switch numbering, and the table below that gives a detailed description of the settings.

NOTE!



Please note that while the pin numbers and their functions are the same for both AQ-101LV and AQ-101DLV, in the DIN rail variant of the unit the pins are "upside down" (that is, Pin 1 is at the top of the DIP switch when normally Pin 8 is at the top)!

Figure. 4.4 - 9. DIP switch diagram.

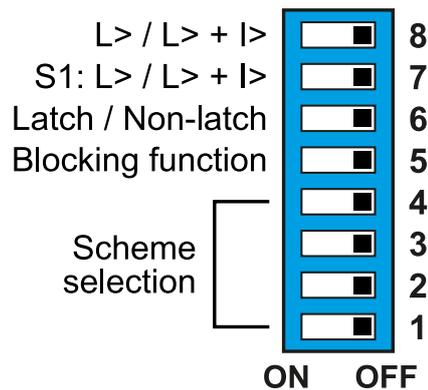


Table. 4.4 - 3. DIP switch settings.

Pin number (name)	Function selection	ON (left position)	OFF (right position)
8 (L> <u>or</u> L> + I>)	The tripping criterion for the S2, S3, S4 (sensor) and S5 (fiber) channels.	Tripping on light only (L>).	Tripping on light and overcurrent (L> + I>), both of which are required to occur simultaneously to trigger tripping.
7 (S1: L> <u>or</u> L> + I>)	The tripping criterion for the S1 sensor channel.	Tripping on light only (L>).	Tripping on light and overcurrent (L> + I>), both of which are required to occur simultaneously to trigger tripping.
6 (Latch <u>or</u> Non-latch)	Latching or non-latching for the T1 and T2 trip relays.	T1 and T2 operate as latched.	T1 and T2 operate as non-latched.
5 (Blocking function)	Selects between the blocking function and the current signal.	The blocking function is selected. All trip signals (T1...T4) and the quencher control (AQD) are blocked.	The current signal is selected.
4 (scheme select)	Scheme selection.	Please refer to the "Scheme selection" and "Application examples" chapters.	Please refer to the "Scheme selection" and "Application examples" chapters.
3 (scheme select)	Scheme selection.	Please refer to the "Scheme selection" and "Application examples" chapters.	Please refer to the "Scheme selection" and "Application examples" chapters.
2 (scheme select)	Scheme selection.	Please refer to the "Scheme selection" and "Application examples" chapters.	Please refer to the "Scheme selection" and "Application examples" chapters.
1 (scheme select)	Scheme selection.	Please refer to the "Scheme selection" and "Application examples" chapters.	Please refer to the "Scheme selection" and "Application examples" chapters.

4.4.1 Scheme selection

This chapter describes the schemes that are available to this unit. The schemes are configured using the DIP switches numbered 1...4 ("Scheme selection"). For detailed instructions on each of the available schemes please refer to the AQ-SAS™ booklet (can be found at arcteq.fi/downloads/). Please note that there are four booklets: two are for schemes based on IEC standards (MV and LV versions) and the other two for schemes based on ANSI standards (MV and LV versions).

4.4.2 Available logic schemes

The schemes described below are the most important ones for this unit. However, additional schemes are also available; please contact your nearest Arcteq representative for more information on those schemes.

SS:0

SS:0			OUTPUTS				
			T1	T2	T3	T4	BO1
INPUTS	BI2 ¹	S1					X
		S2					X
		S3					X
		S4					X
		S5					X
		BI1					
	BI2 ²	S1	X	X	X	X	X
		S2	X	X	X	X	X
		S3	X	X	X	X	X
		S4	X	X	X	X	X
		S5	X	X	X	X	X
BI1		X	X	X	X		

- 1) If the blocking function (SW1: 5) is ON, the activation of BI2 blocks all trip output signals.
- 2) If the blocking function (SW1: 5) is OFF, the binary input BI2 can be used to receive an external current signal. The tripping criterion can be selected to be light only (L>) or both light and current (L> + I>).

SS:1

SS:1			OUTPUTS				
			T1	T2	T3	T4	BO1
INPUTS	BI1 ¹	S1					X
		S2					X
		S3					X
		S4					X
		S5					X
		BI2					X ³
	BI1 ²	S1	X	X		X	X
		S2	X	X	X	X	X
		S3	X		X	X	X
		S4	X		X	X	X
		S5	X		X	X	X
BI2		X		X	X	X	

- 1) If the blocking function (SW1: 5) is ON, the activation of BI1 blocks all trip output signals.

2) If the blocking function (SW1: 5) is OFF, the binary input BI1 can be used to receive an external current signal. The tripping criterion can be selected to be light only (L>) or both light and current (L> + I>).

3) Only available when the unit's configuration includes the light-only setting (i.e. when "L>" has been selected for the DIP switch SW1: 6).

SS:2

SS:2			OUTPUTS				
			T1	T2	T3	T4	BO1
INPUTS	BI2 ¹	S1					X
		S2					X
		S3					X
		S4					X
		S5					X
	BI2 ²	S1	X	X	X	X	X
		S2	X	X	X	X	X
		S3	X	X	X	X	X
		S4	X	X	X	X	X
		S5	X	X	X	X	X

1) If the blocking function (SW1: 5) is ON, the activation of BI2 blocks all trip output signals.

2) If the blocking function (SW1: 5) is OFF, the binary input BI2 can be used to receive an external current signal. The tripping criterion can be selected to be light only (L>) or both light and current (L> + I>).



NOTE!

In this scheme, the binary input BI1 is used as the input for the device reset.

SS:3

SS:3			OUTPUTS				
			T1	T2	T3	T4	BO1
INPUTS	BI2 ¹	S1					X
		S2					X
		S3					X
		S4					X
		S5					X
		BI1					
	BI2 ²	S1	X	X			X
		S2	X	X	X		X
		S3				X	X
		S4			X	X	X
		S5	X	X	X	X	X
BI1		X	X	X	X		

1) If the blocking function (SW1: 5) is ON, the activation of BI2 blocks all trip output signals.

2) If the blocking function (SW1: 5) is OFF, the binary input BI2 can be used to receive an external current signal. The tripping criterion can be selected to be light only (L>) or both light and current (L> + I>).

SS:4

SS:4			OUTPUTS				
			T1	T2	T3	T4	BO1
INPUTS	BI1 ¹	S1					x
		S2					x
		S3					x
		S4					x
		S5					x
		BI2					
	BI1 ²	S1	x	x			x
		S2	x	x	x		x
		S3	x			x	x
		S4	x		x	x	x
		S5	x		x	x	x
		BI2	x		x	x	

1) If the blocking function (SW1: 5) is ON, the activation of BI1 blocks all trip output signals.

2) If the blocking function (SW1: 5) is OFF, the binary input BI1 can be used to receive an external current signal. The tripping criterion can be selected to be light only (L>) or both light and current (L> + I>).

4.5 Non-volatile memory

All critical system data (such as DIP switch settings and the system setup file) are stored in the non-volatile memory (EPROM) to ensure accurate operation and full self-supervision even if auxiliary power is lost temporarily.

Additionally, all LED indications are stored in the non-volatile memory to provide a quick recovery of the system status indication. This feature is especially important if tripping causes the unit to lose its auxiliary power.

The non-volatile memory does not require a power supply to maintain the information and it retains the settings and the indications permanently without power.

5 Arc sensors

The AQ-100 series provides different types of arc sensors to be used with different units and different switchgear types according to specific application requirements. There are two types of sensors: arc light point sensors and arc light fiber optic loop sensors.

Arc light point sensors are typically installed in metal-clad compartments, and they provide a quick and accurate location of the faulted area. Arc light fiber loop sensors typically cover a wider protected area with one fiber, when there is no need to pinpoint the exact location for a fault.

5.1 Arc light point sensor AQ-01

AQ-01 is an arc light point sensor with a light-sensitive photodiode element activated by arc light. The AQ-01 sensors should be mounted in the switchgear cubicles in such a way that the light-sensitive part covers the protected area as completely as possible. Only one sensor should be used per one closed metal-clad compartment. In open spaces (such as a busbar section) the sensors should be mounted no more than two meters apart.

The default light intensity threshold for an AQ-01 sensor is 8,000 lux. Depending on the demand of the application, the default threshold can also be set to 25,000 lux or 50,000 lux. An arc light sensor does not require further settings by the user. Its detection radius is 180 degrees.

Figure. 5.1 - 10. The AQ-01 light sensor.



An AQ-01 is installed either on the compartment wall or through the wall. When wall-mounting, the unit is placed on the wall (with the gray side against the wall) and then fixed to the wall with two screws from the back of the sensor. Through-the-wall mounting is similar: the unit is placed on the wall (with the blue side against the wall and the eye is pushed into the drilled compartment hole for protection) and then fixed to the wall with two screws from the back of the sensor. No external mounting plates are needed regardless of the mounting type; however, mounting brackets can be used if so desired.

Up to three (3) sensors can be connected in series. Installing a connection cable is simple as each end of the sensor has a detachable cover over the cable connectors. Please remember to reattach the cover once the wires have been installed.



NOTE!

The AQ-01 point sensor does not come with a connection cable!

5.2 Arc light and pressure point sensor AQ-02

AQ-02 is an arc light and pressure point sensor that comes with arc light detection and ambient pressure detection. The AQ-02 sensors should be mounted in the switchgear cubicles in such a way that the light-sensitive part covers the protected area as completely as possible. Only one sensor should be used per one closed metal-clad compartment. The AQ-02 sensors cannot be installed in open spaces.

The default light intensity threshold for an AQ-02 sensor is 8,000 lux. Depending on the demand of the application, the default threshold can also be set to 25,000 lux or 50,000 lux. An arc light sensor does not require further settings by the user. Its detection radius is 180 degrees. The pressure threshold is fixed at 0.2 bar above ambient pressure.

Figure. 5.2 - 11. AQ-02 arc light and pressure point sensor.



An AQ-02 can only be installed on the compartment wall as not to block pressure detection located next to "the eye". The unit placed on the wall (with the gray side against the wall), and then fixed to the wall with two screws. No external mounting plates are needed regardless of the mounting type; however, mounting brackets can be used if so desired.

Up to three (3) sensors can be connected in series. Installing a connection cable is simple as each end of the sensor has a detachable cover over the cable connectors. Please remember to reattach the cover once the wires have been installed.

5.3 Arc light fiber optic loop sensor AQ-06

AQ-06 is an arc light fiber optic loop sensor, which is a plastic fiber optic cable. Fiber sensors are distributed through the protected switchgear cells. The fixed light intensity threshold of an AQ-06 sensor is 8,000 lux. The sensor does not require further settings by the user. The sensor's detection radius is 360 degrees.

AQ-06 sensors can be ordered in pre-manufactured lengths of 3...40 meters (3 m, 5 m, 10 m, 15 m, 20 m, 25 m, 30 m, 35 m, 40 m).

5.4 Arc light fiber optic loop sensor AQ-07

AQ-07 is an arc light fiber optic loop sensor, which is a robust fiber optic cable with a practically unlimited bending radius. The sensor contains hundreds of glass fiber drains covered by a plastic tube, thus making it extremely strong and durable. Fiber sensors are distributed through the protected switchgear cells.

AQ-07 sensors can be ordered in pre-manufactured lengths of 3...50 meters (3 m, 5 m, 10 m, 15 m, 20 m, 25 m, 30 m, 35 m, 40 m, 45 m, 50 m).

The fixed light intensity threshold of an AQ-07 sensor is 8,000 lux. The sensor does not require further settings by the user. The sensor's detection radius is 360 degrees.

If necessary, the ends of an AQ-07 cable can be covered with black rubber to avoid light detection outside the protected zone (see the figure below). The covered area can be one (1) or two (2) meters by default; if other lengths are required, please consult the Arcteq sales team. You can find the "Contact and reference information" page at the end of this manual.

5.5 Arc light fiber optic loop sensor AQ-08

AQ-08 is an arc light fiber optic loop sensor. It is designed to withstand temperatures up to 125 °C, which makes it suitable for e.g. wind turbine windings. AQ-08 is a robust fiber optic cable with a practically unlimited bending radius. The sensor contains hundreds of glass fiber drains that are covered by a plastic tube, thus making it extremely strong and durable. Fiber sensors are distributed through the protected switchgear cells.

AQ-08 sensors can be ordered in pre-manufactured lengths of 3...15 meters (3 m, 5 m, 10 m, 15 m).

The fixed light intensity threshold of an AQ-08 sensor is 8,000 lux. The sensor does not require further settings by the user. The sensor's detection radius is 360 degrees.

5.6 Sensor—unit dependencies

Different sensor types can be used with different arc flash protection units of the AQ-100 series. The table below describes those dependencies.

Table. 5.6 - 4. Sensor—unit dependencies.

	AQ-01	AQ-02	AQ-06	AQ-07	AQ-08
AQ-101LV	Yes	Yes	Yes (when the unit is equipped with the fiber option)	Yes (when the unit is equipped with the fiber option)	Yes (when the unit is equipped with the fiber option)
AQ-101DLV	Yes	Yes	Yes (when the unit is equipped with the fiber option)	Yes (when the unit is equipped with the fiber option)	Yes (when the unit is equipped with the fiber option)
AQ-102LV	No	No	Yes	Yes	Yes
AQ-103LV	Yes	Yes	Yes (when the unit is equipped with the fiber option)	Yes (when the unit is equipped with the fiber option)	Yes (when the unit is equipped with the fiber option)
AQ-110PLV	Yes	Yes	Yes (when the unit is equipped with the fiber option)	Yes (when the unit is equipped with the fiber option)	Yes (when the unit is equipped with the fiber option)
AQ-110FLV	No	No	Yes (when the unit is equipped with the fiber option)	Yes (when the unit is equipped with the fiber option)	Yes (when the unit is equipped with the fiber option)

5.7 Connecting sensors

How to connect point sensors

1. Open the sensor covers and detach the connectors.
2. Attach the cable to the connector and to the unit.
3. Reattach the connectors to the sensor.
4. Run the auto-configuration procedure.
5. Once the auto-configuration has been successfully completed, put the sensor covers back in place.

For more detailed instructions, please refer to the "Connecting sensors" chapter in the AQ-0x instruction booklet (arcteq.fi/downloads).

How to connect fiber sensors

1. Drill holes on the compartment wall and cover any sharp edges.
2. Run the fiber through the holes and fasten it to the protected area.
3. Connect the sensor terminals into the Tx and Rx slots at the back of the unit.

The placement of the fiber sensor may require blocking of unwanted light activation. The AQ-07 glass fiber can be ordered with end covers to conceal one (1) or two (2) meters of the fiber on each end. Please refer to the "Arc light fiber optic loop sensor AQ-07" chapter for more information.

6 System self-supervision

All AQ-101 and AQ-102 variants (that is, both LV and MV) have an extensive self-supervision feature, including both internal functions and external connections. The self-supervision module monitors the power supply, hardware and software malfunctions, as well as problems with the binary input connection(s) and sensor(s). Additionally, the module supervises the DIP switch settings by comparing actual values with the data stored in the non-volatile memory.

When the unit's condition is healthy, the "Power" LED is lit and the system failure (SF) relay is energized. If the self-supervision function detects a faulty condition or if the power supply fails, the SF relay is released and the "Error" LED becomes lit.

If a sensor failure occurs, the unit will go into Error mode. The "Error" LED turns on, the SF relay releases, and the LED of the corresponding faulty sensor channel starts blinking. In this situation the unit is still in the protection mode, although the faulty sensor channel is blocked. If the error is resolved, the unit automatically clears the system failure status, energizing the SF relay and turning off the "Error" LED. If one or more of the sensors are disconnected, the healthy sensors remain in use and the unit remains operational accordingly. However, the unit remains in Error mode until the disconnected sensors are repaired.

The unit goes into SF alarm mode, if a DIP switch setting is changed after the system setup procedure has been performed. However, the configured (stored) settings are still valid and the unit is still operational.

7 Connections

Figure. 7 - 12. Rear terminals of AQ-101LV.


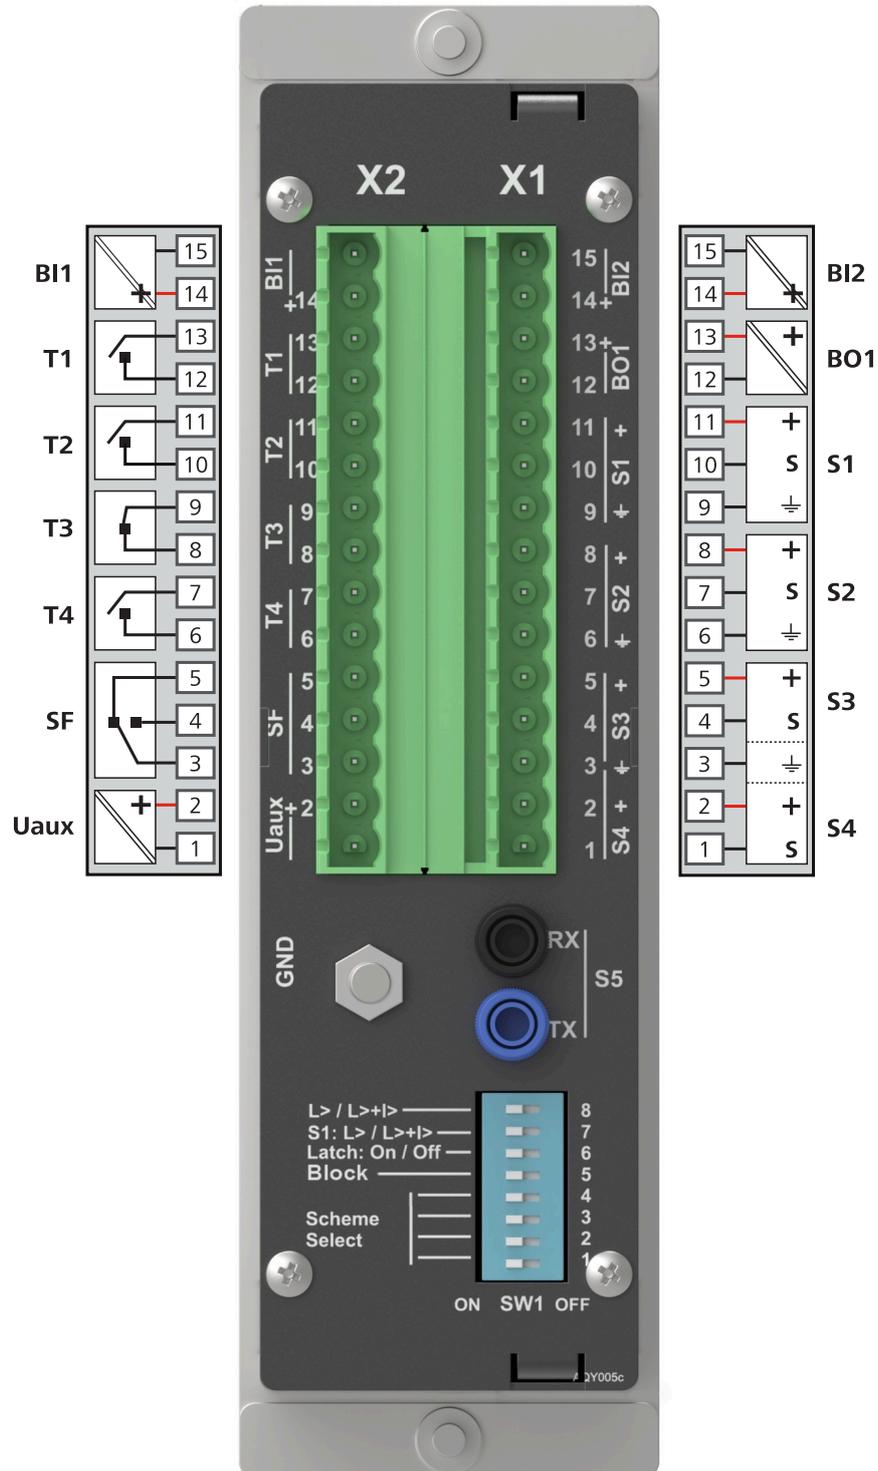


Figure. 7 - 13. Front terminals of AQ-101DLV.

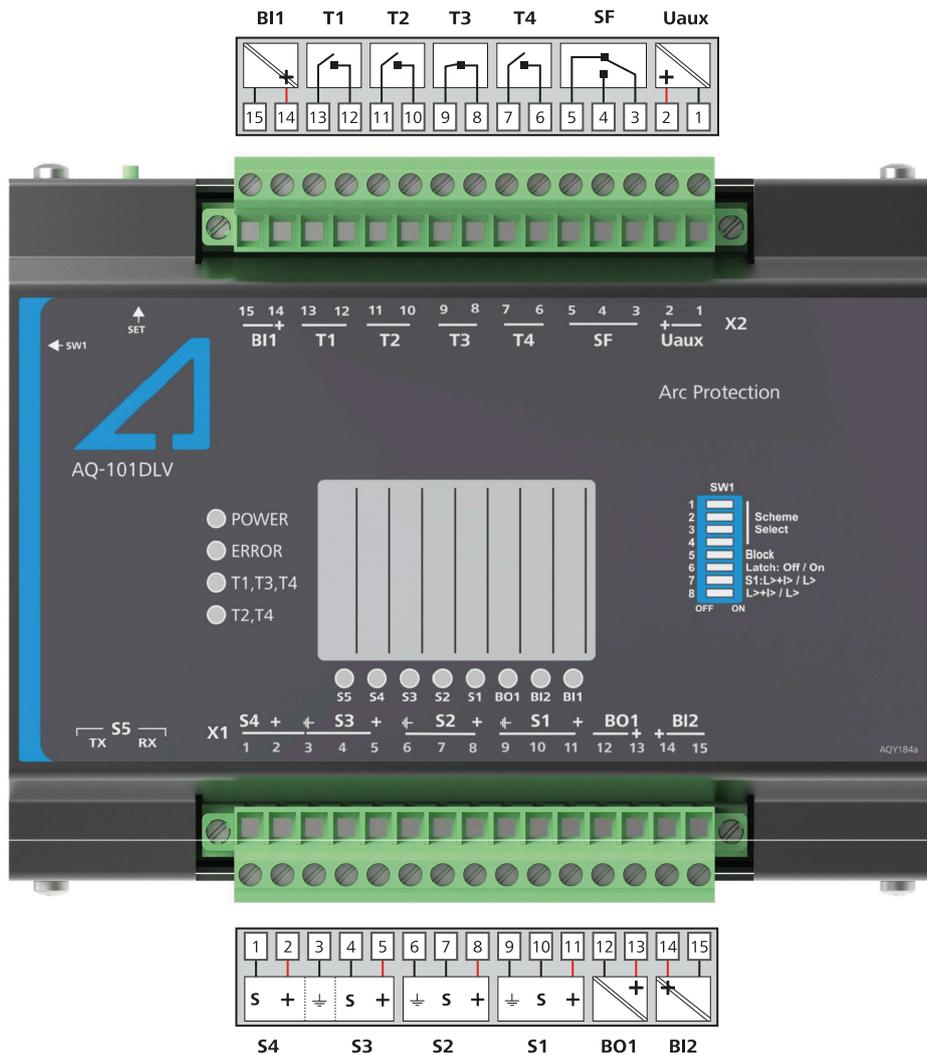

7.1 Outputs

7.1.1 Trip relays

This unit has two (2) integrated trip relays for tripping circuit breakers, namely T1 and T2. Their type is normally open (NO).

T3 can function either as an electronic lock-out relay or as a trip relay. When T3 is configured as an electronic lock-out relay, its type is normally closed (NC) and it holds its position until it receives a manual reset command or until auxiliary power supply is lost. When re-applying the auxiliary power supply, the electronic lock-out relay returns to the same contact condition it had prior to the power loss. This normally closed relay output can also be used for tripping contactor-controlled devices. If the application so requires, T3 can also be ordered as normally open (NO) from the factory. This choice is specified when ordering this unit.

T4 is a common trip relay that operates whenever T1 or T2 operates. It can be used either for tripping one additional disconnecting device, or as a trip alarm in a (local or remote) monitoring and alarming system.

7.1.2 Binary outputs

The unit has one (1) binary output: BO1 (+24 VDC). The binary output function can be configured with the DIP switches. For more information on the configuration, please refer to the "DIP switch settings" chapter.

Please note that the binary output is polarity-sensitive (see the "Wiring" chapter for more information).

7.1.3 System failure relay

The system failure (SF) relay is of the change-over type (NO/NC) and it is energized when the unit is in a healthy condition. Whenever the unit detects a system error or a disconnection between the auxiliary power supply and the contacts, the SF relay changes its state. The state stays this way until the unit returns to a healthy condition and the SF relay is energized again.

7.2 Inputs

7.2.1 Arc sensor channels

Both AQ-101LV and AQ-101DLV have four (4) arc point sensor channels: S1, S2, S3 and S4. You can connect a maximum of three (3) arc point sensors to each channel.

S5 is the optional fiber optic loop sensor channel with a transceiver (Tx) terminal and a receiver (Rx) terminal. When the fiber optic loop sensor is connected to the unit, one of its ends is connected to "Tx" and the other to "Rx". This sensor loop is then continuously monitored by a 60- μ s test light pulse that travels through the loop. If a discontinuity is detected, the unit goes into Error mode and activates the "Error" LED and the SF relay output.

For more information on sensors, please refer to the "Arc sensors" chapter as well as to the AQ-0x instruction booklet which can be found on Arcteq's website (<https://www.arcteq.fi/downloads/>).

7.2.2 Binary inputs

This unit contains two (2) binary inputs.

BI1 is always reserved for the signal from the secondary trip criterion. Typically, the unit receives overcurrent information from an AQ-110x unit, although such information can also come from a non-Arcteq device (such as an upstream protection relay). Alternatively, any other signal (such as undervoltage) can be used as a secondary trip criterion along with light information.

Please note that when this unit receives an overcurrent signal from a non-Arcteq device, the actual operating time depends on the operating time of the third-party device. Therefore, the total operating time cannot be specified nor guaranteed.

BI2 can be used for receiving a trip signal or an arc light signal. The function of the BI2 is configured using the DIP switches. For more information, please refer to the "DIP switch settings" chapter in this manual.

The binary inputs are activated when a connected DC signal exceeds the specified nominal threshold level of the corresponding input. The nominal threshold level for this unit is 24 VDC. The actual activation of the binary input occurs at 80 % of the specified nominal threshold value (i.e. 19 V DC).

7.3 Auxiliary voltage

The auxiliary power supply voltage is 92...265 V AC/DC. Alternatively, the optional auxiliary power supply can be of 18...72 V DC. This choice must be specified when ordering.

8 Testing

It is recommended that the unit is tested prior to substation energizing. Testing is carried out by simulating an arc light for each sensor and verifying that the unit tripped and that the correct indicator LED turned on.

A high-quality camera flash (Canon Speedlite 430EX or equivalent) is used to simulate arc light. You can use a flashlight (Mini Maglite 2 CELL AAA or equivalent) to test non-latched signals and the CBFP function. Before testing please check that the equipment used has a fully charged battery.

8.1 Testing the light-only mode

1. Check that the DIP switch settings are positioned according to your application.
2. Activate the camera flash within 30 cm (12 inches) of the sensor that is being tested.
3. Verify that the indicator LED of the corresponding sensor channel is lit.
4. Verify the activation(s) of the relay output(s) by checking the circuit breaker's status, or by monitoring the trip contact's status. The circuit breaker should open, or the contacts operate. Please note that you achieve the best test results when you operate the circuit breaker while testing.
5. Verify that the indicator LED(s) of the corresponding relay output(s) is lit.
6. If you are using the BO1 binary output, verify its signal activation either through the status change of the relevant input, or by measuring the signal output voltage. Please note that BO1 is of the non-latched type.
7. If you are using the BO1 binary output, also verify that the "BO1" LED is lit.
8. Press the **SET** push button to reset all indications and latches.
9. If you are using the BI2 binary input as the master trip, activate it and verify that the trip has occurred by repeating the steps 4 and 5.
10. Press the **SET** push button to reset all indications and latches.
11. Repeat the steps 1 through 10 for all sensors.

8.2 Testing the light and current mode

1. Check that the DIP switch settings are positioned according to your application.
2. Activate the following two things simultaneously: the camera flash within 30 cm (12 inches) of the sensor unit that is being tested, and the BI1 binary input used for the overcurrent condition ($I >$).
3. Verify that the indicator LED of the corresponding sensor channel is lit.
4. Verify that the indicator LED of the BI1 binary input is lit.
5. Verify the activation(s) of the relay output(s) by checking the circuit breaker's status, or by monitoring the trip contact's status. The circuit breaker should open, or the contacts operate. Please note that you achieve the best test results when you operate the circuit breaker while testing.
6. Verify that the indicator LED(s) of the corresponding relay output(s) is lit.
7. If you are using the BO1 binary output, verify its signal activation either through the status change of the relevant input, or by measuring the signal output voltage. Please note that BO1 is of the non-latched type.
8. If you are using the BO1 binary output, also verify that the "BO1" LED is lit.
9. If you are using the BI2 binary input, verify its correct operations by activating the input.
10. Activate the camera flash within 30 cm (12 inches) of the sensor unit but do not activate the binary input used for the overcurrent condition ($I >$).
11. Verify that no trip has occurred and only the indicator LED of the sensor activation is lit.
12. If you are using the BO1 signal and have configured it to send light information, verify that it is activated.
13. Press the **SET** push button to reset all indications and latches.

14. If you are using the BI2 binary input as the master trip, activate it and verify that the trip has occurred by repeating the steps 5 and 6.
15. Press the **SET** push button to reset all indications and latches.
16. Repeat the steps 1 through 15 for all sensors.

8.3 Testing the CBFP function

The circuit breaker failure protection (CBFP) function is tested by taking the light signal and the secondary trip criterion signal (if applicable) and leaving them active for longer than the set CBFP time (that is, 100 or 150 ms). The T2 trip relay and the BO1 binary output must be active after the set time delay has passed to confirm the CBFP function operates correctly.

8.4 Testing the unit operation time

An operation time test is not required at commissioning as it is performed by the manufacturer both as a type test and as a routine production test. If you want to have more information of these tests, please refer to the routine test reports sent with the AQ-101 unit and/or consult your nearest Arcteq representative for the type test reports.

However, if it is deemed necessary, you can conduct an on-site timing test with the following instructions.

1. Use a calibrated relay test set.
2. Connect one of the test set's outputs to a camera flash (Metz 20B1 or equivalent) to initialize the flash and to configure the set's timer to start simultaneously with the flash.
3. Connect one of the AQ-101 unit's trip outputs (T1, T2, T3, T4) to a test set input and configure the input to stop the timer.
4. Place the camera flash within 20 cm (12 inches) of the sensor.
5. Initiate the flash and the timer by using the test set output.
6. Read the measured time between the simulated arc light and the operation of the trip contact.
7. Subtract the digital input delay of the test set from the final measured time (if applicable). For specific test instructions, please consult the manufacturer of the relay test set.

8.5 Test plan example



Basic data	
Date:	
Substation:	
Switchgear:	
Serial number:	

Preconditions		Additional notes
Trip mode (channel 1):	<input type="checkbox"/> L> <input type="checkbox"/> L> + I>	
Trip mode (channels 2, 3, 4):	<input type="checkbox"/> L> <input type="checkbox"/> L> + I>	
BI master trip in use:	<input type="checkbox"/> Yes <input type="checkbox"/> No	
CBFP in use:	<input type="checkbox"/> Yes <input type="checkbox"/> No	
CBFP time setting:	<input type="checkbox"/> 100 ms <input type="checkbox"/> 150 ms	

Object activated	LED active	T1, T2, T3, T4 active	BO1 active	Additional notes
Sensor channel 1	S1			
	S2			
	S3			
Sensor channel 2	S1			
	S2			
	S3			
Sensor channel 3	S1			
	S2			
	S3			
Sensor channel 4	S1			
	S2			
	S3			
Fiber sensor channel				
Binary inputs	BI1			
	BI2			

Involved personnel	
Tested by:	
Approved by:	

9 Troubleshooting

Table. 9 - 5. Troubleshooting guide for AQ-101 variants.

Problem	Possible solution(s)
The sensor does not activate during testing.	Check the sensor's cable wiring (see the "Arc sensors" chapter for more information). <u>or</u> Check the testing equipment, especially the camera flash intensity (see the "Testing" chapter for more information).
The trip relay does not operate even when the sensor is activated.	Check the DIP switch settings (see the "DIP switch settings" chapter for more information).

10 Technical data

10.1 Operating times

Table. 10.1 - 6. Technical data for relay operating times.

Trip time using mechanical trip relays	7 ms*
Reset time (arc light stage)	2 ms

*) The total trip time when using both the arc light (L>) or phase/residual overcurrent (I>) from an AQ-110 unit and the arc light (L>) from this unit.

10.2 Auxiliary voltage

Table. 10.2 - 7. Technical data for the relay auxiliary voltage (Uaux).

Auxiliary power supply	92...265 V AC/DC 18...72 V DC (optional)
Maximum interruption	100 ms
Maximum power consumption	5 W, < 10 mΩ
Standby current	90 mA

10.3 Binary inputs

Table. 10.3 - 8. Technical data for the relay binary inputs (BI1, BI2).

Nominal threshold voltage	24 V DC
Threshold: - pick-up - drip-off	≥ 15 V DC ≤ 14 V DC
Rated current	3 mA
Number of inputs	2

10.4 Trip relays

Table. 10.4 - 9. Technical data for the trip relays (T1, T2, T3, T4).

Number of trip relays	4 NO <u>or</u> 3 NO + 1 NC
Voltage withstand	250 V AC/DC
Carry: - continuous carry - make-and-carry for 3 s - make-and-carry for 0.5 s	5 A 16 A 30 A
Breaking capacity DC*	40 W (0.36 A at 110 V DC)
Contact material	AgNi 90/10

*) When the time constant L/R = 40 ms.

10.5 Binary output(s)

Table. 10.5 - 10. Technical data for the relay binary output (BO1).

Number of outputs	1
Rated voltage	+24 V DC
Rated current (max.)	20 mA

10.6 System failure relay

Table. 10.6 - 11. Technical data for the system failure relay (SF).

Number of SF relays	1
Rated voltage	250 V AC/DC
Carry: - continuous carry - make-and-carry for 3 s - make-and-carry for 0.5 s	5 A 16 A 30 A
Breaking capacity DC*	40 W (0.36 A at 110 V DC)
Contact material	AgNi 90/10

*) When the time constant L/R = 40 ms.

10.7 Sensors

AQ-01 point sensor

Table. 10.7 - 12. Technical data for the AQ-01 light point sensor.

Light intensity threshold	8,000 lux 25,000 lux 50,000 lux
Detection radius	180°
Mechanical protection	IP 20
Sensor cable specification	Shielded twisted pair 0.75 mm ² (AWG: 18)
Maximum sensor cable length (per channel)	200 m
Operating temperature	-20...+85 °C

AQ-02 point sensor

Table. 10.7 - 13. Technical data for the AQ-02 light and pressure point sensor.

Light intensity threshold	8,000 lux 25,000 lux 50,000 lux
Pressure threshold (fixed)	0.2 bar above ambient pressure
Pressure measuring accuracy	±1.8 % (of full scale)
Detection radius	180°
Mechanical protection	IP 20
Sensor cable specification	Shielded twisted pair 0.75 mm ² (AWG: 18)

Maximum sensor cable length (per channel)	200 m
Operating temperature	-20...+85 °C

AQ-06 fiber optic loop sensor

Table. 10.7 - 14. Technical data for the AQ-06 fiber optic loop sensor.

Material	Plastic fiber
Light intensity threshold	8,000 lux
Cable length (min...max)	3...40 m
Cable diameter	1.0 mm
Detection radius	360°
Bending radius	5 cm
Operating temperature	-40...+85 °C

AQ-07 fiber optic loop sensor

Table. 10.7 - 15. Technical data for the AQ-07 fiber optic loop sensor.

Material	Covered glass fiber
Light intensity threshold	8,000 lux
Cable length (min...max)	3...50 m
Cable diameter	1.2 mm
Detection radius	360°
Bending radius	1 cm
Operating temperature	-40...+85 °C

AQ-08 fiber optic loop sensor

Table. 10.7 - 16. Technical data for the AQ-08 fiber optic loop sensor.

Material	Covered glass fiber
Light intensity threshold	8,000 lux
Cable length (min...max)	3...15 m
Cable diameter	1.2 mm
Detection radius	360°
Bending radius	1 cm
Operating temperature	-40...+125 °C

10.8 Disturbance tests

Table. 10.8 - 17. Technical data for the disturbance tests.

Electromagnetic compatibility test	CE-approved and tested according to EN 50081-2 and EN 50082-2
Conducted emission (EN 55011, class A)	0.15...30.00 Hz

Radiated emission (EN 55011. class A)	30.00...1,000.00 MHz
Electrostatic discharge immunity (IEC 244-222 and EN 61000-4-2, level 4)	Air discharge: 15 kV Contact discharge: 8 kV
Electrical fast transients (EN 61000-4-4, class III & IEC 801-4, level 4)	Power supply input: 4 kV, 5/50 ns Other inputs and outputs: 4 kV, 5/50 ns
Surge immunity (EN 61000-4-5, level 4)	Between wires: 2 kV, 1.2/50 μ s Between wire and earth: 4 kV, 1.2/50 μ s
RF electromagnetic field (EN 61000-4-3, level 3)	f = 80...1,000 MHz, 10 V/m
Conducted RF field (EN 61000-4-6, level 3)	f = 150 kHz...80 MHz, 10 V/m

10.9 Voltage tests

Table. 10.9 - 18. Technical data for the voltage tests.

Insulation test voltage (IEC 60255-5)	2 kV, 50 Hz, 1 min
Impulse test voltage (IEC 60255-5)	5 kV, 1.2/50 μ s, 0.5 J

10.10 Mechanical tests

Table. 10.10 - 19. Technical data for the mechanical tests.

Vibration test	2...13.2 Hz (\pm 3.5 mm)
	13.2...100 Hz (\pm 1.0 g)
Shock/bump test (IEC 60255-21-2)	20 g and 1,000 bumps/dir.

10.11 Environmental conditions

Table. 10.11 - 20. Technical data for the environmental conditions.

Specified ambient service temperature	-35...+70 °C
Transportation and storage temperature	-40...+70 °C
Relative humidity	Up to 97 %
Altitude	Up to 2,000 m above sea level


10.12 Casing

Table. 10.12 - 21. Technical data for the device casing.


Protection: - front - back	IP 50 IP 20
Device dimensions (W \times H \times D)	50 \times 157 \times 160 mm 145 \times 109 \times 34 mm (the DIN rail variant)
Weight	0.7 kg

11 Ordering information


AQ-101LV point sensor unit (panel mounted)

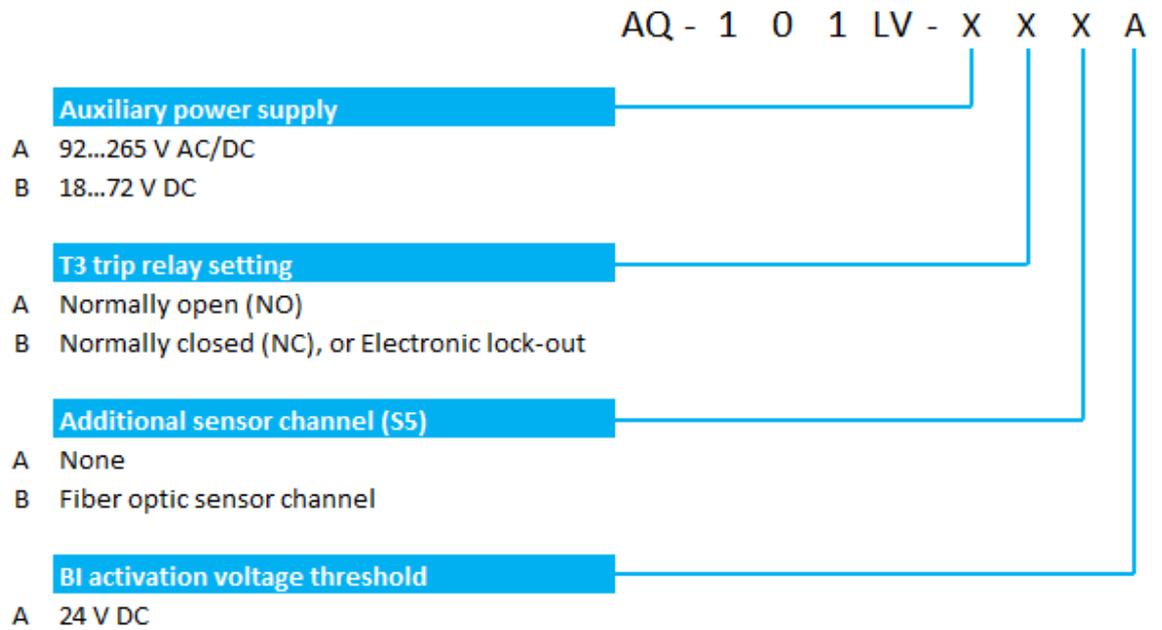


AQ-101DLV point sensor unit (DIN rail mounted)

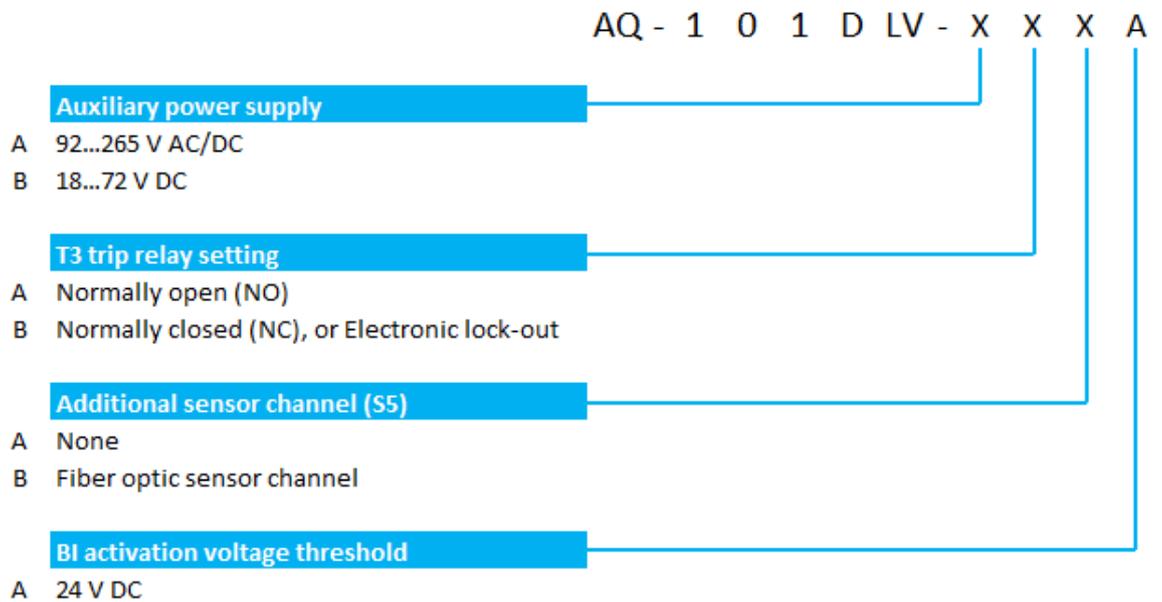

AQ-0x point sensors

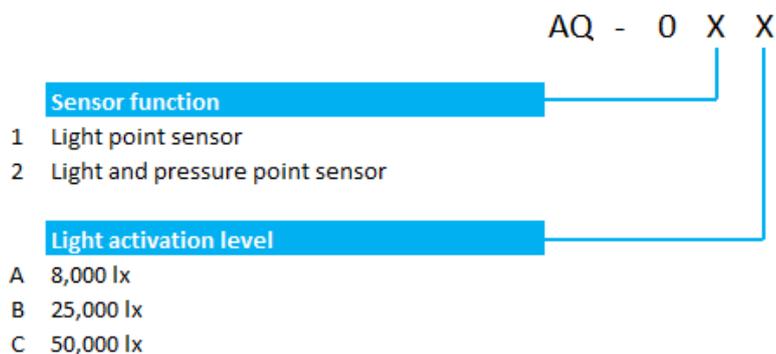

AQ-0x fiber optic loop sensors

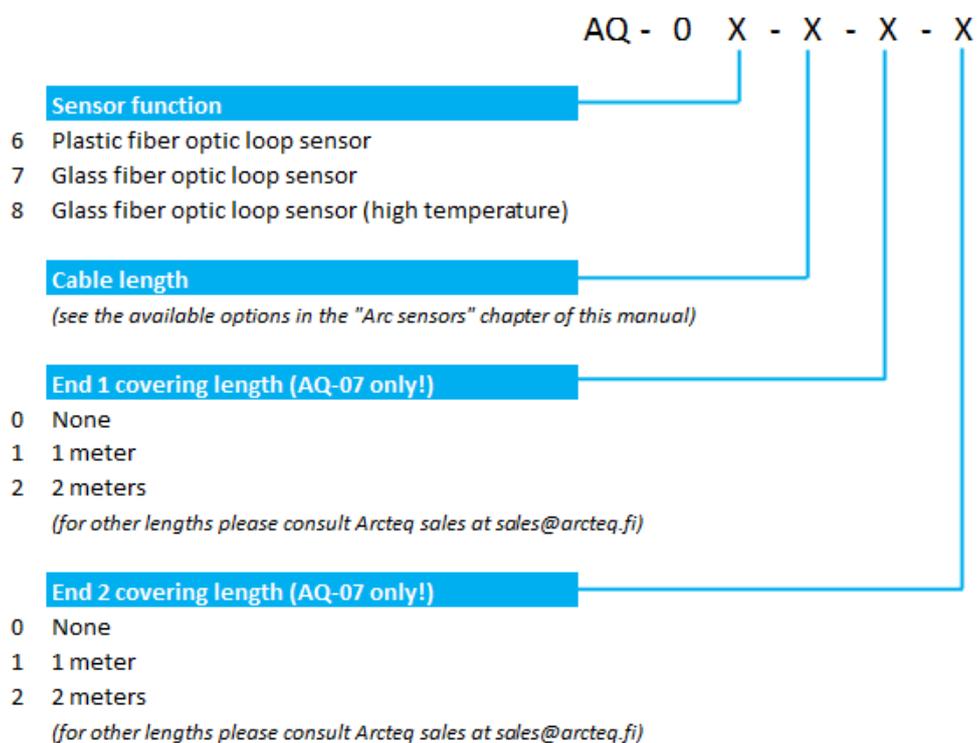

Accessories

Order code	Description	Note	Manufacturer
AQX006	Wall mounting bracket	For AQ-103 and AQ-110x variants (MV and LV).	Arcteq Ltd.
AQX016	Wall mounting bracket	For AQ-101, AQ-101S and AQ-102 units (MV and LV).	Arcteq Ltd.

12 Contact and reference information

Manufacturer

Arcteq Relays Ltd.

Visiting and postal address

Kvartsikatu 2 A 1

65300 Vaasa, Finland

Contacts

Phone:	+358 10 3221 370
Website:	arcteq.fi
Technical support:	support.arcteq.fi
	+358 10 3221 388 (EET 9:00 – 17.00)
E-mail (sales):	sales@arcteq.fi