

# AQ-M210

Motor protection IED

Instruction manual



## Table of contents

<b>1 Document information</b> .....	<b>6</b>
1.1 Version 2 revision notes .....	6
1.2 Version 1 revision notes .....	7
<b>2 Abbreviations</b> .....	<b>9</b>
<b>3 General</b> .....	<b>11</b>
<b>4 IED user interface</b> .....	<b>12</b>
4.1 Panel structure .....	12
4.1.1 Local panel structure .....	12
4.2 Mimic and main menu .....	13
4.2.1 Basic configuration .....	13
4.2.2 Navigation in the main configuration menus .....	13
4.3 General menu .....	14
4.4 Protection menu .....	17
4.5 Control menu .....	23
4.6 Communication menu .....	38
4.7 Measurement menu .....	41
4.8 Monitoring menu .....	44
4.9 Configuring user levels and their passwords .....	47
<b>5 Functions</b> .....	<b>50</b>
5.1 Functions included in AQ-M210 .....	50
5.2 Measurements .....	51
5.2.1 Current measurement and scaling .....	51
5.2.2 Frequency tracking and scaling .....	64
5.3 Protection functions .....	67
5.3.1 General properties of a protection function .....	67
5.3.2 Non-directional overcurrent protection ( $I>$ ; 50/51) .....	76
5.3.3 Non-directional earth fault protection ( $I0>$ ; 50N/51N) .....	83
5.3.4 Negative sequence overcurrent/ phase current reversal/ current unbalance protection ( $I2>$ ; 46/46R/46L) .....	87
5.3.5 Harmonic overcurrent protection ( $Ih>$ ; 50H/51H/68H) .....	93
5.3.6 Circuit breaker failure protection (CBFP; 50BF/52BF) .....	99
5.3.7 Low-impedance or high-impedance restricted earth fault/ cable end differential protection ( $I0d>$ ; 87N) .....	114
5.3.8 Motor status monitoring .....	123
5.3.9 Motor start/ locked rotor monitoring ( $Ist>$ ; 48/14) .....	133
5.3.10 Frequent start protection ( $N>$ ; 66) .....	144
5.3.11 Non-directional undercurrent protection ( $I<$ ; 37) .....	150
5.3.12 Mechanical jam protection ( $I_m>$ ; 51M) .....	154
5.3.13 Machine thermal overload protection (TM>; 49M) .....	161
5.3.14 Resistance temperature detectors .....	194
5.3.15 Arc fault protection ( $I_{Arc}>/I_{0Arc}>$ ; 50Arc/50NArc) .....	199
5.3.16 Programmable stage ( $PGx>/<$ ; 99) .....	208
5.4 Control functions .....	222
5.4.1 Setting group selection .....	222
5.4.2 Object control and monitoring .....	230
5.4.3 Indicator object monitoring .....	240
5.4.4 Milliampere output control .....	241
5.4.5 Programmable control switch .....	243
5.4.6 Analog input scaling curves .....	244
5.4.7 Logical outputs .....	247
5.4.8 Logical inputs .....	247
5.5 Monitoring functions .....	248
5.5.1 Current transformer supervision .....	248
5.5.2 Circuit breaker wear .....	258
5.5.3 Total harmonic distortion (THD) .....	262

5.5.4 Disturbance recorder (DR) .....	267
5.5.5 Measurement recorder .....	278
5.5.6 Measurement value recorder .....	282
<b>6 System integration.....</b>	<b>287</b>
6.1 Communication protocols .....	287
6.1.1 NTP .....	287
6.1.2 Modbus/TCP and Modbus/RTU .....	288
6.1.3 Modbus I/O .....	289
6.1.4 IEC 61850 .....	289
6.1.5 GOOSE .....	291
6.1.6 IEC 103 .....	291
6.1.7 DNP3 .....	292
6.1.8 IEC 101/104 .....	294
6.1.9 SPA .....	296
6.2 Analog fault registers .....	296
6.3 Real-time measurements to communication .....	296
<b>7 Connections and application examples.....</b>	<b>299</b>
7.1 Connections of AQ-M210 .....	299
7.2 Application example and its connections.....	301
7.3 Two-phase, three-wire ARON input connection .....	302
7.4 Trip circuit supervision (95) .....	303
<b>8 Construction and installation .....</b>	<b>308</b>
8.1 Construction .....	308
8.2 CPU module .....	311
8.3 Current measurement module .....	313
8.4 Digital input module (optional) .....	314
8.5 Digital output module (optional) .....	316
8.6 Arc protection module (optional) .....	317
8.7 RTD input module (optional).....	318
8.8 Serial RS-232 communication module (optional) .....	319
8.9 LC 100 Mbps Ethernet communication module (optional).....	321
8.10 Double ST 100 Mbps Ethernet communication module (optional) .....	322
8.11 Double RJ-45 10/100 Mbps Ethernet communication module (optional) .....	324
8.12 Milliampere (mA) I/O module (optional) .....	326
8.13 Dimensions and installation.....	326
<b>9 Technical data .....</b>	<b>329</b>
9.1 Hardware.....	329
9.1.1 Measurements .....	329
9.1.1.1 Current measurement.....	329
9.1.1.2 Frequency measurement .....	330
9.1.2 CPU & Power supply .....	330
9.1.2.1 Auxiliary voltage.....	330
9.1.2.2 CPU communication ports.....	331
9.1.2.3 CPU digital inputs .....	332
9.1.2.4 CPU digital outputs.....	333
9.1.3 Option cards .....	333
9.1.3.1 Digital input module .....	333
9.1.3.2 Digital output module.....	334
9.1.3.3 Arc protection module .....	334
9.1.3.4 Milliampere module (mA out & mA in) .....	335
9.1.3.5 RTD input module .....	336
9.1.3.6 RS-232 & serial fiber communication module.....	336
9.1.3.7 Double LC 100 Mbps Ethernet communication module .....	336
9.1.4 Display .....	337
9.2 Functions.....	337
9.2.1 Protection functions.....	337
9.2.1.1 Non-directional overcurrent protection ( $I >$ ; 50/51).....	337
9.2.1.2 Non-directional earth fault protection ( $I_0 >$ ; 50N/51N).....	338

9.2.1.3 Negative sequence overcurrent/ phase current reversal/ current unbalance protection ( $I_{2>}$ ; 46/46R/46L).....	339
9.2.1.4 Harmonic overcurrent protection ( $I_h$ ; 50H/51H/68H).....	339
9.2.1.5 Circuit breaker failure protection (CBFP; 50BF/52BF) .....	340
9.2.1.6 Low-impedance or high-impedance restricted earth fault/ cable end differential protection ( $I_{0d>}$ ; 87N) .....	341
9.2.1.7 Machine thermal overload protection (TM>; 49M).....	342
9.2.1.8 Motor start/ locked rotor monitoring ( $I_{st>}$ ; 48/14) .....	342
9.2.1.9 Frequent start protection (N>; 66).....	343
9.2.1.10 Non-directional undercurrent protection ( $I_{<}$ ; 37).....	344
9.2.1.11 Mechanical jam protection ( $I_m$ ; 51M).....	344
9.2.1.12 Resistance temperature detectors .....	345
9.2.1.13 Arc fault protection ( $I_{Arc>}/I_{0Arc>}$ ; 50Arc/50NArc) (optional).....	345
9.2.2 Control functions .....	346
9.2.2.1 Setting group selection .....	346
9.2.2.2 Object control and monitoring.....	346
9.2.3 Monitoring functions .....	346
9.2.3.1 Current transformer supervision .....	346
9.2.3.2 Circuit breaker wear monitoring .....	347
9.2.3.3 Total harmonic distortion.....	347
9.2.3.4 Disturbance recorder.....	348
9.3 Tests and environmental .....	348
<b>10 Ordering information .....</b>	<b>351</b>
<b>11 Contact and reference information.....</b>	<b>353</b>

## Disclaimer

Please read these instructions carefully before using the equipment or taking any other actions with respect to the equipment. Only trained and qualified persons are allowed to perform installation, operation, service or maintenance of the equipment. Such qualified persons have the responsibility to take all appropriate measures, including e.g. use of authentication, encryption, anti-virus programs, safe switching programs etc. necessary to ensure a safe and secure environment and usability of the equipment. The warranty granted to the equipment remains in force only provided that the instructions contained in this document have been strictly complied with.

Nothing contained in this document shall increase the liability or extend the warranty obligations of the manufacturer Arcteq Relays Ltd. The manufacturer expressly disclaims any and all liability for any damages and/or losses caused due to a failure to comply with the instructions contained herein or caused by persons who do not fulfil the aforementioned requirements. Furthermore, the manufacturer shall not be liable for possible errors in this document.

Please note that you must always comply with applicable local legislation and regulations. The manufacturer gives no warranties that the content of this document is in all respects in line with local laws and regulations and assumes no liability for such possible deviations.

You are advised to notify the manufacturer in case you become aware of any errors in this document or of defects in the equipment.

The manufacturer reserves the right to update or amend this document at any time.

## Copyright

Copyright © Arcteq Relays Ltd. 2021. All rights reserved.

# 1 Document information

## 1.1 Version 2 revision notes

Table. 1.1 - 1. Version 2 revision notes

Revision	2.00
Date	6.6.2019
Changes	<ul style="list-style-type: none"> <li>- New more consistent look.</li> <li>- Improved descriptions generally in many chapters.</li> <li>- Improved readability of a lot of drawings and images.</li> <li>- Updated protection functions included in every IED manual.</li> <li>- Every protection IED type now has connection drawing, application example drawing with function block diagram and application example with wiring.</li> <li>- Added General-menu description.</li> </ul>
Revision	2.01
Date	6.11.2019
Changes	<ul style="list-style-type: none"> <li>- Added description for LED test and button test.</li> <li>- Complete rewrite of every chapter.</li> <li>- Improvements to many drawings and formula images.</li> <li>- Order codes revised.</li> <li>- Added double ST 100 Mbps Ethernet communication module and Double RJ45 10/100 Mbps Ethernet communication module descriptions</li> </ul>
Revision	2.02
Date	7.7.2020
Changes	- A number of image descriptions improved.
Revision	2.03
Date	27.8.2020

Changes	<ul style="list-style-type: none"> <li>- Terminology consistency improved (e.g. binary inputs are now always called digital inputs).</li> <li>- Tech data modified to be more informative about what type of measurement inputs are used (phase currents/voltages, residual currents/voltages), what component of that measurement is available (RMS, TRMS, peak-to-peak) and possible calculated measurement values (powers, impedances, angles etc.).</li> <li>- Tech data updated: non-directional overcurrent</li> <li>- Tech data updated: non-directional earthfault</li> <li>- Tech data updated: current unbalance</li> <li>- Improvements to many drawings and formula images.</li> <li>- Improved and updated IED user interface display images.</li> <li>- AQ-M210 Functions included list Added: Indicator objects, cold load pick-up, programmable control switches, mA output control, measurement recorder, non-directional undercurrent and running hour counter.</li> <li>- Added 6th harmonic to harmonic overcurrent protection function.</li> <li>- Changed disturbance recorder maximum digital channel amount from 32 to 95.</li> <li>- Added residual current coarse and fine measurement data to disturbance recorder description.</li> <li>- HSO1 and HSO2 connection swapped in arc protection card (was way wrong before).</li> <li>- Updated I01 and I02 rated current range.</li> <li>- Added inches to Dimensions and installation chapter.</li> <li>- Added raising frames, wall mounting bracket, combiflex frame to order code.</li> <li>- Added logical input and logical output function descriptions.</li> <li>- Additions to Abbreviations chapter.</li> <li>- Added button test description to Local panel structure chapter.</li> <li>- Added Fault register view to Basic configuration chapter.</li> <li>- Added parameter descriptions to General menu IED user interface chapter.</li> <li>- Protection IED user interface chapter almost completely rewritten and restructured.</li> <li>- Added new parameter descriptions to Monitoring menu IED user interface chapter.</li> <li>- Added note to Configuring user levels and passwords chapter that user level with a password automatically locks itself after 30 minutes of inactivity.</li> <li>- Added more "Tripped stage" indications and fault types to Measurement value recorder function.</li> <li>- Updated: Digital input activation and release threshold setting ranges and added drop-off delay setting.</li> <li>- Added sample rate to voltage and current measurement tech data.</li> </ul>
Revision	2.04
Date	8.6.2021
Changes	<ul style="list-style-type: none"> <li>- increased the consistency in terminology</li> <li>- various image upgrades</li> <li>- visual update to the order codes</li> </ul>

## 1.2 Version 1 revision notes

Table. 1.2 - 2. Version 1 revision notes

Revision	1.00
Date	8.4.2013

Changes	- The first revision for AQ-M210.
Revision	1.01
Date	29.8.2013
Changes	- Application example for ARON input connection added to chapter 8.0. - Application example for trip circuit supervision. - Added arc protection description and technical data. - Added arc protection card description and technical data
Revision	1.02
Date	20.1.2015
Changes	- Added RTD&mA input module, Double LC 100Mb Ethernet card module and Serial RS232 & serial fiber module hardware descriptions - Added system integration text: SPA - Order code updated
Revision	1.03
Date	12.2.2015
Changes	- Motor thermal protection description parameters revised
Revision	1.04
Date	12.1.2016
Changes	- Added digital input operation description.
Revision	1.05
Date	30.5.2016
Changes	- Added PCB and Terminal options to order code table.
Revision	1.06
Date	30.8.2016
Changes	- Added password set up guide (previously only in AQivate user guide)
Revision	1.07
Date	9.2.2017
Changes	- Added Programmable Control Switch and Indicator Object descriptions - Order code updated
Revision	1.08
Date	20.12.2017
Changes	- Measurement value recorder description - ZCT connection added to current measurement description - Internal harmonics blocking to I>,I0> function descriptions - Non-standard delay curves added - Event lists revised on several functions - RTD&mA card description improvements - Ring-lug CT card option description added - Fault view description added - New U> and U< function measurement modes documented - Order code revised
Revision	1.09
Date	14.8.2018
Changes	- Added mA output option card description and ordercode - Added HMI display technical data

## 2 Abbreviations

AI	–	Analog input
AR	–	Auto-recloser
ASDU	–	Application service data unit
AVR	–	Automatic voltage regulator
BCD	–	Binary-coded decimal
CB	–	Circuit breaker
CBFP	–	Circuit breaker failure protection
CLPU	–	Cold load pick-up
CPU	–	Central processing unit
CT	–	Current transformer
CTM	–	Current transformer module
CTS	–	Current transformer supervision
DG	–	Distributed generation
DHCP	–	Dynamic Host Configuration Protocol
DI	–	Digital input
DO	–	Digital output
DOL	–	Direct-on-line
DR	–	Disturbance recorder
DT	–	Definite time
FF	–	Fundamental frequency
FFT	–	Fast Fourier transform
FTP	–	File Transfer Protocol
GI	–	General interrogation
HMI	–	Human-machine interface
HR	–	Holding register
HV	–	High voltage
HW	–	Hardware
IDMT	–	Inverse definite minimum time
IED	–	Intelligent electronic device

IGBT – Insulated-gate bipolar transistor

I/O – Input and output

IRIG-B – Inter-range instruction group, timecode B

LCD – Liquid-crystal display

LED – Light emitting diode

LV – Low voltage

NC – Normally closed

NO – Normally open

NTP – Network Time Protocol

RMS – Root mean square

RSTP – Rapid Spanning Tree Protocol

RTD – Resistance temperature detector

RTU – Remote terminal unit

SCADA – Supervisory control and data acquisition

SG – Setting group

SOTF – Switch-on-to-fault

SW – Software

THD – Total harmonic distortion

TRMS – True root mean square

VT – Voltage transformer

VTM – Voltage transformer module

VTS – Voltage transformer supervision

## 3 General

The AQ-M210 motor protection IED is a member of the AQ-200 product line. The hardware and software are modular: the hardware modules are assembled and configured according to the application's I/O requirements and the software determines the available functions. This manual describes the specific application of the AQ-M210 motor protection IED. For other AQ-200 series products please consult their respective device manuals.

AQ-M210 offers a modular motor protection and control solution for small and medium-sized motors. There are up to four (4) option card slots available for additional I/O or communication cards for more comprehensive monitoring and control applications. AQ-M210 communicates using various protocols including the IEC 61850 substation communication standard.

## 4 IED user interface


### 4.1 Panel structure

The user interface section of an AQ-200 series device is divided into two user interface sections: one for the hardware and the other for the software. You can access the software interface either through the front panel or through the AQtivate freeware software suite.

#### 4.1.1 Local panel structure

The front panel of AQ-200 series devices have multiple LEDs, control buttons and a local RJ-45 Ethernet port for configuration. Each unit is also equipped with an RS-485 serial interface and an RJ-45 Ethernet interface on the back of the device. See the image and list below.

Figure. 4.1.1 - 1. Local panel structure.

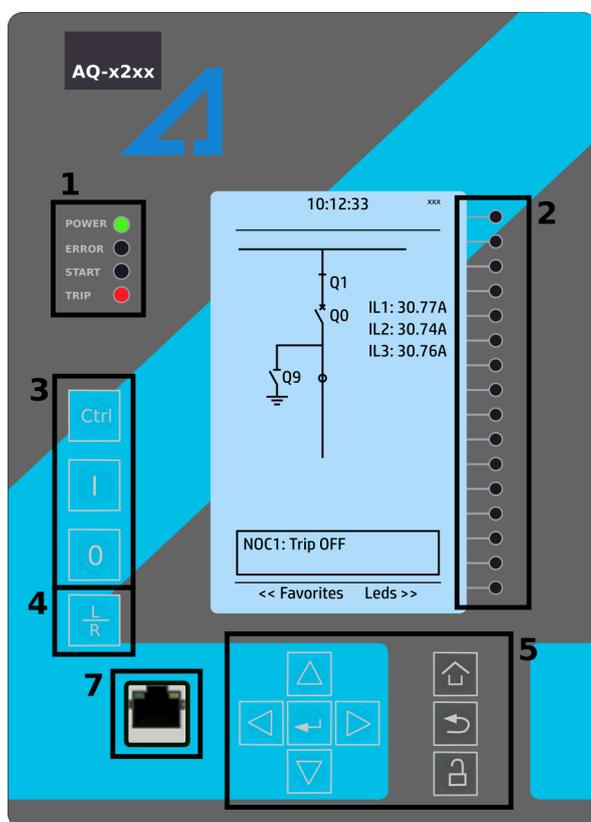

1. Four (4) default LEDs: "Power", "Error", "Start" (configurable) and "Trip" (configurable).
2. Sixteen (16) freely configurable LEDs with programmable legend texts.
3. Three (3) object control buttons: Choose the controllable object with the **Ctrl** button and control the breaker or other object with the **I** and **O** buttons.
4. The **L/R** button switches between the local and the remote control modes.
5. Eight (8) buttons for IED local programming: the four navigation arrows and the **Enter** button in the middle, as well as the **Home**, the **Back** and the password activation buttons.
6. One (1) RJ-45 Ethernet port for IED configuration.

When the unit is powered on, the green "Power" LED is lit. When the red "Error" LED is lit, the relay has an internal (hardware or software) error that affects the operation of the unit. The activation of the yellow "Start" LED and the red "Trip" LED are based on the setting the user has put in place in the software.

The sixteen freely configurable LEDs are located on the right side of the display. Their activation and color (green or yellow) are based on the settings the user has put in place in the software.


Holding the I (object control) button down for five seconds brings up the button test menu. It displays all the physical buttons on the front panel. Pressing any of the listed buttons marks them as tested. When all buttons are marked as having been tested, device will return back to default view.

## 4.2 Mimic and main menu

### 4.2.1 Basic configuration

The user interface is divided into seven (7) quick displays: "Mimic", "LEDs", "Events", "Clock", "Measurement", "Favorites" and "Fault register". The default quick display (as presented in the image below) is the mimic view; you can move through these menus by pressing the left and right arrow buttons. Please note that the available quick display carousel view might be different if you have changed the view with AQtivate's Carousel Designer tool.

Figure. 4.2.1 - 2. Basic navigation (general).

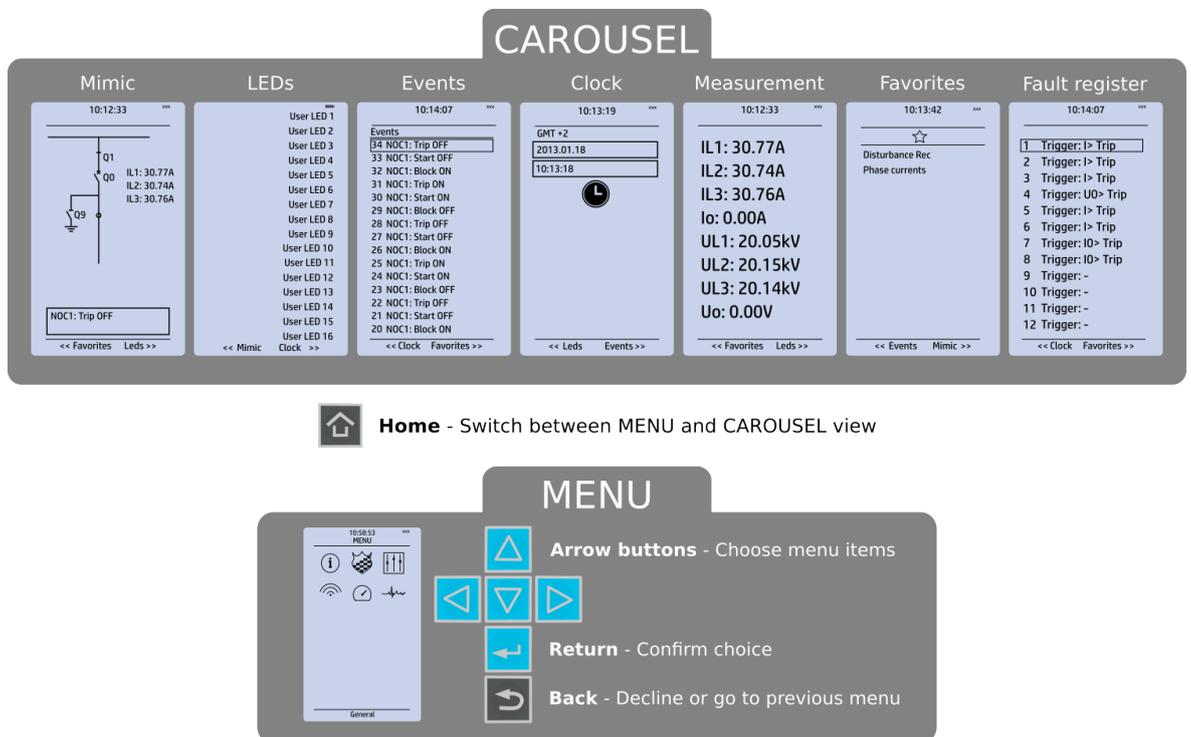

The **Home** button switches between the quick display carousel and the main display with the six (6) main configuration menus (*General, Protection, Control, Communication, Measurements and Monitoring*). Note that the available menus vary depending on the device type. You can select one of the menus by using the four navigation arrows and pressing **Enter** in the middle. The **Back** button takes you back one step. If you hold it down for three seconds, it takes you back to the main menu. You can also use it to reset the alarm LEDs you have set. The password activation button (with the padlock icon) takes you to the password menu where you can enter the passwords for the various user levels (User, Operator, Configurator, and Super-user).

### 4.2.2 Navigation in the main configuration menus


All the settings in this device have been divided into the following six (6) main configuration menus:

- General
- Protection

- Control
- Communication
- Measurement
- Monitoring.

They are presented in the image below. The available menus vary according to the device type.


Figure. 4.2.2 - 3. Main configuration menus.

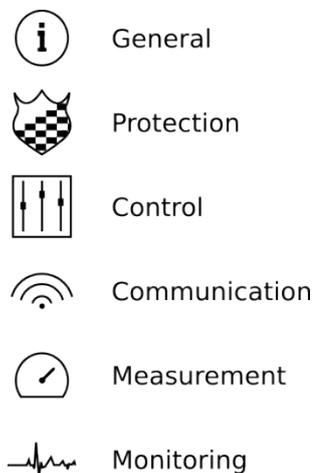

### 4.3 General menu

The *General* main menu is divided into two submenus: the *Device info* tab presents the information of the device, while the *Function comments* tab allows you to view all comments you have added to the functions.

Figure. 4.3 - 4. General menu structure

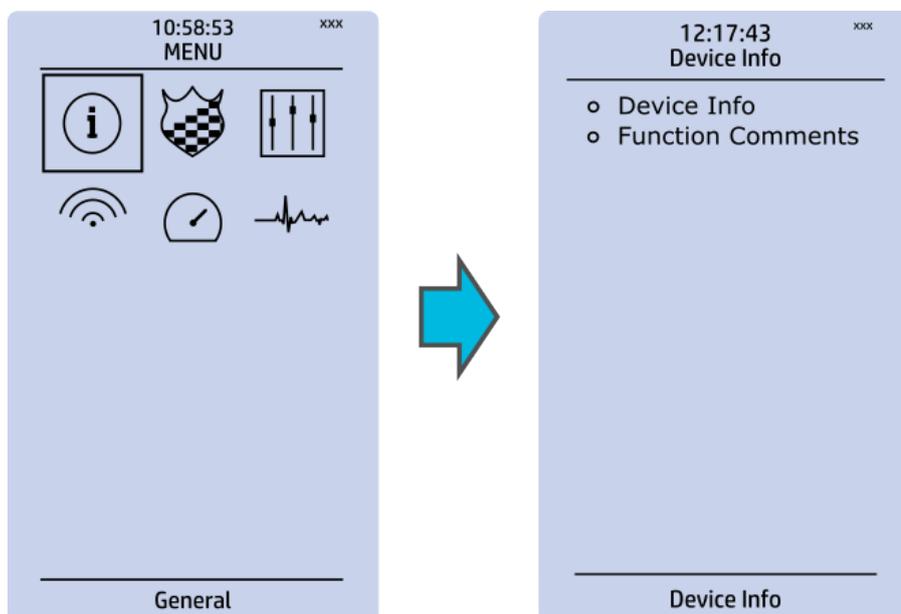

## Device info

Figure. 4.3 - 5. Device info.

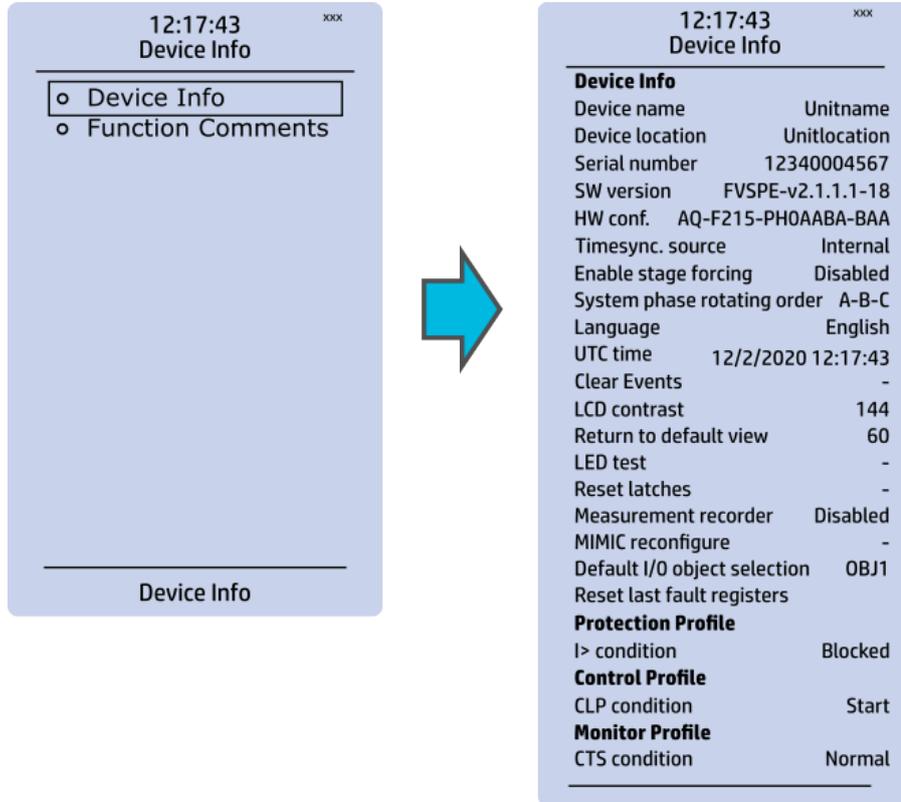


Table. 4.3 - 3. Parameters and indications in the *General* menu.


Name	Range	Step	Default	Description
Device name	-	-	Unitname	The file name uses these fields when loading the .aqc configuration file from the AQ-200 unit.
Device location	-	-	Unitlocation	
Serial number	-	-	-	Displays the unit's unique serial number. The serial number is also printed on the sticker located on the side of the unit.
Firmware version	-	-	-	Displays the software version (firmware) used by the unit. Upgradable by the user if a newer version is available.
Hardware configuration	-	-	-	Displays the hardware configuration of the unit. The hardware configuration is also printed on the sticker located on the side of the unit.
Time synchronization source	0: Internal 1: External NTP 2: External Serial 3: IRIG-B	-	0: Internal	If an external clock time synchronization source is available, the type is defined with this parameter. In the internal mode there is no external Timesync source. IRIG-B requires a serial fiber communication option card.
Enable stage forcing	0: Disabled 1: Enabled	-	0: Disabled	When this parameter is enabled it is possible for the user to force the protection, control and monitoring functions to different statuses like START and TRIP. This is done in the function's <i>Info</i> page with the <i>Force status to</i> parameter.
System phase rotating order	0: A-B-C 1: A-C-B	-	0: A-B-C	Allows the user to switch the expected order in which the phase measurements are wired to the unit.

Name	Range	Step	Default	Description
Language	0: User defined 1: English 2: Finnish 3: Swedish 4: Spanish 5: French 6: German 7: Russian 8: Ukraine	-	1: English	Changes the language of the parameter descriptions in the HMI. If the language has been set to "Other" in the settings of the AQtivate setting tool, AQtivate follows the value set into this parameter.
UTC time	-	-	-	Displays the UTC time used by the unit without time zone corrections.
Clear events	0: - 1: Clear	-	0: -	Clears the event history recorded in the AQ-200 device.
LCD Contrast	0...255	1	120	Changes the contrast of the LCD display.
Return to default view	0...3600 s	10 s	0 s	If the user navigates to a menu and gives no input after a period of time defined with this parameter, the unit automatically returns to the default view. If set to 0 s, this feature is not in use.
LED test	0: - 1: Activated	-	0: -	When activated, all LEDs are lit up. LEDs with multiple possible colors blink each color.
Reset latches	0: - 1: Reset	-	0: -	Resets the latched signals in the logic and the matrix. When a reset command is given, the parameter automatically returns back to "-".
Measurement recorder	0: Disabled 1: Enabled	-	0: Disabled	Enables the measurement recorder tool, further configured in <i>Tools</i> → <i>Misc</i> → <i>Measurement recorder</i> .
Reconfigure mimic	0: - 1: Reconfigure	-	0: -	Reloads the mimic to the unit.
Reset last fault registers	-	-	-	Activation of input selected here resets the values in "Fault registers" view in carousel.
Protection/Control/Monitor profile	-	-	-	Displays the status of all enabled functions.

## Function comments

Function comments displays notes of each function that has been activated in the Protection, Control and Monitoring menu. Function notes can be edited by the user.


Figure. 4.3 - 6. Function comments.

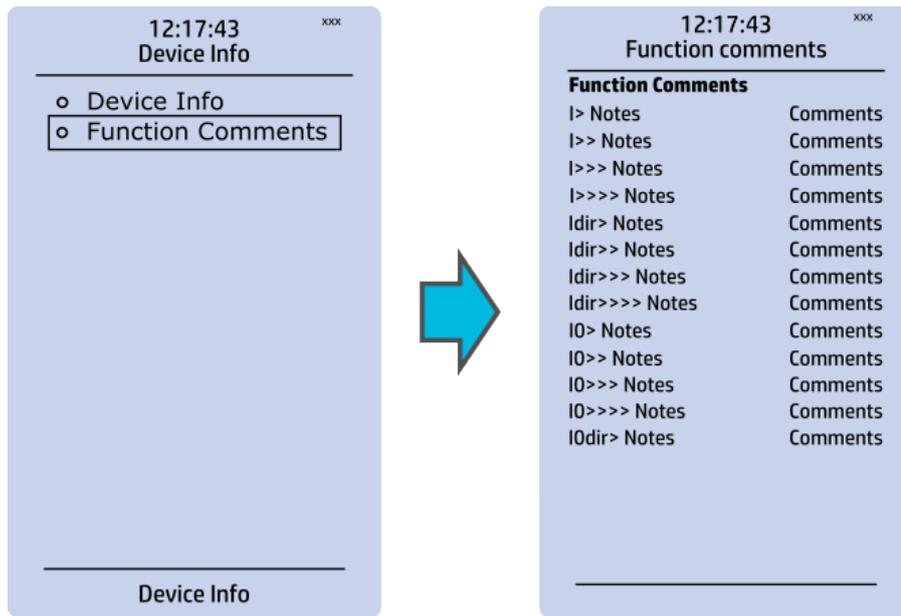

## 4.4 Protection menu


### General

Figure. 4.4 - 7. Protection menu structure

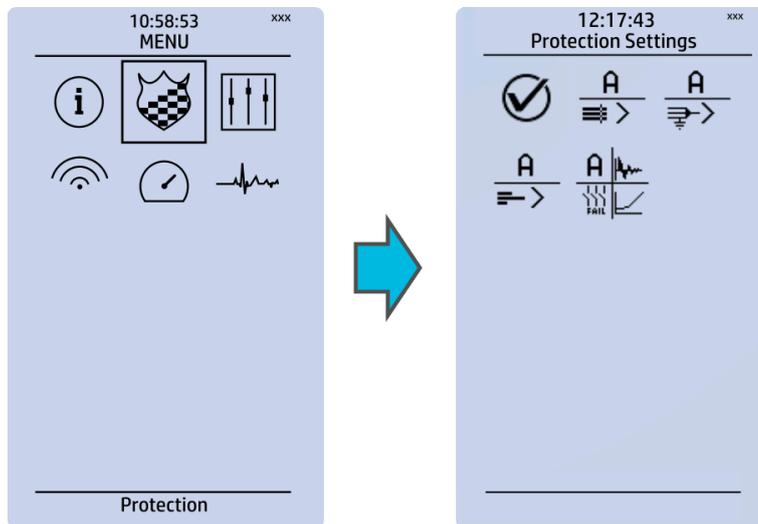

The *Protection* main menu includes the *Stage activation* submenu as well as the submenus for all the various protection functions, categorized under the following modules: "Arc protection", "Current", "Voltage", "Frequency", "Sequence" and "Supporting" (see the image below). The available functions depend on the device type in use.


Figure. 4.4 - 8. Protection menu view.

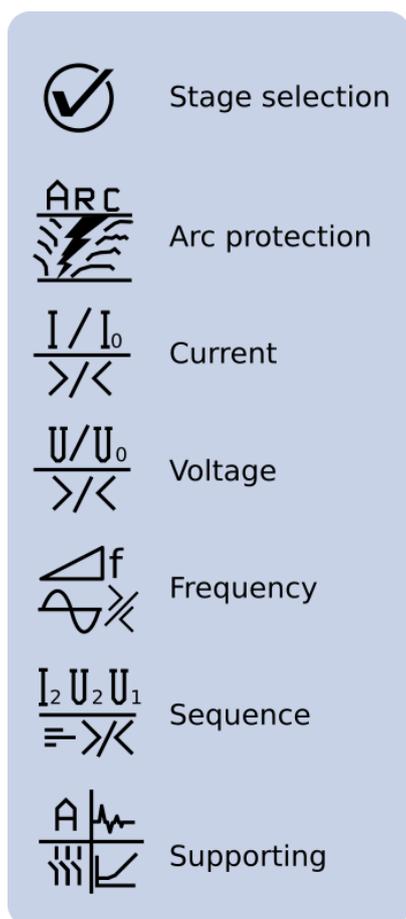

### Stage activation

You can activate the various protection stages in the *Stage activation* submenu (see the images below). Each protection stage and supporting function is disabled by default. When you activate one of the stages, its activated menu appears in the stage-specific submenu. For example, the I> (overcurrent) protection stage can be found in the "Current" module, whereas the U< (undervoltage) protection stage can be found in the "Voltage" module.


Figure. 4.4 - 9. Submenus for Stage activation.

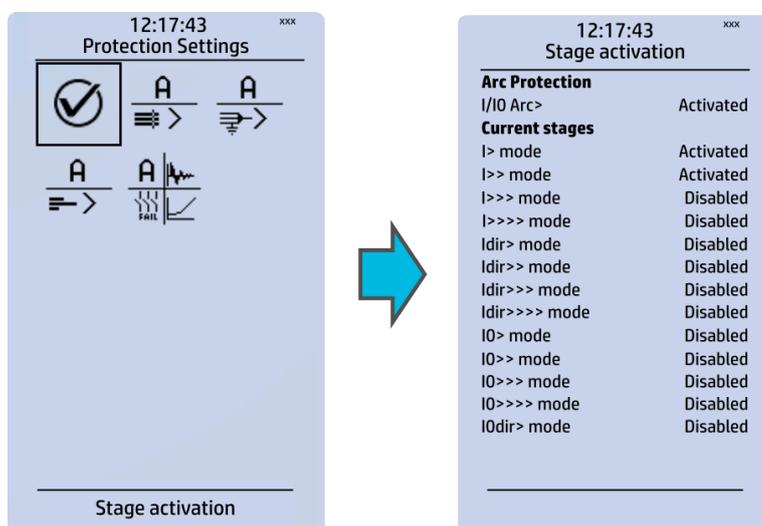

## Example of a protection stage and its use


Once a protection stage has been activated in the *Stage activation* submenu, you can open its own submenu. In the image series below, the user has activated three current stages. The user accesses the list of activated current stages through the "Current" module, and selects the I> stage for further inspection.

Figure. 4.4 - 10. Accessing the submenu of an individual activated stage.

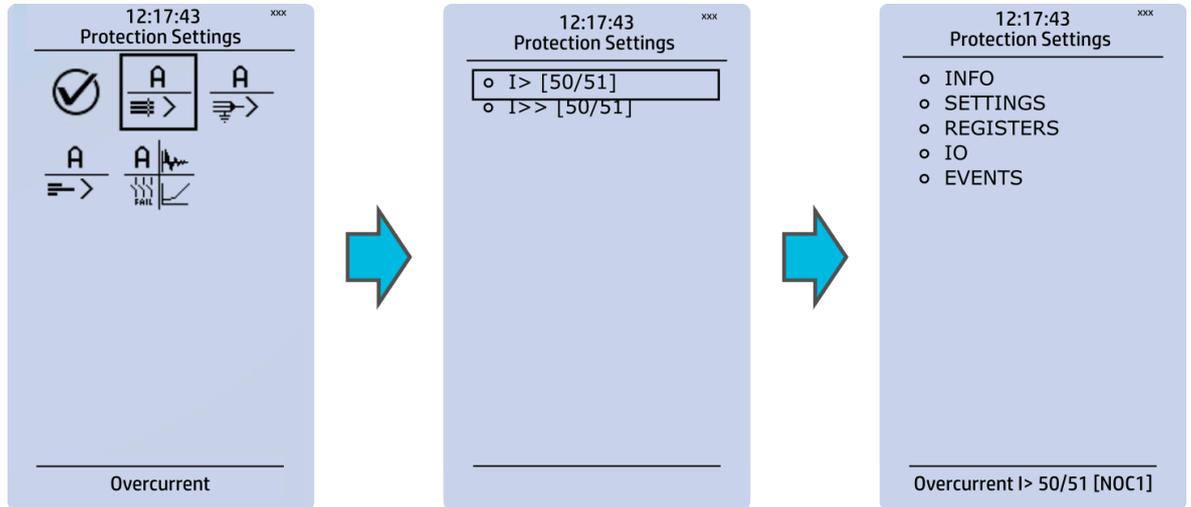

Each protection stage and supporting function has five sections in their stage submenus: "Info", "Settings", "Registers", "I/O" and "Events".

Figure. 4.4 - 11. Info.

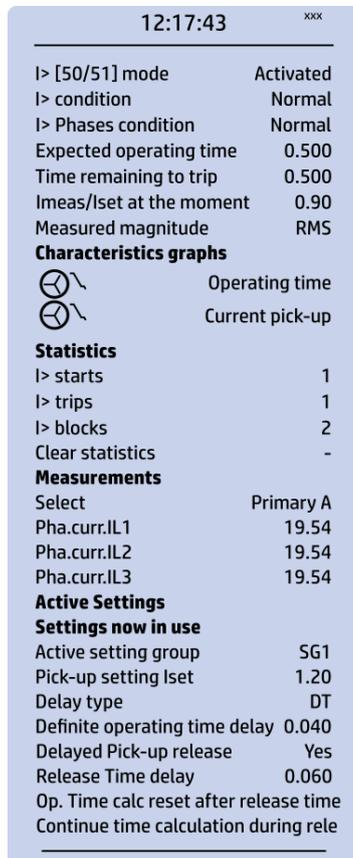


The "Info" section offers many details concerning the function and its status:

- Function condition: indicates the stage's condition which can be Normal, Start, Trip, or Blocked.
- Expected operating time: Expected time delay from detecting a fault to tripping the breaker. This value can vary during a fault if an inverse curve time delay (IDMT) is used.
- Time remaining to trip: When a fault is detected this value counts down towards zero. When zero is reached, the function will trip.
- Imeas/lset at the moment: Displays the ratio between the measured value and the pick-up level.
- Measured magnitude: In some functions it is possible to choose the monitored magnitude between Peak-to-peak, TRMS, or RMS (the default is RMS; the available magnitudes depend on the function).
- Characteristics graphs: opens graphs related to the protection function.
- Statistics: indicates the number of function starts, trips and blocks (can be cleared through "Clear statistics" → "Clear").
- Measurements: displays the measurements carried out by the function.
- Active settings: displays the setting group that is currently in use and its settings (other setting groups can be set in the "Settings" section).

While the function is activated and disabled in the *Stage activation* submenu, you can disable the function through the "Info" section ("Function mode" at the top of the section).

Figure. 4.4 - 12. Settings.

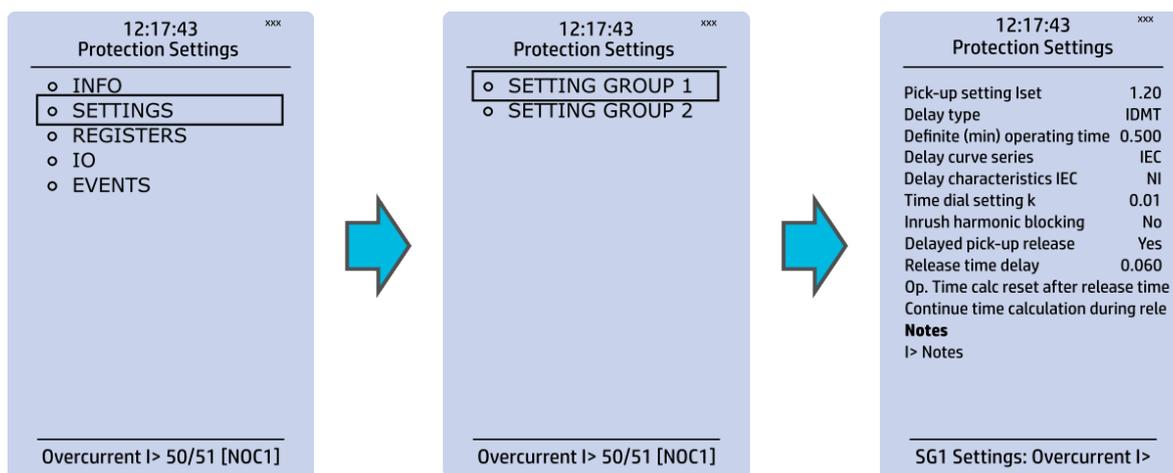


The stage settings vary depending on which protection function they are a part of. By default only one setting group of the eight available setting groups is activated. You can enable more groups in the *Control* → *Setting groups* menu, although they are set here in the "Settings" section.

Most protection functions follow the same structure:

- Pick-up setting: Defines the fault magnitude. Most functions pick-up value is in relation to the current transformer or voltage transformer nominal, but some functions use kW, ohm, Hz and other units. Voltage and current transformers nominal values can be set at *Measurement* → *Transformers*.
- Delay type and operating time delay settings are described in detail in chapter *General properties of a protection function*.

Figure. 4.4 - 13. Registers.

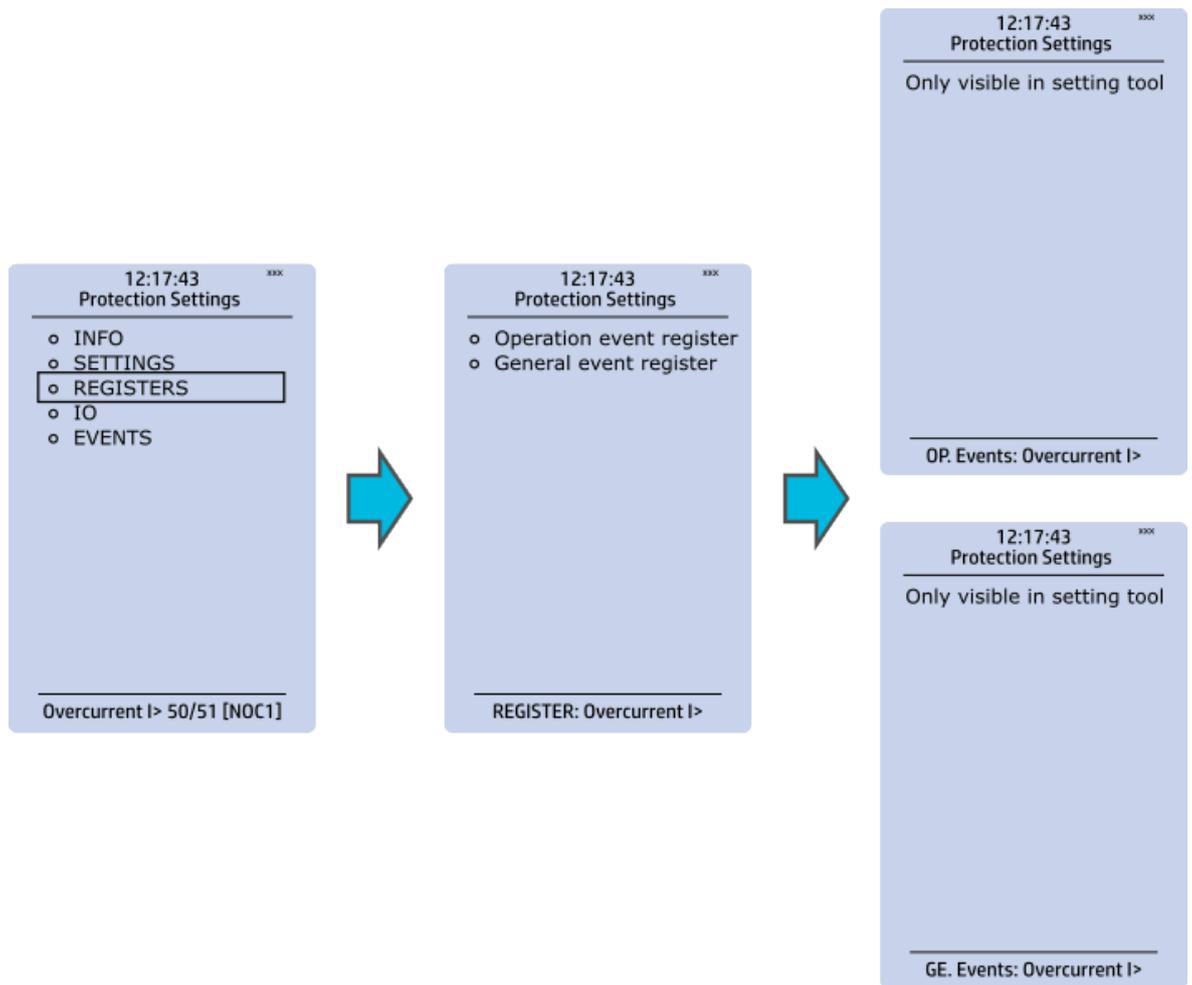


Register menu content is not available in the HMI. It can only be accessed with AQtivate setting tool. Stored in the "Registers" section you can find both "Operation event register" and "General event register".

"Operation event register" stores the function's specific fault data. There are twelve (12) registers, and each of them includes data like the pre-fault value, the fault value, the time stamp and the active group during the trigger. Data included in the register depend on the protection function. You can clear the the operation register by choosing "Clear registers" → "Clear".

"General event register" stores the event generated by the stage. These general event registers cannot be cleared.

Figure. 4.4 - 14. I/O.

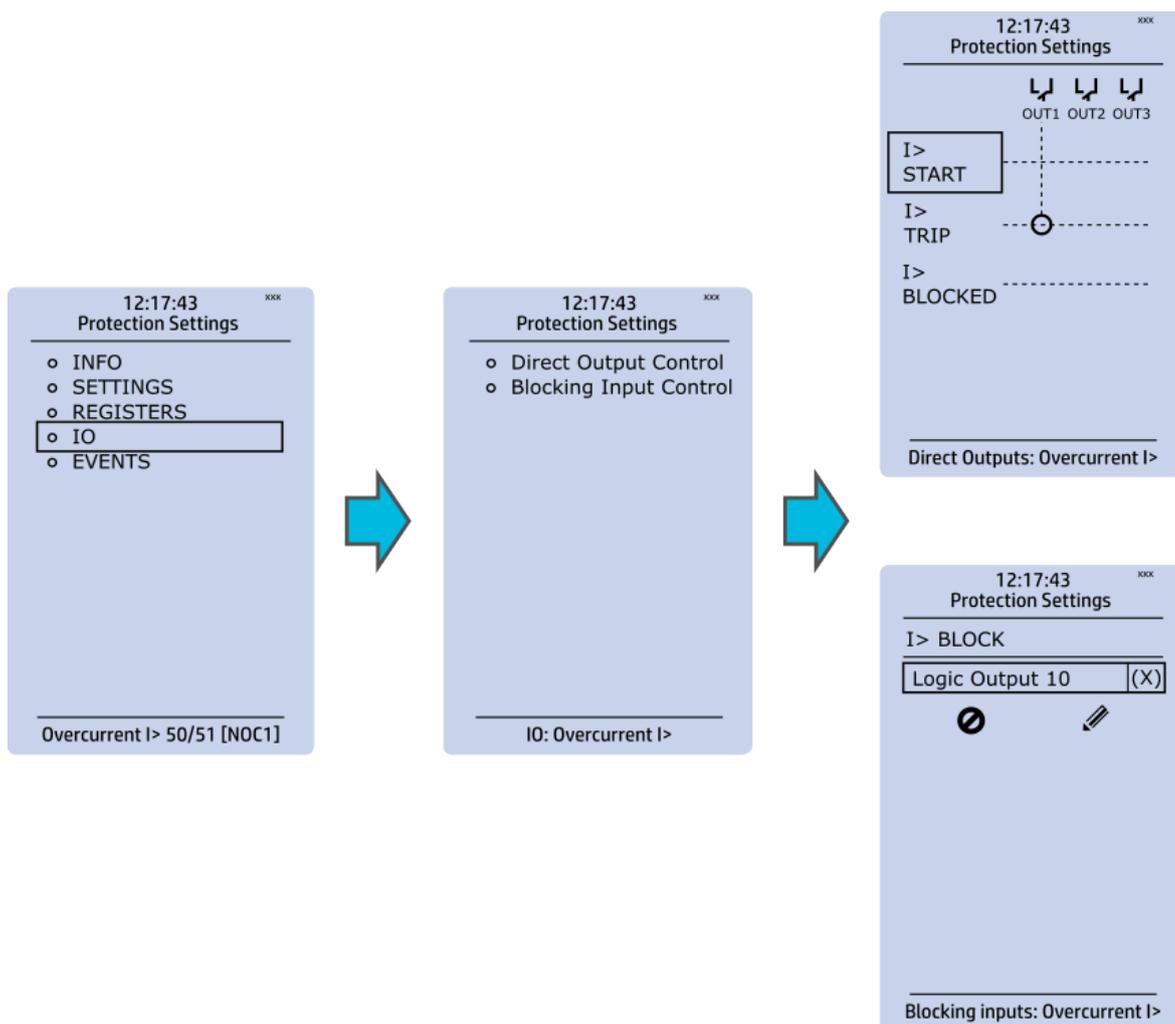

The "I/O" section is divided into two subsections: "Direct output control" and "Blocking input control".

In "Direct output control" you can connect the stage's signals to physical outputs, either to an output relay or an LED (START or TRIP LEDs or one of the 16 user configurable LEDs). If the stage is blocked internally (DI or another signal), you can configure an output to indicate the stage that is blocked. A connection to an output can be either latched ("|x|") or non-latched ("x").

"Blocking input control" allows you to block stages. The blocking can be done by using any of the following:

- digital inputs
- logical inputs or outputs
- the START, TRIP or BLOCKED information of another protection stage
- object status information.


Figure. 4.4 - 15. Events.



You can mask on and mask off the protection stage related events in "Event mask". By default events are masked off. You can activate the desired events by masking them ("x"). Remember to save your maskings by confirming the changes with the check mark icon. If you want to cancel the changes, select the strike-through circle to do so. Only masked events are recorded to event history (which can be accessed in the "Events" view in the user view section).

## 4.5 Control menu


### Main menu

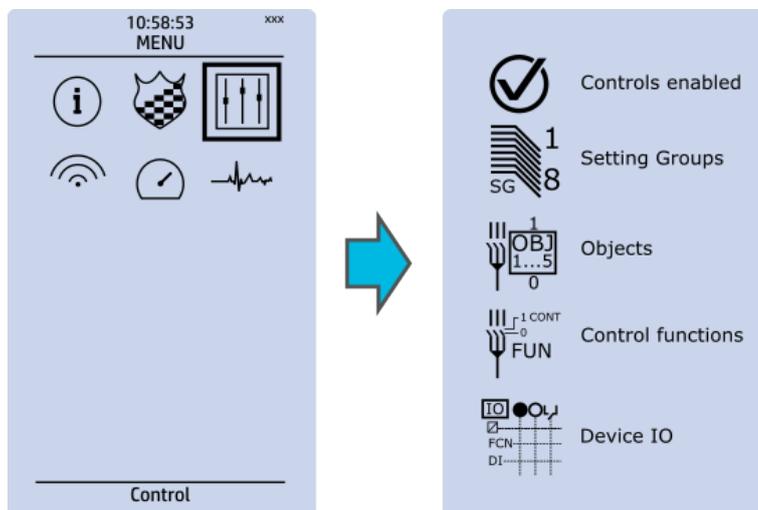

The *Control* main menu includes submenus (see the image above) for enabling the various control functions and objects (*Controls enabled*), for enabling and controlling the setting groups (*Setting groups*), for configuring the objects (*Objects*), for setting the various control functions (*Control functions*), and for configuring the inputs and outputs (*Device I/O*). The available control functions depend on the model of the device in use.

## Controls enabled

Figure. 4.5 - 16. Controls enabled submenu.

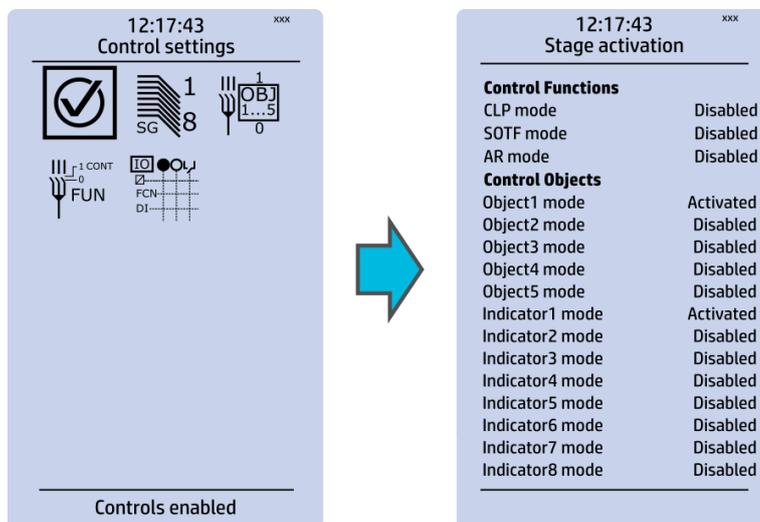


You can activate the selected control functions in the *Controls enabled* submenu. By default all the control functions are disabled. All activated functions can be viewed in the *Control functions* submenu (see the section "Control functions" below for more information).

In this submenu you can also activate and disable controllable objects. As with control functions, all objects are disabled by default. All activated objects can be viewed in the *Objects* submenu (see the section "Objects" below for more information).

## Setting groups

Figure. 4.5 - 17. Setting groups submenu.

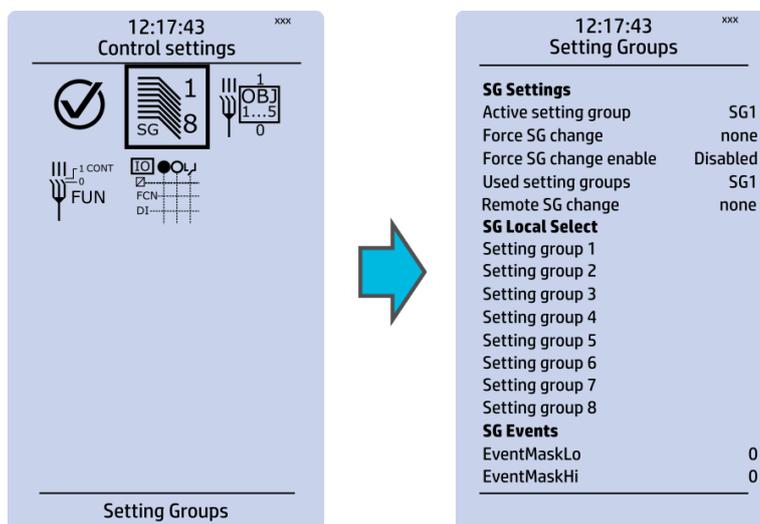


The *Setting groups* submenu displays all the information related to setting group changing, such as the following:

- **Active setting group:** displays the current active setting group (SG1...SG8).
- **Force setting group change:** this setting allows the activation of a setting group at will (please note that Force SG change enable must be "Enabled").
- **Used setting groups:** this setting allows the activation of setting groups SG1...SG8 (only one group is active by default).

- **SG local select:** selects the local control for the different setting groups (can use digital inputs, logical inputs or outputs, RTDs, object status information as well as stage starts, trips or blocks).
- **Remote setting group change:** When enabled it is possible to change the setting group manually through SCADA.
- **SG events:** event masking for setting groups (masks are OFF by default; please note that only masked events are recorded into the event history).


Setting group 1 (SG1) has the highest priority, while Setting group 8 (SG8) has the lowest priority. Setting groups can be controlled with pulses or with both pulses and static signals (see the image below).

Figure. 4.5 - 18. Example of setting group (SG) changing.

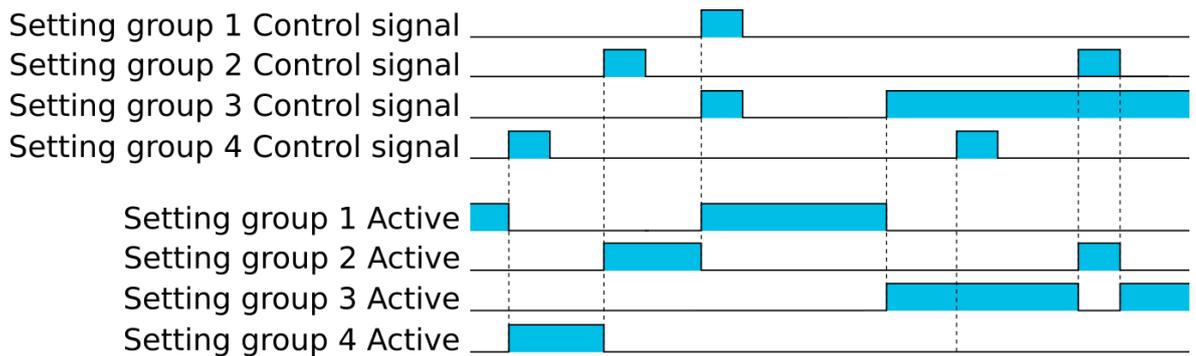


## Objects

Figure. 4.5 - 19. Objects submenu.

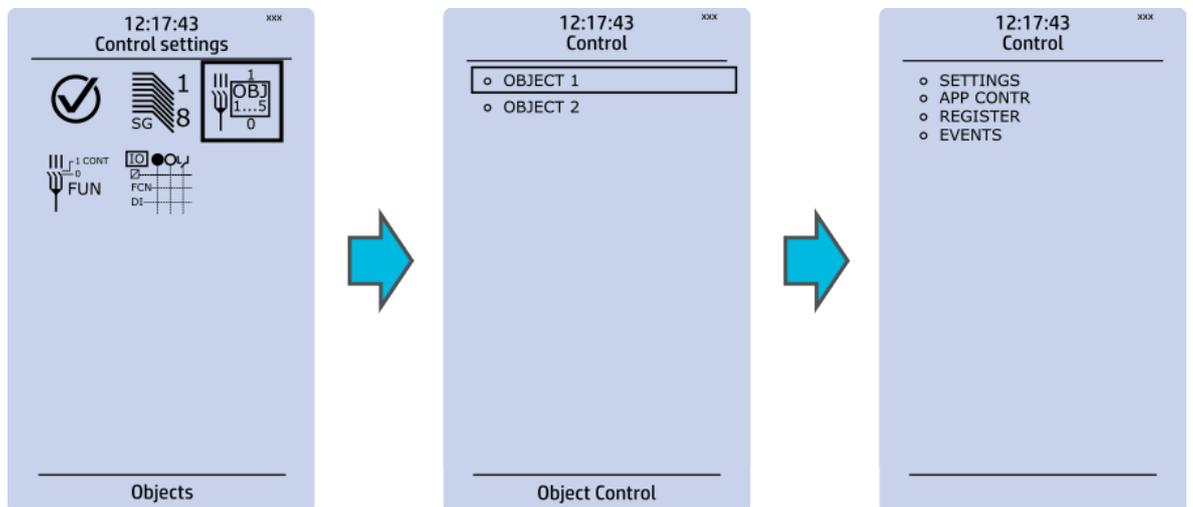

Each activated object is visible in the *Objects* submenu. By default all objects are disabled unless specifically activated in the *Controls* → *Controls enabled* submenu. Each active object has four sections in their submenus: "Settings", "Application control" ("App contr"), "Registers" and "Events". These are described in further detail below.

Figure. 4.5 - 20. Settings section.

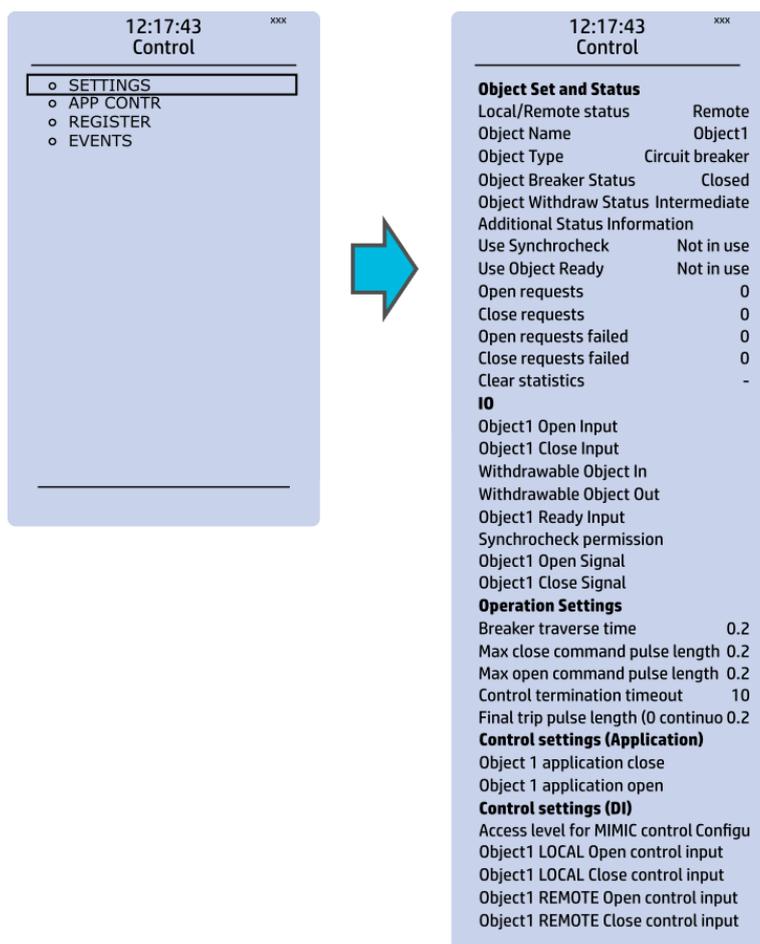

## OBJECT SET AND STATUS

- **Local/Remote status:** control access may be set to Local or Remote (Local by default; please note that when local control is enabled, the object cannot be controlled through the bus and vice versa).
- **Object name:** the name of the object (objects are named "ObjectX" by default).
- **Object type:** selects the type of the object from Grounding disconnecter, Motor-controlled disconnecter, Circuit breaker and Withdrawable circuit breaker (Circuit breaker by default).
- **Object x status:** the status can be Bad, Closed, Open and Intermittent. The status "Intermittent" is the phase between "Open" and "Closed" where both status inputs are 0. The status "Bad" occurs when both status inputs of the object/cart are 1.
- **Additional status information:** gives feedback from the object on whether the opening and closing are allowed or blocked, whether the object is ready, and whether the synchronization status is ok.
- **Use synchrocheck and Use Object ready:** closing the object is forbidden when the sides are not synchronized or when the object is not ready to be closed.
- **Open requests and Close requests:** displays the statistics, i.e. the number of Open and Close requests.
- **Open requests failed and Close requests failed:** displays the statistics of Open and Close request failures. A request is considered to have failed when the object does not change its status as a result of that request.
- **Clear statistics:** statistics can be cleared by choosing "Clear statistics" and then "Clear".

I/O

- An object has both **Open input** and **Close input** signals which are used for indicating the status of the breaker on the HMI and in SCADA. Status can be indicated by any of the following: digital inputs, logical inputs or outputs.
- A withdrawable object has both **In** and **Out** inputs. The status can be indicated by any of the following: digital inputs, logical inputs or outputs.
- Both **Object ready** and **Synchrocheck permission** have status inputs. If either one is used, the input(s) must be active for the relay to be able to give the "Object Close" command.
- **Object open** and **Object close** signals define which digital output is controlled.

#### OPERATION SETTINGS

- **Breaker traverse time:** determines how long a gap there can be between a status change from "Open" to "Closed" before an intermittent status is reported by the function.
- **Max close/open command pulse length:** defines the maximum length of "Open" and "Close" commands. If the status has changed before the maximum pulse length has elapsed, the pulse is cut short.
- **Control termination timeout:** If the status of the object does not change during the set time, an "Open/Close request failed" event is recorded.
- After the set delay, if the controlled object does not respond accordingly, the procedure is terminated and a fail message is issued.


#### CONTROL SETTINGS (APPLICATION)

- **Object application close** and **Object application open:** a signal set to these points can be used to open and close the object. Controlling the object through this point does not follow the local/remote status of the relay.

#### CONTROL SETTINGS (DI)

- **Access level for MIMIC control:** determines the access level required to control the MIMIC (each level has its own password). By default, the access level is set to "Configurator".
- You can use digital inputs to control the object locally or remotely. Remote controlling via the bus is configured on the protocol level.


Figure. 4.5 - 21. Application control section.

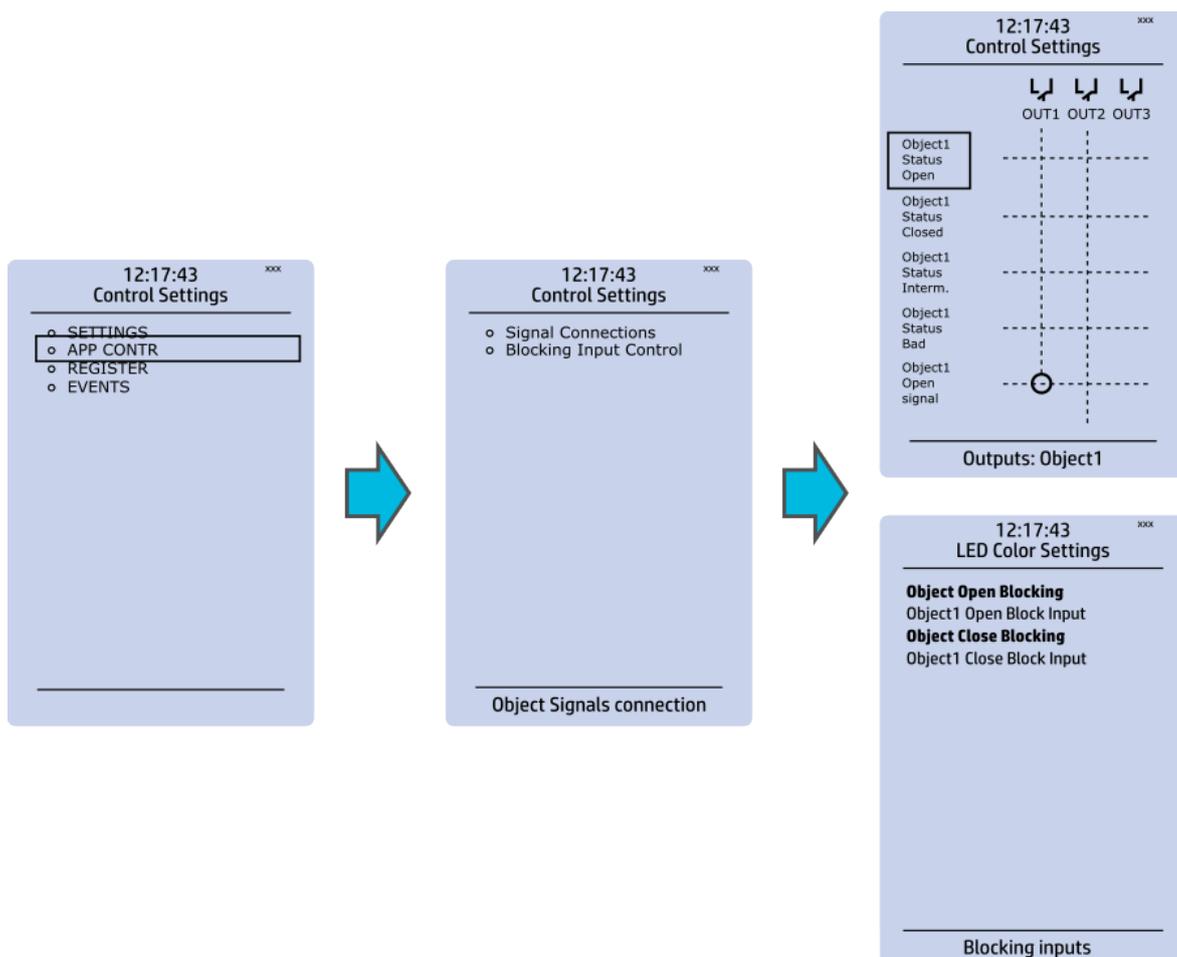

You can connect object statuses directly to specific physical outputs in the "Signal connections" subsection (*Control* → *Application control*). A status can be connected to output relays, as well as to user-configurable LEDs. A connection to an output can be either latched ("|x|") or non-latched ("x").

Object blocking is done in the "Blocking input control" subsection. It can be done by any of the following: digital inputs, logical inputs or outputs, object status information as well as stage starts, trips or blocks.


Figure. 4.5 - 22. Registers section.

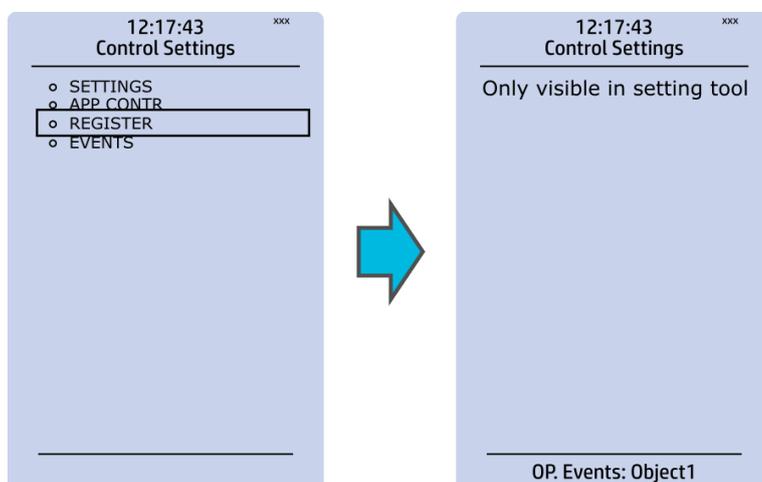

The "Registers" section stores the function's specific fault data. There are twelve (12) registers, and each of them includes data such as opening and closing times, command types and request failures. The data included in the register depend on the protection function. You can clear the the operation register by choosing "Clear registers" → "Clear".

Please note that the content of the *Registers* section is not available in the HMI. It can only be accessed via the AQtivate setting tool.

Figure. 4.5 - 23. Events section.

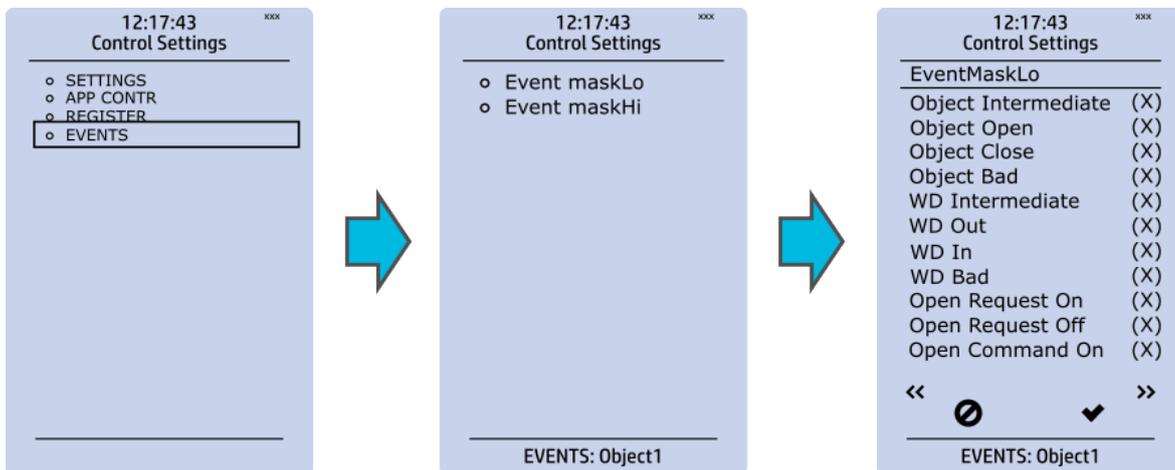


You can mask on and mask off events related to an object's stage in "Event mask". By default all events are masked off. You can activate the desired events by masking them ("x"). Please remember to save your maskings by confirming the changes with the check mark icon. If you want to cancel the changes, select the strike-through circle to do so. Only masked events are recorded to the event history (which can be accessed in the "Events" view in the user view section).

### Control functions


Once a control function has been activated in the *Controls* → *Controls enabled* submenu, its own submenu can be opened. In the image series below, the user has activated three control functions. The user accesses the list of activated control stages through the "Control functions" module, and selects the control function for further inspection.

Figure. 4.5 - 24. Control functions submenu.

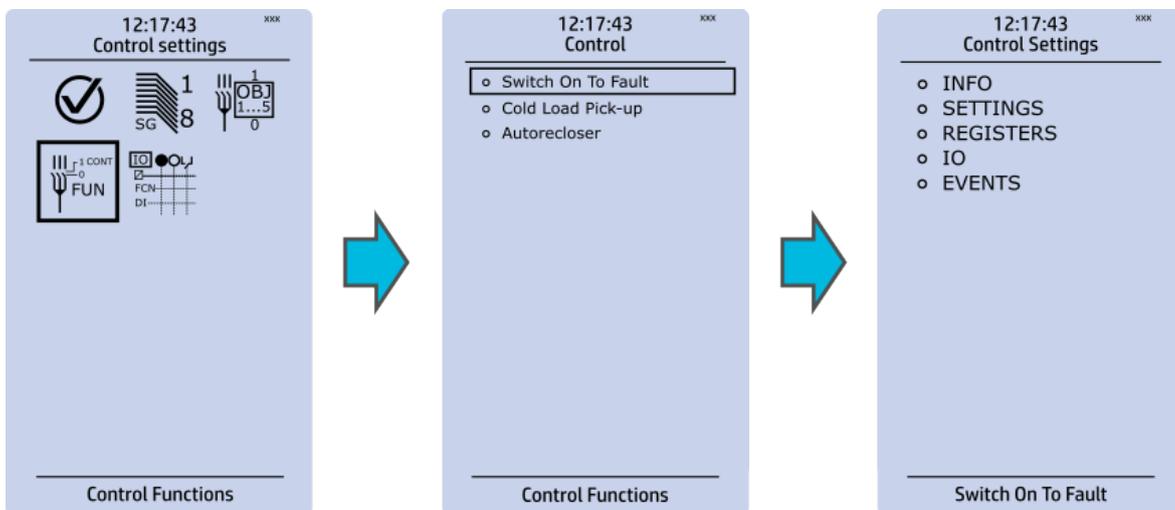

Each control function that has been activated is listed in the *Control functions* submenu (see the middle image above). This submenu includes the following sections: "Info", "Settings", "Registers", "I/O" and "Events". The text below describes these in further detail.

Figure. 4.5 - 25. Info section.

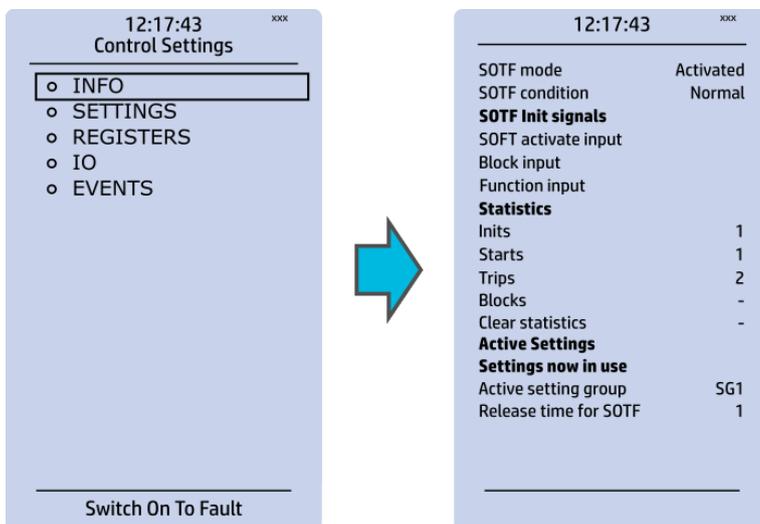


The "Info" section offers many details concerning the function and its status:

- **Function condition:** indicates the stage's condition which can be Normal, Start, Trip, or Blocked.
- **Measured magnitude:** In some functions it is possible to choose the monitored magnitude between Peak-to-peak, TRMS, or RMS (the default is RMS; the available magnitudes depend on the function).
- **Statistics:** indicates the number of function starts, trips and blocks (can be cleared through "Clear statistics" → "Clear").
- **Measurements:** displays the measurements carried out by the function.
- **Active settings:** displays the setting group that is currently in use and its settings (other setting groups can be set in the "Settings" section).


While the function is activated and disabled in the *Control* → *Controls enabled* submenu, you can disable the function through the "Info" section (the [function name] mode at the top of the section).

Figure. 4.5 - 26. Settings section.

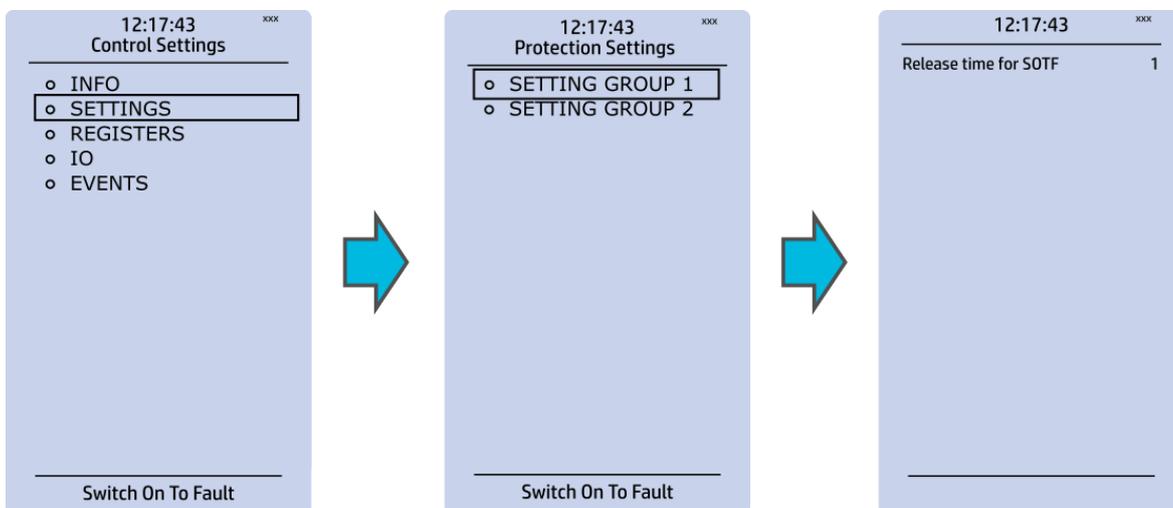

The stage settings vary depending on which control function they are a part of. By default only one setting group of the eight available setting groups is activated. You can enable more groups in the *Control* → *Setting groups* menu, although they are set here in the "Settings" section.

Figure. 4.5 - 27. Registers section.

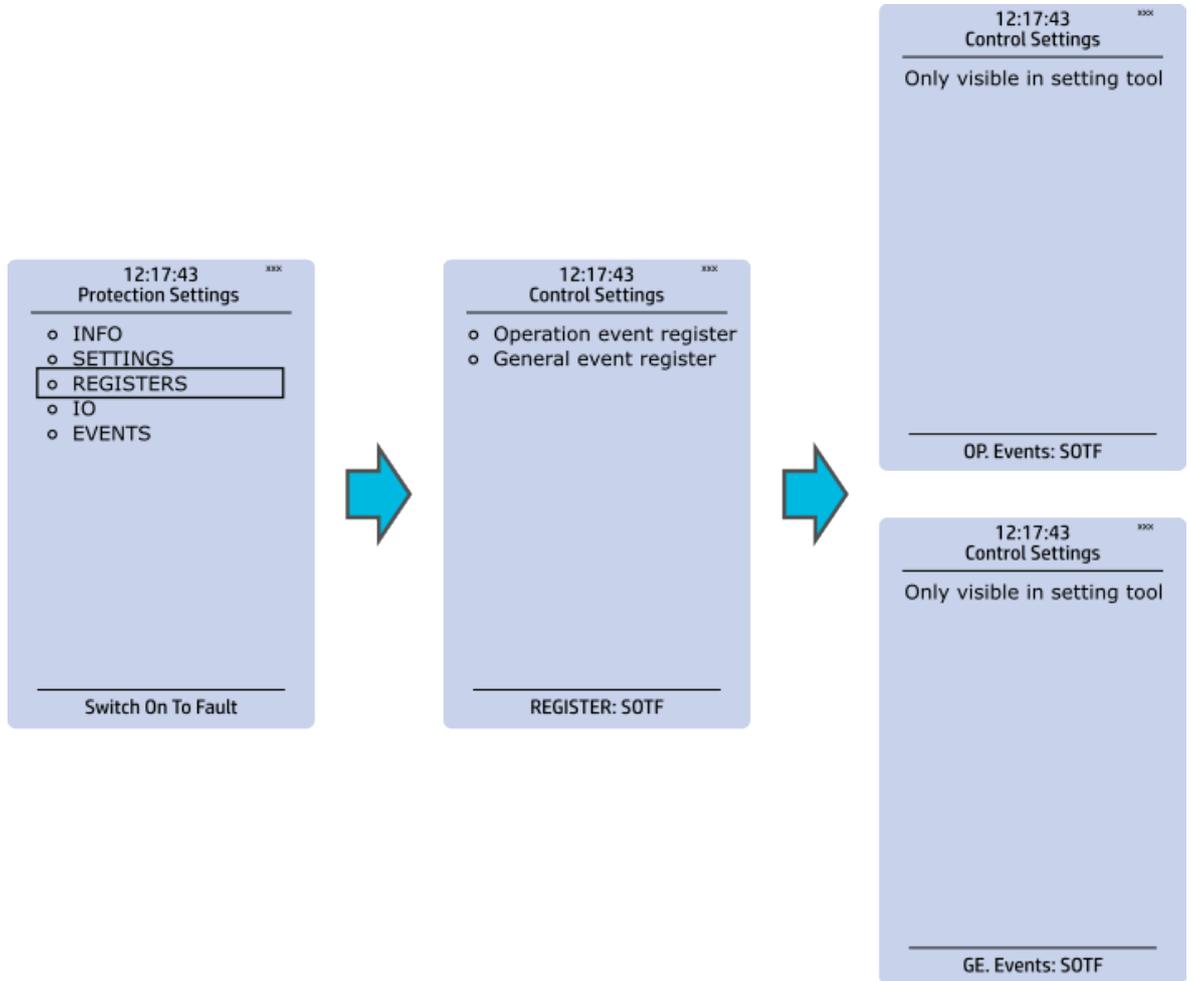


Please note that the content of the "Registers" section is not available in the HMI. It can only be accessed via the AQtivate setting tool. Stored in the "Registers" section you can find both "Operation event register" and "General event register".

"Operation event register" stores the function's specific operation data. There are twelve (12) registers, and each of them includes data like the pre-fault value, the fault value, the time stamp and the active group during the trigger. Data included in the register depend on the control function. You can clear the the operation register by choosing "Clear registers" → "Clear".

"General event register" stores the event generated by the stage. These general event registers cannot be cleared.

Figure. 4.5 - 28. I/O section.

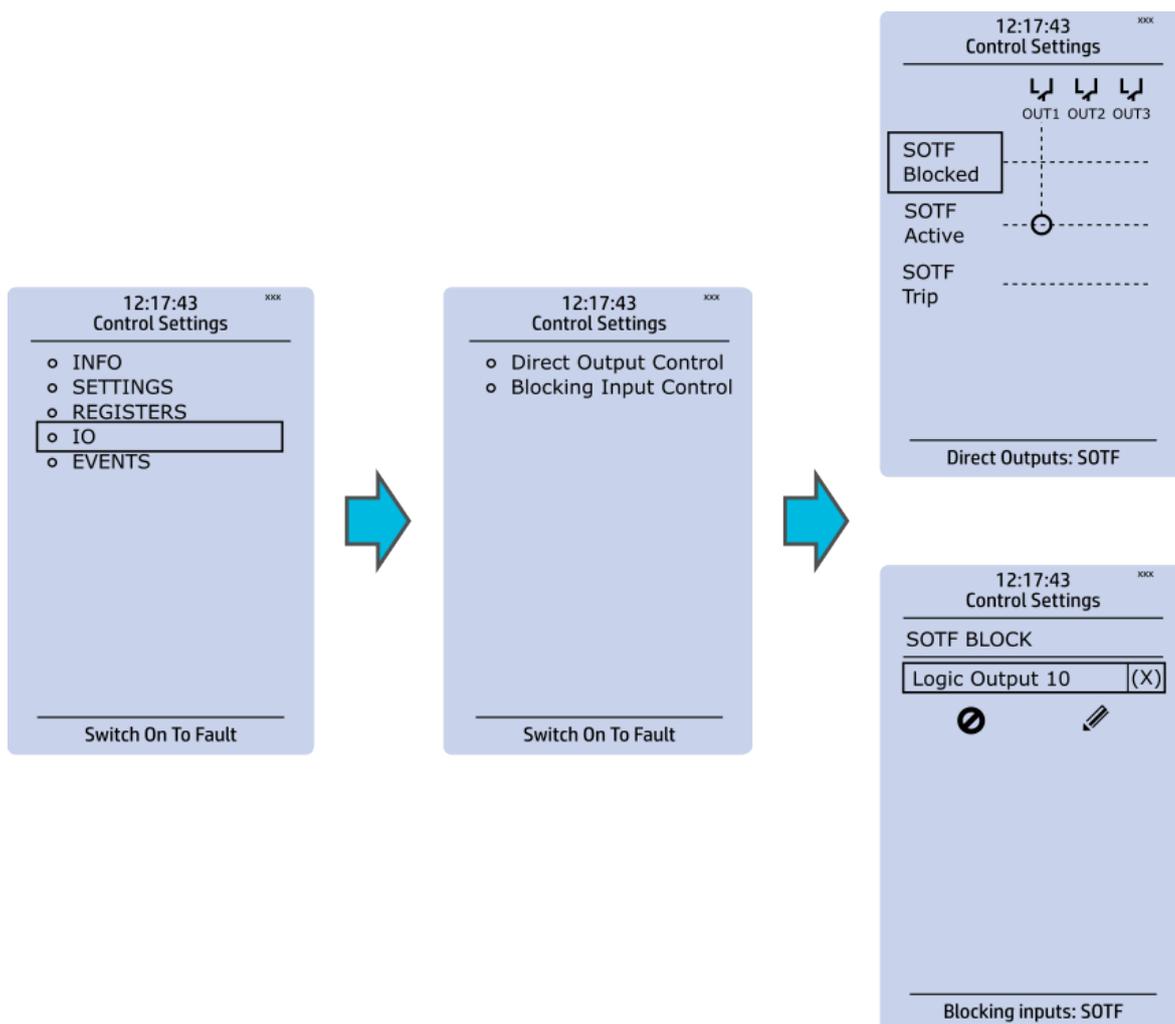


The "I/O" section is divided into two subsections: "Direct output control" and "Blocking input control".

In "Direct output control" you can connect the stage's signals to physical outputs, either to an output relay or an LED (START or TRIP LEDs or one of the 16 user configurable LEDs). If the stage is blocked internally (by a digital input or another signal), you can configure an output to indicate the stage that is blocked. A connection to an output can be either latched ("|x|") or non-latched ("x").

"Blocking input control" allows you to block stages. The blocking can be done by using any of the following:

- digital inputs.
- logical inputs or outputs.
- the START, TRIP or BLOCKED information of another protection stage.
- object status information.


Figure. 4.5 - 29. Events section.

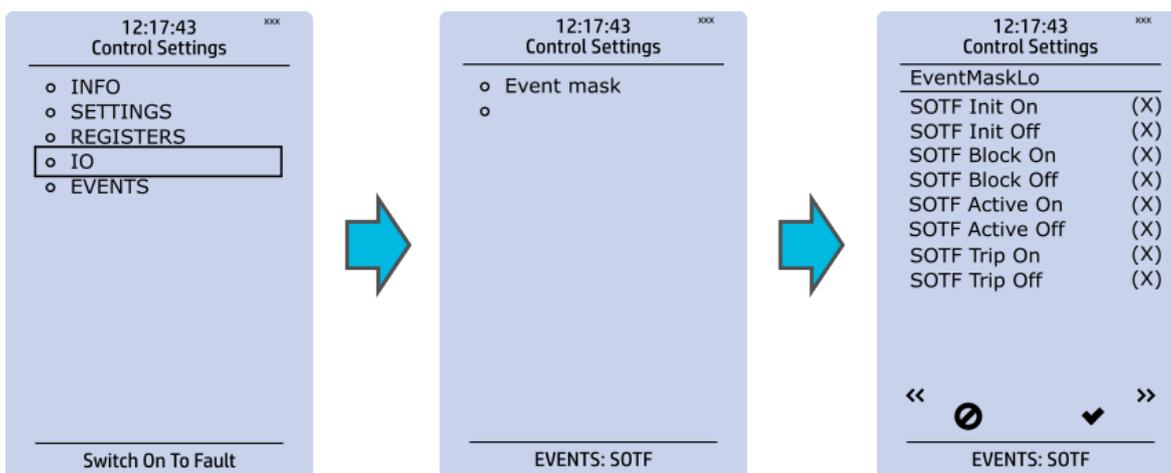

You can mask on and mask off events related to an object's stage in "Event mask". By default all events are masked off. You can activate the desired events by masking them ("x"). Please remember to save your maskings by confirming the changes with the check mark icon. If you want to cancel the changes, select the strike-through circle to do so. Only masked events are recorded to the event history (which can be accessed in the "Events" view in the user view section).


## Device I/O

Figure. 4.5 - 30. Device I/O submenu.

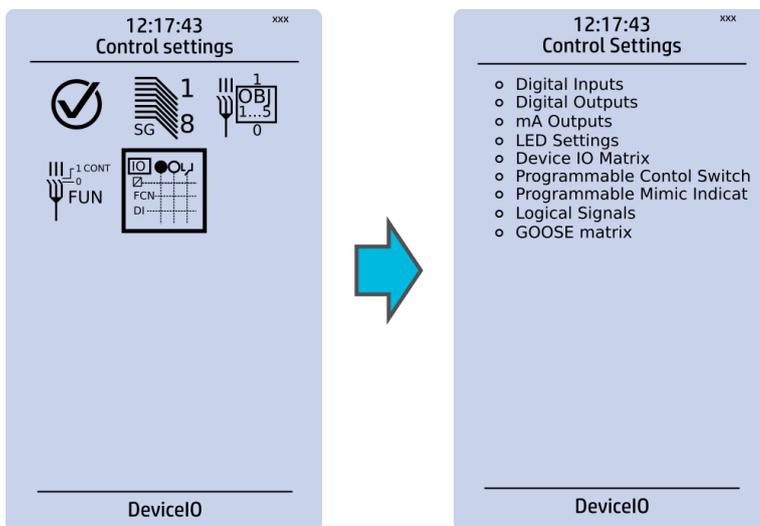

The *Device I/O* submenu is divided into the following nine sections: "Digital inputs", "Digital outputs", "mA Outputs", "LED settings", "Device I/O matrix", "Programmable control switch", "Programmable Mimic Indicator", "Logic signals" and "GOOSE matrix". Please note that digital inputs, logic outputs, protection stage status signals (START, TRIP, BLOCKED, etc.) as well as object status signals can be connected to an output relay or to LEDs in the "Device I/O matrix" section.

Figure. 4.5 - 31. Digital input section.

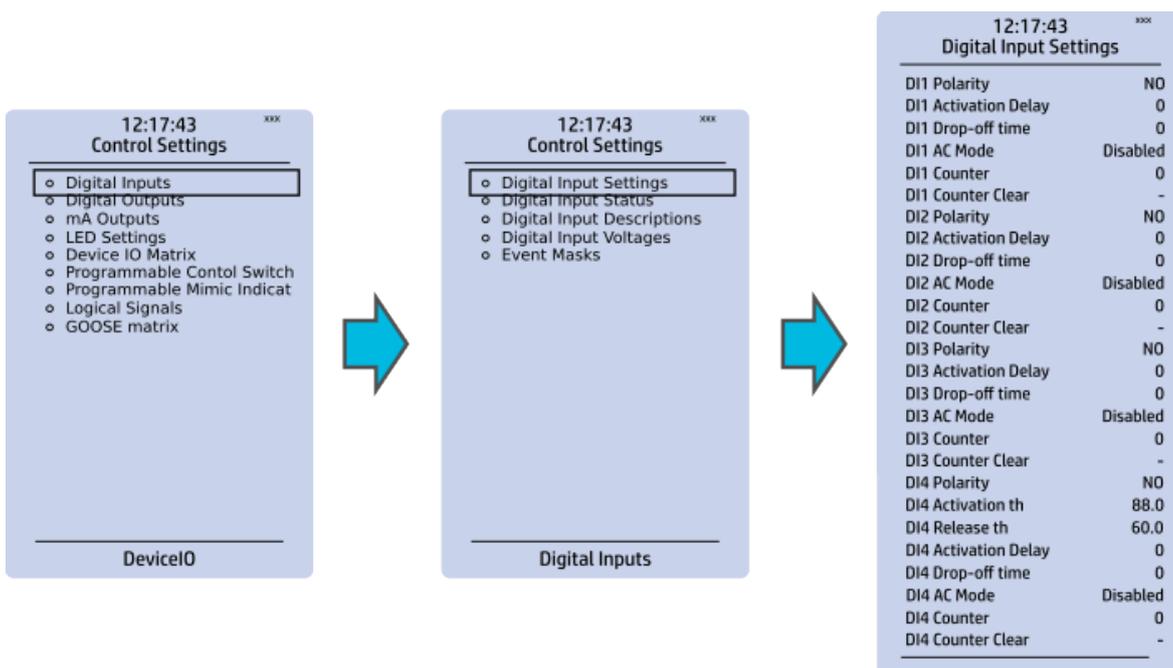


All settings related to digital inputs can be found in the "Digital inputs" section.

The "Digital inputs settings" subsection includes various settings for the inputs: the polarity selection determines whether the input is Normal Open (NO) or Normal Closed (NC) as well as the activation threshold voltage (16...200 V AC/DC, step 0.1 V) and release threshold voltage (10...200 V AC/DC, step 0.1 V) for each available input. There is also a setting to determine the wanted activation and release delay (0...1800 s, step 1 ms). Digital input activation and release threshold follow the measured peak value. The activation time of an input is 5...10 ms. The release time with DC is 5...10 ms, while with AC it is less than 25 ms. The first three digital inputs don't have activation and release threshold voltage settings as these have already been defined when the unit was ordered.

Digital input statuses can be checked from the corresponding subsection ("Digital input status"). The "Digital input descriptions" subsection displays the texts the user has written for each digital input. In the "Event masks" subsection you can determine which events are masked –and therefore recorded into the event history– and which are not.

Figure. 4.5 - 32. Digital outputs section.

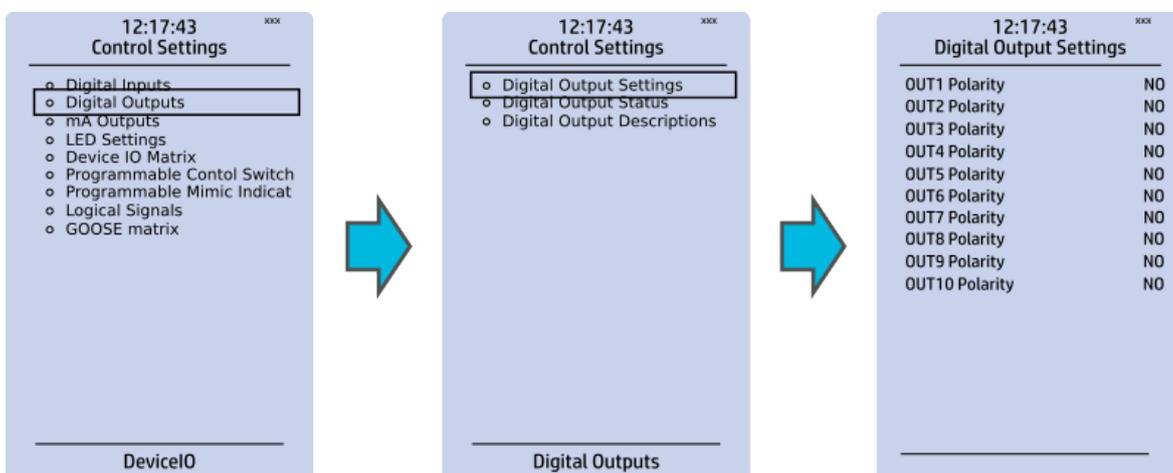

All settings related to digital outputs can be found in the "Digital outputs" section.


The "Digital outputs settings" subsection lets you select the polarity for each output; they can be either Normal Open (NO) or Normal Closed (NC). The default polarity is Normal Open. The operational delay of an output contact is approximately 5 ms. You can view the digital output statuses in the corresponding subsection ("Digital output status"). The "Digital output descriptions" subsection allows you to configure the description text for each output. All name changes affect the matrices as well as input–output selection lists.

**NOTE!**




An NC signal goes to the default position (NO) if the relay loses the auxiliary voltage or if the system is fully reset. However, an NC signal does not open during voltage or during System full reset. An NC output signal does not open during a Communication or Protection reset.

Figure. 4.5 - 33. LED settings section.

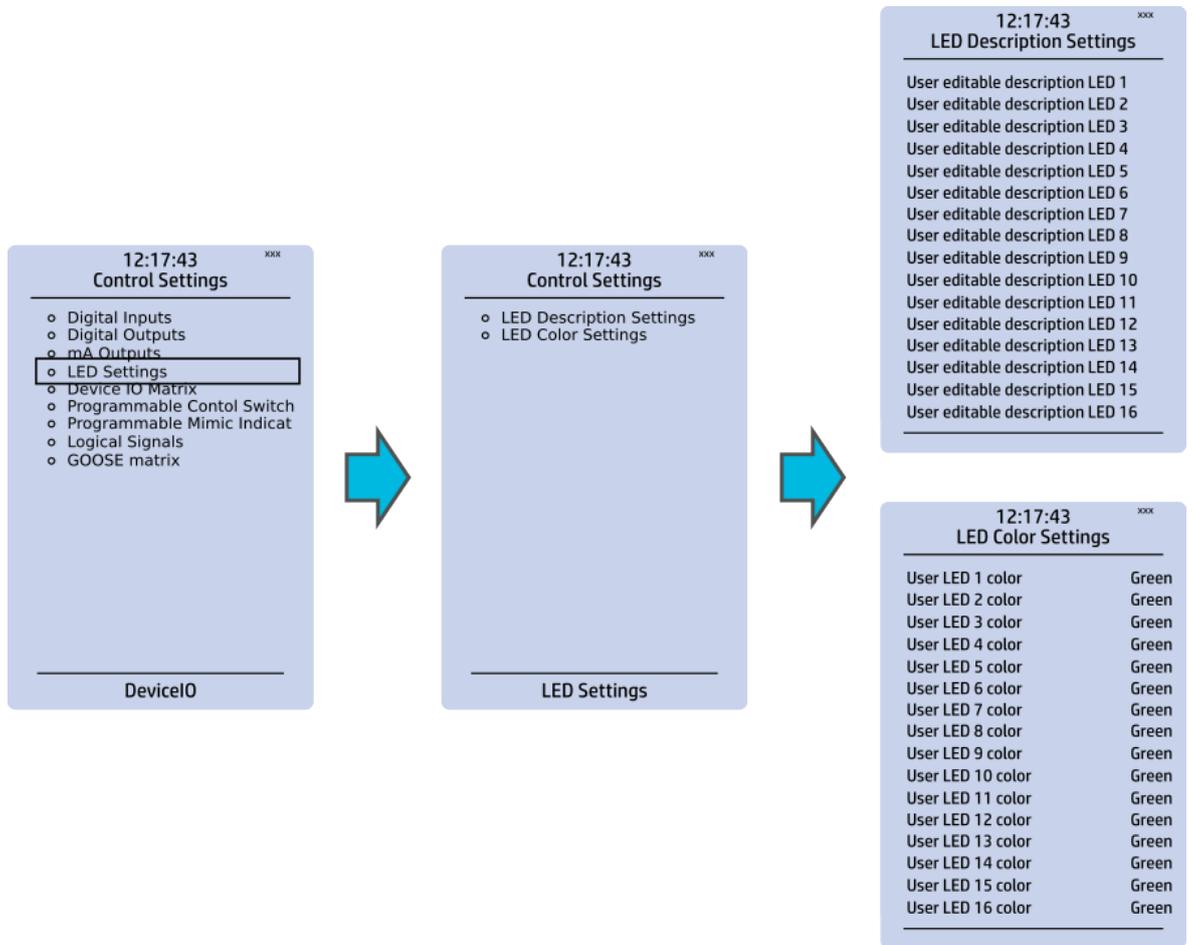

The "LED settings" section allows you to modify the individual label text attached to an LED ("LED description settings"); that label is visible in the LED quick displays and the matrices. You can also modify the color of the LED ("LED color settings") between green and yellow; by default all LEDs are green.


Figure. 4.5 - 34. Device I/O matrix section.

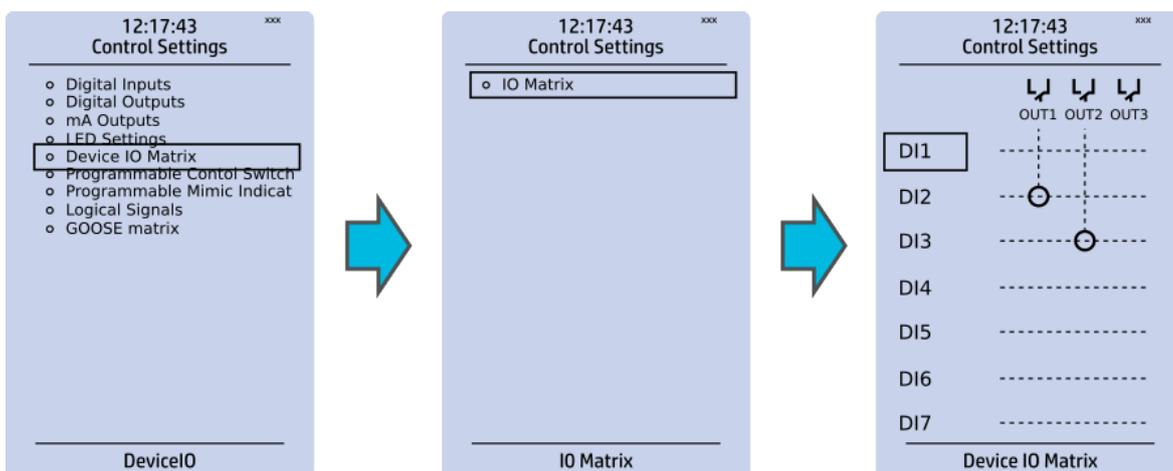

Through the "Device I/O matrix" section you can connect digital inputs, logical outputs, protection stage status signals (START, TRIP, BLOCKED, etc.), object status signals and many other binary signals to output relays, or to LEDs configured by the used. A connection can be latched ("|x|") or non-latched ("x"). Please note that a non-latched output is deactivated immediately when the triggering signal is disabled, while a latched signal stays active until the triggering signal deactivates and the latched function is manually cleared.


You can clear latched signals by entering the mimic display and the pressing the Back button on the panel.

Figure. 4.5 - 35. Programmable control switch section.

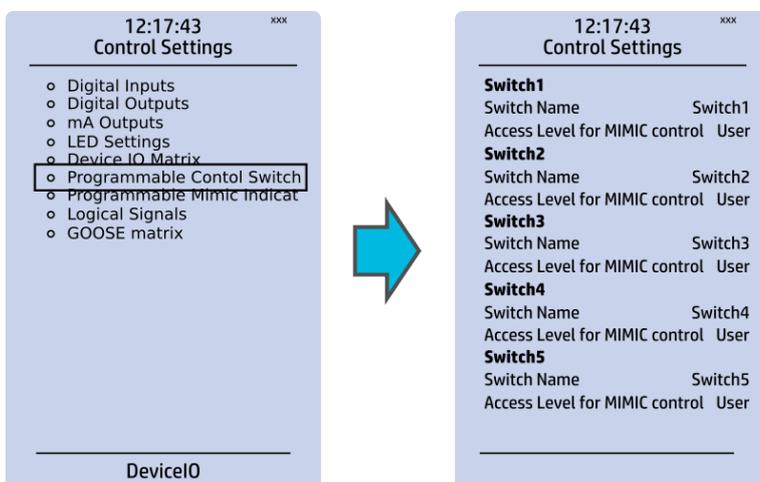


Programmable control switches (PCSs) are switches that can be used to control signals while in the mimic view. These signals can be used in a variety of situations, such as for controlling the logic program, for function blocking, etc. You can name each switch and set the access level to determine who can control the switch.

Figure. 4.5 - 36. Programmable mimic indicators section

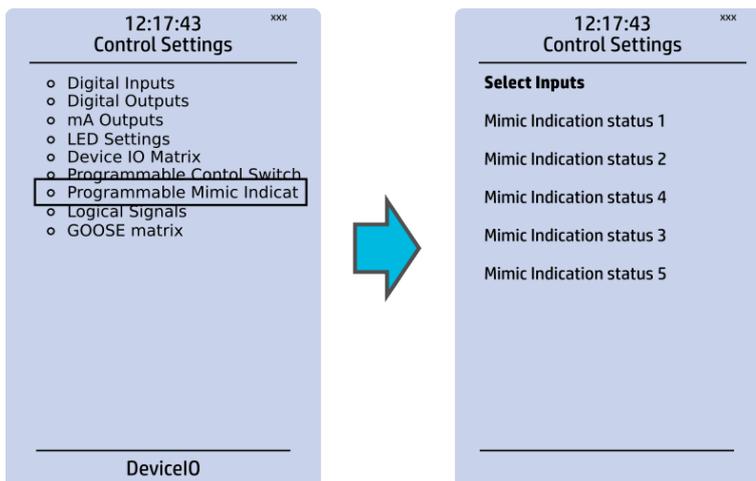

Programmable mimic indicators can be placed into the mimic to display a text based on the status of a given binary signal (digital input, logical signal, status of function start/tripped/blocked signals etc.). When configuring the mimic with the AQtivate setting tool, it is possible to set a text to be shown when an input signal is ON and a separate text for when the signal is OFF.

Figure. 4.5 - 37. Logical signals section.

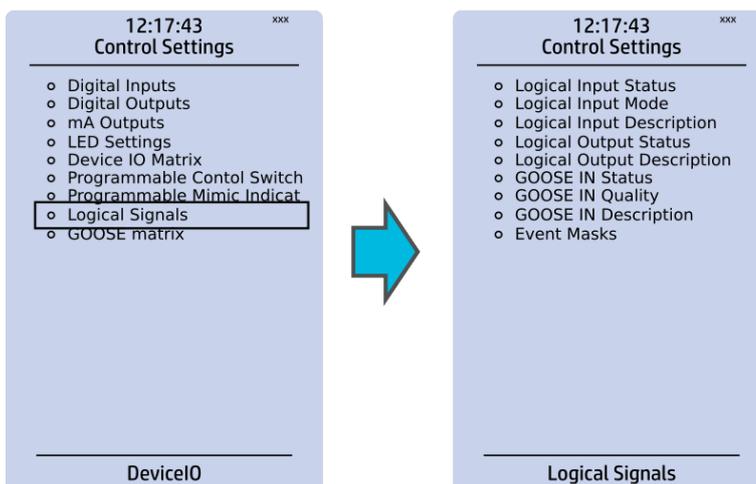

All AQ-200 series units have three different types of logical signals:

- 32 logical input signal status bits; the status of a bit is either 0 or 1.
- 32 logical output signal status bits; the status of a bit is either 0 or 1.
- 64 GOOSE input signal status bits; the status of a bit is either 0 or 1.
- 64 quality bits for GOOSE input signals; the status of a bit is either 0 or 1.

Logical input signals can be used when building a logic with the AQtivate setting tool. The status of a logical input signal can be changed either from the mimic or through SCADA. By default logical inputs use "Hold" mode in which the status changes from 0 to 1 and from 1 to 0 only through user input. The mode of each input can be changed to "Pulse" in which a logical input's status changes from 0 to 1 through user input and then immediately back to 0.

Logical output signals can be used as the end result of a logic that has been built in the AQtivate setting tool. The end result can then be connected to a digital output or a LED in the matrix, block functions and much more.


GOOSE inputs are mainly used for controlling purposes and in conjunction with the IEC 61850 communication protocol. There are 64 GOOSE inputs signal status bits, and their status can be either 0 or 1. "GOOSE IN quality" checks the quality of a GOOSE input message. There are 64 GOOSE input quality signals, and their status can be either 0 ("Good" or "Valid") or 1 ("Bad" or "Invalid"). Logical outputs can be used when building a programmable logic. Activating a logic gate does not create an event but when a logical output is connected to a logic gate it is possible to create an event from the gate's activation. All logical inputs and outputs have both ON and OFF events, and they can be masked on when necessary (they are masked off by default).

**NOTE!**



Please refer to the "System integration" chapter for a more detailed description of the use of logical signals.


## 4.6 Communication menu

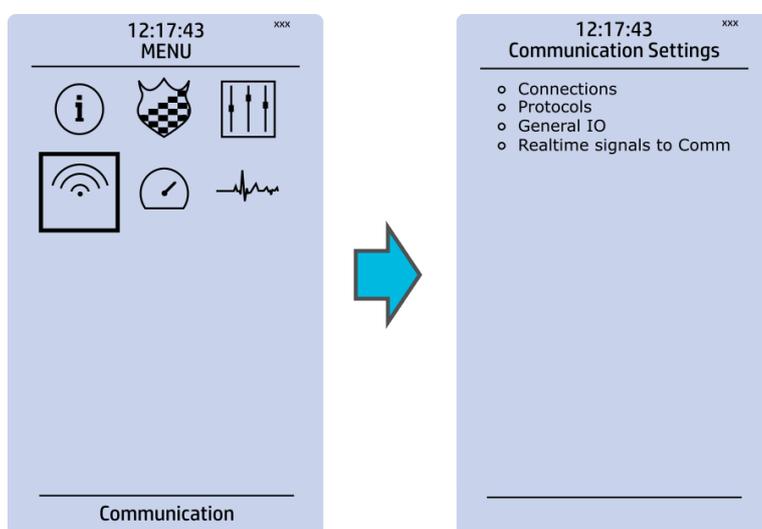

The *Communication* main menu includes four submenus: *Connections*, *Protocols*, *General IO* and *Realtime signals to Comm*. All devices can be configured through the Ethernet connection in the back panel with the AQtivate setting tool software. Connecting to the AQtivate software requires knowing the IP address of your device (can be found in the *Communication* → *Connections* submenu). As a standard, the devices support the following communication protocols: NTP, IEC 61850, Modbus/TCP, Modbus/RTU, IEC 103, IEC 101/104, SPA, DNP3 and Modbus/IO.

## Connections

Figure. 4.6 - 38. View of the Connections submenu.

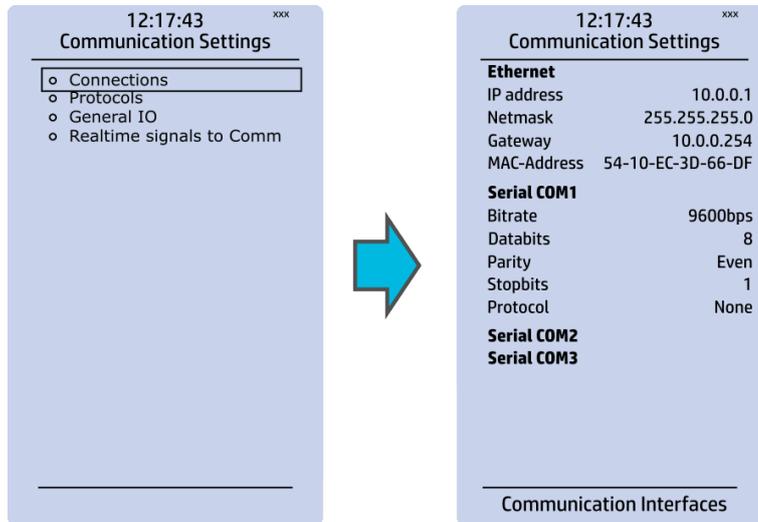

The *Connections* submenu offers the following bits of information and settings:

### ETHERNET

This section defines the IP settings for the ethernet port in the back panel of the unit.

- IP address: the IP address of the device which can be set by the user (the default IP address depends on the device).
- Network: the network subnet mask is entered here.
- Gateway: the gateway is configured only when communicating with the devices in a separate subnet.
- MAC-Address: Unique MAC address of the device. Not configurable by user.

### SERIAL COM

This section defines the basic settings of RS-485 port in the back panel of the unit.

- Bitrate: displays the bitrate of the RS-485 serial communication interface (9600 bps as standard, although can be changed to 19 200 bps or 38 400 bps if an external device supports the faster speed).
- Databits, Parity and Stopbits: these can be set according the connected external devices.
- Protocol: by default the device does not have any serial protocol activated, although IEC 103, Modbus I/O and Modbus/RTU can be used for communication.

#### NOTE!




When communicating with a device through a front Ethernet port connection, the IP address is always 192.168.66.9.

### SERIAL COM1 & COM2

SERIAL COM1 and SERIAL COM2 are reserved for serial communication option cards. They have the same settings as RS-485 port.

## Protocols

Figure. 4.6 - 39. View of the Protocols submenu.

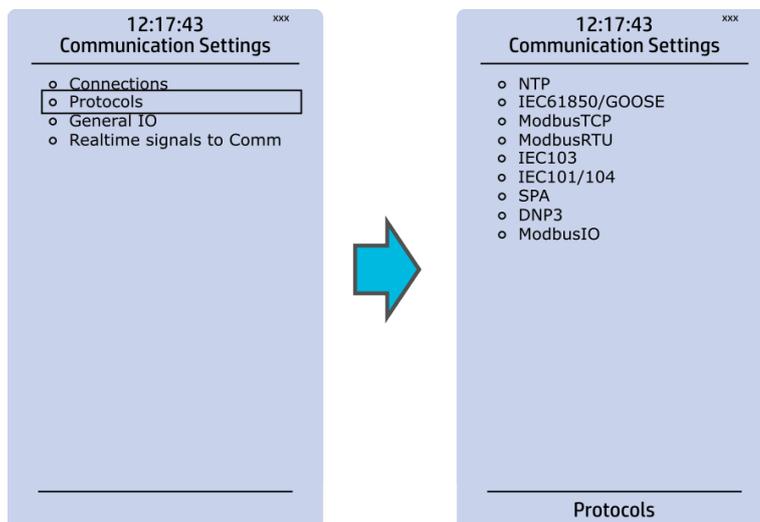

The *Protocols* submenu offers access to the various communication protocol configuration menus. Some of the communication protocols use serial communication and some use Ethernet communication. Serial communication protocols can be used either with the RS-485 port that is always equipped in AQ-200 series units or with serial communication option card. Ethernet communication protocols can be used either with the RJ-45 port in the back of the unit or with an ethernet communication option card.

The communication protocols are:

- NTP: this protocol is used for time synchronization over Ethernet, and can be used simultaneously with the ethernet based communication protocols.
- IEC 61850: Ethernet based communication protocol.
- Modbus/TCP: Ethernet communication protocol.
- Modbus/RTU: Serial communication protocol.
- IEC103: Serial communication protocol.
- IEC101/104: The standards IEC 60870-5-101 and IEC 60870-5-104 are closely related. On the physical layer the IEC 101 protocol uses serial communication whereas the IEC 104 protocol uses Ethernet communication.
- SPA: Serial communication protocol.
- DNP3: Supports serial and Ethernet communication.
- ModbusIO: Used for connecting external devices like ADAM RTD measurement units.


### NOTE!



Please refer to the "System integration" chapter for a more detailed text on the various communication options.

## 4.7 Measurement menu


Figure. 4.7 - 40. Measurement section.

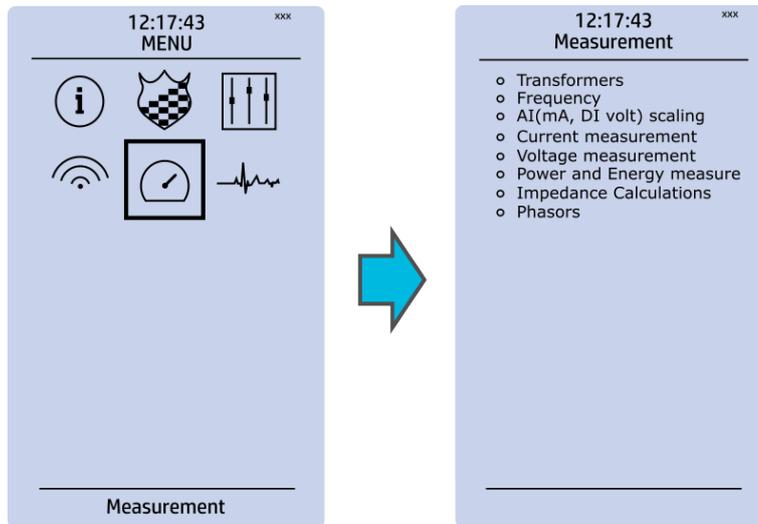

The *Measurement* menu includes the following submenus: *Transformers*, *Frequency*, *Current measurement*, *Voltage measurement*, *Power and energy measurement*, *Impedance calculations*, and *Phasors*. The available measurement submenus depends on the type of IED in use. The ratio used by the current and voltage transformers is defined in the *Transformers* submenu, while the system nominal frequency is specified in the *Frequency* submenu. Other submenus are mainly for monitoring purposes.

### Transformers


Figure. 4.7 - 41. Transformers section.

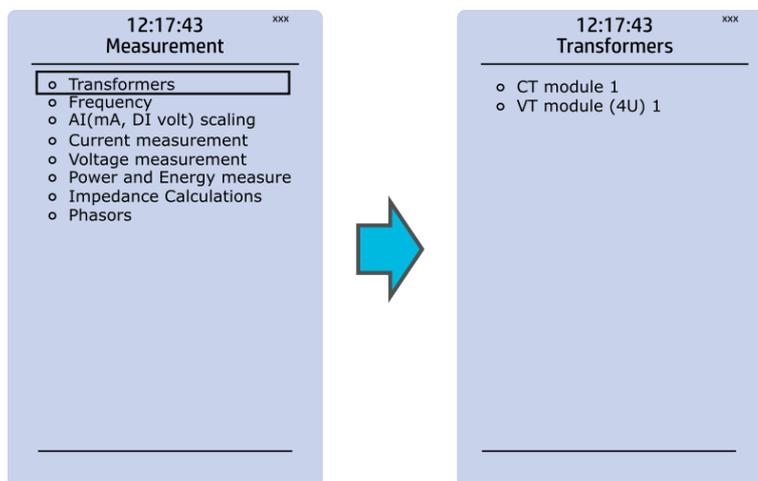

Transformers menu is used for setting up the measurement settings of available current transformer modules or voltage transformer modules. Some unit types have more than one CT or VT module. Some unit types like AQ-S214 do not have current or voltage transformers at all.

## CT module


Figure. 4.7 - 42. CT module section.

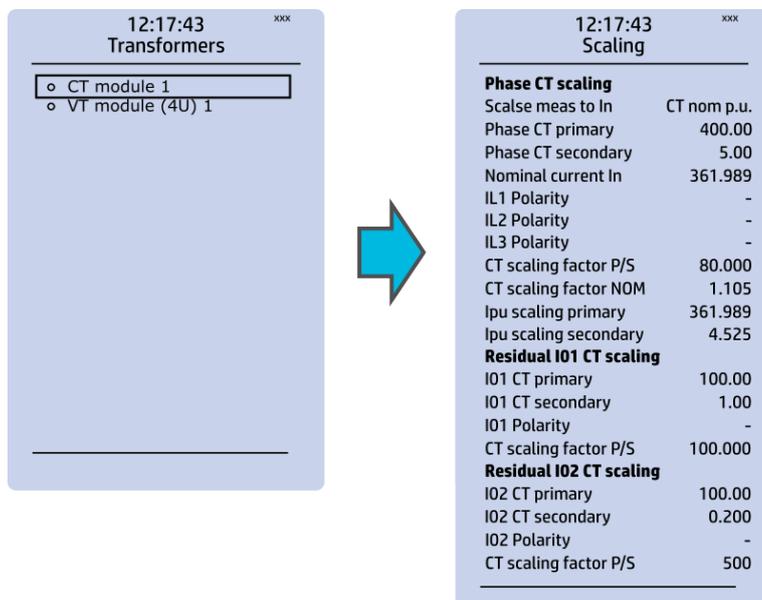

The three main sections ("Phase CT scaling", "Residual I01 CT scaling" and "Residual I02 CT scaling") determine the ratio of the used transformers. Additionally, the nominal values are also determined in the *CT module* submenu. Sometimes a mistake in the wiring can cause the polarity to be changed; in such cases, you can invert the polarity of each phase current individually. The *CT module* submenu also displays additional information such as CT scaling factors and per-unit scaling factors.

## Frequency


Figure. 4.7 - 43. Frequency submenu.

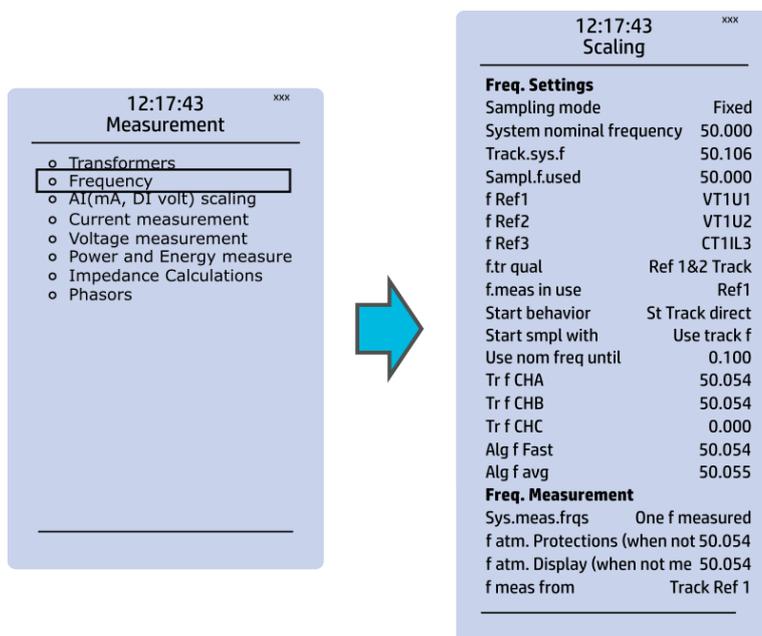

Frequency measurements use the fixed sampling mode as the default, and "System nominal frequency" should be set to the desired level. When "Sampling mode" is set to "Tracking", the device uses the measured frequency value as the system nominal frequency. There are three frequency reference channels: f Ref1, fRef2 and fRef3. With these parameters it is possible to set up three voltage or current channels to be used for frequency sampling. Parameter "f.meas in use" indicates which of the three channels are used for sampling if any.

## Current measurement

Figure. 4.7 - 44. Current measurement submenu.

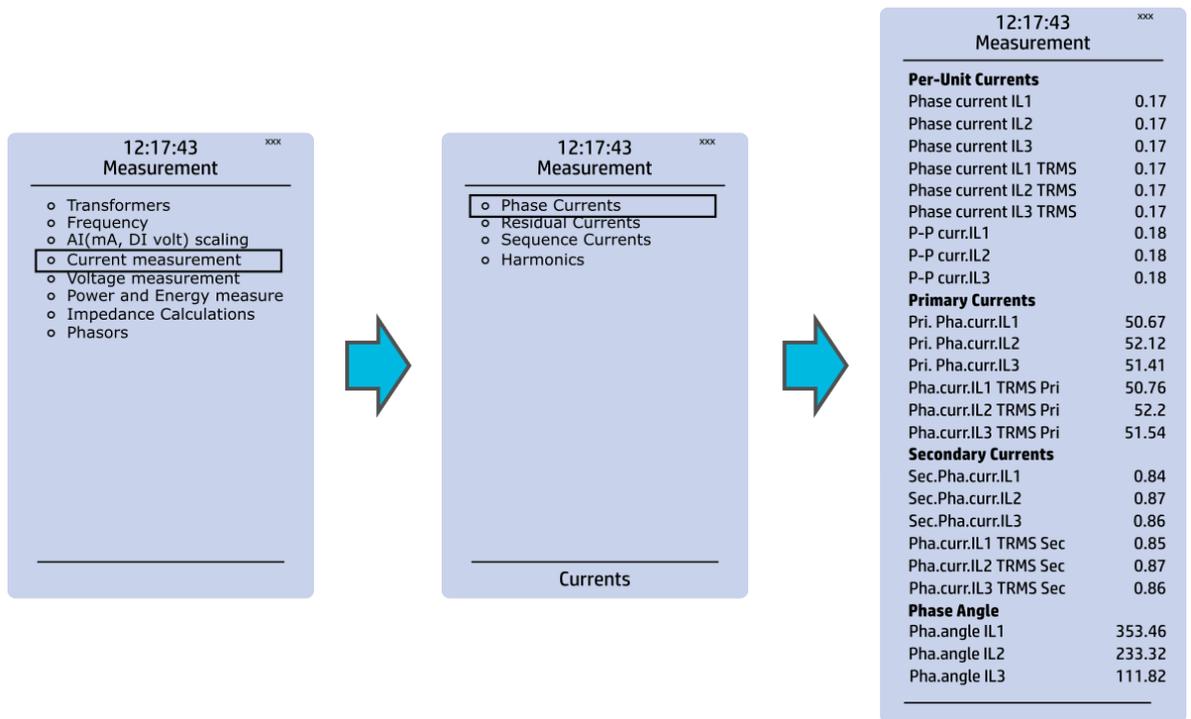


*Current measurement* submenu includes various individual measurements for each phase or phase-to-phase measurement.

The *Current measurement* submenu has been divided into four sections: "Phase currents", "Residual currents", "Sequence currents", and "Harmonics".

- "Phase currents" and "Residual currents" have been further divided into four subsections ("Per-unit currents", "Primary currents", "Secondary currents" and "Phase angle"), and they display the RMS, TRMS and peak-to-peak values, amplitude and power THD values as well as the angle of each measured component.
- "Sequence currents" has also been further divided into the four above-mentioned sections, and it calculates the positive, negative and neutral sequence currents.
- "Harmonics" displays current harmonics up to the 31<sup>st</sup> harmonic for the three phase current (IL1, IL2, IL3) as well as the two residual currents (I01, I02); each component can be displayed as absolute or percentage values, and as primary or secondary amperages or in per-unit values.

## Phasors

Figure. 4.7 - 45. Phasors submenu.

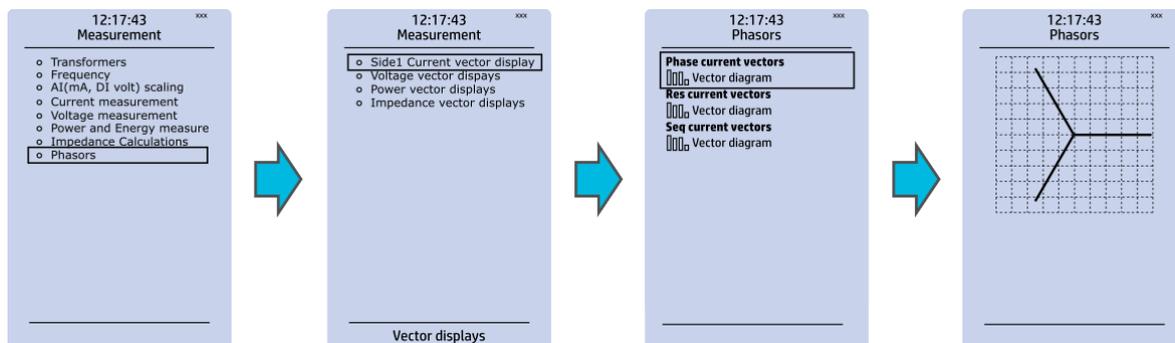


The *Phasors* submenu holds the vector displays for voltages and currents, as well as the various calculated components the IED may have (e.g. power, impedance). Phasors are helpful when solving incorrect wiring issues.

## 4.8 Monitoring menu


The *Monitoring* main menu includes submenus (see the image below) for enabling the various monitoring functions (*Monitors enabled*), setting the various monitoring functions (*Monitor functions*), controlling the disturbance recorder (*Disturbance REC*) and accessing the device diagnostics (*Device diagnostics*). The available monitoring functions depend on the type of the device in use.

Figure. 4.8 - 46. Monitoring menu view.

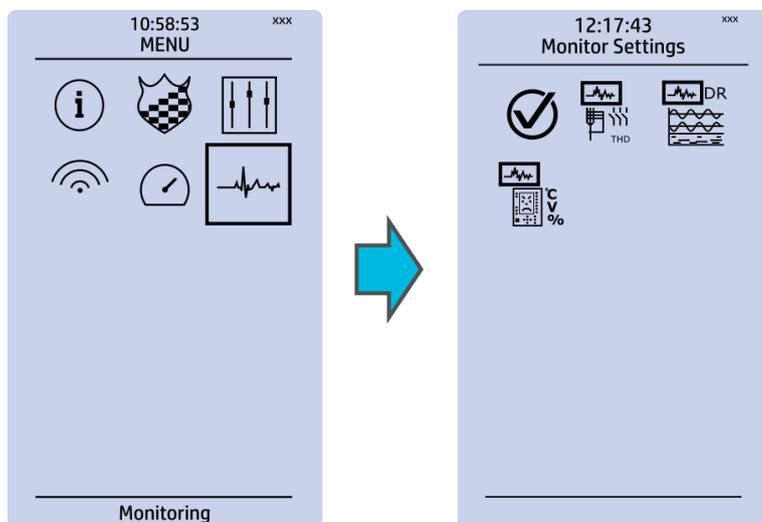

## Monitors enabled


Figure. 4.8 - 47. Monitors enabled submenu.

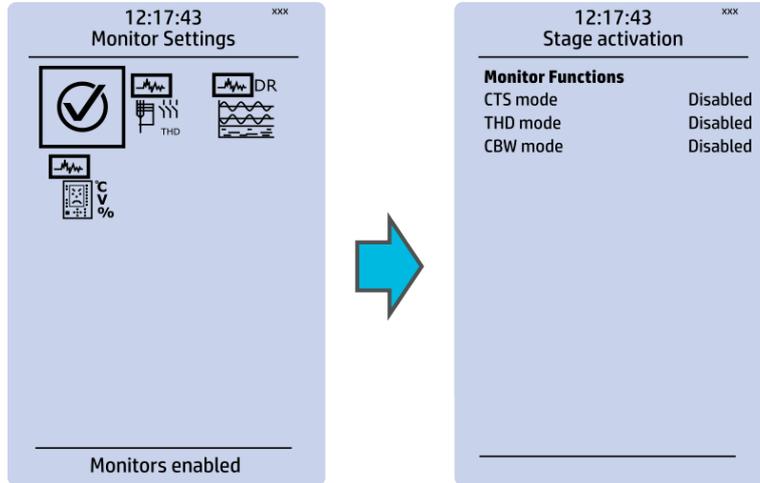

You can activate the selected monitor functions in the *Monitors enabled* submenu. By default all the control functions are disabled. All activated functions can be viewed in the *Monitor functions* submenu (see the section "Monitor functions" below for more information).

## Monitor functions


Figure. 4.8 - 48. Monitor function view.

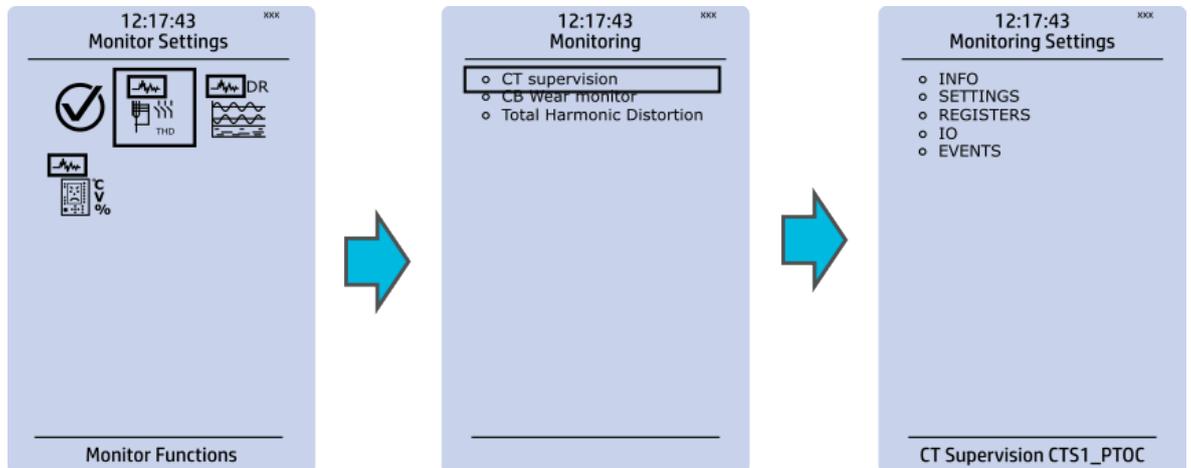

Configuring monitor functions is very similar to configuring protection and control stages. They, too, have the five sections that display information ("Info"), set the parameters ("Settings"), show the inputs and outputs ("I/O") and present the events and registers ("Events" and "Registers").

## Disturbance recorder

Figure. 4.8 - 49. Disturbance recorder settings.

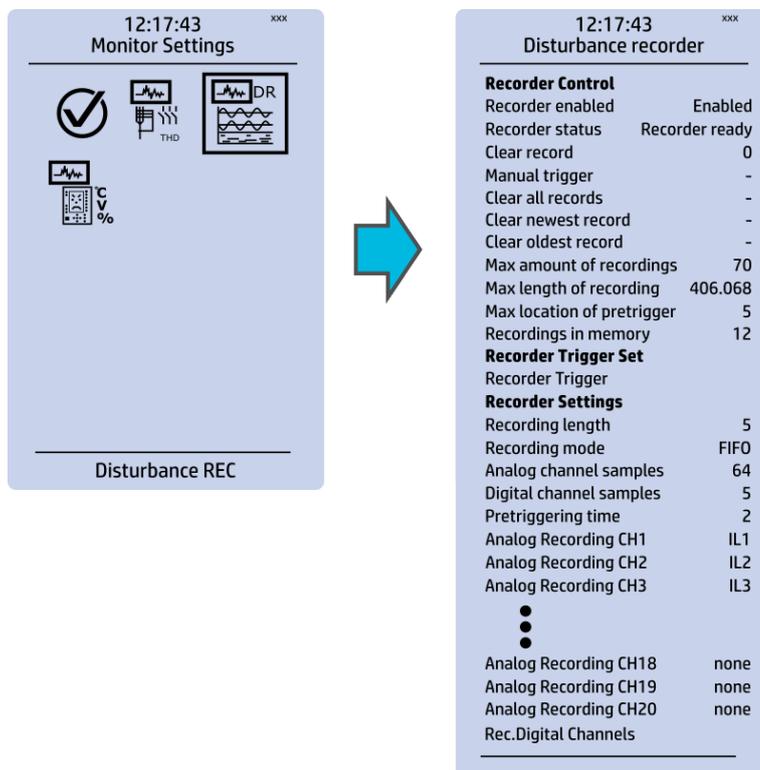


The *Disturbance recorder* submenu has the following settings:

- "Recorder enabled" enables or disables the recorder.
- "Recorder status" indicates the status of the recorder.
- "Clear record" records the chosen record in the memory.
- "Manual trigger" triggers the recorder when set to "Clear". Goes back to "-" when afterwards.
- "Clear all records", "Clear newest record" and "Clear oldest record" allows the clearing of all, the latest, or the oldest recording.
- "Max. amount of recordings" displays the maximum number of recordings; depends on the number of channels, the sample rate and the length of the file.
- "Max. length of recording" displays the maximum length of a single recording; depends on the number of chosen channels and the sample rate.
- "Recordings in memory" displays the number of recordings currently in the disturbance recorder's memory.
- "Recorder trigger" shows which signals or other states has been selected to trigger the recording (digital input, logical input or output, signals of a stage, object position, etc.); by default nothing triggers the recorder.
- "Recording length" displays the length of a single recording and can be set between 0.1...1800 seconds.
- "Recording mode" can be selected to replace the oldest recording ("FIFO") or to keep the old recordings ("FILO").
- "Analog channel samples" determines the sample rate of analog channels, and it can be selected to be 8/16/32/62 samples per cycle.
- "Digital channel samples" displays the sample rate in a digital channel; this is a fixed 5 ms.
- "Pretriggering time" can be selected between 0.1...15.0 s.
- The IED can record up to 20 (20) analog channels that can be selected from the twenty (20) available channels. Every measured current or voltage signal can be selected to be recorded.

- Enabling "Auto. get recordings" allows the device to automatically upload recordings to the designated FTP folder (which, in turn, allows any FTP client to read the recordings from the IED's memory).
- "Rec. digital channels" is a long list of the possible digital channels that can be recorded (including primary and secondary amplitudes and currents, calculated signals, TRMS values, sequence components, inputs and outputs, etc.).

## Device diagnostics

Figure. 4.8 - 50. Device diagnostics submenu.

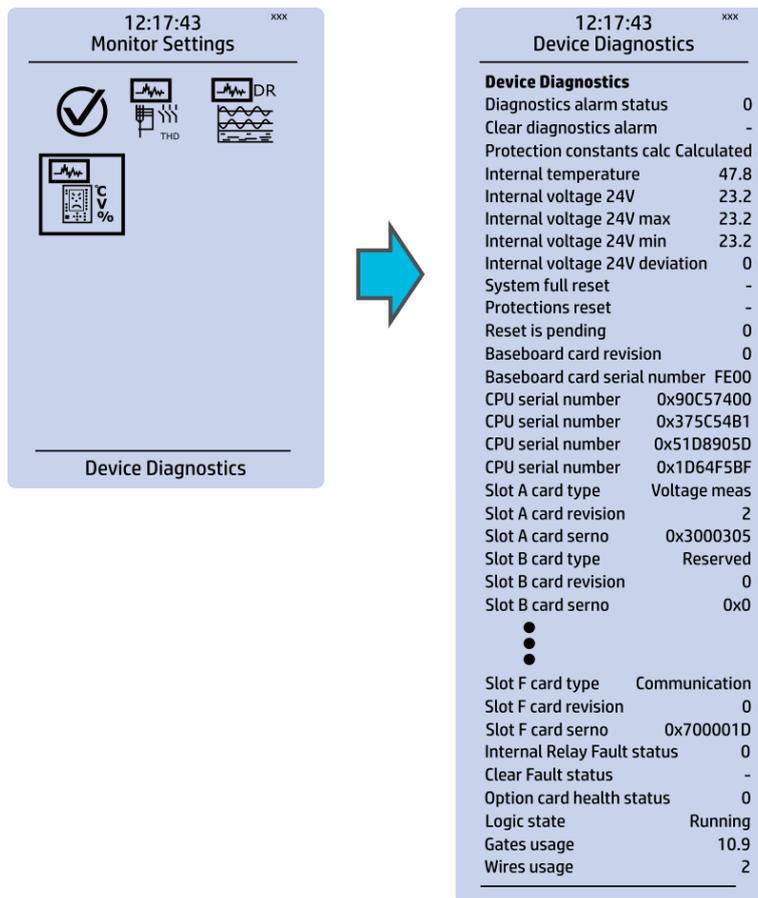

The *Device Diagnostics* submenu gives a detailed feedback of the device's current condition. It also shows whether option cards have been installed correctly without problems. If you see something out of the ordinary in the *Device diagnostics* submenu and cannot reset it, please contact the closest representative of the manufacturer or the manufacturer of the device itself.

## 4.9 Configuring user levels and their passwords

As a factory default, no user level is locked with a password in an IED. In order to activate the different user levels, click the **Lock** button in the device's HMI and set the desired passwords for the different user levels.





### NOTE!

Passwords can only be set locally in an HMI.

A number of stars are displayed in the upper right corner of the HMI; these indicate the current user level. The different user levels and their star indicators are as follows (also, see the image below for the HMI view):

- Super user (\*\*\*)
- Configurator (\*\*)
- Operator (\*)
- User (-)

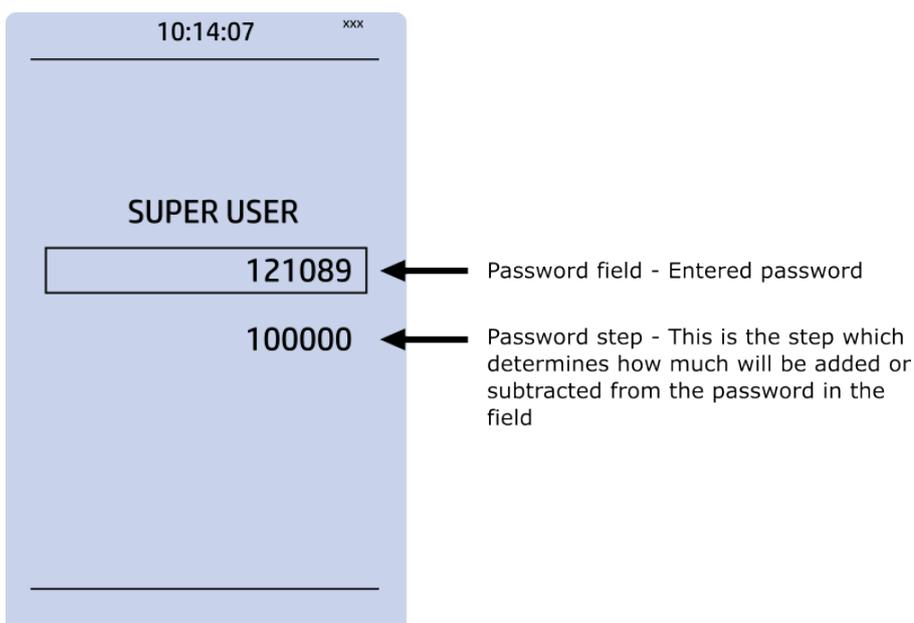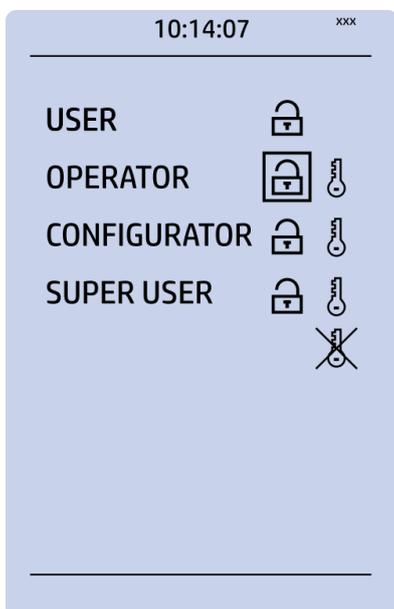

You can set a new password for a user level by selecting the key icon next to the user level's name. After this you can lock the user level by pressing the **Return** key while the lock is selected. If you need to change the password, you can select the key icon again and give a new password. Please note that in order to do this the user level whose password is being changed must be unlocked.

As mentioned above, the access level of the different user levels is indicated by the number of stars. The required access level to change a parameter is indicated with a star (\*) symbol if such is required. As a general rule the access levels are divided as follows:

- *User*: Can view any menus and settings but cannot change any settings, nor operate breakers or other equipment.
- *Operator*: Can view any menus and settings but cannot change any settings BUT can operate breakers and other equipment.

- *Configurator*: Can change most settings such as basic protection pick-up levels or time delays, breaker control functions, signal descriptions etc. and can operate breakers and other equipment.
- *Super user*: Can change any setting and can operate breakers and other equipment.

**NOTE!**



Any user level with a password automatically locks itself after half an hour (30 minutes) of inactivity.

## 5 Functions

### 5.1 Functions included in AQ-M210

The AQ-M210 motor protection relay includes the following functions as well as the number of stages for those functions.

Table. 5.1 - 4. Protection functions of AQ-M210.

Name (number of stages)	IEC	ANSI	Description
NOC (4)	I> I>> I>>> I>>>>	50/51	Non-directional overcurrent protection
NEF (4)	I0> I0>> I0>>> I0>>>>	50N/51N	Non-directional earth fault protection
CUB (4)	I2> I2>> I2>>> I2>>>>	46/46R/46L	Negative sequence overcurrent/ phase current reversal/ current unbalance protection
HOC (4)	Ih> Ih>> Ih>>> Ih>>>>	50H/51H/68H	Harmonic overcurrent protection
CBFP (1)	CBFP	50BF/52BF	Circuit breaker failure protection
REF (1)	I0d>	87N	Low-impedance or high-impedance restricted earth fault/ cable end differential protection
MST	-	-	Motor status monitoring
TOLM (1)	TM>	49M	Machine thermal overload protection
LCR (1)	Ist>	48/14	Motor start/locked rotor monitoring
FSP (1)	N>	66	Frequent start protection
NUC (1)	I<	37	Non-directional undercurrent protection
MJP (1)	Im>	51M	Mechanical jam protection
RTD (1)	-	-	Resistance temperature detectors
PGS (1)	PGx>/<	99	Programmable stage
ARC (1)	IArc>/I0Arc>	50Arc/50NArc	Arc fault protection (optional)

Table. 5.1 - 5. Control functions of AQ-M210.

Name	IEC	ANSI	Description
SGS	-	-	Setting group selection
OBJ	-	-	Object control and monitoring (5 objects available)
CIN	-	-	Indicator object monitoring (5 indicators available)

Name	IEC	ANSI	Description
CLPU	CLPU	-	Cold load pick-up
PCS	-	-	Programmable control switch
mA output	-	-	Milliampere output control

Table. 5.1 - 6. Monitoring functions of AQ-M210.


Name	IEC	ANSI	Description
CTS	-	-	Current transformer supervision
DR	-	-	Disturbance recorder
CBW	-	-	Circuit breaker wear monitor
THD	-	-	Total harmonic distortion
RHC	-	-	Running hour counter
MR	-	-	Measurement recorder
VREC	-	-	Measurement value recorder

## 5.2 Measurements

### 5.2.1 Current measurement and scaling

The current measurement module (CT module, or CTM) is used for measuring the currents from current transformers. The measured values are processed into the measurement database and they are used by measurement and protection functions. It is essential to understand the concept of current measurements to be able to get correct measurements.

Figure. 5.2.1 - 51. Current measurement terminology

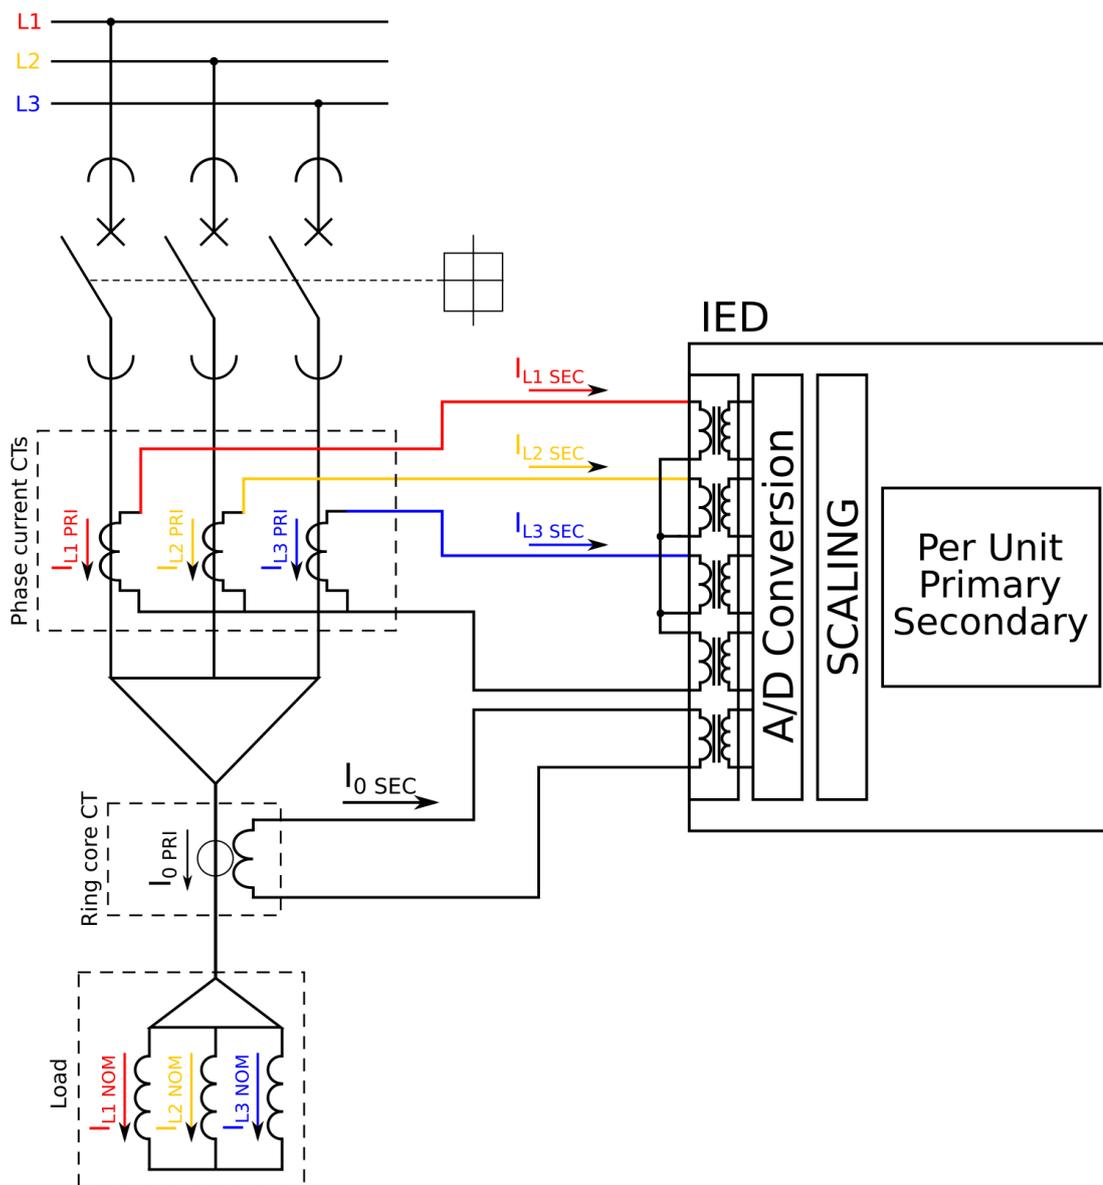

**PRI:** The primary current, i.e. the current which flows in the primary circuit and through the primary side of the current transformer.

**SEC:** The secondary current, i.e. the current which the current transformer transforms according to its ratios. This current is measured by the protection relay.

**NOM:** The nominal primary current of the protected object.

For the measurements to be correct the user needs to ensure that the measurement signals are connected to the correct inputs, that the current direction is connected to the correct polarity, and that the scaling is set according to the nominal values of the current transformer.

The relay calculates the scaling factors based on the set values of the CT primary, the CT secondary and the nominal current settings. The relay measures the secondary current, the current output from the current transformer installed into application's primary circuit. The rated primary and secondary currents of the CT need to be set for the relay to "know" the primary and per-unit values. With motors and other specific electrical apparatus protections, the motor's nominal current should be set for the values to be in per unit with regards to the apparatus nominal instead of the CT nominal. This is not always mandatory as some relays still require manual calculations for the correct settings; however, setting the motors nominal current makes motor protection much easier and more straightforward. In modern protection devices this scaling calculation is done internally after the current transformer's primary current, secondary current and motor nominal current are set.


Normally, the primary current ratings for phase current transformers are 10 A, 12.5 A, 15 A, 20 A, 25 A, 30 A, 40 A, 50 A, 60 A and 75 A as well as their decimal multiples, while the secondary current ratings are 1 A and 5 A. Other, non-standard ratings can be directly connected as the scaling settings are flexible and have large ranges. For example, the ring core current transformer ratings may vary. Ring core current transformers are commonly used for sensitive earth fault protection and their rated secondary current may be as low as 0.2 A in some cases.

The following chapter is an example on how to set the scaling of the current measurements for the selected current transformer and system load.

### Example of CT scaling

The following figure presents how CTs are connected to the relay's measurement inputs. It also shows example CT ratings and nominal current of the load.

Figure. 5.2.1 - 52. Connections.

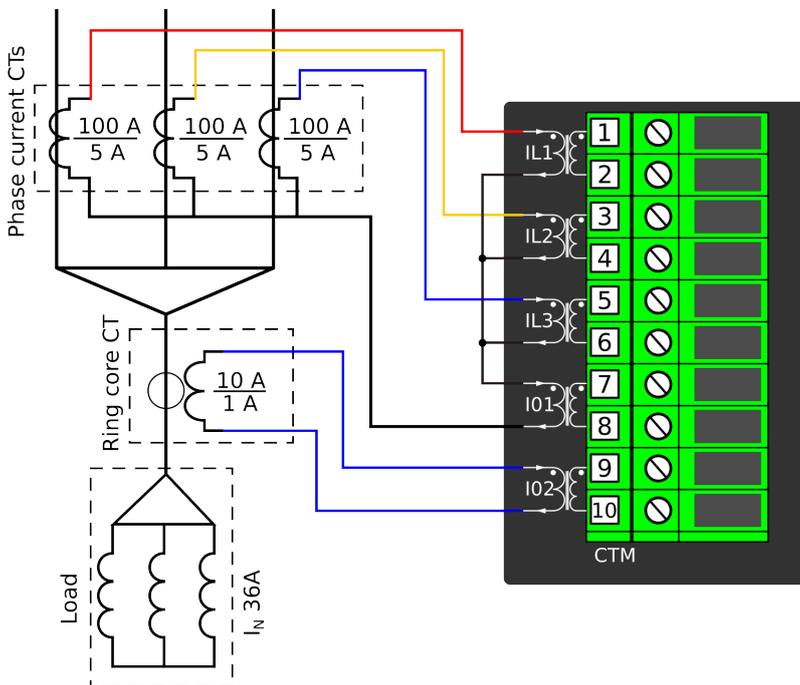

The following table presents the initial data of the connection.

Table. 5.2.1 - 7. Initial data.

Phase current CT	Ring core CT in Input I02	Load (nominal)
- CT primary: 100 A	- IOCT primary: 10 A	36 A
- CT secondary: 5 A	- IOCT secondary: 1 A	


- the phase currents are connected to the I01 residual via a Holmgren connection
- the starpoint of the phase current CT's secondary current is towards the line

### Phase CT scaling

Next, to scale the current to per-unit values, we have to select whether the basis of the phase CT scaling is the protected object's nominal current or the CT primary value.

If the CT values are chosen to be the basis for the per-unit scaling, the option "CT nom. p.u." is selected for the "Scale meas to In" setting (see the image below).


Figure. 5.2.1 - 53. Setting the phase current transformer scalings to CT nominal.

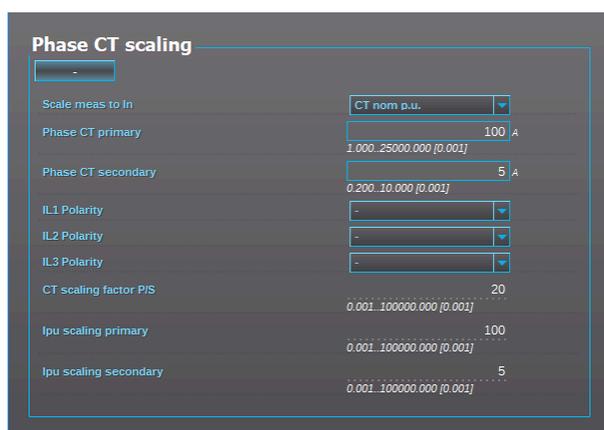

Once the setting have been sent to the device, relay calculates the scaling factors and displays them for the user. The "CT scaling factor P/S" describes the ratio between the primary current and the secondary current. The per-unit scaling factors ("Ipu scaling") for both primary and secondary values are also displayed (in this case they are the set primary and secondary currents of the CT).

If the protected object's nominal current is chosen to be the basis for the per-unit scaling, the option "Object in p.u." is selected for the "Scale meas to In" setting (see the image below).

Figure. 5.2.1 - 54. Setting the phase current transformer scalings to the protected object's nominal current.

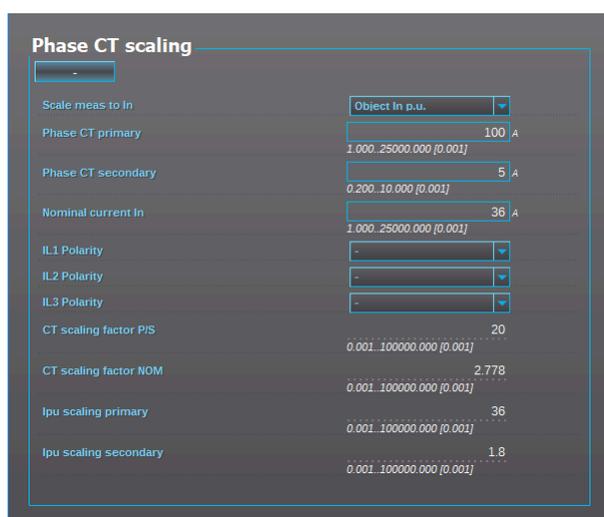


Once the measurement scaling is tied to the protected object's nominal current, the user must set the appropriate input for the "Nominal current In" setting. One can now see the differences between the two scaling options (CT nominal vs. object nominal). The "CT scaling factor P/S" is the direct ratio between the set CT current values, and the "CT scaling factor NOM" is now the ratio between the set CT primary and the nominal current. The "Ipu scaling primary" is now equal to the set nominal current, and the "Ipu scaling secondary" is the ratio between the nominal current and the "CT scaling factor P/S".

### Residual I0 CT scaling

Next, we set the residual IO CT scalings according to how the phase current CTs and the ring core CT are connected to the module (see the Connections image at the beginning of this chapter).


The phase current CTs are connected to the module via a Holmgren (summing) connection, which requires the use of coarse residual current measurement settings: the "I01 CT" settings are set according to the phase current CTs' ratings (100/5 A).

Figure. 5.2.1 - 55. Residual I01 CT scaling (coarse).

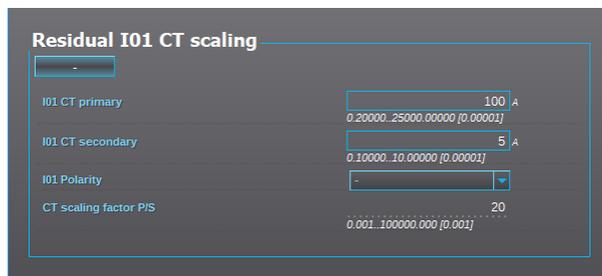

The ring core CT is connected to the CTM directly, which requires the use of sensitive residual current measurement settings: the "I02 CT" settings are set according to the ring core CT's ratings (10/1 A).

Figure. 5.2.1 - 56. Residual I02 CT scaling (sensitive).

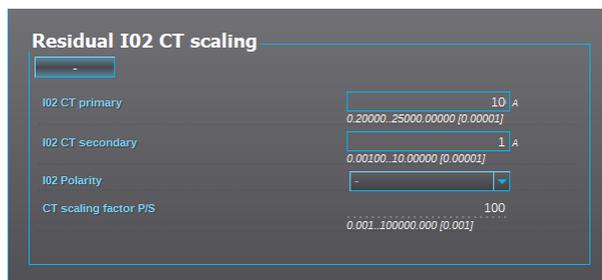


### Displaying the scaling

Depending on whether the scaling was done based on the CT primary values or the protected object's nominal current, the measurements are displayed slightly differently. The first of the two images shows how the measurements are displayed when the CT primary values are the basis for the scaling; the second shows them when the protected object's nominal current is the basis for the scaling.

Figure. 5.2.1 - 57. Scalings display (based on the CT nominal).



Figure. 5.2.1 - 58. Scalings display (based on the protected object's nominal current).

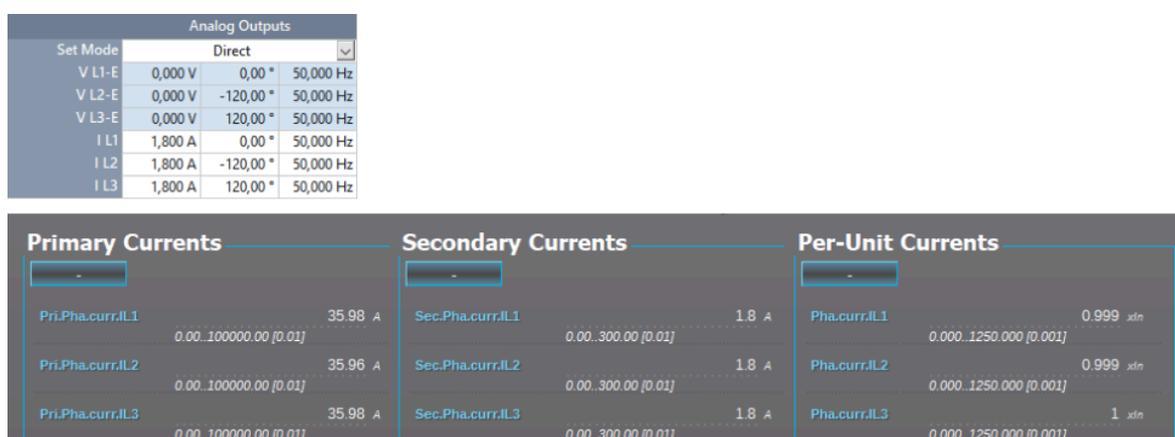


As the images above show, the scaling selection does not affect how primary and secondary currents are displayed (as actual values). The only effect is that the per-unit system in the relay is scaled either to the CT nominal or to the object nominal, making the settings input straightforward.

### Example of zero sequence CT scaling

Zero sequence CT scaling (ZCT scaling) is done when a zero sequence CT instead of a ring core CT is part of the measurement connection. In such a case the zero sequence CT should be connected to the I02 channel which has lower CT scaling ranges (see the image below).

Figure. 5.2.1 - 59. Connections of ZCT scaling.

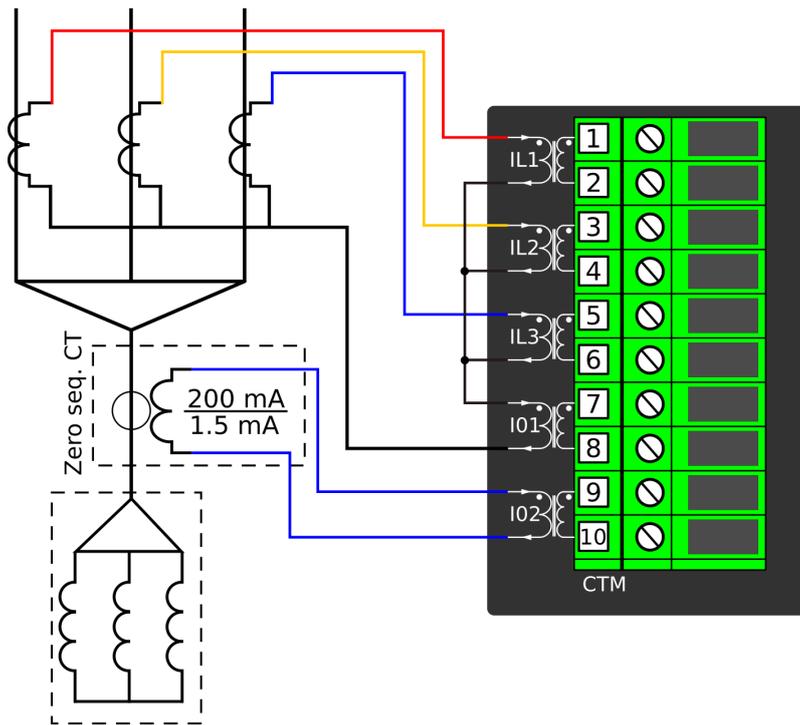

## Troubleshooting


When the measured current values differ from the expected current values, the following table offers possible solutions for the problems.

### NOTE!




If you work with energized CTs, extreme caution needs to be taken when checking the connections! An opened CT secondary circuit may generate dangerously high voltages. A "buzzing" sound from the connector can indicate an open circuit.

Problem	Solution
The measured current amplitude in all phases does not match the injected current.	The scaling settings may be wrong, check that the settings match with the connected current transformer ( <i>Measurement</i> → <i>Transformers</i> → <i>Phase CT scaling</i> ). Also check that the "Scale meas. to In" is set accordingly. If possible, check the actual CTs and their ratings as there may have been a need to change the original plan.
The measured current amplitude does not match one of the measured phases./  The calculated I0 is measured even though it should not.	Check the wiring connections between the injection device or the CTs and the relay.

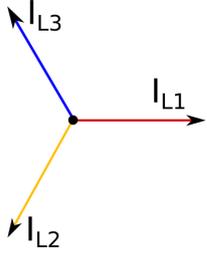Problem	Solution
<p>The measured current amplitudes are OK but the angles are strange./</p> <p>The phase unbalance protection trips immediately after activation./</p> <p>The earth fault protection trips immediately after activation.</p>	<p>The phase currents are connected to the measurement module but the order or polarity of one or all phases is incorrect. In relay settings, go to <i>Measurement</i> → <i>Phasors</i> and check the "Phase current vectors" diagram. When all connections are correct, the diagram (symmetric feeding) should look like this:</p>  <p>See the following tables for the most common problems with phase polarity and network rotation (mixed phases).</p>


The following image presents the most common problems with phase polarity. Problems with phase polarity are easy to find because the vector diagram points towards the opposite polarity when a phase has been incorrectly connected.

Figure. 5.2.1 - 60. Common phase polarity problems.

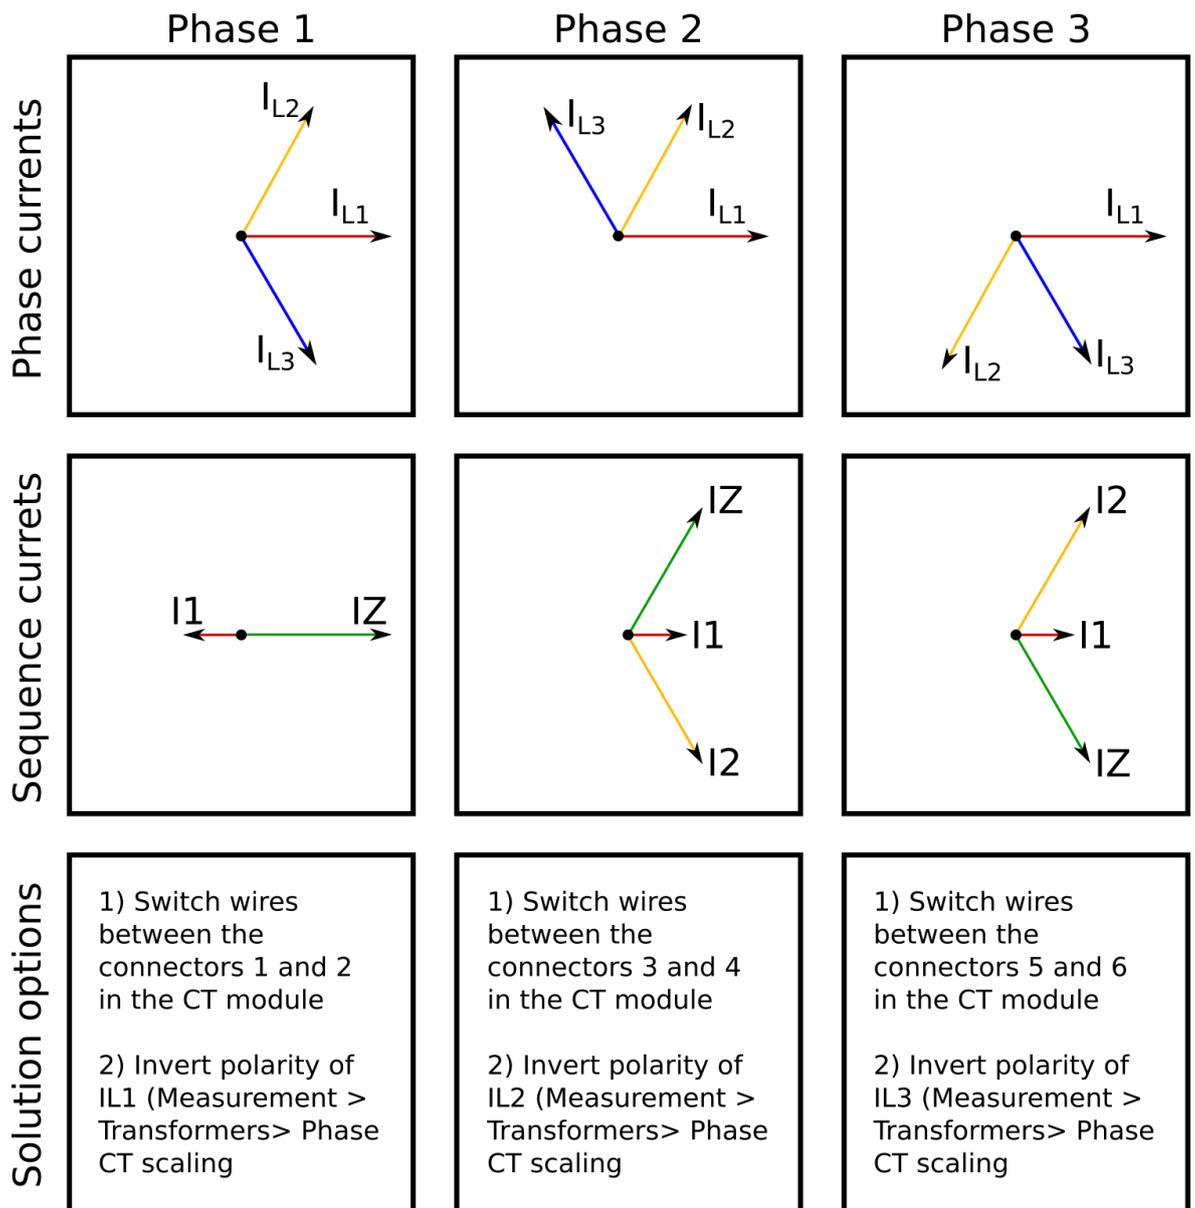

The following image presents the most common problems with network rotation (mix phases). These problems can be difficult to find because the measurement result is always the same in the relay. If two phases are mixed together, the network rotation always follows the pattern IL1-IL3-IL2 and the measured negative sequence current is therefore always 1.00 (in. p.u.).

Figure. 5.2.1 - 61. Common network rotation (mixed phases) problems.

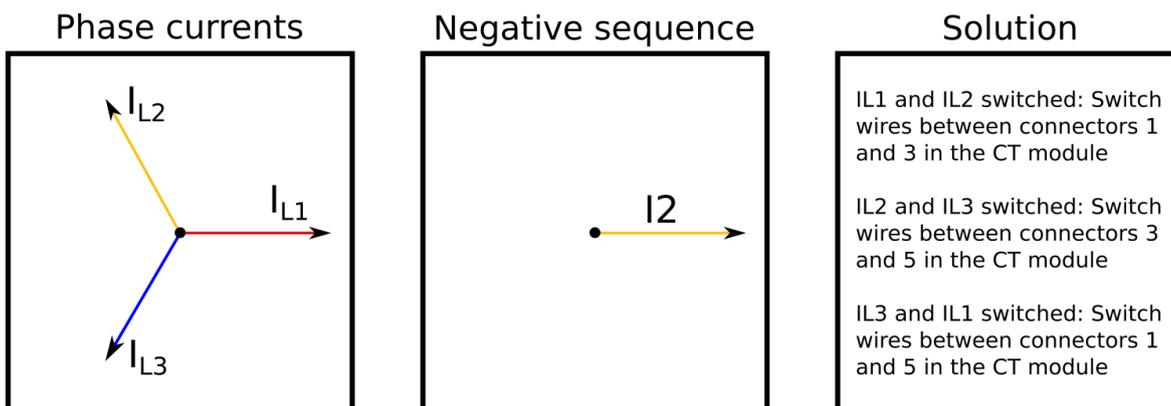

## Settings

Table. 5.2.1 - 8. Settings of the Phase CT scaling.

Name	Unit	Range	Step	Default	Description
Scale measurement to In	-	0: CT nom p.u. 1: Object In p.u.	-	0: CT nom p.u.	The selection of the reference used in the relay's per-unit system scaling. Either the set phase current CT primary or the protected object's nominal current.
Phase CT primary	A	1...25000	0.001	100	The rated primary current of the current transformer.
Phase CT secondary	A	0.2...10	0.001	5	The rated secondary current of the current transformer.
Nominal current In	A	1...25000	0.001	100	The nominal current of the protected object. This setting is only visible if the option "Object In p.u." has been selected in the "Scale measurement to In" setting.
IL1 Polarity	-	0: - 1: Invert	-	0: -	The selection of the first current measurement channel's (IL1) polarity (direction). The default setting is for the positive current to flow from connector 1 to connector 2, with the secondary currents' starpoint pointing towards the line.
IL2 Polarity	-	0: - 1: Invert	-	0: -	The selection of the second current measurement channel's (IL2) polarity (direction). The default setting is for the positive current to flow from connector 3 to connector 4, with the secondary currents' starpoint pointing towards the line.
IL3 Polarity	-	0: - 1: Invert	-	0: -	The selection of the third current measurement channel's (IL3) polarity (direction). The default setting is for the positive current to flow from connector 5 to connector 6, with the secondary currents' starpoint pointing towards the line.
CT scaling factor P/S	-	-	-	-	A relay feedback value; the calculated scaling factor that is the ratio between the primary current and the secondary current.
CT scaling factor NOM	-	-	-	-	A relay feedback value; the calculated scaling factor that is the ratio between the set primary current and the set nominal current. This parameter is only visible if the option "Object In p.u." has been selected in the "Scale measurement to In" setting.
Ipu scaling primary	-	-	-	-	A relay feedback value; the scaling factor for the primary current's per-unit value.
Ipu scaling secondary	-	-	-	-	A relay feedback value; the scaling factor for the secondary current's per-unit value.

Table. 5.2.1 - 9. Settings of the Residual I01 CT scaling.

Name	Unit	Range	Step	Default	Description
I01 CT primary	A	0.2...25 000	0.00001	100	The rated primary current of the current transformer.
I01 CT secondary	A	0.1...10.000	0.00001	1	The rated secondary current of the current transformer.
I01 Polarity	-	0: - 1: Invert	-	0: -	The selection of the coarse residual measurement channel's (I01) polarity (direction). The default setting is for the positive current to flow from connector 7 to connector 8.
CT scaling factor P/S	-	-	-	-	A relay feedback value; the calculated scaling factor that is the ratio between the primary current and the secondary current.

Table. 5.2.1 - 10. Settings of the Residual I02 CT scaling.

Name	Unit	Range	Step	Default	Description
I02 CT primary	A	0.2...25 000	0.00001	100	The rated primary current of the current transformer.
I02 CT secondary	A	0.001...10	0.00001	0.2	The rated secondary current of the current transformer.
I02 Polarity	-	0: - 1: Invert	-	0: -	The selection of the sensitive residual measurement channel's (I02) polarity (direction). The default setting is for the positive current to flow from connector 9 to connector 10.
CT scaling factor P/S	-	-	-	-	A relay feedback value; the calculated scaling factor that is the ratio between the primary current and the secondary current.

## Measurements

The following measurements are available in the measured current channels.

Table. 5.2.1 - 11. Per-unit phase current measurements.

Name	Unit	Range	Step	Description
Phase current ILx ("Pha.curr.ILx")	× In	0.000...1250.000	0.001	The RMS current measurement (in p.u.) from each of the phase current channels.
Phase current ILx TRMS ("Pha.curr.ILx TRMS")	× In	0.00...1250.00	0.01	The TRMS current (inc. harmonics up to 31 <sup>st</sup> ) measurement (in p.u.) from each of the phase current channels.
Peak-to-peak current ILx ("P-P curr.ILx")	× In	0.00...500.00	0.01	The peak-to-peak current measurement (in p.u.) from each of the phase current channels.

Table. 5.2.1 - 12. Primary phase current measurements.

Name	Unit	Range	Step	Description
Primary phase current ILx ("Pri.Pha.curr.ILx")	A	0.00...1 000 000.00	0.01	The primary RMS current measurement from each of the phase current channels.
Primary phase current ILx TRMS ("Pha.curr.ILx TRMS Pri")	A	0.00...1 000 000.00	0.01	The primary TRMS current (inc. harmonics up to 31 <sup>st</sup> ) measurement from each of the phase current channels.

Table. 5.2.1 - 13. Secondary phase current measurements.

Name	Unit	Range	Step	Description
Secondary phase current ILx ("Sec.Pha.curr.ILx")	A	0.00...300.00	0.01	The primary RMS current measurement from each of the phase current channels.
Secondary phase current ILx TRMS ("Pha.curr.ILx TRMS Sec")	A	0.00...300.00	0.01	The primary TRMS current (inc. harmonics up to 31 <sup>st</sup> ) measurement from each of the phase current channels.

Table. 5.2.1 - 14. Phase angle measurements.

Name	Unit	Range	Step	Description
Phase angle ILx ("Pha.angle ILx")	deg	0.00...360.00	0.01	The phase angle measurement from each of the three phase current inputs.

Table. 5.2.1 - 15. Per-unit residual current measurements.

Name	Unit	Range	Step	Description
Residual current I0x ("Res.curr.I0x")	× In	0.00...1250.00	0.01	The RMS current measurement (in p.u.) from the residual current channel I01 or I02.
Calculated I0	× In	0.00...1250.00	0.01	The RMS current measurement (in p.u.) from the calculated I0 current channel.
Phase current I0x TRMS ("Res.curr.I0x TRMS")	× In	0.00...1250.00	0.01	The TRMS current (inc. harmonics up to 31 <sup>st</sup> ) measurement (in p.u.) from the residual current channel I01 or I02.
Peak-to-peak current I0x ("P-P curr.I0x")	× In	0.00...500.00	0.01	The peak-to-peak current measurement (in p.u.) from the residual current channel I01 or I02.

Table. 5.2.1 - 16. Primary residual current measurements.

Name	Unit	Range	Step	Description
Primary residual current I0x ("Pri.Res.curr.I0x")	A	0.00...1 000 000.00	0.01	The primary RMS current measurement from the residual current channel I01 or I02.
Primary calculated I0 ("Pri.calc.I0")	A	0.00...1 000 000.00	0.01	The primary RMS current measurement from the calculated current channel I0.
Primary residual current I0x TRMS ("Res.curr.I0x TRMS Pri")	A	0.00...1 000 000.00	0.01	The TRMS current (inc. harmonics up to 31 <sup>st</sup> ) measurement from the primary residual current channel I01 or I02.

Table. 5.2.1 - 17. Secondary residual current measurements.

Name	Unit	Range	Step	Description
Secondary residual current I0x ("Sec.Res.curr.I0x")	A	0.00...300.00	0.01	The secondary RMS current measurement from the residual current channel I01 or I02.
Secondary calculated I0 ("Sec.calc.I0")	A	0.00...300.00	0.01	The secondary RMS current measurement from the calculated current channel I0.
Secondary residual current I0x TRMS (Res.curr.I0x TRMS Sec")	A	0.00...300.00	0.01	The secondary TRMS current (inc. harmonics up to 31 <sup>st</sup> ) measurement from the secondary residual current channel I01 or I02.

Table. 5.2.1 - 18. Residual phase angle measurements.

Name	Unit	Range	Step	Description
Residual current angle I0x ("Res.curr.angle I0x")	deg	0.00...360.00	0.01	The residual current angle measurement from the I01 or I02 current input.
calc.I0 Pha.angle	deg	0.00...360.00	0.01	The calculated residual current angle measurement.

Table. 5.2.1 - 19. Per-unit sequence current measurements.

Name	Unit	Range	Step	Description
Positive sequence current	× In	0.00...1250.00	0.01	The measurement (in p.u.) from the calculated positive sequence current.
Negative sequence current	× In	0.00...1250.00	0.01	The measurement (in p.u.) from the calculated negative sequence current.
Zero sequence current	× In	0.00...1250.00	0.01	The measurement (in p.u.) from the calculated zero sequence current.

Table. 5.2.1 - 20. Primary sequence current measurements.

Name	Unit	Range	Step	Description
Primary positive sequence current ("Pri.Positivesequence curr.")	A	0.00...1 000 000.00	0.01	The primary measurement from the calculated positive sequence current.
Primary negative sequence current ("Pri.Negative sequence curr.")	A	0.00...1 000 000.00	0.01	The primary measurement from the calculated negative sequence current.
Primary zero sequence current ("Pri.Zero sequence curr.")	A	0.00...1 000 000.00	0.01	The primary measurement from the calculated zero sequence current.

Table. 5.2.1 - 21. Secondary sequence current measurements.

Name	Unit	Range	Step	Description
Secondary positive sequence current ("Sec.Positive sequence curr.")	A	0.00...300.00	0.01	The secondary measurement from the calculated positive sequence current.
Secondary negative sequence current ("Sec.Negative sequence curr")	A	0.00...300.00	0.01	The secondary measurement from the calculated negative sequence current.
Secondary zero sequence current ("Sec.Zero sequence curr.")	A	0.00...300.00	0.01	The secondary measurement from the calculated zero sequence current.

Table. 5.2.1 - 22. Sequence phase angle measurements.

Name	Unit	Range	Step	Description
Positive sequence current angle ("Positive sequence curr.angle")	deg	0.00...360.00	0.01	The calculated positive sequence current angle.
Negative sequence current angle ("Negative sequence curr.angle")	deg	0.00...360.00	0.01	The calculated negative sequence current angle.
Zero sequence current angle ("Zero sequence curr.angle")	deg	0.00...360.00	0.01	The calculated zero sequence current angle.


Table. 5.2.1 - 23. Harmonic current measurements.

Name		Range	Step	Default	Description
Harmonics calculation values ("Harm Abs.or Perc.")	-	0: Percent 1: Absolute	-	0: Percent	Defines whether the harmonics are calculated as percentage or absolute values.
Harmonics display	-	0: Per unit 1: Primary A 2: Secondary A	-	0: Per unit	Defines how the harmonics are displayed: in p.u values, as primary current values, or as secondary current values.
Maximum harmonics value ("Ixx maximum harmonic")	A	0.00...100 000.00	0.01	-	Displays the maximum harmonics value of the selected current input ILx or IOx.
Fundamental frequency ("Ixx fundamental")	A	0.00...100 000.00	0.01	-	Displays the current value of the fundamental frequency (RMS) from the selected current input ILx or IOx.
Ixx harmonics (2 <sup>nd</sup> ...31 <sup>st</sup> harmonic)	A	0.00...100 000.00	0.01	-	Displays the selected harmonic from the current input ILx or IOx.

## 5.2.2 Frequency tracking and scaling

Measurement sampling can be set to the frequency tracking mode or to the fixed user-defined frequency sampling mode. The benefit of frequency tracking is that the measurements are within a pre-defined accuracy range even when the fundamental frequency of the power system changes.

Table. 5.2.2 - 24. Frequency tracking effect (FF changes from 6 Hz to 75 Hz).

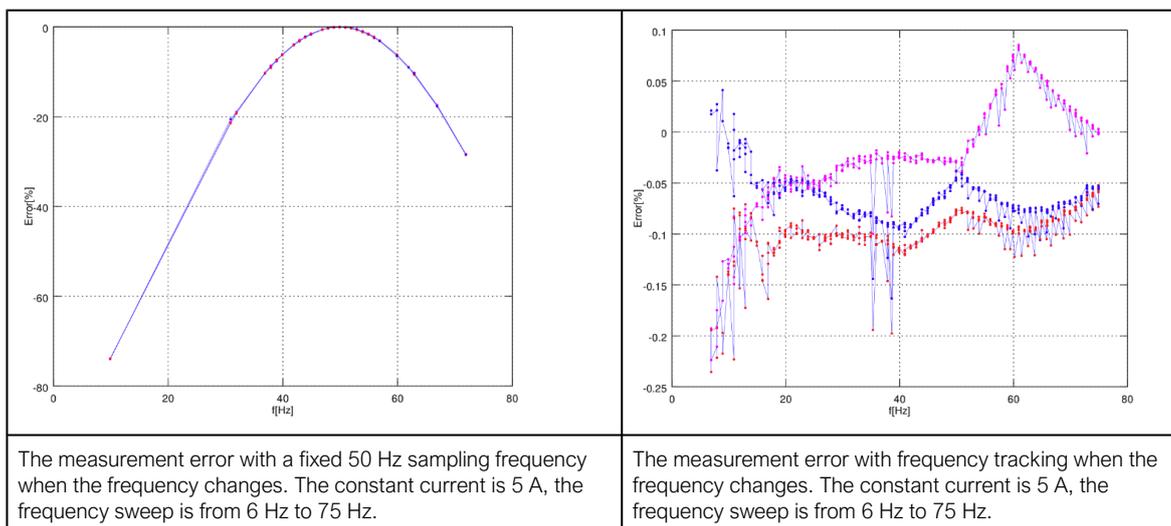

As the figures above show, the sampling frequency has a major effect on the relay's measurement accuracy. If the sampling is not tracked to the system frequency, for example a 10 Hz difference between the measured and the set system frequency can give a measurement error of over 5 %. The figures also show that when the frequency is tracked and the sampling is adjusted according to the detected system frequency, the measurement accuracy has an approximate error of 0.1...- 0.2 % error in the whole frequency range.

AQ -200 series devices have a measurement accuracy that is independent of the system frequency. This has been achieved by adjusting the sample rate of the measurement channels according to the measured system frequency; this way the FFT calculation always has a whole power cycle in the buffer. The measurement accuracy is further improved by Arcteq's patented calibration algorithms that calibrate the analog channels against eight (8) system frequency points for both magnitude and angle. This frequency-dependent correction compensates the frequency dependencies in the used, non-linear measurement hardware and improves the measurement accuracy significantly. Combined, these two methods give an accurate measurement result that is independent of the system frequency.

## Troubleshooting

When the measured current, voltage or frequency values differ from the expected values, the following table offers possible solutions for the problems.

Problem	Check / Resolution
The measured current or voltage amplitude is lower than it should be./ The values are "jumping" and are not stable.	The set system frequency may be wrong. Please check that the frequency settings match the local system frequency, or change the measurement mode to "Tracking" ( <i>Measurement</i> → <i>Frequency</i> → "Smpl mode") so the relay adjusts the frequency itself.
The frequency readings are wrong.	In Tracking mode the relay may interpret the frequency incorrectly if no current is injected into the CT (or voltage into the VT). Please check the frequency measurement settings ( <i>Measurement</i> → <i>Frequency</i> ).

## Settings

Table. 5.2.2 - 25. Settings of the frequency tracking.

Name	Range	Step	Default	Description
Sampling mode	0: Fixed 1: Tracking	-	0: Fixed	Defines which measurement sampling mode is in use: the fixed user-defined frequency, or the tracked system frequency.
System nominal frequency	7.000...75.000Hz	0.001Hz	50Hz	The user-defined system nominal frequency that is used when the "Sampling mode" setting has been set to "Fixed".
Tracked system frequency	0.000...75.000Hz	0.001Hz	-	Displays the rough measured system frequency.
Sampling frequency in use	0.000...75.000Hz	0.001Hz	-	Displays the tracking frequency that is in use at that moment.
Frequency reference 1	0: None 1: CT1IL1 2: CT2IL1 3: VT1U1 4: VT2U1	-	1: CT1IL1	The first reference source for frequency tracking.
Frequency reference 2	0: None 1: CT1IL2 2: CT2IL2 3: VT1U2 4: VT2U2	-	1: CT1IL2	The second reference source for frequency tracking.
Frequency reference 3	0: None 1: CT1IL3 2: CT2IL3 3: VT1U3 4: VT2U3	-	1: CT1IL3	The third reference source for frequency tracking.


Name	Range	Step	Default	Description
Frequency tracking quality	0: No trackable channels 1: Reference 1 trackable 2: Reference 2 trackable 3: References 1 & 2 trackable 4: Reference 3 trackable 5: Reference 1 & 3 trackable 6: References 2 & 3 trackable 7: All references trackable	-	-	Defines the frequency tracker quality. If the measured current (or voltage) amplitude is below the threshold, the channel tracking quality is 0 and cannot be used for frequency tracking. If all channels' magnitudes are below the threshold, there are no trackable channels.
Frequency measurement in use	0: No track ch 1: Ref1 2: Ref2 3: Ref3	-	-	Indicates which reference is used at the moment for frequency tracking.
Start behavior	0: Start tracking immediately 1: First nominal or tracked	-	0: Start tracking immediately	Defines the how the tracking starts. Tracking can start immediately, or there can be a set delay time between the receiving of the first trackable channel and the start of the tracking.
Start sampling with	0: Use track frequency 1: Use nom frequency	-	0: Use track frequency	Defines the start of the sampling. Sampling can begin with a previously tracked frequency, or with a user-set nominal frequency.
Use nominal frequency until	0...1800.000s	0.005s	0.100s	Defines how long the nominal frequency is used after the tracking has started. This setting is only valid when the "Sampling mode" setting is set to "Tracking" and when the "Start behavior" is set to "First nominal or tracked".
Tracked f channel A	0.000...75.000Hz	0.001Hz	-	Displays the rough value of the tracked frequency in Channel A.
Tracked f channel B	0.000...75.000Hz	0.001Hz	-	Displays the rough value of the tracked frequency in Channel B.
Tracked f channel C	0.000...75.000Hz	0.001Hz	-	Displays the rough value of the tracked frequency in Channel C.
Alg f fast	0.000...75.000Hz	0.001Hz	-	Frequency measurement built from tracked frequencies and U4 voltage channel samples.
Alg f avg	0.000...75.000Hz	0.001Hz	-	Averaged frequency measurement built from tracked frequencies and U4 voltage channel samples.
System measured frequency	0: One f measured 1: Two f measured 2: Three f measured	-	-	Displays the amount of frequencies that are measured.
f.atm. Protections	0.000...75.000Hz	0.001Hz	-	Frequency measurement value used by protection functions. When frequency is not measurable this value returns to value set to "System nominal frequency" parameter.
f.atm. Display	0.000...75.000Hz	0.001Hz	-	Frequency measurement value used in display. When frequency is not measurable this value is "0 Hz".

Name	Range	Step	Default	Description
f measurement from	0: Not measurable 1: Avg Ref 1 2: Avg Ref 2 3: Avg Ref 3 4: Track Ref 1 5: Track Ref 2 6: Track Ref 3 7: Fast Ref 1 8: Fast Ref 2 9: Fast Ref 3	-	-	Displays which reference is used for frequency measurement.
SS1.meas.frqs	0.000...75.000Hz	0.001Hz	-	Displays frequency used by "system set" channel 1 and 2.
SS2.meas.frqs				
SS1f meas.from	0: Not measurable 1: Fast Ref U3 2: Fast Ref U4	-	-	Displays which voltage channel frequency reference is used by "system set" voltage channel.
SS2f meas.from	0: Not measurable 1: Fast Ref U4	-	-	Displays if U4 channel frequency reference is measurable or not when the channel has been set to "system set" mode.

## 5.3 Protection functions


### 5.3.1 General properties of a protection function

The following flowchart describes the basic structure of any protection function. The basic structure is composed of analog measurement values being compared to the pick-up values and operating time characteristics.

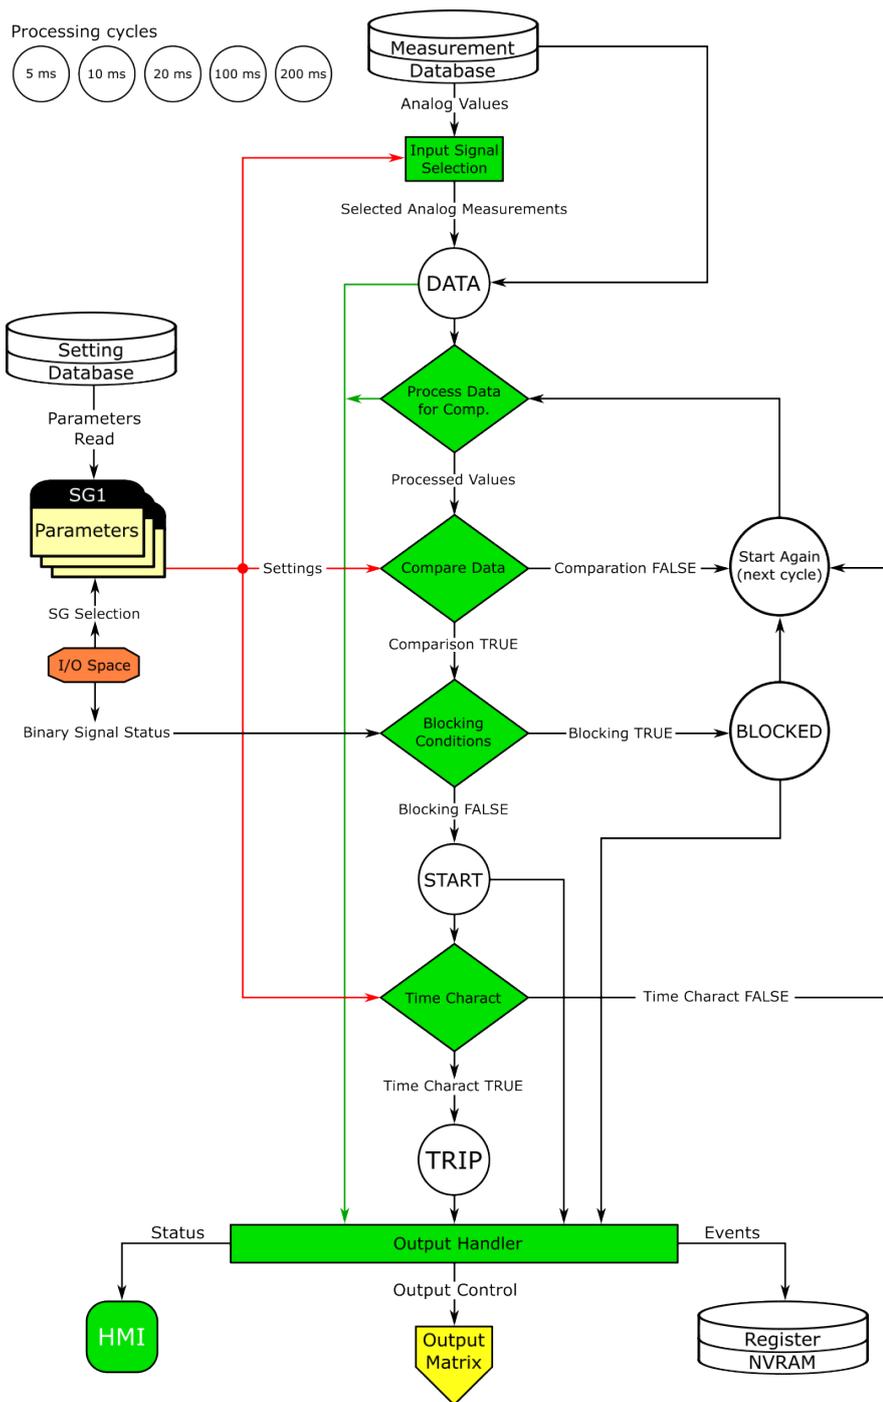

The protection function is run in a completely digital environment with a protection CPU microprocessor which also processes the analog signals transformed into the digital form.

Figure. 5.3.1 - 62. Principle diagram of the protection relay platform.

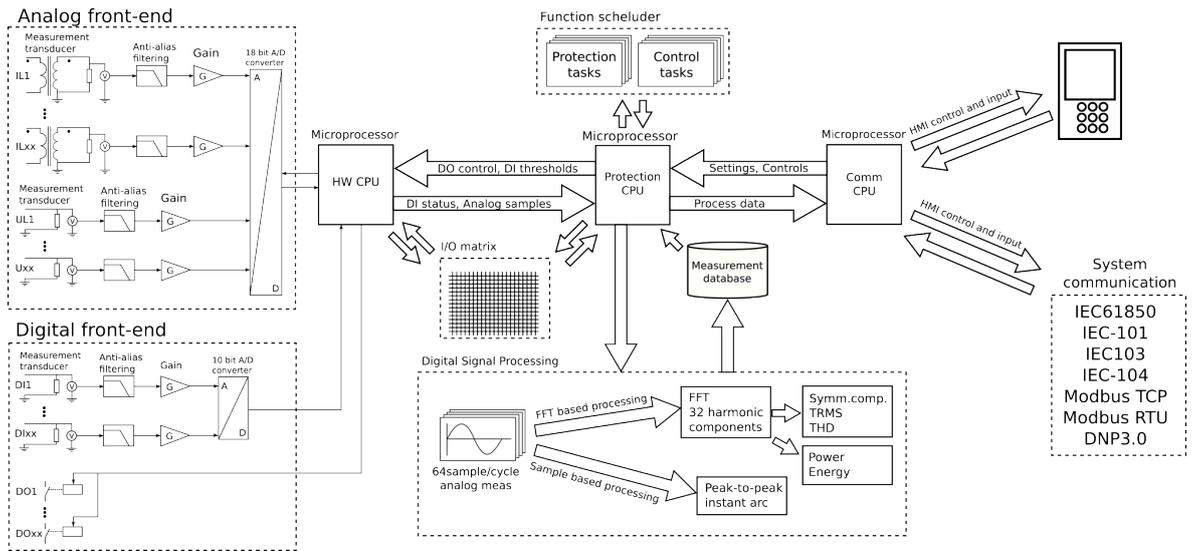


In the following chapters the common functionalities of protection functions are described. If a protection function deviates from this basic structure, the difference is described in the corresponding chapter of the manual.

## Pick-up


The  $X_{set}$  parameter defines the pick-up level of the function, and this in turn defines the maximum or minimum allowed measured magnitude (in per unit, absolute or percentage value) before the function takes action. The function constantly calculates the ratio between the pick-up parameter set by the user and the measured magnitude ( $X_m$ ). The reset ratio of 97 % is built into the function and is always relative to the  $X_{set}$  value. If a function's pick-up characteristics vary from this description, they are defined in the function section in the manual.

Figure. 5.3.1 - 63. Pick up and reset.

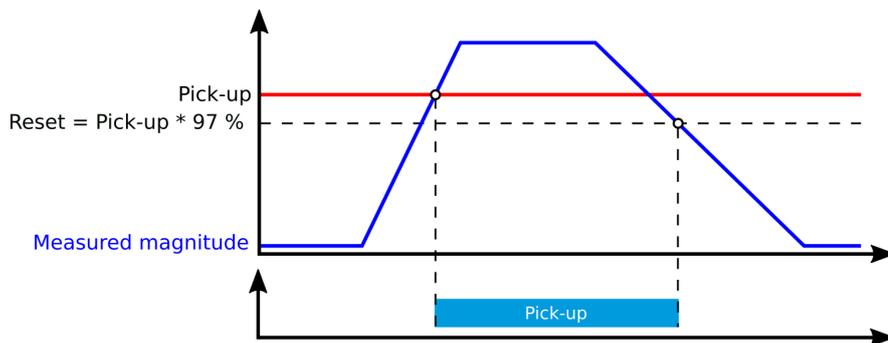

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if a blocking condition is not active.

Figure. 5.3.1 - 64. Measurement range in relation to the nominal current.

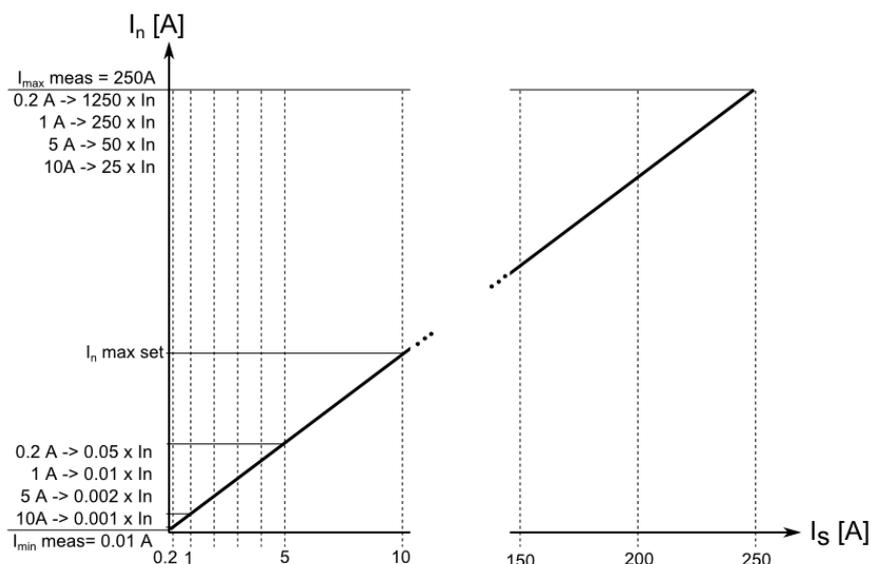

The  $I_n$  magnitude refers to the user set nominal current which can range from 0.2...10 A, typically 0.2 A, 1 A or 5 A. With its own current measurement card, the IED will measure secondary currents from 0.001 A up to 250 A. To this relation the pick-up setting in secondary amperes will vary.

## Function blocking

The blocking signals are checked in the beginning of each program cycle. A blocking signal is received from the blocking matrix for the function dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when pick-up element activates, a BLOCKED signal is generated and the function will not process the situation further. If the START function has been activated before the blocking signal, it resets and the release time characteristics are processed similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's common and global testing mode is activated.

The variables users can set are binary signals from the system. The blocking signal needs to reach the IED minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Operating time characteristics for trip and reset

The operating timers' behavior during a function can be set for trip signal and for the release of the function in case the pick-up element is reset before the trip time has been reached. There are three basic operating modes available for the function:

- Instant operation: activates the trip signal with no additional time delay simultaneously with the start signal.
- Definite time operation (DT): activates the trip signal after a user-defined time delay regardless of the measured current as long as the current is above or below the  $X_{set}$  value and thus the pick-up element is active (independent time characteristics).

- Inverse definite minimum time (IDMT): activates the trip signal after a time which is in relation to the set pick-up value  $X_{set}$  and the measured value  $X_m$  (dependent time characteristics).

Both IEC and IEEE/ANSI standard characteristics as well as user settable parameters are available for the IDMT operation. Please note that in the IDMT mode *Definite (Min)* operating time delay is also determines the minimum time for protection tripping (see the figure below). If this function is not desired the parameter should be set to 0 seconds.

Figure. 5.3.1 - 65. Operating time delay: *Definite (Min)* and the minimum for tripping.

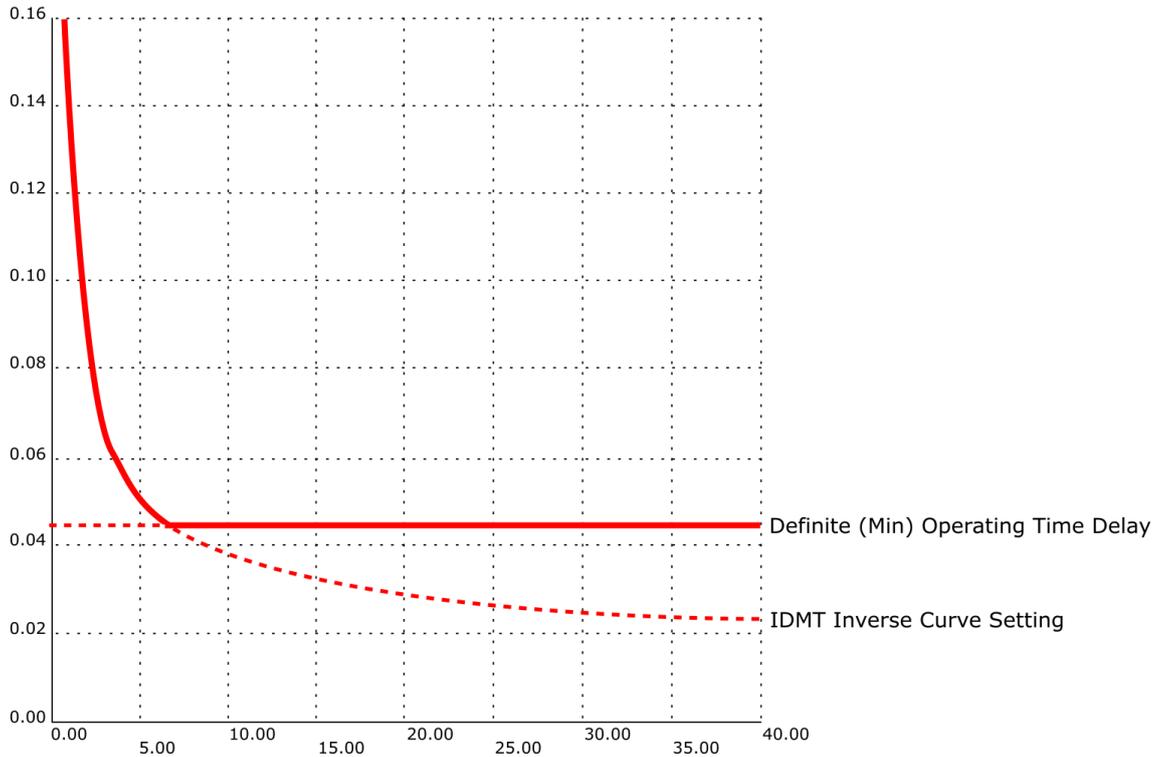


Table. 5.3.1 - 26. Operating time characteristics setting parameters (general).

Name	Range	Step	Default	Description
Delay type	0: DT 1: IDMT	-	0: DT	Selects the delay type for the time counter. The selection is made between dependent (IDMT) and independent (DT) characteristics.
Definite (min) operating time delay	0.000...1800.000s	0.005s	0.040s	When the "Delay type" parameter is set to "DT", this parameter acts as the expected operating time for the protection function.  When set to 0 s, the stage operates instantaneously without any additional delay. When the parameter is set to 0.005...1800 s, the stage operates as independent delayed.  When the "Delay type" parameter has been set to "IDMT", this parameter can be used to determine the minimum operating time for the protection function. Example of this is presented in the figure above.
Delay curve series	0: IEC 1: IEEE	-	0: IEC	Selects whether the delay curve series for an IDMT operation follows either IEC or IEEE/ANSI standard defined characteristics.  This setting is active and visible when the "Delay type" parameter is set to "IDMT".

Name	Range	Step	Default	Description
Delay characteristics IEC	0: NI 1: EI 2: VI 3: LTI 4: Param	-	0: NI	<p>Selects the IEC standard delay characteristics.</p> <p>The options include the following: Normally Inverse ("NI"), Extremely Inverse ("EI"), Very Inverse ("VI") and Long Time Inverse ("LTI") characteristics. Additionally, the "Param" option allows the tuning of the constants A and B which then allows the setting of characteristics following the same formula as the IEC curves mentioned here.</p> <p>This setting is active and visible when the "Delay type" parameter is set to "IDMT" and the "Delay curve series" parameter is set to "IEC".</p>
Delay characteristics IEEE	0: ANSI NI 1: ANSI VI 2: ANSI EI 3: ANSI LTI 4: IEEE MI 5: IEEE VI 6: IEEE EI 7: Param	-	0: ANSI NI	<p>Selects the IEEE and ANSI standard delay characteristics.</p> <p>The options for ANSI include the following: Normal Inverse ("ANSI NI"), Very Inverse ("ANSI VI"), Extremely inverse ("ANSI EI"), Long time inverse ("ANSI LTI") characteristics. IEEE: Moderately Inverse ("IEEE MI"), Very Inverse ("IEEE VI"), Extremely Inverse ("IEEE EI") characteristics. Additionally, the "Param" option allows the tuning of the constants A, B and C which then allows the setting of characteristics following the same formula as the IEEE curves mentioned here.</p> <p>This setting is active and visible when the "Delay type" parameter is set to "IDMT" and the "Delay curve series" parameter is set to "IEEE".</p>
Time dial setting k	0.01...25.00s	0.01s	0.05s	<p>Defines the time dial/multiplier setting for IDMT characteristics.</p> <p>This setting is active and visible when the "Delay type" parameter is set to "IDMT".</p>
A	0.0000...250.0000	0.0001	0.0860	<p>Defines the Constant A for IEC/IEEE characteristics.</p> <p>This setting is active and visible when the "Delay type" parameter is set to "IDMT" and the "Delay characteristic" parameter is set to "Param".</p>
B	0.0000...5.0000	0.0001	0.1850	<p>Defines the Constant B for IEC/IEEE characteristics.</p> <p>This setting is active and visible when the "Delay type" parameter is set to "IDMT" and the "Delay characteristic" parameter is set to "Param".</p>
C	0.0000...250.0000	0.0001	0.0200	<p>Defines the Constant C for IEEE characteristics.</p> <p>This setting is active and visible when the "Delay type" parameter is set to "IDMT" and the "Delay characteristic" parameter is set to "Param".</p>

Figure. 5.3.1 - 66. Inverse operating time formulas for IEC and IEEE standards.

IEC	IEEE/ANSI																																																			
$t = \frac{kA}{\left(\frac{I_m}{I_{set}}\right)^B - 1}$	$t = k \left( \frac{A}{\left(\frac{I_m}{I_{set}}\right)^C - 1} + B \right)$																																																			
<p><i>t</i> = Operating delay (s)  <i>k</i> = Time dial setting  <i>I<sub>m</sub></i> = Measured maximum current  <i>I<sub>set</sub></i> = Pick-up setting  <i>A</i> = Operating characteristics constant  <i>B</i> = Operating characteristics constant</p>	<p><i>t</i> = Operating delay (s)  <i>k</i> = Time dial setting  <i>I<sub>m</sub></i> = Measured maximum current  <i>I<sub>set</sub></i> = Pick-up setting  <i>A</i> = Operating characteristics constant  <i>B</i> = Operating characteristics constant  <i>C</i> = Operating characteristics constant</p>																																																			
<p>Standard delays IEC constants</p> <table border="1"> <thead> <tr> <th>Type</th> <th>A</th> <th>B</th> </tr> </thead> <tbody> <tr> <td>Normally Inverse (NI)</td> <td>0,14</td> <td>0,02</td> </tr> <tr> <td>Extremely Inverse (EI)</td> <td>80</td> <td>2</td> </tr> <tr> <td>Very Inverse (VI)</td> <td>13,5</td> <td>1</td> </tr> <tr> <td>Long Time Inverse (LTI)</td> <td>120</td> <td>1</td> </tr> </tbody> </table>	Type	A	B	Normally Inverse (NI)	0,14	0,02	Extremely Inverse (EI)	80	2	Very Inverse (VI)	13,5	1	Long Time Inverse (LTI)	120	1	<p>Standard delays ANSI constants</p> <table border="1"> <thead> <tr> <th>Type</th> <th>A</th> <th>B</th> <th>C</th> </tr> </thead> <tbody> <tr> <td>Normally Inverse (NI)</td> <td>8,934</td> <td>0,1797</td> <td>2,094</td> </tr> <tr> <td>Very Inverse (VI)</td> <td>3,922</td> <td>0,0982</td> <td>2</td> </tr> <tr> <td>Extremely Inverse (EI)</td> <td>5,64</td> <td>0,02434</td> <td>2</td> </tr> <tr> <td>Long Time Inverse (LTI)</td> <td>5,614</td> <td>2,186</td> <td>1</td> </tr> </tbody> </table> <p>Standard delays IEEE constants</p> <table border="1"> <thead> <tr> <th>Type</th> <th>A</th> <th>B</th> <th>C</th> </tr> </thead> <tbody> <tr> <td>Moderately Inverse (MI)</td> <td>0,0515</td> <td>0,114</td> <td>0,02</td> </tr> <tr> <td>Very Inverse (VI)</td> <td>19,61</td> <td>0,491</td> <td>2</td> </tr> <tr> <td>Extremely Inverse (EI)</td> <td>28,2</td> <td>0,1217</td> <td>2</td> </tr> </tbody> </table>	Type	A	B	C	Normally Inverse (NI)	8,934	0,1797	2,094	Very Inverse (VI)	3,922	0,0982	2	Extremely Inverse (EI)	5,64	0,02434	2	Long Time Inverse (LTI)	5,614	2,186	1	Type	A	B	C	Moderately Inverse (MI)	0,0515	0,114	0,02	Very Inverse (VI)	19,61	0,491	2	Extremely Inverse (EI)	28,2	0,1217	2
Type	A	B																																																		
Normally Inverse (NI)	0,14	0,02																																																		
Extremely Inverse (EI)	80	2																																																		
Very Inverse (VI)	13,5	1																																																		
Long Time Inverse (LTI)	120	1																																																		
Type	A	B	C																																																	
Normally Inverse (NI)	8,934	0,1797	2,094																																																	
Very Inverse (VI)	3,922	0,0982	2																																																	
Extremely Inverse (EI)	5,64	0,02434	2																																																	
Long Time Inverse (LTI)	5,614	2,186	1																																																	
Type	A	B	C																																																	
Moderately Inverse (MI)	0,0515	0,114	0,02																																																	
Very Inverse (VI)	19,61	0,491	2																																																	
Extremely Inverse (EI)	28,2	0,1217	2																																																	

### Non-standard delay characteristics

In addition to the previously mentioned delay characteristics, some functions also have delay characteristics that deviate from the IEC or IEEE standards. These functions are the following:

- overcurrent stages
- residual overcurrent stages
- directional overcurrent stages
- directional residual overcurrent stages.

The setting parameters and their ranges are documented in the chapters of the respective function blocks.

Table. 5.3.1 - 27. Inverse operating time formulas for nonstandard characteristics.

RI-type	RD-type
Used to get time grading with mechanical relays	Mostly used in earth fault protection which grants selective tripping even in non-directional protection
$t = \frac{k}{0,339 - 0,236 * \frac{I_{set}}{I_m}}$	$t = 5,8 - 1,35 * \ln \left( \frac{I_m}{k * I_{set}} \right)$
<p><i>t</i> = Operating delay (s)  <i>k</i> = Time dial setting  <i>I<sub>m</sub></i> = Measured maximum current  <i>I<sub>set</sub></i> = Pick-up setting</p>	<p><i>t</i> = Operating delay (s)  <i>k</i> = Time dial setting  <i>I<sub>m</sub></i> = Measured maximum current  <i>I<sub>set</sub></i> = Pick-up setting</p>

Table. 5.3.1 - 28. Setting parameters for reset time characteristics.

Name	Range	Step	Default	Description
Delayed pick-up release	0: No 1: Yes	-	1: Yes	Resetting characteristics selection (either time-delayed or instant) after the pick-up element is released. If activated, the START signal is reset after a set release time delay.
Release time delay	0.000...150.000s	0.005s	0.06s	Resetting time. The time allowed between pick-ups if the pick-up has not led into a trip operation.  If the "Delayed pick-up release" setting is active, the START signal is held on for the duration of the timer.
Op.Time calculation reset after release time	0: No 1: Yes	-	1: Yes	Operating timer resetting characteristics selection. When active, the operating time counter is reset after a set release time if the pick-up element is not activated during this time. When disabled, the operating time counter is reset directly after the pick-up element is reset.
Continue time calculation during release time	0: No 1: Yes	-	0: No	Time calculation characteristics selection. If activated, the operating time counter continues until a set release time even if the pick-up element is reset.

The behavior of the stages with different release time configurations are presented in the figures below.

Figure. 5.3.1 - 67. No delayed pick-up release.

#### Delayed pick-up release: Disabled

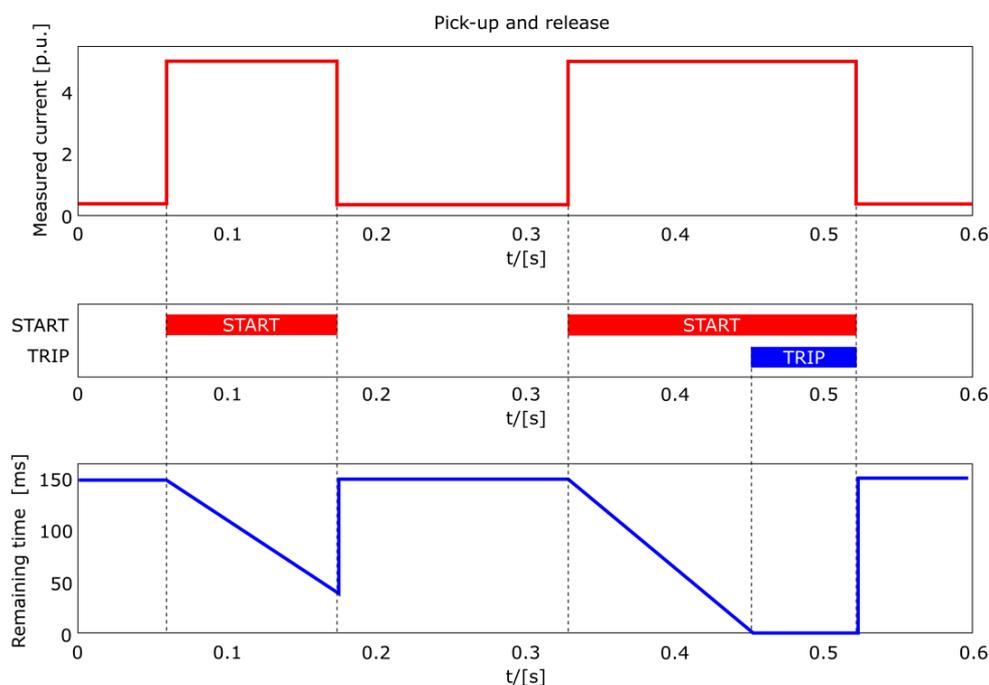


Figure. 5.3.1 - 68. Delayed pick-up release, delay counter is reset at signal drop-off.

Delayed pick-up release: Enabled  
 Op.time calc reset after release time: Disabled  
 Continue time calculation during release time: Disabled

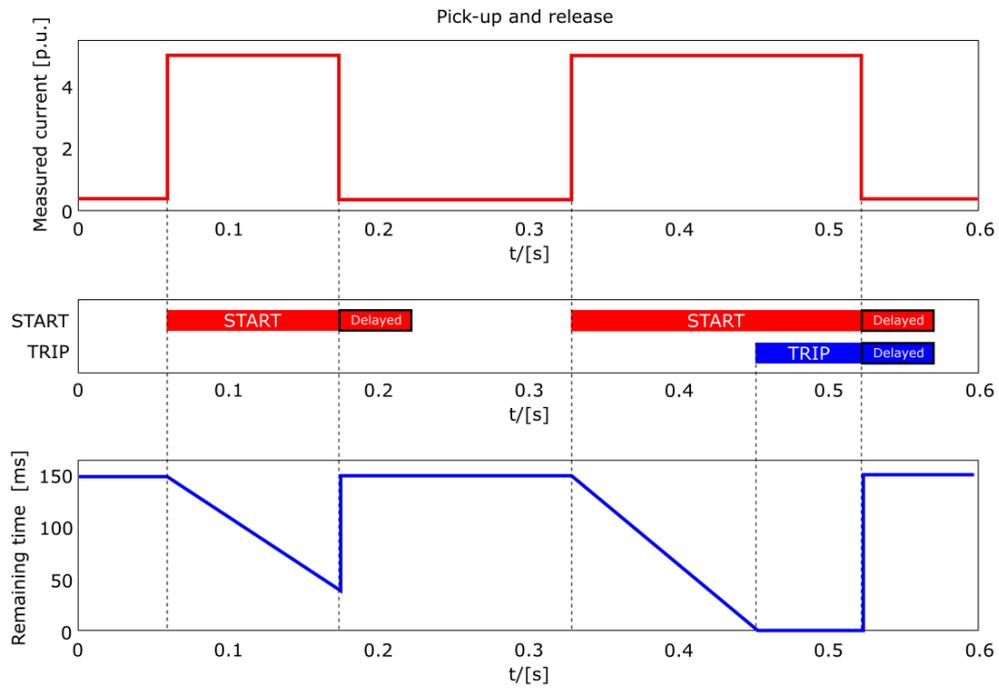


Figure. 5.3.1 - 69. Delayed pick-up release, delay counter value is held during the release time.

Delayed pick-up release: Enabled  
 Op.time calc reset after release time: Enabled  
 Continue time calculation during release time: Disabled


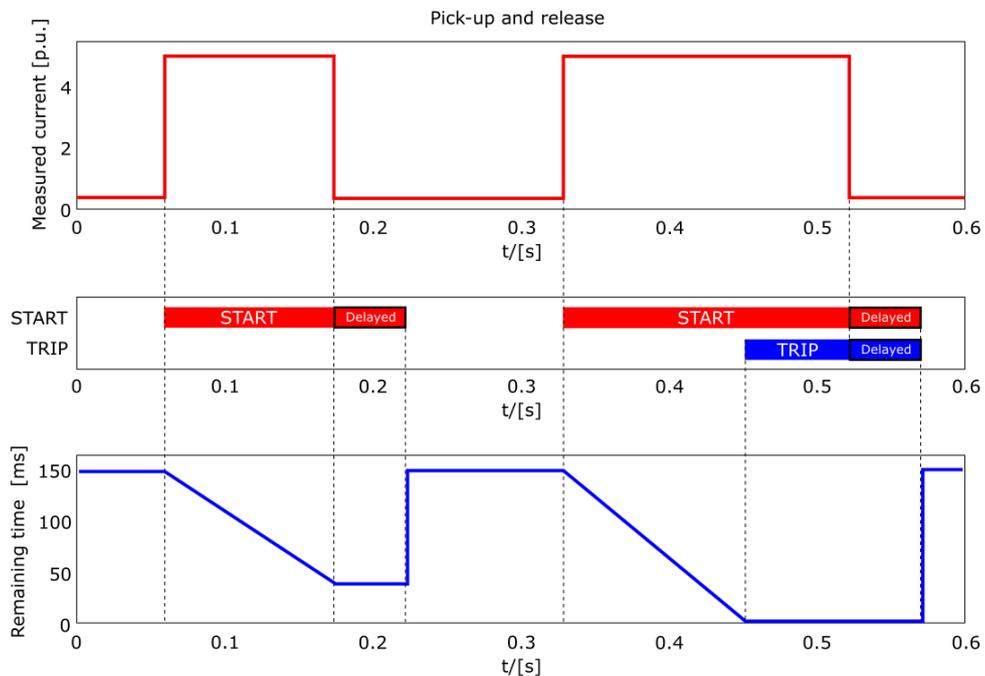


Figure. 5.3.1 - 70. Delayed pick-up release, delay counter value is decreasing during the release time.

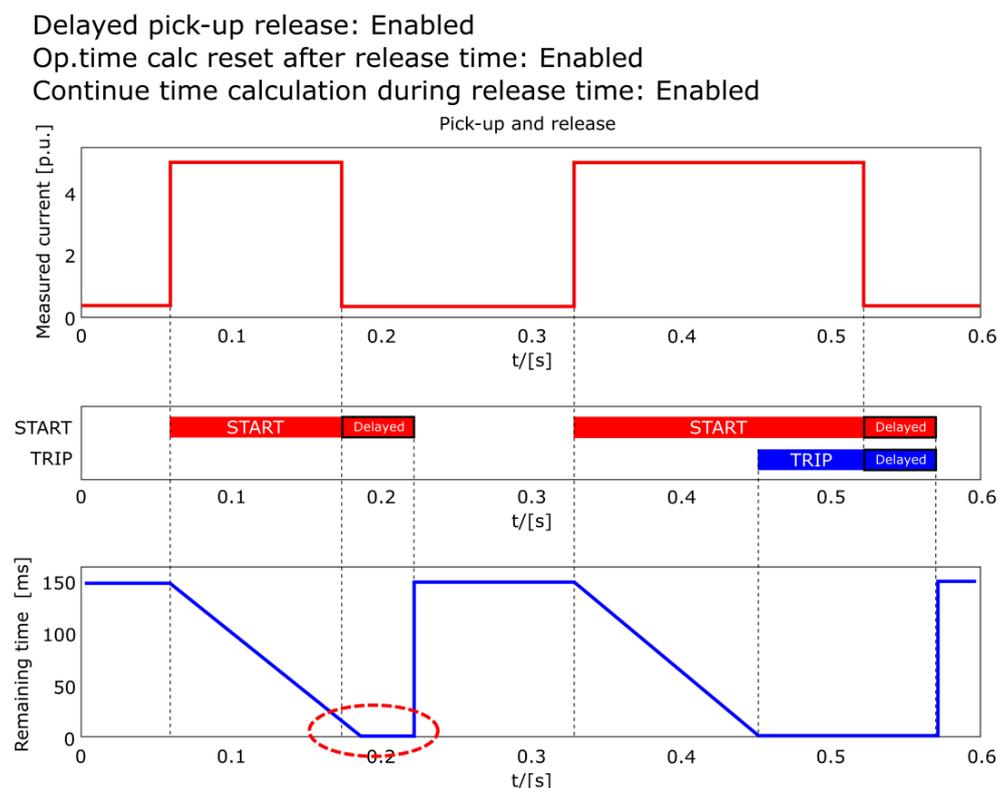

The resetting characteristics can be set according to the application. The default setting is delayed 60 ms and the time calculation is held during the release time.

When using the release delay option where the operating time counter is calculating the operating time during the release time, the function will not trip if the input signal is not activated again during the release time counting.

## Stage forcing

It is possible to test the logic, event processing and the operation of the relay's protection system by controlling the state of the protection functions manually without injecting any current into the relay with stage forcing. To enable *Stage forcing* set the *Enable stage forcing* to ENABLED in the *General* menu. After this it is possible to control the status of a protection function (Normal, Start, Trip, Blocked etc.) in the *Info* page of the function.

### NOTE!



When *Stage forcing* is enabled protection functions will also change state through user input. Injected currents/voltages also affect the behavior of the relay. Regardless, it is recommended to disable *Stage Forcing* after testing has ended.

## 5.3.2 Non-directional overcurrent protection ( $I >$ ; 50/51)

The non-directional overcurrent function is used for instant and time-delayed overcurrent and short-circuit protection. The number of stages in the function depends on the relay model. The operating decisions are based on phase current magnitude, constantly measured by the function. The available phase current magnitudes are equal to RMS values, to TRMS values (including harmonics up to 32<sup>nd</sup>), or to peak-to-peak values. The blocking signal and the setting group selection control the operating characteristics of the function during normal operation, i.e. the user or user-defined logic can change function parameters while the function is running.

The outputs of the function are the START, TRIP and BLOCKED signals. The non-directional overcurrent function uses a total of eight (8) separate setting groups which can be selected from one common source.

The function can operate on instant or time-delayed mode. In time-delayed mode the operation can be selected between definite time (DT) mode and inverse definite minimum time (IDMT) mode. The IDMT operation supports both IEC and ANSI standard time delays as well as custom parameters. The function includes CT saturation checking which allows the function to start and operate accurately during CT saturation.

The operational logic consists of the following:

- input magnitude selection
- input magnitude processing
- saturation check
- threshold comparator
- block signal check
- time delay characteristics
- output processing.

The basic design of the protection function is the three-pole operation.


The inputs for the function are the following:

- operating mode selections
- setting parameters
- digital inputs and logic signals
- measured and pre-processed current magnitudes.

The function outputs the START, TRIP and BLOCKED signals which can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the three (3) output signals. In the instant operating mode the function outputs START and TRIP events simultaneously with an equivalent time stamp. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the START, TRIP and BLOCKED events.

The following figure presents a simplified function block diagram of the non-directional overcurrent function.

Figure. 5.3.2 - 71. Simplified function block diagram of the I> function.

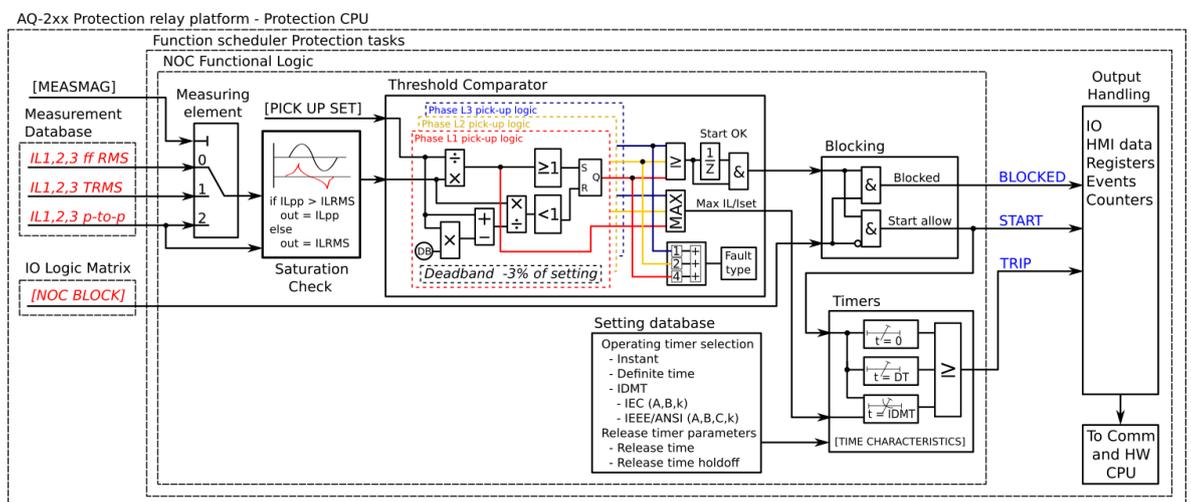

## Measured input

The function block uses analog current measurement values. However, when the peak-to-peak mode is selected for the function's "Measured magnitude" setting, the values are taken directly from the samples. The user can select the monitored magnitude to be equal either to RMS values, to TRMS values from the whole harmonic specter of 32 components, or to peak-to-peak values. A -20ms averaged value of the selected magnitude is used for pre-fault data registering.

Table. 5.3.2 - 29. Measurement inputs of the I> function.

Signal	Description	Time base
IL1RMS	RMS measurement of phase L1 (A) current	5ms
IL2RMS	RMS measurement of phase L2 (B) current	5ms
IL3RMS	RMS measurement of phase L3 (C) current	5ms
IL1TRMS	TRMS measurement of phase L1 (A) current	5ms
IL2TRMS	TRMS measurement of phase L2 (B) current	5ms
IL3TRMS	TRMS measurement of phase L3 (C) current	5ms
IL1PP	Peak-to-peak measurement of phase L1 (A) current	5ms
IL2PP	Peak-to-peak measurement of phase L2 (B) current	5ms
IL3PP	Peak-to-peak measurement of phase L3 (C) current	5ms

The selection of the used AI channel is made with a setting parameter. In all possible input channel variations the pre-fault condition is presented with a 20 ms averaged history value from -20 ms from START or TRIP event.

## General settings

The following general settings define the general behavior of the function. These settings are static i.e. it is not possible to change them by editing the setting group.

Table. 5.3.2 - 30. General settings of the function.

Name	Range	Step	Default	Description
Setting control from comm bus	1: Disabled 2: Allowed	-	1: Disabled	Activating this parameter allows changing the pick-up level of the protection stage via SCADA.
Measured magnitude	1: RMS 2: TRMS 3: Peak-to-peak	-	1: RMS	Defines which available measured magnitude is used by the function.

## Pick-up

The  $I_{set}$  setting parameter controls the pick-up of the I> function. This defines the maximum allowed measured current before action from the function. The function constantly calculates the ratio between the  $I_{set}$  and the measured magnitude ( $I_m$ ) for each of the three phases. The reset ratio of 97 % is built into the function and is always relative to the  $I_{set}$  value. The setting value is common for all measured phases, and when the  $I_m$  exceeds the  $I_{set}$  value (in single, dual or all phases) it triggers the pick-up operation of the function.

Table. 5.3.2 - 31. Pick-up settings.

Name	Description	Range	Step	Default
I <sub>set</sub>	Pick-up setting	0.10...50.00×I <sub>n</sub>	0.01×I <sub>n</sub>	1.20×I <sub>n</sub>

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active.

## Read-only parameters

The relay's *Info* page displays useful, real-time information on the state of the protection function. It is accessed either through the relay's HMI display, or through the setting tool software when it is connected to the relay and its Live Edit mode is active.

Table. 5.3.2 - 32. Information displayed by the function.

Name	Range	Step	Description
I> condition	0: Normal 1: Start 2: Trip 3: Blocked	-	Displays status of the protection function.
I> phases condition	0: Normal 1: Start A 2: Start B 3: Start C 4: Trip A 5: Trip B 6: Trip C 7: Start AB 8: Start BC 9: Start CA 10: Start ABC 11: Trip AB 12: Trip BC 13: Trip CA 14: Trip ABC	-	Displays the status of phases individually.
Expected operating time	-1800.000...1800.000s	0.005s	Displays the expected operating time when a fault occurs. When IDMT mode is used, the expected operating time depends on the measured highest phase current value. If the measured current changes during a fault, the expected operating time changes accordingly.
Time remaining to trip	0.000...1800.000s	0.005s	When the function has detected a fault and counts down time towards a trip, this displays how much time is left before tripping occurs.
I <sub>meas</sub> /I <sub>set</sub> at the moment	0.00...1250.00	0.01	The ratio between the highest measured phase current and the pick-up value.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. Additionally, the non-directional overcurrent function includes an internal inrush harmonic blocking option which is applied according to the parameters set by the user. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

Table. 5.3.2 - 33. Internal inrush harmonic blocking settings.

Name	Range	Step	Default	Description
Inrush harmonic blocking (internal-only trip)	0: No 1: Yes	-	0: No	Enables and disables the 2 <sup>nd</sup> harmonic blocking.
2 <sup>nd</sup> harmonic blocking limit (I <sub>harm</sub> /I <sub>fund</sub> )	0.10...50.00%I <sub>fund</sub>	0.01%I <sub>fund</sub>	0.01%I <sub>fund</sub>	Defines the limit of the 2 <sup>nd</sup> harmonic blocking.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and the release time characteristics are processed similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Operating time characteristics for trip and reset

This function supports definite time delay (DT) and inverse definite minimum time delay (IDMT). For detailed information on these delay types please refer to the chapter "General properties of a protection function" and its section "Operating time characteristics for trip and reset".

## Events and registers

The non-directional overcurrent function (abbreviated "NOC" in event block names) generates events and registers from the status changes in START, TRIP and BLOCKED. The user can select which event messages are stored in the main event buffer: ON, OFF, or both. The function offers four (4) independent stages; the events are segregated for each stage operation.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.3.2 - 34. Event codes.

Event number	Event channel	Event block name	Event code	Description
1280	20	NOC1	0	Start ON
1281	20	NOC1	1	Start OFF
1282	20	NOC1	2	Trip ON
1283	20	NOC1	3	Trip OFF
1284	20	NOC1	4	Block ON
1285	20	NOC1	5	Block OFF
1286	20	NOC1	6	Phase A Start ON
1287	20	NOC1	7	Phase A Start OFF
1288	20	NOC1	8	Phase B Start ON
1289	20	NOC1	9	Phase B Start OFF
1290	20	NOC1	10	Phase C Start ON

Event number	Event channel	Event block name	Event code	Description
1291	20	NOC1	11	Phase C Start OFF
1292	20	NOC1	12	Phase A Trip ON
1293	20	NOC1	13	Phase A Trip OFF
1294	20	NOC1	14	Phase B Trip ON
1295	20	NOC1	15	Phase B Trip OFF
1296	20	NOC1	16	Phase C Trip ON
1297	20	NOC1	17	Phase C Trip OFF
1344	21	NOC2	0	Start ON
1345	21	NOC2	1	Start OFF
1346	21	NOC2	2	Trip ON
1347	21	NOC2	3	Trip OFF
1348	21	NOC2	4	Block ON
1349	21	NOC2	5	Block OFF
1350	21	NOC2	6	Phase A Start ON
1351	21	NOC2	7	Phase A Start OFF
1352	21	NOC2	8	Phase B Start ON
1353	21	NOC2	9	Phase B Start OFF
1354	21	NOC2	10	Phase C Start ON
1355	21	NOC2	11	Phase C Start OFF
1356	21	NOC2	12	Phase A Trip ON
1357	21	NOC2	13	Phase A Trip OFF
1358	21	NOC2	14	Phase B Trip ON
1359	21	NOC2	15	Phase B Trip OFF
1360	21	NOC2	16	Phase C Trip ON
1361	21	NOC2	17	Phase C Trip OFF
1408	22	NOC3	0	Start ON
1409	22	NOC3	1	Start OFF
1410	22	NOC3	2	Trip ON
1411	22	NOC3	3	Trip OFF
1412	22	NOC3	4	Block ON
1413	22	NOC3	5	Block OFF
1414	22	NOC3	6	Phase A Start ON
1415	22	NOC3	7	Phase A Start OFF
1416	22	NOC3	8	Phase B Start ON
1417	22	NOC3	9	Phase B Start OFF
1418	22	NOC3	10	Phase C Start ON
1419	22	NOC3	11	Phase C Start OFF
1420	22	NOC3	12	Phase A Trip ON

Event number	Event channel	Event block name	Event code	Description
1421	22	NOC3	13	Phase A Trip OFF
1422	22	NOC3	14	Phase B Trip ON
1423	22	NOC3	15	Phase B Trip OFF
1424	22	NOC3	16	Phase C Trip ON
1425	22	NOC3	17	Phase C Trip OFF
1472	23	NOC4	0	Start ON
1473	23	NOC4	1	Start OFF
1474	23	NOC4	2	Trip ON
1475	23	NOC4	3	Trip OFF
1476	23	NOC4	4	Block ON
1477	23	NOC4	5	Block OFF
1478	23	NOC4	6	Phase A Start ON
1479	23	NOC4	7	Phase A Start OFF
1480	23	NOC4	8	Phase B Start ON
1481	23	NOC4	9	Phase B Start OFF
1482	23	NOC4	10	Phase C Start ON
1483	23	NOC4	11	Phase C Start OFF
1484	23	NOC4	12	Phase A Trip ON
1485	23	NOC4	13	Phase A Trip OFF
1486	23	NOC4	14	Phase B Trip ON
1487	23	NOC4	15	Phase B Trip OFF
1488	23	NOC4	16	Phase C Trip ON
1489	23	NOC4	17	Phase C Trip OFF

The function registers its operation into the last twelve (12) time-stamped registers; this information is available for all provided instances separately. The register of the function records the ON event process data for START, TRIP or BLOCKED. The table below presents the structure of the function's register content.

Table. 5.3.2 - 35. Register content.

Date and time	Event code	Fault type	Trigger current	Fault current	Pre-fault current	Trip time remaining	Used SG
dd.mm.yyyy hh:mm:ss.mss	1280-1489 Descr.	L1-E...L1-L2-L3	Start average current	Trip -20ms averages	Start -200ms averages	0 ms...1800s	Setting group 1...8 active

### 5.3.3 Non-directional earth fault protection ( $I_{0>}$ ; 50N/51N)

The non-directional earth fault function is used for instant and time-delayed earth fault protection. The number of stages in the function depend on the device model. The operating characteristics are based on the selected neutral current magnitudes which the function measures constantly. The available analog measurement channels are I01 and I02 (residual current measurement) and I0Calc (residual current calculated from phase current). The user can select these channels to use RMS values, TRMS values (including harmonics up to 32<sup>nd</sup>), or peak-to-peak values. The blocking signal and the setting group selection control the operating characteristics of the function during normal operation, i.e. the user or user-defined logic can change function parameters while the function is running.

The outputs of the function are the START, TRIP and BLOCKED signals. The non-directional earth fault function uses a total of eight (8) separate setting groups which can be selected from one common source.

The function can operate on instant or time-delayed mode. In the time-delayed mode the operation can be selected for definite time (DT) or for inverse definite minimum time (IDMT); the IDMT operation supports both IEC and ANSI standard time delays as well as custom parameters. The function includes the checking of CT saturation which allows the function to start and operate accurately even during CT saturation.

The operational logic consists of the following:

- input magnitude selection
- input magnitude processing
- saturation check
- threshold comparator
- block signal check
- time delay characteristics
- output processing.


The inputs for the function are the following:

- operating mode selections
- setting parameters
- digital inputs and logic signals
- measured and pre-processed current magnitudes.

The function outputs the START, TRIP and BLOCKED signals which can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the three (3) output signals. In the instant operating mode the function outputs START and TRIP events simultaneously with an equivalent time stamp. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the START, TRIP and BLOCKED events.

The following figure presents a simplified function block diagram of the non-directional earth fault function.

Figure. 5.3.3 - 72. Simplified function block diagram of the I0> function.

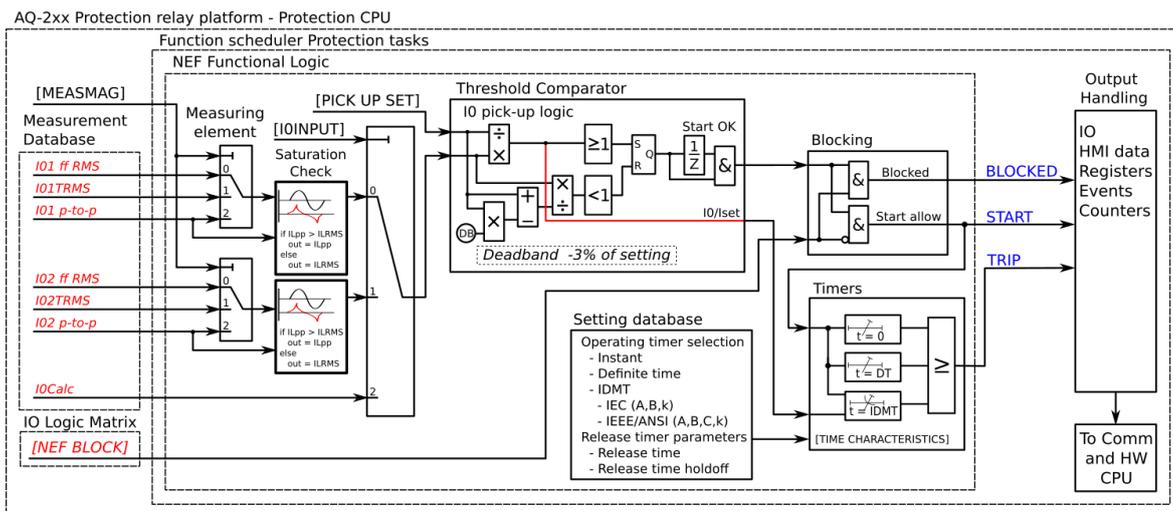

## Measured input

The function block uses analog current measurement values. The user can select the monitored magnitude to be equal either to RMS values, to TRMS values, or to peak-to-peak values. TRMS mode uses values from the whole harmonic spectrum of 32 components. Peak-to-peak mode picks measurement values directly from the samples. A -20 ms averaged value of the selected magnitude is used for pre-fault data registering.

Table. 5.3.3 - 36. Measurement inputs of the I0> function.

Signal	Description	Time base
I01RMS	RMS measurement of coarse residual current measurement input I01	5 ms
I01TRMS	TRMS measurement of coarse residual current measurement input I01	5 ms
I01PP	Peak-to-peak measurement of coarse residual current measurement input I01	5 ms
I02RMS	RMS measurement of sensitive residual current measurement input I02	5 ms
I02TRMS	TRMS measurement of coarse sensitive current measurement input I02	5 ms
I02PP	Peak-to-peak measurement of sensitive residual current measurement input I02	5 ms
IOCalc	RMS value of the calculated zero sequence current from the three phase currents	5 ms

The selection of the used AI channel is made with a setting parameter. In all possible input channel variations the pre-fault condition is presented with a 20 ms averaged history value from -20 ms from a START or TRIP event.

## General settings

The following general settings define the general behavior of the function. These settings are static i.e. it is not possible to change them by editing the setting group.

Table. 5.3.3 - 37. General settings of the function.

Name	Description	Range	Default
Setting control from comm bus	Activating this parameter permits changing the pick-up level of the protection stage via SCADA.	1: Disabled 2: Allowed	1: Disabled

Name	Description	Range	Default
Measured magnitude	Defines which available measured magnitude is used by the function. This parameter is available when "Input selection" has been set to "I01" or "I02".	1: RMS 2: TRMS 3: Peak-to-peak	1: RMS
Input selection	Defines which measured residual current is used by the function.	1: I01 2: I02 3: I0Calc	1: I01

## Pick-up

The  $I_{0set}$  setting parameter controls the the pick-up of the I0> function. This defines the maximum allowed measured current before action from the function. The function constantly calculates the ratio between the  $I_{0set}$  and the measured magnitude ( $I_m$ ) for each of the three phases. The reset ratio of 97 % is built into the function and is always relative to the  $I_{0set}$  value. The setting value is common for all measured phases. When the  $I_m$  exceeds the  $I_{0set}$  value (in single, dual or all phases) it triggers the pick-up operation of the function.

Table. 5.3.3 - 38. Pick-up settings.

Name	Description	Range	Step	Default
$I_{0set}$	Pick-up setting	0.0001...40.00 × $I_n$	0.0001 × $I_n$	1.20 × $I_n$

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active.

## Read-only parameters

The relay's *Info* page displays useful, real-time information on the state of the protection function. It is accessed either through the relay's HMI display, or through the setting tool software when it is connected to the relay and its Live Edit mode is active.

Table. 5.3.3 - 39. Information displayed by the function.

Name	Range	Step	Description
I0> condition	0: Normal 1: Start 2: Trip 3: Blocked	-	Displays status of the protection function.
Detected I0 angle	-360.00...360.00 deg	0.01 deg	Angle of I0 against reference. If phase voltages are available, positive sequence voltage angle is used as reference. If voltages are not available, positive sequence current angle is used as reference.
Detected fault type	0: - 1: A-G-R 2: B-G-F 3: C-G-R 4: A-G-F 5: B-G-R 6: C-G-F	-	Displays the detected fault type and direction of previous fault. "A/B/C" stand for one of the three phases. "G" stands for "ground". "F" stands for "forward" direction and "R" stands for "reverse" direction.
Expected operating time	-1800.000...1800.000 s	0.005 s	Displays the expected operating time when a fault occurs. When IDMT mode is used, the expected operating time depends on the measured current value. If the measured current changes during a fault, the expected operating time changes accordingly.
Time remaining to trip	0.000...1800.000 s	0.005 s	When the function has detected a fault and counts down time towards a trip, this displays how much time is left before tripping occurs.

Name	Range	Step	Description
I <sub>meas</sub> /I <sub>set</sub> at the moment	0.00...1250.00	0.01	The ratio between the measured current and the pick-up value.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. Additionally, non-directional earth fault protection includes an internal inrush harmonic blocking option which is applied according to the parameters set by the user. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

Table. 5.3.3 - 40. Internal inrush harmonic blocking settings.

Name	Description	Range	Step	Default
Inrush harmonic blocking (internal-only trip)	2 <sup>nd</sup> harmonic blocking enable/disable	0: No 1: Yes	-	0: No
2 <sup>nd</sup> harmonic block limit (I <sub>harm</sub> /I <sub>fund</sub> )	2 <sup>nd</sup> harmonic blocking limit	0.10...50.00%I <sub>fund</sub>	0.01%I <sub>fund</sub>	0.01%I <sub>fund</sub>

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and processes the release time characteristics similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Operating time characteristics for trip and reset

This function supports definite time delay (DT) and inverse definite minimum time delay (IDMT). For detailed information on these delay types please refer to the chapter "General properties of a protection function" and its section "Operating time characteristics for trip and reset".

## Events and registers

The non-directional earth fault function (abbreviated "NEF" in event block names) generates events and registers from the status changes in START, TRIP and BLOCKED. The user can select which event messages are stored in the main event buffer: ON, OFF, or both. The function offers four (4) independent stages; the events are segregated for each stage operation.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.3.3 - 41. Event codes.

Event number	Event channel	Event block name	Event code	Description
1664	26	NEF1	0	Start ON
1665	26	NEF1	1	Start OFF

Event number	Event channel	Event block name	Event code	Description
1666	26	NEF1	2	Trip ON
1667	26	NEF1	3	Trip OFF
1668	26	NEF1	4	Block ON
1669	26	NEF1	5	Block OFF
1728	27	NEF2	0	Start ON
1729	27	NEF2	1	Start OFF
1730	27	NEF2	2	Trip ON
1731	27	NEF2	3	Trip OFF
1732	27	NEF2	4	Block ON
1733	27	NEF2	5	Block OFF
1792	28	NEF3	0	Start ON
1793	28	NEF3	1	Start OFF
1794	28	NEF3	2	Trip ON
1795	28	NEF3	3	Trip OFF
1796	28	NEF3	4	Block ON
1797	28	NEF3	5	Block OFF
1856	29	NEF4	0	Start ON
1857	29	NEF4	1	Start OFF
1858	29	NEF4	2	Trip ON
1859	29	NEF4	3	Trip OFF
1860	29	NEF4	4	Block ON
1861	29	NEF4	5	Block OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for START, TRIP or BLOCKED. The table below presents the structure of the function's register content.

Table. 5.3.3 - 42. Register content.

Date and time	Event code	Fault type	Trigger current	Fault current	Pre-fault current	Trip time remaining	Used SG
dd.mm.yyyy hh:mm:ss.mss	1664-1861 Descr.	A-G- R...C-G- F	Start average current	Trip -20ms averages	Start -200ms averages	0 ms...1800s	Setting group 1...8 active

### 5.3.4 Negative sequence overcurrent/ phase current reversal/ current unbalance protection (I2>; 46/46R/46L)

The current unbalance function is used for instant and time-delayed unbalanced network protection and for detecting broken conductors. The number of stages in the function depends on the relay model. The operating decisions are based on negative and positive sequence current magnitudes which the function constantly measures. In the broken conductor mode (I2/I1) the minimum allowed loading current is also monitored in the phase current magnitudes.

There are two possible operating modes available: the I2 mode monitors the negative sequence current, while the I2/I1 mode monitors the ratio between the negative sequence current and the positive sequence current. The relay calculates the symmetrical component magnitudes in use from the phase current inputs  $I_{L1}$ ,  $I_{L2}$  and  $I_{L3}$ . The zero sequence current is also recorded into the registers as well as the angles of the positive, negative and zero sequence currents in order to better verify any fault cases. The blocking signal and the setting group selection control the operating characteristics of the function during normal operation, i.e. the user or user-defined logic can change function parameters while the function is running.

The outputs of the function are the START, TRIP and BLOCKED signals. The current unbalance function uses a total of eight (8) separate setting groups which can be selected from one common source.

The function can operate on instant or time-delayed mode. In time-delayed mode the operation can be selected between definite time (DT) or inverse definite minimum time (IDMT). The IDMT operation supports both IEC and ANSI standard time delays as well as custom parameters.

The operational logic consists of the following:

- input magnitude selection
- input magnitude processing
- threshold comparator
- block signal check
- time delay characteristics
- output processing.


The inputs for the function are the following:

- operating mode selections
- setting parameters
- digital inputs and logic signals
- measured and pre-processed current magnitudes.

The function outputs START, TRIP and BLOCKED signals which can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the three (3) output signals. In instant operating mode the function outputs START and TRIP events simultaneously with an equivalent time stamp. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the START, TRIP and BLOCKED events.

The following figure presents a simplified function block diagram of the current unbalance function.

Figure. 5.3.4 - 73. Simplified function block diagram of the I2> function.

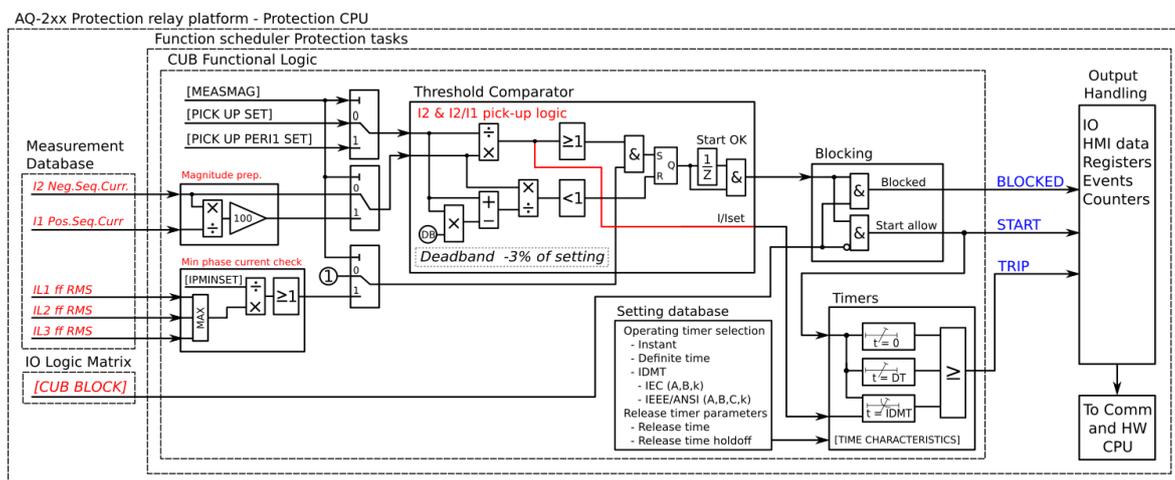

## Measured input

The function block uses analog current measurement values and always uses calculated positive and negative sequence currents. In the broken conductor mode (I2/I1) the function also uses the RMS values of all phase currents to check the minimum current. Zero sequence and component sequence angles are used for fault registering and for fault analysis processing. A -20 ms averaged value of the selected magnitude is used for pre-fault data registering.

Table. 5.3.4 - 43. Measurement inputs of the I2> function.

Signal	Description	Time base
I1	Positive sequence current magnitude	5 ms
I2	Negative sequence current magnitude	5 ms
IZ	Zero sequence current magnitude	5 ms
I1 ANG	Positive sequence current angle	5 ms
I2 ANG	Negative sequence current angle	5 ms
IZ ANG	Zero sequence current angle	5 ms
IL1RMS	Phase L1 (A) measured RMS current	5 ms
IL2RMS	Phase L2 (B) measured RMS current	5 ms
IL3RMS	Phase L3 (C) measured RMS current	5 ms

## General settings

The following general settings define the general behavior of the function. These settings are static i.e. it is not possible to change them by editing the setting group.

Name	Description	Range	Step	Default
Measured magnitude	Defines whether the ratio between the positive and the negative sequence currents are supervised or whether only the negative sequence is used in detecting unbalance.	1: I2pu 2: I2/I1	-	1: I2pu

## Pick-up

The setting parameters  $I_{2set}$  and  $I_{2/I1set}$  control the the pick-up of the I2> function. They define the maximum allowed measured negative sequence current or the negative/positive sequence current ratio before action from the function. The function constantly calculates the ratio between the  $I_{set}$  and the measured magnitude ( $I_m$ ). The reset ratio of 97 % is built into the function and is always relative to the  $I_{xset}$  value. The reset ratio is the same for both modes.

Table. 5.3.4 - 44. Pick-up settings.

Name	Description	Range	Step	Default
I2set	Pick-up setting for I2 mode.	0.01...40.00×I <sub>n</sub>	0.01×I <sub>n</sub>	0.2×I <sub>n</sub>
I2/I1set	Pick-up setting for I2/I1 mode	1...200%	0.01%	20%

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active.

## Read-only parameters

The relay's *Info* page displays useful, real-time information on the state of the protection function. It is accessed either through the relay's HMI display, or through the setting tool software when it is connected to the relay and its Live Edit mode is active.

Table. 5.3.4 - 45. Information displayed by the function.

Name	Range	Step	Description
I2> condition	0: Normal 1: Start 2: Trip 3: Blocked	-	Displays the status of the protection function.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and processes the release time characteristics similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Operating time characteristics for trip and reset

The operating timers' behavior during a function can be set for TRIP signal and also for the release of the function in case the pick-up element is reset before the trip time has been reached. There are three basic operating modes available for the function:

- Instant operation: gives the TRIP signal with no additional time delay simultaneously with the start signal.
- Definite time operation (DT): gives the TRIP signal after a user-defined time delay regardless of the measured current as long as the current is above or below the  $I_{set}$  value and thus the pick-up element is active (independent time characteristics).
- Inverse definite minimum time (IDMT): gives the TRIP signal after a time which is in relation to the set pick-up value  $I_{set}$  and the measured current  $I_m$  (dependent time characteristics).


Both IEC and IEEE/ANSI standard characteristics as well as user settable parameters are available for the IDMT operation.

Unique to the current unbalance protection is the availability of the "Curve2" delay which follows the formula below:

$$t = \frac{k}{I_{2meas}^2 - I_{set}^2}$$

- $t$  = Operating time
- $I_{2meas}$  = Calculated negative sequence
- $k$  = Constant k value (user settable delay multiplier)
- $I_{set}$  = Pick-up setting of the function

Figure. 5.3.4 - 74. Operation characteristics curve for I2> Curve2.

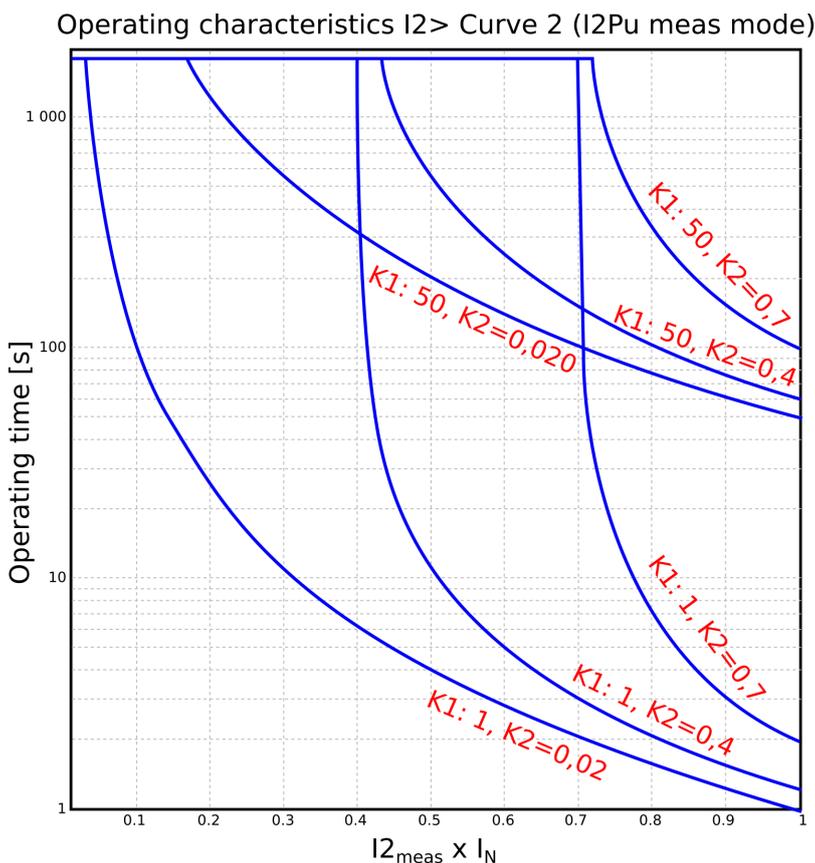

For a more detailed description on the time characteristics and their setting parameters, please refer to the "General properties of a protection function" chapter and its "Operating time characteristics for trip and reset" section.

The user can reset characteristics through the application. The default setting is a 60 ms delay; the time calculation is held during the release time.

In the release delay option the operating time counter calculates the operating time during the release. When using this option the function does not trip if the input signal is not re-activated while the release time count is on-going.

## Events and registers

The current unbalance function (abbreviated "CUB" in event block names) generates events and registers from the status changes in START, TRIP, and BLOCKED. The user can select the status ON or OFF for messages in the main event buffer. The function offers four (4) independent stages; the events are segregated for each stage operation.

The triggering event of the function (START, TRIP or BLOCKED) is recorded with a time stamp and with process data values.

Table. 5.3.4 - 46. Event codes.

Event Number	Event channel	Event block name	Event Code	Description
2048	32	CUB1	0	Start ON
2049	32	CUB1	1	Start OFF
2050	32	CUB1	2	Trip ON
2051	32	CUB1	3	Trip OFF
2052	32	CUB1	4	Block ON
2053	32	CUB1	5	Block OFF
2112	33	CUB2	0	Start ON
2113	33	CUB2	1	Start OFF
2114	33	CUB2	2	Trip ON
2115	33	CUB2	3	Trip OFF
2116	33	CUB2	4	Block ON
2117	33	CUB2	5	Block OFF
2176	34	CUB3	0	Start ON
2177	34	CUB3	1	Start OFF
2178	34	CUB3	2	Trip ON
2179	34	CUB3	3	Trip OFF
2180	34	CUB3	4	Block ON
2181	34	CUB3	5	Block OFF
2240	35	CUB4	0	Start ON
2241	35	CUB4	1	Start OFF
2242	35	CUB4	2	Trip ON
2243	35	CUB4	3	Trip OFF
2244	35	CUB4	4	Block ON
2245	35	CUB4	5	Block OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for START, TRIP or BLOCKED. The table below presents the structure of the function's register content.

Table. 5.3.4 - 47. Register content.

Date and time	Event code	Fault type	Trigger current	Fault current	Pre-fault current	Fault currents	Trip time remaining	Used SG
dd.mm.yyyy hh:mm:ss.mss	2048-2245 Descr.	Unbalance	Start average current	Trip -20ms averages	Start -200ms averages	I1, I2, IZ mag. and ang.	0 ms...1800s	Setting group 1...8 active

### 5.3.5 Harmonic overcurrent protection ( $I_h$ ; 50H/51H/68H)

The harmonic overcurrent function is used for non-directional instant and time-delayed overcurrent detection and clearing. The number of stages in the function depends on the relay model. The function constantly measures the selected harmonic component of the selected measurement channels, the value being either absolute value or relative to the RMS value. The blocking signal and the setting group selection control the operating characteristics of the function during normal operation, i.e. the user or user-defined logic can change function parameters while the function is running.

The outputs of the function are the START, TRIP and BLOCKED signals. The non-directional harmonic overcurrent function uses a total of eight (8) separate setting groups which can be selected from one common source.

The function can operate on instant or time-delayed mode. Either START or TRIP signal can be used when the instant mode is selected to block other protection stages. In time-delayed mode the operation can be selected between definite time (DT) mode and inverse definite minimum time (IDMT) mode. The START signal can be used to block other stages; if the situation lasts longer, the TRIP signal can be used on other actions as time-delayed. The IDMT operation supports both IEC and ANSI standard time delays as well as custom parameters.

The operational logic consists of the following:

- input magnitude selection
- input magnitude processing
- saturation check
- threshold comparator
- block signal check
- time delay characteristics
- output processing.

The basic design of the protection function is the three-pole operation.


The inputs of the function are the following:

- operating mode selections
- setting parameters
- digital inputs and logic signals
- measured and pre-processed current magnitudes.

The function outputs the START, TRIP and BLOCKED signals which can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the three (3) output signals. In the instant operating mode the function outputs START and TRIP events simultaneously with an equivalent time stamp. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the START, TRIP and BLOCKED events.

The following figure presents a simplified function block diagram of the non-directional harmonic overcurrent function.

Figure. 5.3.5 - 75. Simplified function block diagram of the I<sub>h</sub>> function.

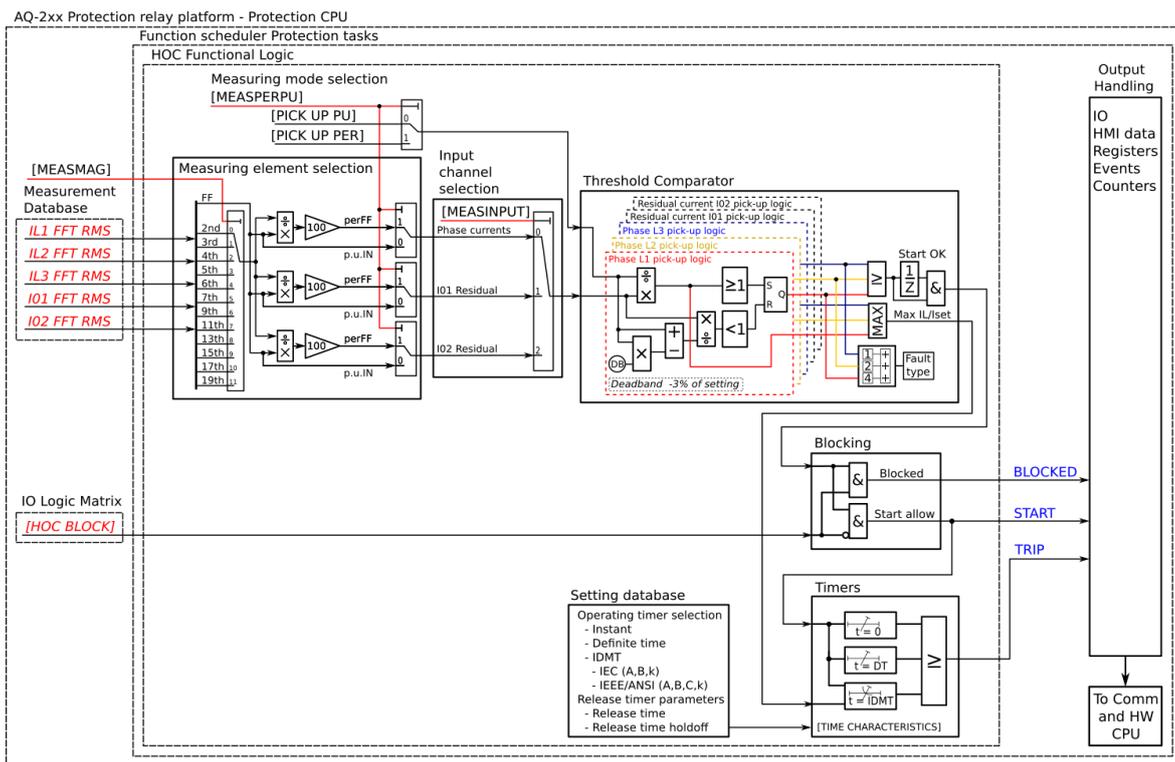

## Measured input

The function block uses analog current measurement values from phase or residual currents. Each measurement input of the function block uses RMS values and harmonic components of the selected current input. The user can select the monitored magnitude to be equal to the per-unit RMS values of the harmonic component, or to the harmonic component percentage content compared to the RMS values. A -20 ms averaged value of the selected magnitude is used for pre-fault data registering.

Table. 5.3.5 - 48. Measurement inputs of the I<sub>h</sub>> function.

Signal	Description	Time base
IL1FFT	<p>The magnitudes (RMS) of phase L1 (A) current components:</p> <ul style="list-style-type: none"> <li>- Fundamental</li> <li>- 2<sup>nd</sup> harmonic</li> <li>- 3<sup>rd</sup> harmonic</li> <li>- 4<sup>th</sup> harmonic</li> <li>- 5<sup>th</sup> harmonic</li> <li>- 6<sup>th</sup> harmonic</li> <li>- 7<sup>th</sup> harmonic</li> <li>- 9<sup>th</sup> harmonic</li> <li>- 11<sup>th</sup> harmonic</li> <li>- 13<sup>th</sup> harmonic</li> <li>- 15<sup>th</sup> harmonic</li> <li>- 17<sup>th</sup> harmonic</li> <li>- 19<sup>th</sup> harmonic.</li> </ul>	5 ms

Signal	Description	Time base
IL2FFT	<p>The magnitudes (RMS) of phase L2 (B) current components:</p> <ul style="list-style-type: none"> <li>- Fundamental</li> <li>- 2<sup>nd</sup> harmonic</li> <li>- 3<sup>rd</sup> harmonic</li> <li>- 4<sup>th</sup> harmonic</li> <li>- 5<sup>th</sup> harmonic</li> <li>- 6<sup>th</sup> harmonic</li> <li>- 7<sup>th</sup> harmonic</li> <li>- 9<sup>th</sup> harmonic</li> <li>- 11<sup>th</sup> harmonic</li> <li>- 13<sup>th</sup> harmonic</li> <li>- 15<sup>th</sup> harmonic</li> <li>- 17<sup>th</sup> harmonic</li> <li>- 19<sup>th</sup> harmonic.</li> </ul>	5 ms
IL3FFT	<p>The magnitudes (RMS) of phase L3 (C) current components:</p> <ul style="list-style-type: none"> <li>- Fundamental</li> <li>- 2<sup>nd</sup> harmonic</li> <li>- 3<sup>rd</sup> harmonic</li> <li>- 4<sup>th</sup> harmonic</li> <li>- 5<sup>th</sup> harmonic</li> <li>- 6<sup>th</sup> harmonic</li> <li>- 7<sup>th</sup> harmonic</li> <li>- 9<sup>th</sup> harmonic</li> <li>- 11<sup>th</sup> harmonic</li> <li>- 13<sup>th</sup> harmonic</li> <li>- 15<sup>th</sup> harmonic</li> <li>- 17<sup>th</sup> harmonic</li> <li>- 19<sup>th</sup> harmonic.</li> </ul>	5 ms
I01FFT	<p>The magnitudes (RMS) of residual I01 current components:</p> <ul style="list-style-type: none"> <li>- Fundamental</li> <li>- 2<sup>nd</sup> harmonic</li> <li>- 3<sup>rd</sup> harmonic</li> <li>- 4<sup>th</sup> harmonic</li> <li>- 5<sup>th</sup> harmonic</li> <li>- 6<sup>th</sup> harmonic</li> <li>- 7<sup>th</sup> harmonic</li> <li>- 9<sup>th</sup> harmonic</li> <li>- 11<sup>th</sup> harmonic</li> <li>- 13<sup>th</sup> harmonic</li> <li>- 15<sup>th</sup> harmonic</li> <li>- 17<sup>th</sup> harmonic</li> <li>- 19<sup>th</sup> harmonic.</li> </ul>	5 ms

Signal	Description	Time base
I02FFT	<p>The magnitudes (RMS) of residual I02 current components:</p> <ul style="list-style-type: none"> <li>- Fundamental</li> <li>- 2<sup>nd</sup> harmonic</li> <li>- 3<sup>rd</sup> harmonic</li> <li>- 4<sup>th</sup> harmonic</li> <li>- 5<sup>th</sup> harmonic</li> <li>- 6<sup>th</sup> harmonic</li> <li>- 7<sup>th</sup> harmonic</li> <li>- 9<sup>th</sup> harmonic</li> <li>- 11<sup>th</sup> harmonic</li> <li>- 13<sup>th</sup> harmonic</li> <li>- 15<sup>th</sup> harmonic</li> <li>- 17<sup>th</sup> harmonic</li> <li>- 19<sup>th</sup> harmonic.</li> </ul>	5 ms

The selection of the used AI channel, the monitored harmonic, and the monitoring type (per unit or percentage of fundamental frequency) are made with setting parameters. In all possible input channel variations the pre-fault condition is presented with a 20 ms averaged history value from -20 ms from START or TRIP event.

## General settings

The function can be set to monitor the ratio between the measured harmonic and either the measured fundamental component or the per unit value of the harmonic current. The user must select the correct measurement input.

Table. 5.3.5 - 49. Operating mode selection settings.

Name	Range	Step	Default	Description
Harmonic selection	2 <sup>nd</sup> harmonic 3 <sup>rd</sup> harmonic 4 <sup>th</sup> harmonic 5 <sup>th</sup> harmonic 6 <sup>th</sup> harmonic 7 <sup>th</sup> harmonic 9 <sup>th</sup> harmonic 11 <sup>th</sup> harmonic 13 <sup>th</sup> harmonic 15 <sup>th</sup> harmonic 17 <sup>th</sup> harmonic 19 <sup>th</sup> harmonic	-	2 <sup>nd</sup> harmonic	Selection of the monitored harmonic component.
Per unit or relative	$\times I_n$ $I_h/I_L$	-	$\times I_n$	Selection of the monitored harmonic mode. Either directly per unit $\times I_n$ or in relation to the fundamental frequency magnitude.

Name	Range	Step	Default	Description
Measurement input	IL1/IL2/ IL3 I01 I02	-	IL1/IL2/ IL3	Selection of the measurement input (either phase current or residual current).

Each function stage provides these same settings. Multiple stages of the function can be set to operate independently of each other.

## Pick-up

The setting parameter  $I_{hset}$  per unit or  $I_h/I_L$  (depending on the selected operating mode) controls the pick-up of the  $I_h >$  function. This defines the maximum allowed measured current before action from the function. The function constantly calculates the ratio between the  $I_{hset}$  per unit or  $I_h/I_L$  and the measured magnitude ( $I_m$ ) for each of the three phases. The reset ratio of 97 % is built into the function and is always relative to the  $I_{hset}$  per unit or  $I_h/I_L$  value. The setting value is common for all measured phases, and when the  $I_m$  exceeds the  $I_{set}$  value (in single, dual or all phases) it triggers the pick-up operation of the function.

Table. 5.3.5 - 50. Pick-up settings.

Name	Range	Step	Default	Description
$I_{hset}$ pu	0.05...2.00× $I_n$	0.01× $I_n$	0.20× $I_n$	Pick-up setting (per unit monitoring)
$I_h/I_L$	5.00...200.00%	0.01%	20.00%	Pick-up setting (percentage monitoring)

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active.

## Read-only parameters

The relay's *Info* page displays useful, real-time information on the state of the protection function. It is accessed either through the relay's HMI display, or through the setting tool software when it is connected to the relay and its Live Edit mode is active.

Table. 5.3.5 - 51. Information displayed by the function.

Name	Range	Step	Description
$I_h >$ condition	0: Normal 1: Start 2: Trip 3: Blocked	-	Displays the status of the protection function.
$I_h$ meas/ $I_h$ set now	0.00...100000.00 $I_m/I_{set}$	0.01 $I_m/I_{set}$	The ratio between the monitored residual current and the pick-up value.
Expected operating time	0.000...1800.000s	0.005s	Displays the expected operating time when a fault occurs. When IDMT mode is used, the expected operating time depends on the measured voltage value. If the measured voltage changes during a fault, the expected operating time changes accordingly.
Time remaining to trip	-1800.000...1800.000s	0.005s	When the function has detected a fault and counts down time towards a trip, this displays how much time is left before tripping occurs.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and the release time characteristics are processed similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Operating time characteristics for trip and reset

This function supports definite time delay (DT) and inverse definite minimum time delay (IDMT). For detailed information on these delay types please refer to the chapter "General properties of a protection function" and its section "Operating time characteristics for trip and reset".

## Events and registers

The harmonic overcurrent function (abbreviated "HOC" in event block names) generates events and registers from the status changes in START, TRIP and BLOCKED. The user can select which event messages are stored in the main event buffer: ON, OFF, or both. The function offers four (4) independent stages; the events are segregated for each stage operation.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.3.5 - 52. Event codes.

Event number	Event channel	Event block name	Event code	Description
2368	37	HOC1	0	Start ON
2369	37	HOC1	1	Start OFF
2370	37	HOC1	2	Trip ON
2371	37	HOC1	3	Trip OFF
2372	37	HOC1	4	Block ON
2373	37	HOC1	5	Block OFF
2432	38	HOC2	0	Start ON
2433	38	HOC2	1	Start OFF
2434	38	HOC2	2	Trip ON
2435	38	HOC2	3	Trip OFF
2436	38	HOC2	4	Block ON
2437	38	HOC2	5	Block OFF

Event number	Event channel	Event block name	Event code	Description
2496	39	HOC3	0	Start ON
2497	39	HOC3	1	Start OFF
2498	39	HOC3	2	Trip ON
2499	39	HOC3	3	Trip OFF
2500	39	HOC3	4	Block ON
2501	39	HOC3	5	Block OFF
2560	40	HOC4	0	Start ON
2561	40	HOC4	1	Start OFF
2562	40	HOC4	2	Trip ON
2563	40	HOC4	3	Trip OFF
2564	40	HOC4	4	Block ON
2565	40	HOC4	5	Block OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for START, TRIP or BLOCKED. The table below presents the structure of the function's register content.

Table. 5.3.5 - 53. Register content.

Date and time	Event code	Fault type	Trigger current	Fault current	Pre-fault current	Trip time remaining	Used SG
dd.mm.yyyy hh:mm:ss.mss	2368-2565 Descr.	L1-G...L1-L2-L3	Start average current	Trip -20ms averages	Start -200ms averages	0 ms...1800s	Setting group 1...8 active

### 5.3.6 Circuit breaker failure protection (CBFP; 50BF/52BF)

The circuit breaker failure protection function is used for monitoring the circuit breaker operation after it has received a TRIP signal. The function can also be used to retrip a failing breaker; if the retrip fails, an incomer breaker can be tripped by using the function's CBFP output. The retrip functionality can be disabled if the breaker does not have two trip coils.

The function can be triggered by the following:

- overcurrent (phase and residual)
- digital output monitor
- digital signal
- any combination of the above-mentioned triggers.

In the current-dependent mode the function constantly measures phase current magnitudes and the selected residual current. In the signal-dependent mode any of the device's binary signals (trips, starts, logical signals etc.) can be used to trigger the function. In the digital output-dependent mode the function monitors the status of the selected output relay control signal. The blocking signal and the setting group selection control the operating characteristics of the function during normal operation, i.e. the user or user-defined logic can change function parameters while the function is running.

The outputs of the function are CBFP START, RETRIP, CBFP ACT and BLOCKED signals. The circuit breaker failure protection function uses a total of eight (8) separate setting groups which can be selected from one common source. Additionally, the function's operating mode can be changed via setting group selection.

The operational logic consists of the following:

- input magnitude processing
- input magnitude selection
- threshold comparator
- block signal check
- time delay characteristics
- output processing.


The inputs of the function are the following:

- operating mode selections
- setting parameters
- digital input signals
- measured and pre-processed current magnitudes.

The function' output signals can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the two (2) output signals. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counters for RETRIP, CBFP, CBFP START and BLOCKED events.

The following figure presents a simplified function block diagram of the circuit breaker failure protection function.

Figure. 5.3.6 - 76. Simplified function block diagram of the CBFP function.

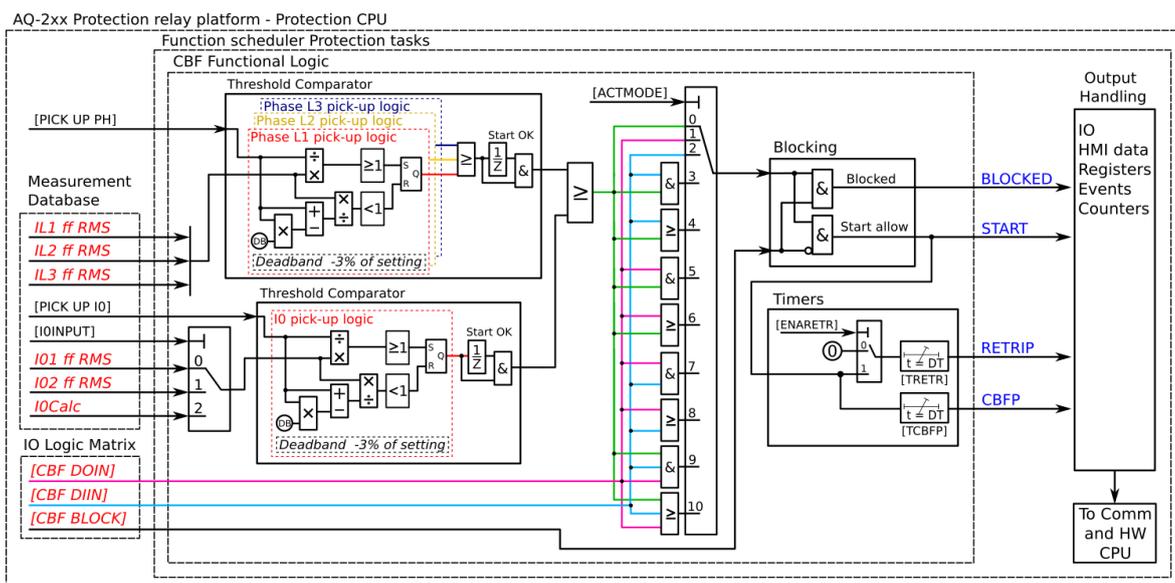

## Measured input

The function block uses analog current measurement values. It always uses the RMS magnitude of the current measurement input. The user can select IO1, IO2 or the calculated IO for the residual current measurement. A -20 ms averaged value of the selected magnitude is used for pre-fault data registering.

Table. 5.3.6 - 54. Measurement inputs of the CBFP function.

Signal	Description	Time base
IL1RMS	RMS measurement of phase L1 (A) current	5ms
IL2RMS	RMS measurement of phase L2 (B) current	5ms

Signal	Description	Time base
IL3RMS	RMS measurement of phase L3 (C) current	5ms
I01RMS	RMS measurement of residual input I01	5ms
I02RMS	RMS measurement of residual input I02	5ms
I0Calc	Calculated residual current from the phase current inputs	5ms
DOIN	Monitors digital output relay status	5ms
DIIN	Monitors digital input status	5ms

The selection of the used AI channel is made with a setting parameter. In all possible input channel variations the pre-fault condition is presented with a 20 ms averaged history value from -20 ms from START or TRIP event.

## General settings

The following general settings define the general behavior of the function. These settings are static i.e. it is not possible to change them by editing the setting group.

Table. 5.3.6 - 55. CBFP monitoring signal definitions.

Name	Description
Signal in monitor	Defines which TRIP events of the used protection functions trigger the CBFP countdown. For the CBFP function to monitor the signals selected here, the "Operation mode selection" parameter must be set to a mode that includes signals (e.g. "Signals only", "Signals or DO", "Current and signals and DO").
Trip monitor	Defines which output relay of the used protection functions trigger the CBFP countdown. For the CBFP function to monitor the output relays selected here, the "Operation mode selection" parameter must be set to a mode that includes digital outputs (e.g. "DO only", "Current and DO", "Current or signals or DO").

## Pick-up

The setting parameters  $I_{set}$  and  $I_{0set}$  control the pick-up and the activation of the current-dependent CBFP function. They define the minimum allowed measured current before action from the function. The function constantly calculates the ratio between the  $I_{set}$  or the  $I_{0set}$  and the measured magnitude ( $I_m$ ) for each of the three phases and the selected residual current input. The reset ratio of 97 % is built into the function and is always relative to the  $I_{set}$  value. The setting value is common for all measured phases. When the  $I_m$  exceeds the  $I_{set}$  value (in single, dual or all phases) it triggers the pick-up operation of the function.

Table. 5.3.6 - 56. Operating mode and input signals selection.

Name	Range	Step	Default	Description
I0Input	0: Not in use 1: I01 2: I02 3: I0Calc	-	0: Not in use	Selects the residual current monitoring source, which can be either from the two separate residual measurements (I01 and I02) or from the phase current's calculated residual current.

Name	Range	Step	Default	Description
Actmode	0: Current only 1: DO only 2: Signals only 3: Current and DO 4: Current or DO 5: Current and signals 6: Current or signals 7: Signals and DO 8: Signals or DO 9: Current or DO or signals 10: Current and DO and Signals	-	0: Current only	Selects the operating mode. The mode can be dependent on current measurement, binary signal status, output relay status ("DO"), or a combination of the three.

Table. 5.3.6 - 57. Pick-up settings.

Name	Range	Step	Default	Description
$I_{set}$	$0.01 \dots 40.00 \times I_n$	$0.01 \times I_n$	$0.20 \times I_n$	The pick-up threshold for the phase current measurement. This setting limit defines the upper limit for the phase current pick-up element.
$I_{0set}$	$0.005 \dots 40.000 \times I_n$	$0.001 \times I_n$	$1.200 \times I_n$	The pick-up threshold for the residual current measurement. This setting limit defines the upper limit for the phase current pick-up element.

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active. There is no delay between the activation of the monitored signal and the activation of the pick-up when using binary signals.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and processes the release time characteristics similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Operating time characteristics

The operating timers' behavior during a function can be set depending on the application. The same pick-up signal starts both timers. When retrip is used the time grading should be set as follows: the sum of specific times (i.e. the retrip time, the expected operating time, and the pick-up conditions' release time) is shorter the set CBFP time. This way, when retripping another breaker coil clears the fault, any unnecessary function triggers are avoided.

The following table presents the setting parameters for the function's operating time characteristics.


Table. 5.3.6 - 58. Setting parameters for operating time characteristics.

Name	Range	Step	Default	Description
Retrip	0: No 1: Yes	-	1: Yes	Retrip enabled or disabled. When the retrip is disabled, the output will not be visible and the TRetr setting parameter will not be available.
Retrip time delay	0.000...1800.000s	0.005s	0.100s	Retrip start the timer. This setting defines how long the starting condition has to last before a RETRIP signal is activated.
CBFP	0.000...1800.000s	0.005s	0.200s	CBFP starts the timer. This setting defines how long the starting condition has to last before the CBFP signal is activated.

The following figures present some typical cases of the CBFP function.




Figure. 5.3.6 - 78. Retrip and CBFP when "Current" is the selected criterion.

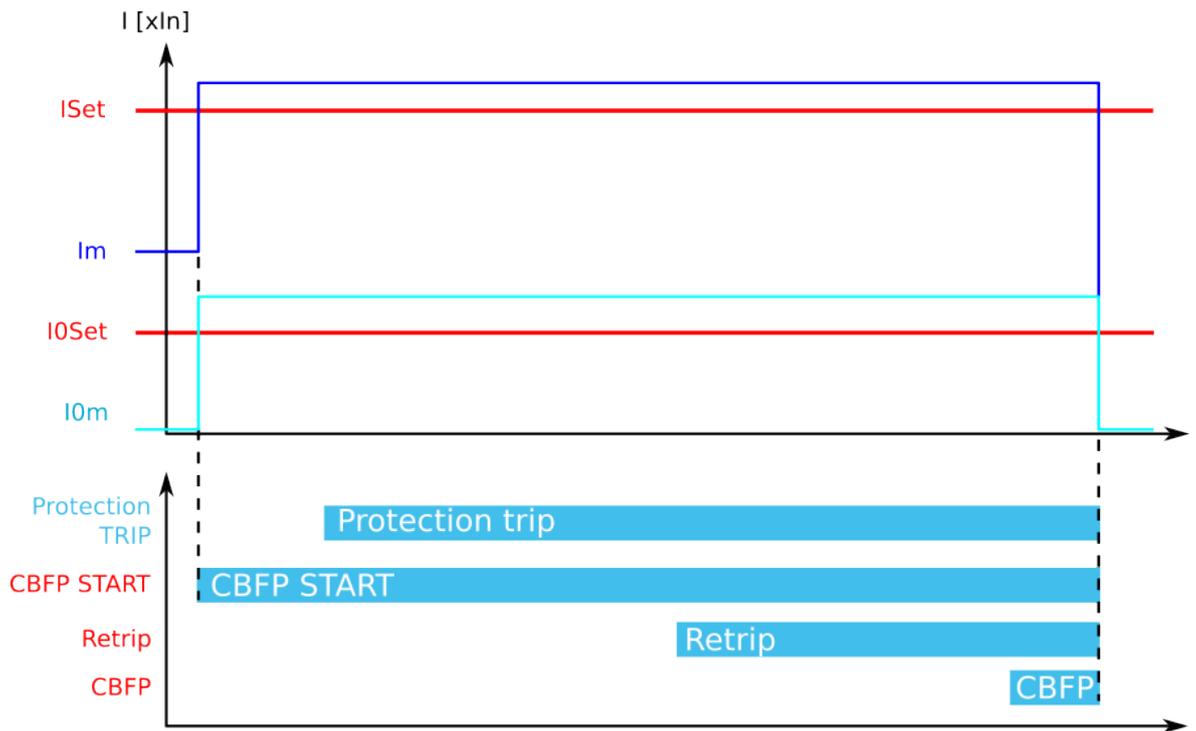


When the current threshold setting of  $I_{Set}$  and/or  $I_{OSet}$  is exceeded, the current-based protection is activated and the counters for RETRIP and CBFP start calculating the set operating time. The tripping of the primary protection stage is not monitored in this configuration. Therefore, if the current is not reduced below the setting limit, a RETRIP signal is sent to the redundant trip coil. If the current is not reduced within the set time limit, the function also sends a CBFP signal to the incomer breaker. If the primary protection function clears the fault, both counters (RETRIP and CBFP) are reset as soon as the measured current is below the threshold settings.

Figure. 5.3.6 - 79. Retrip and CBFP when "Current and DO" is the selected criterion.

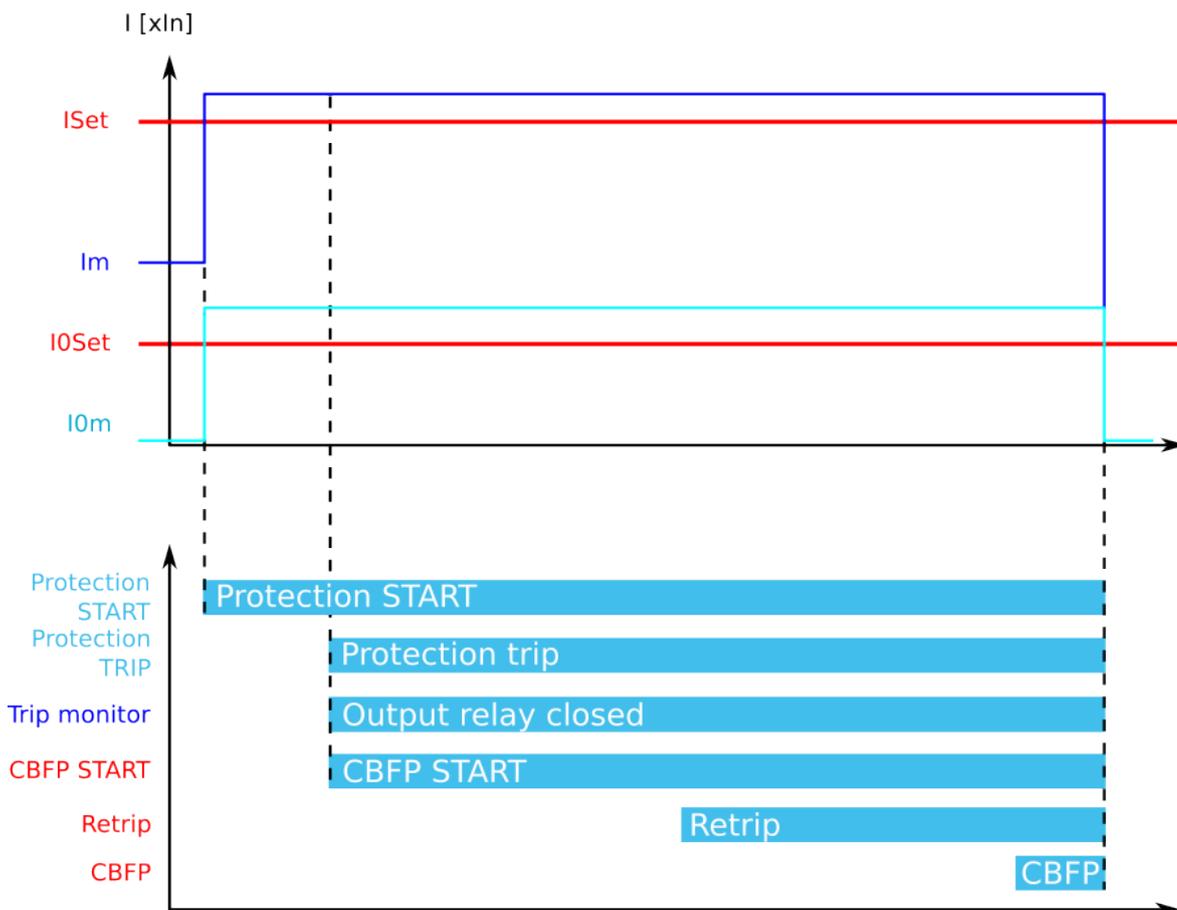

When the current threshold setting of  $I_{set}$  and/or  $I_{Oset}$  is exceeded, the current-based protection is activated. At the same time, the counters for RETRIP and CBFP are halted until the monitored output contact is controlled (that is, until the primary protection operates). When the tripping signal reaches the primary protection stage, the RETRIP and CBFP counters start calculating the set operating time. The tripping of the primary protection stage is constantly monitored in this configuration. If the current is not reduced below the setting limit or the primary stage tripping signal is not reset, a RETRIP signal is sent to the redundant trip coil. If the retripping fails and the current is not reduced below the setting limit or the primary stage tripping signal is not reset, the function also sends a CBFP signal to the incomer breaker. If the primary protection function clears the fault, both counters (RETRIP and CBFP) are reset as soon as the measured current is below the threshold settings or the tripping signal is reset. This configuration allows the CBFP to be controlled with current-based functions alone, and other function trips can be excluded from the CBFP functionality.


Figure. 5.3.6 - 80. Retrip and CBFP when "Current or DO" is the selected criterion.

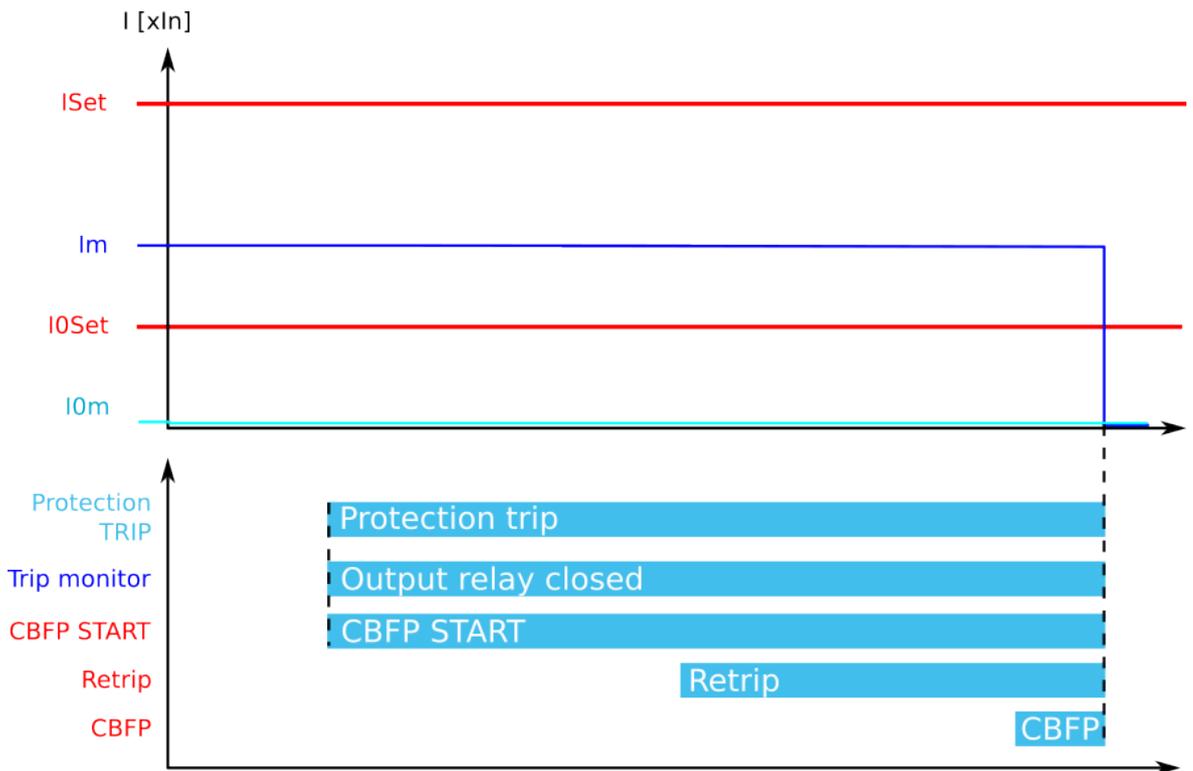

When the current threshold setting of  $I_{set}$  and/or  $I_{Oset}$  is exceeded, or the TRIP signal reaches the primary protection stage, the function starts counting down towards the RETRIP and CBFP signals. The tripping of the primary protection stage is constantly monitored in this configuration regardless of the current's status. The pick-up of the CBFP is active unless the current is reduced below the setting limit and the primary stage tripping signal is reset. If either of these conditions is met (i.e. the current is above the limit or the signal is active) for the duration of the set RETRIP time delay, a RETRIP signal is sent to the redundant trip coil. If either of the conditions is active for the duration of the set CBFP time delay, a CBFP signal is sent to the incomer breaker. If the primary protection function clears the fault, both counters (RETRIP and CBFP) are reset as soon as the measured current is below the threshold settings and the tripping signal is reset. This configuration allows the CBFP to be controlled with current-based functions alone, with added security from current monitoring. Other function trips can also be included in the CBFP functionality.


## Trip and CBFP in the device configuration

Figure. 5.3.6 - 81. Wiring diagram when Trip and CBFP are configured to the device.

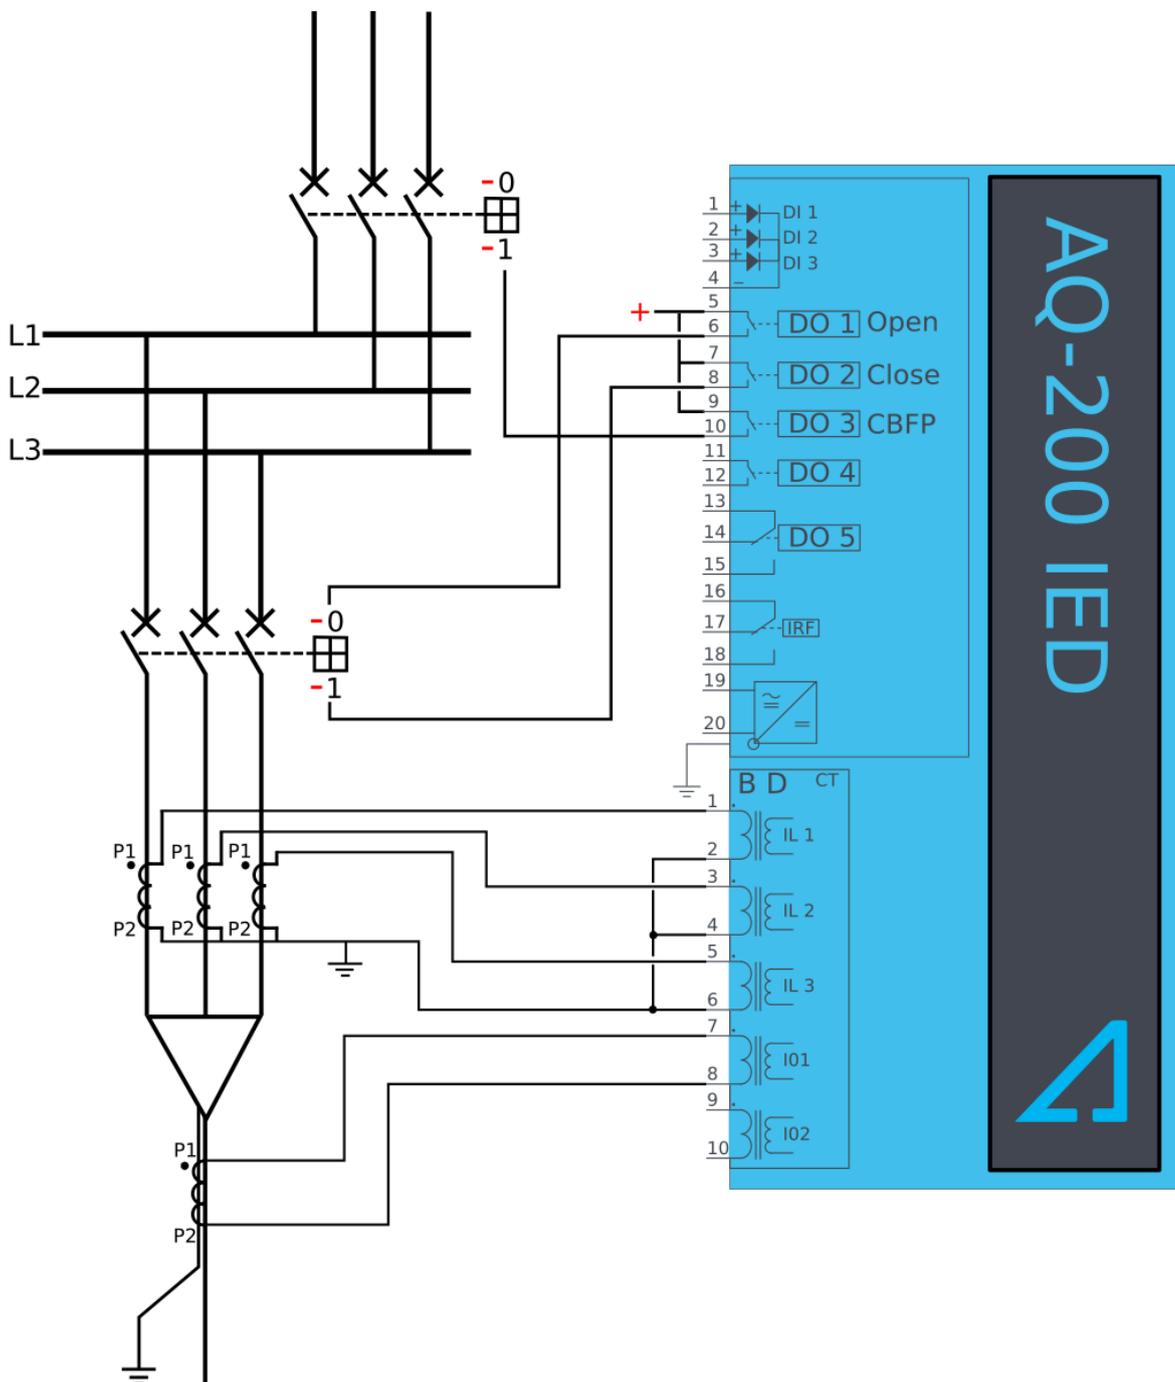


Probably the most common application is when the device's trip output controls the circuit breaker trip coil, while one dedicated CBFP contact controls the CBFP function. Below are a few operational cases regarding the various applications and settings of the CBFP function.

Figure. 5.3.6 - 82. CBFP when "Current" is the selected criterion.

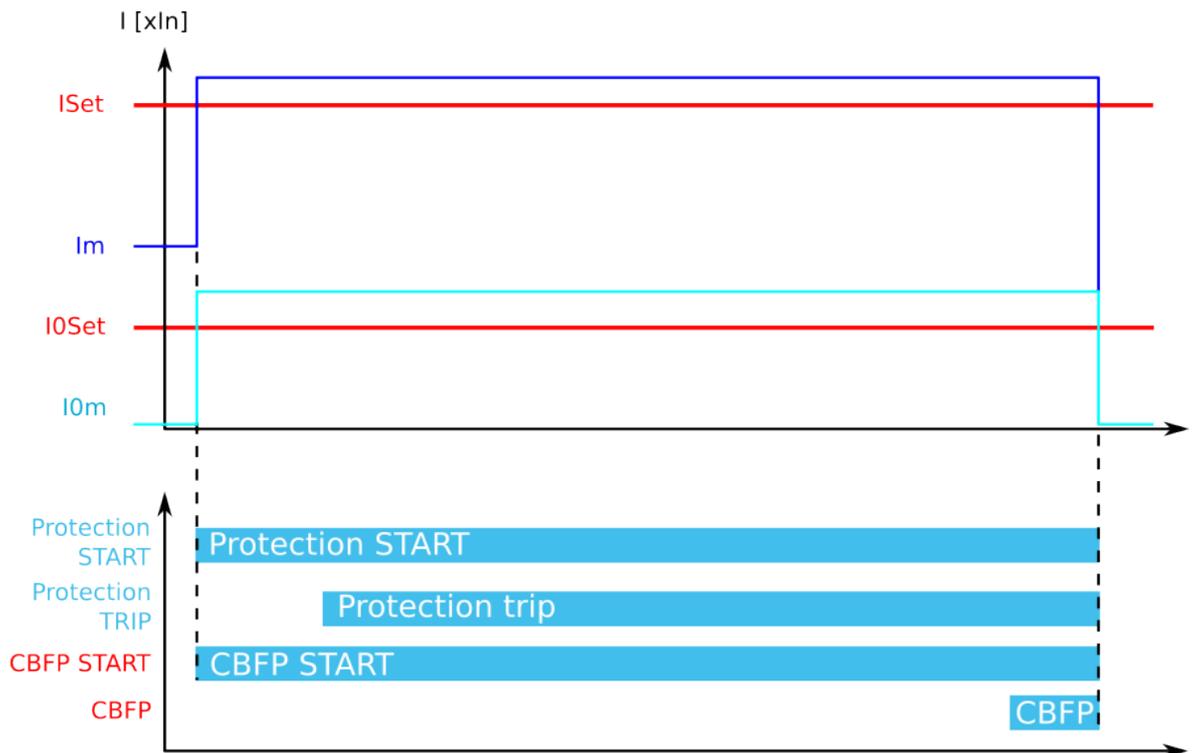


When the current threshold setting of  $I_{set}$  and/or  $I_{Oset}$  is exceeded, the current-based protection is activated and the counter for CBFP starts calculating the set operating time. The tripping of the primary protection stage is not monitored in this configuration. Therefore, if the current is not reduced below the setting limit, a CBFP signal is sent to the incomer breaker. If the primary protection function clears the fault, the counter for CBFP resets as soon as the measured current is below the threshold settings.

Figure. 5.3.6 - 83. CBFP when "Current and DO" is the selected criterion.

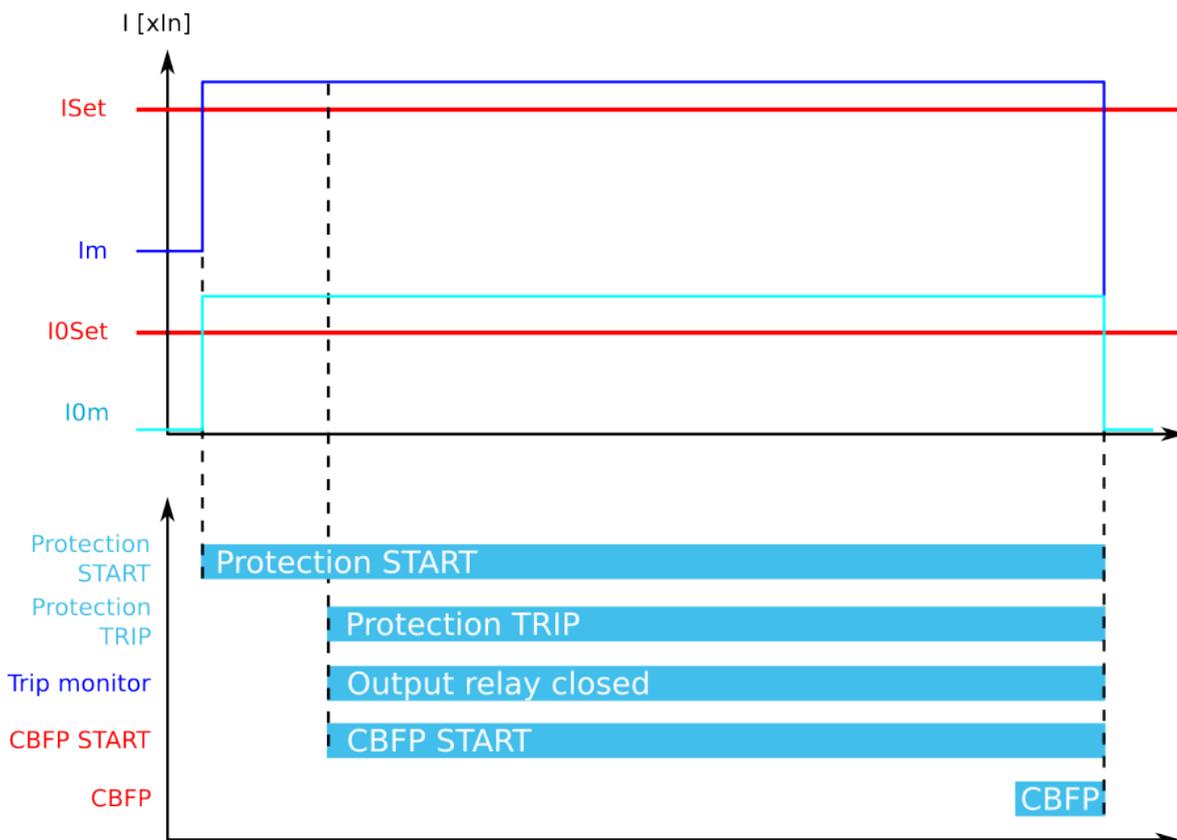

When the current threshold setting of  $I_{Set}$  and/or  $I_{OSet}$  is exceeded, the current-based protection is activated. At the same time, the counter for CBFP is halted until the monitored output contact is controlled (that is, until the primary protection operates). When the tripping signal reaches the primary protection stage, the CBFP counter starts calculating the set operating time. The tripping of the primary protection stage is constantly monitored in this configuration. If the current is not reduced below the setting limit or the primary stage tripping signal is not reset, a CBFP signal is sent to the incomer breaker. The time delay counter for CBFP is reset as soon as the measured current is below the threshold settings or the tripping signal is reset. This configuration allows the CBFP to be controlled by current-based functions alone, and other function trips can be excluded from the CBFP functionality.


Figure. 5.3.6 - 84. CBFP when "Current or DO" is the selected criterion.

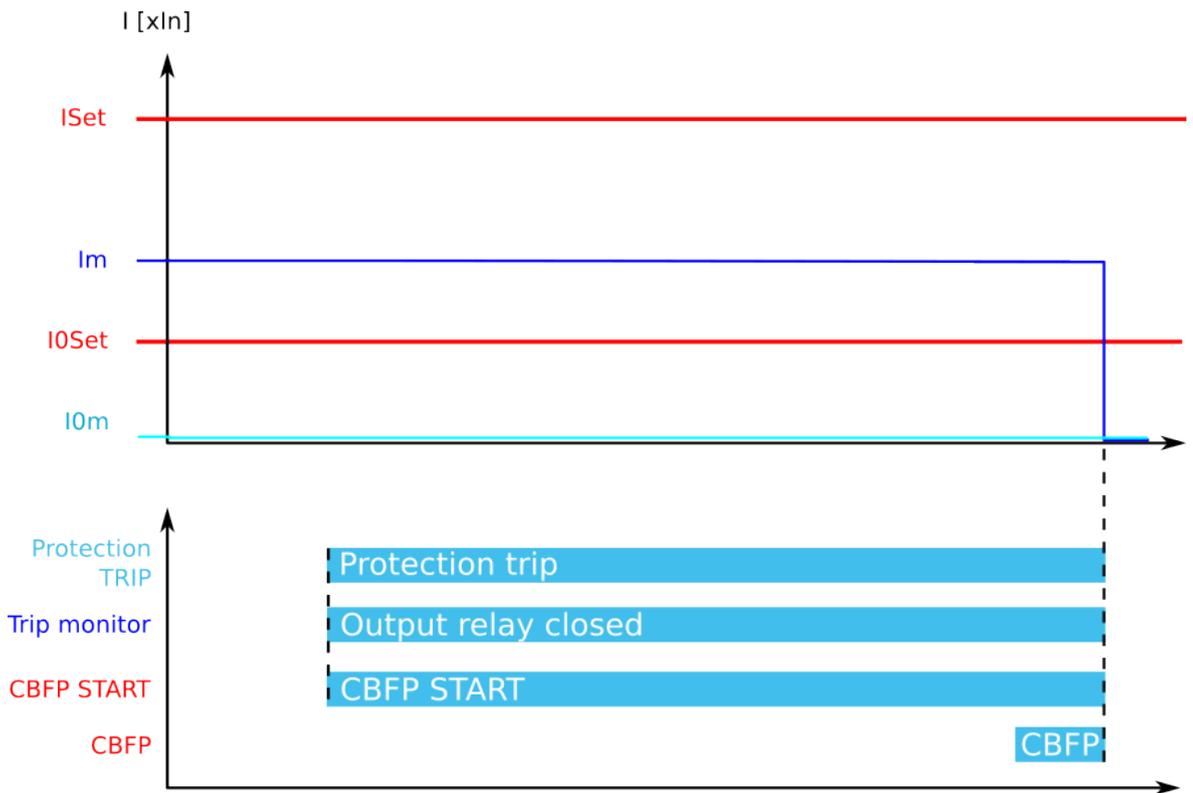

When the current threshold setting of  $I_{set}$  and/or  $I_{Oset}$  is exceeded, or the TRIP signal reaches the primary protection stage, the function starts counting down towards the CBFP signal. The tripping of the primary protection stage is constantly monitored in this configuration regardless of the current's status. The pick-up of the CBFP is active unless the current is reduced below the setting limit and the primary stage tripping signal is reset. If either of these conditions is met (i.e. the current is above the limit or the signal is active) for the duration of the set CBFP time delay, a CBFP signal is sent to the incomer breaker. The time delay counter for CBFP is reset as soon as the measured current is below the threshold settings and the tripping signal is reset. This configuration allows the CBFP to be controlled by current-based functions alone, with added security from current monitoring. Other function trips can also be included to the CBFP functionality.


## Device configuration as a dedicated CBFP unit

Figure. 5.3.6 - 85. Wiring diagram when the device is configured as a dedicated CBFP unit.

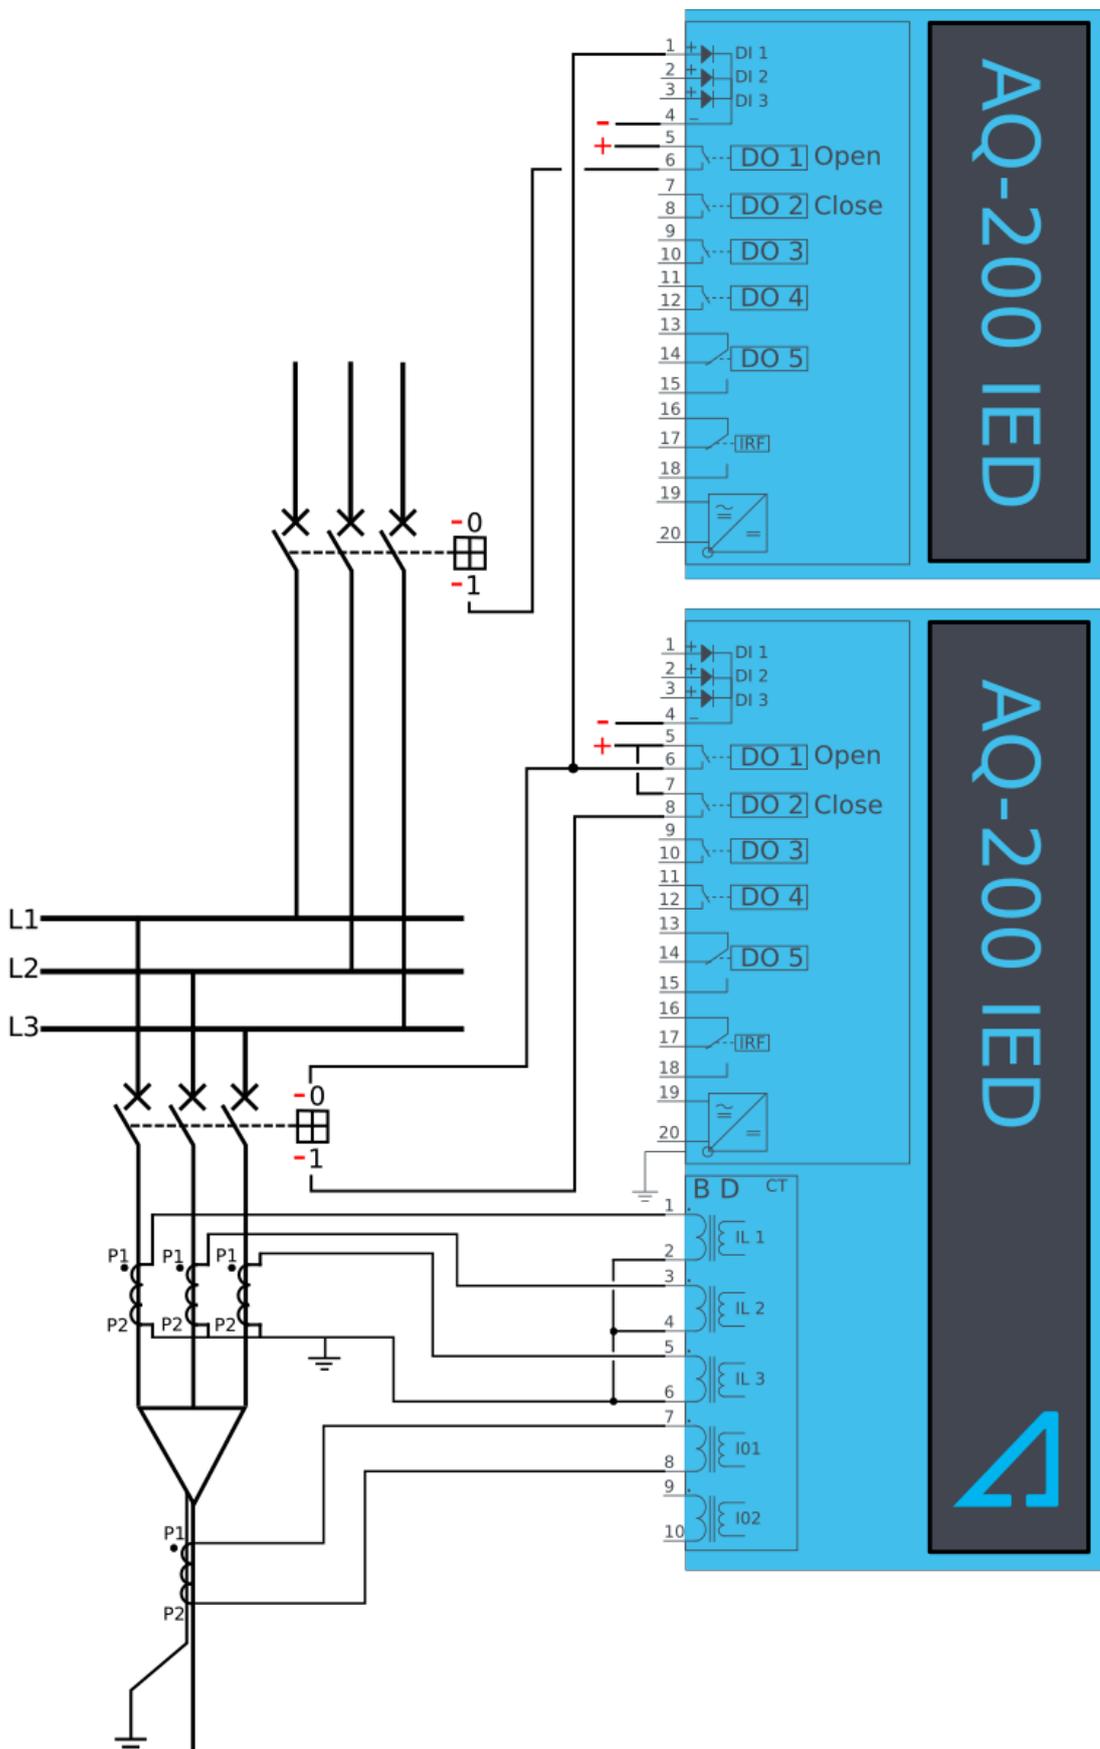

Some applications require a dedicated circuit breaker protection unit. When the CBFP function is configured to operate with a digital input signal, it can be used in these applications. When a device is used for this purpose, the tripping signal is wired to the device's digital input and the device's own TRIP signal is used only for the CBFP purpose. In this application's incomer the RETRIP and CBFP signals are also available with different sets of requirements. The RETRIP signal can be used for tripping the section's feeder breaker and the CBFP signal for tripping the incomer. The following example does not use retripping and the CBFP signal is used as the incomer trip from the outgoing breaker trip signal. The TRIP signal can also be transported between different devices by using GOOSE messages.

Figure. 5.3.6 - 86. Dedicated CBFP operation from digital input signal.

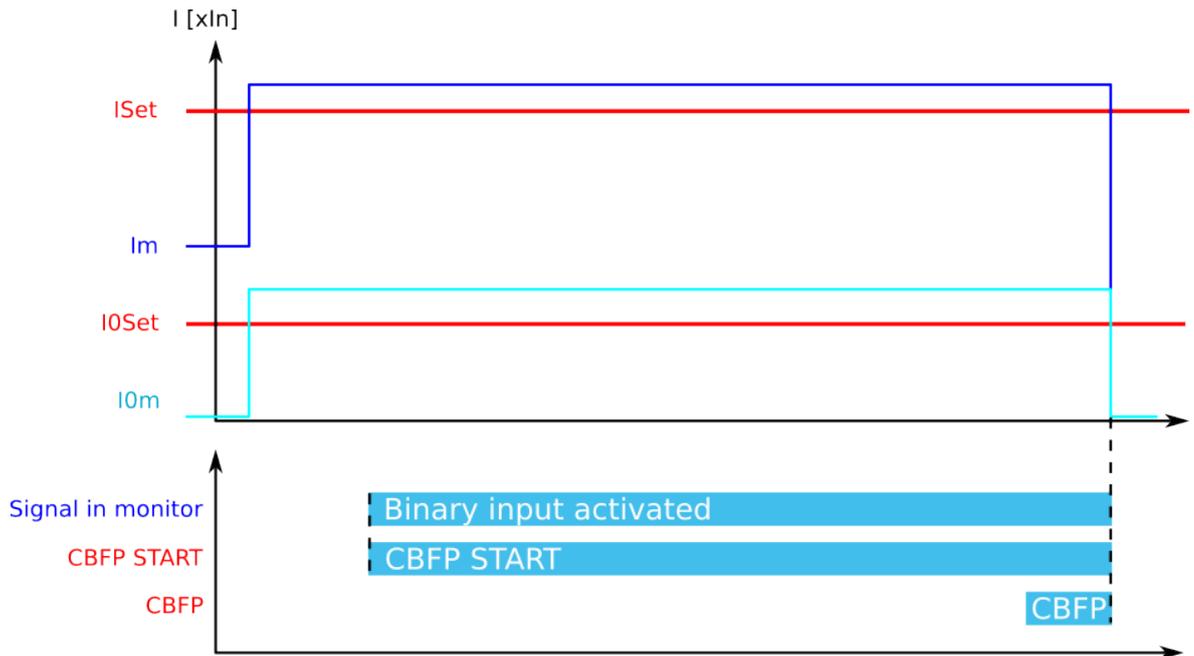

In this mode the CBFP operates only from a digital input signal. Both current and output relay monitoring can be used. The counter for the CBFP signal begins when the digital input is activated. If the counter is active until the CBFP counter is used, the device issues a CBFP command to the incomer breaker. In this application the device tripping signals from all outgoing feeders can be connected to one, dedicated CBFP device which operates either on current-based protection or on all possible faults' CBFP protection.

## Events and registers

The circuit breaker failure protection function (abbreviated "CBF" in event block names) generates events and registers from the status changes in RETRIP, in CBFP-activated and CBFP-blocked signals, as well as in internal pick-up comparators. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.3.6 - 59. Event codes.

Event number	Event channel	Event block name	Event code	Description
2816	44	CBF1	0	Start ON
2817	44	CBF1	1	Start OFF
2818	44	CBF1	2	Retrip ON
2819	44	CBF1	3	Retrip OFF

Event number	Event channel	Event block name	Event code	Description
2820	44	CBF1	4	CBFP ON
2821	44	CBF1	5	CBFP OFF
2822	44	CBF1	6	Block ON
2823	44	CBF1	7	Block OFF
2824	44	CBF1	8	DO monitor ON
2825	44	CBF1	9	DO monitor OFF
2826	44	CBF1	10	Signal ON
2827	44	CBF1	11	Signal OFF
2828	44	CBF1	12	Phase current ON
2829	44	CBF1	13	Phase current OFF
2830	44	CBF1	14	Res current ON
2831	44	CBF1	15	Res current OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for ACTIVATED, BLOCKED, etc. The table below presents the structure of the function's register content.

Table. 5.3.6 - 60. Register content.

Date and time	Event code	Trigger current	Time to RETRact	Time to CBFpact	F type	S type	Used SG
dd.mm.yyyy hh:mm:ss.mss	2816-2831 Descr.	Phase and residual currents on trigger time	Time remaining before RETR is active	Time remaining before CBFP is active	Monitored current status code	Activate start triggers	Setting group 1...8 active

### 5.3.7 Low-impedance or high-impedance restricted earth fault/ cable end differential protection (I0d>; 87N)

The low-impedance or high-impedance restricted earth fault function is used for residual differential current measurement for transformers. This function can also be used as the cable end differential function. The operating principle is low-impedance differential protection with bias characteristics the user can set. A differential current is calculated with the sum of the phase currents and the selected residual current input. In cable end differential mode the function provides natural measurement unbalance compensation for higher operating sensitivity in monitoring cable end faults.

The restricted earth fault function constantly monitors phase currents and selected residual current instant values as well as calculated bias current and differential current magnitudes.

The blocking signal and the setting group selection control the operating characteristics of the function during normal operation, i.e. the user or user-defined logic can change function parameters while the function is running.

The outputs of the function are TRIP and BLOCKED signals. The function uses a total of eight (8) separate setting groups which can be selected from one common source. The operating mode of the function can be changed via setting group selection.

The operational logic consists of the following:

- input magnitude selection
- input magnitude processing

- differential characteristic comparator
- block signal check
- output processing.


The inputs for the function are the following:

- setting parameters
- measured and pre-processed current magnitudes.

The function's output signals can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the two (2) output signals. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the REF, TRIP and BLOCKED events.

The following figure presents a simplified function block diagram of the restricted earth fault function.

Figure. 5.3.7 - 87. Simplified function block diagram of the I0d> function.

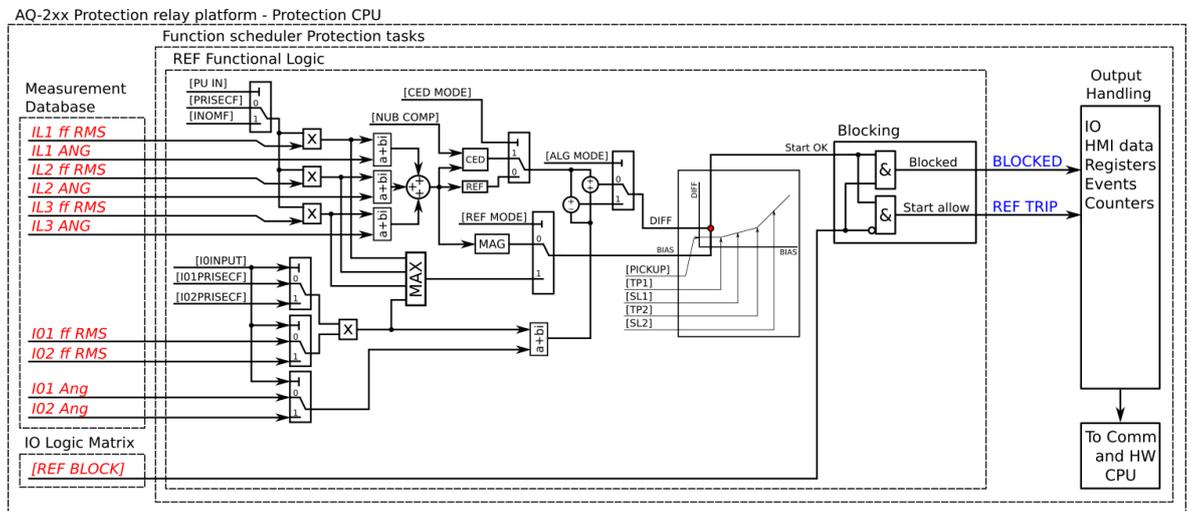

## Measured input

The function block uses analog current measurement values. It uses the RMS magnitude of the current measurement inputs. Both calculated residual currents and measured residual currents are always used. The user can select inputs I01 or I02 for residual current measurement.

Please note that when the function is in cable end differential mode, the difference is only calculated when the measured I0 current is available.

Table. 5.3.7 - 61. Measurement inputs of the I0d> function.

Signal	Description	Time base
IL1RMS	RMS measurement of phase L1 (A) current	5ms
IL2RMS	RMS measurement of phase L2 (B) current	5ms
IL3RMS	RMS measurement of phase L3 (C) current	5ms
I01RMS	RMS measurement of residual input I01	5ms
I02RMS	RMS measurement of residual input I02	5ms
IL1Ang	Angle of phase L1 (A) current	5ms
IL2 Ang	Angle of phase L2 (B) current	5ms

Signal	Description	Time base
IL3 Ang	Angle of phase L3 (C) current	5ms
I01 Ang	Angle of residual input I01	5ms
I02 Ang	Angle of residual input I02	5ms

The selection of the used AI channel is made with a setting parameter.

## General settings

The following general settings define the general behavior of the function. These settings are static i.e. it is not possible to change them by editing the setting group.

Table. 5.3.7 - 62. General settings.

Name	Range	Step	Default	Description
Restricted earth fault (REF) or Cable End Differential	0: REF 1: CED	-	0: REF	Selection of the operating characteristics. If REF is selected, the function operates with normal accuracies. If CED is selected, the natural unbalance created by the phase current CT:s can be compensated for more sensitive operation. The default setting is REF.
Compenstate natural unbalance	0:- 1: Comp	-	-	When activated while the line is energized, the currently present calculated residual current is compensated to 0. This compensation only has an effect in the CED mode.

## Operating characteristics

The current-dependent pick-up and activation of the function are controlled by setting parameters, which define the current calculating method used as well as the operating characteristics.


Table. 5.3.7 - 63. Pick-up settings.

Name	Range	Step	Default	Description
I0 Input	0: I01 1: I02	-	0: I01	Selection of the used residual current measurement input.
I0 Direction	0: Add 1: Subtract	-	0: Add	Differential current calculation mode. This matches the directions of the calculated and measured residual currents to the application. The default setting (0: Add) means that $I0Calc + I01$ or $I0Calc + I02$ in a through fault yields no differential current.
Bias current calculation	0: Residual current $(3I0 + I0Calc)/2$ 1: Maximum (Phase and I0 max)	-	0: Residual current	Selection of the bias current calculation. Differential characteristics biasing can use either the calculated residual current averages or the maximum of all measured currents. The residual current mode is more sensitive while the maximum current is coarser.
I0d> pick-up	0.01...50.00% (of $I_n$ )	0.01%	10%	Setting for basic sensitivity of the differential characteristics.
Turnpoint 1	0.01...50.00× $I_n$	0.01× $I_n$	1.00× $I_n$	Setting for first turn point in the bias axe of the differential characteristics.
Slope 1	0.01...150.00%	0.01%	10.00%	Setting for the first slope of the differential characteristics.
Turnpoint 2	0.01...50.00× $I_n$	0.01× $I_n$	3.00× $I_n$	Setting for second turn point in the bias axe of the differential characteristics.
Slope 2	0.01...250.00%	0.01%	40.00%	Setting for the second slope of the differential characteristics.

The pick-up settings can be selected via setting groups. The pick-up activation of the function is not directly equal to the TRIP signal generation of the function. The TRIP signal is allowed if the blocking condition is not active.

The following figure presents the differential characteristics with default settings.

Figure. 5.3.7 - 88. Differential characteristics for the I0d> function with default settings.

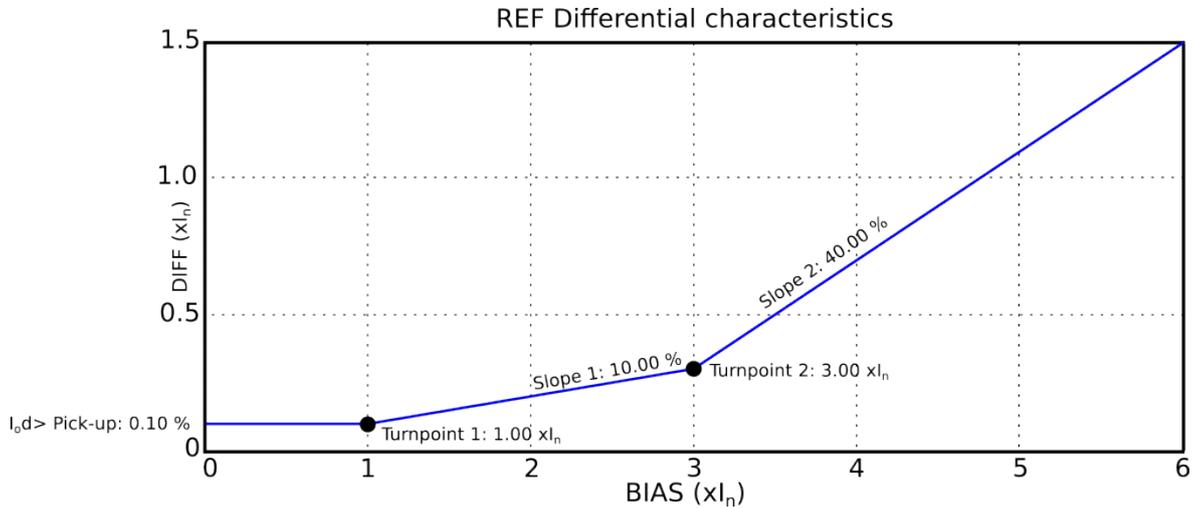

The equations for the differential characteristics are the following:

Figure. 5.3.7 - 89. Differential current (the calculation is based on user-selected inputs and direction).

$$I_{Diff+I01} = (\overline{IL1} + \overline{IL2} + \overline{IL3}) + \overline{I01}$$

$$I_{Diff-I01} = (\overline{IL1} + \overline{IL2} + \overline{IL3}) - \overline{I01}$$

$$I_{Diff+I02} = (\overline{IL1} + \overline{IL2} + \overline{IL3}) + \overline{I02}$$

$$I_{Diff-I02} = (\overline{IL1} + \overline{IL2} + \overline{IL3}) - \overline{I02}$$

Figure. 5.3.7 - 90. Bias current (the calculation is based on the user-selected mode).

$$I_{Bias1} = (\overline{IL1} + \overline{IL2} + \overline{IL3})$$

$$I_{Bias2I01} = \text{MAX}(|IL1|, |IL2|, |IL3|, |I01|)$$

$$I_{Bias2I02} = \text{MAX}(|IL1|, |IL2|, |IL3|, |I02|)$$

Figure. 5.3.7 - 91. Characteristics settings.

$$Diff_{bias < TP1} = I0_{d > pick-up}$$

$$Diff_{bias TP1...TP2} = SL1 \times (Ix - TP1) + I0_{d > pick-up}$$

$$Diff_{bias > TP2} = SL2 \times (Ix - TP2) + SL1 \times (TP2 - TP1) + I0_{d > pick-up}$$

## Read-only parameters

The relay's *Info* page displays useful, real-time information on the state of the protection function. It is accessed either through the relay's HMI display, or through the setting tool software when it is connected to the relay and its Live Edit mode is active.

Table. 5.3.7 - 64. Information displayed by the function.

Name	Range	Step	Description
I0d> condition	0: Normal 1: Trip 2: Blocked	-	Displays the status of the protection function.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a TRIP signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the TRIP function has been activated before the blocking signal, it resets and processes the release time characteristics similarly to when the pick-up signal is reset.



The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.



The following figures present some typical applications for this function.

Figure. 5.3.7 - 92. Cable end differential with natural unbalance in the phase current measurement.

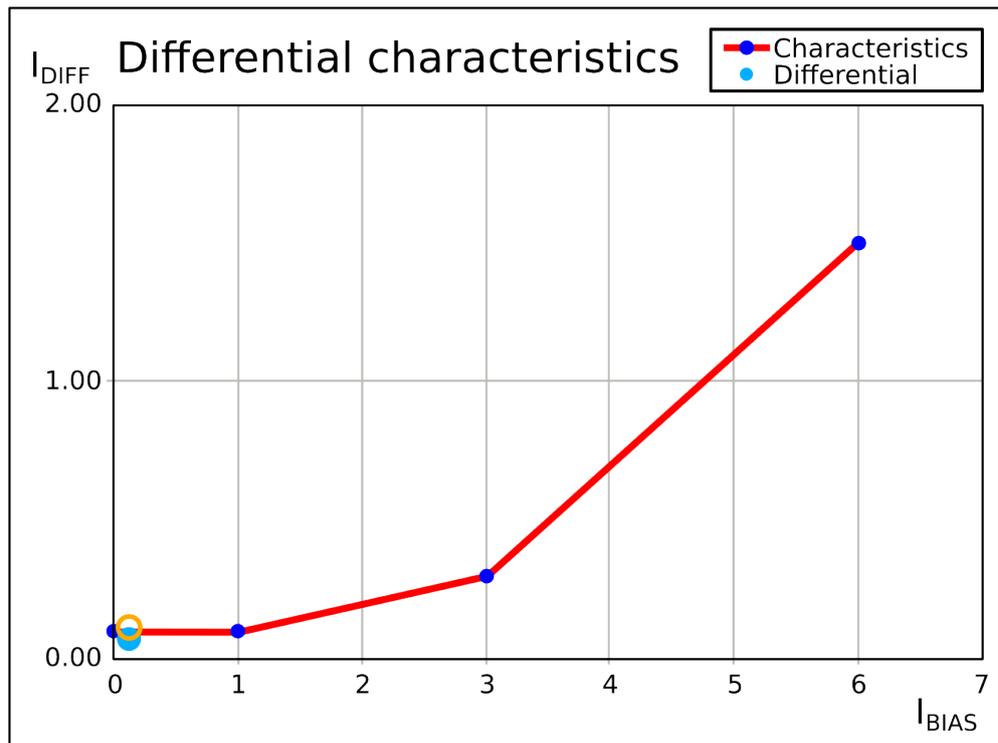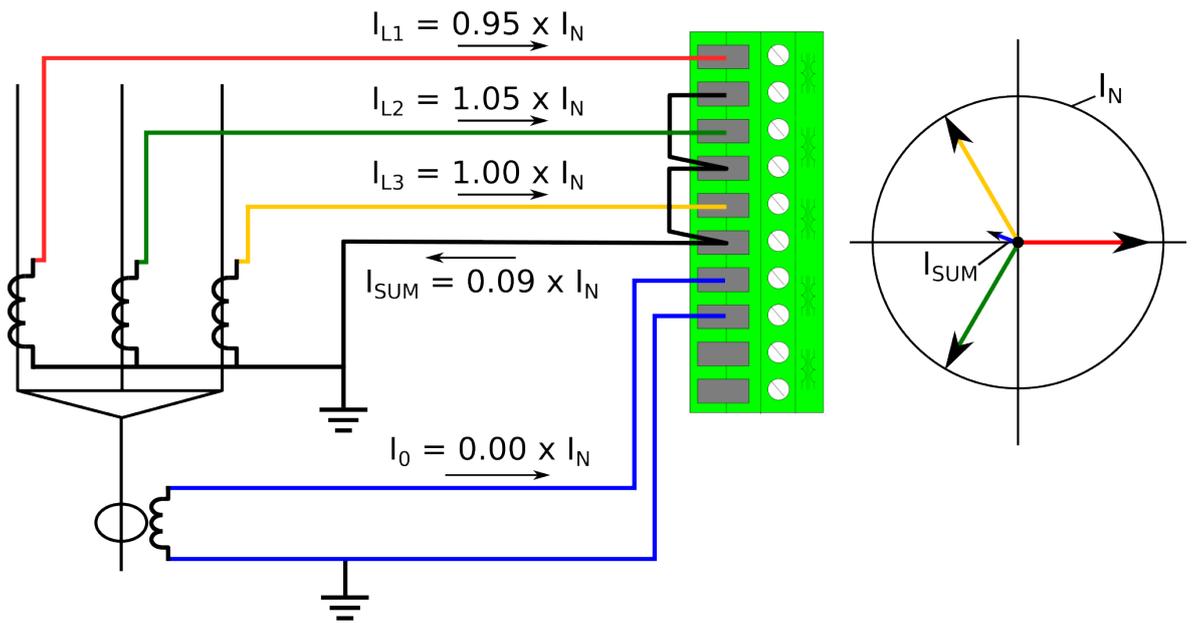

When calculating residual current from the phase currents, the natural unbalance can be around 10 % while the used CTs are still within the promised 5P class (which is probably the most common CT accuracy class). When the current natural unbalance is compensated in this situation, the differential settings may be set to be more sensitive and the natural unbalance does not, therefore, affect the calculation.



Figure. 5.3.7 - 93. Cable end differential when a fault occurs.

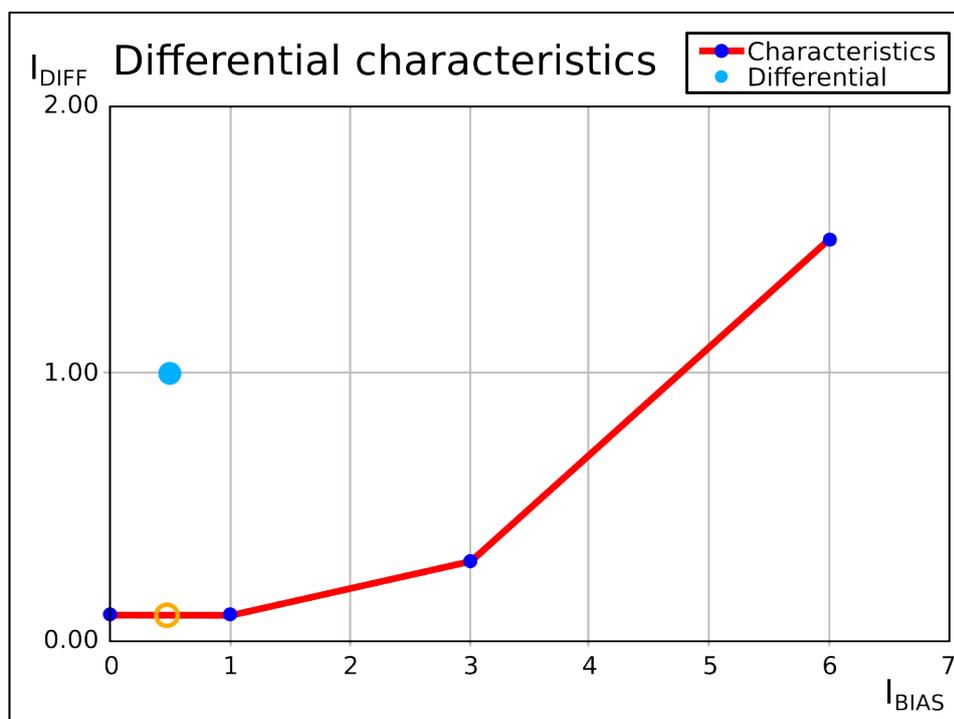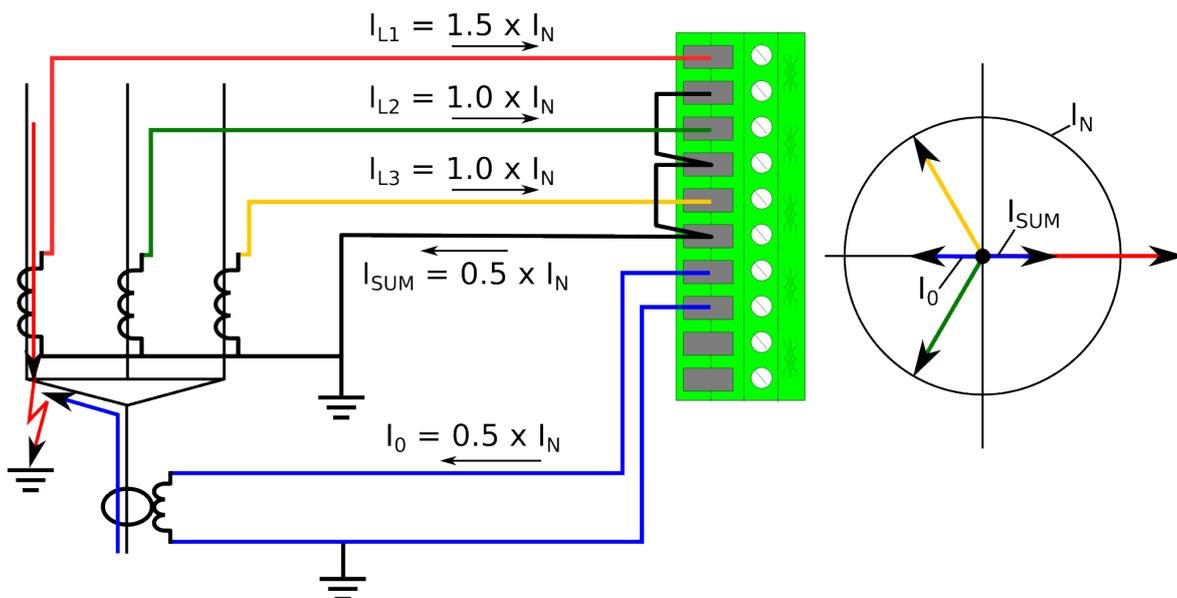

If a starting fault occurs in the cable end, the CED mode catches the difference between the ingoing and the outgoing residual currents. The resulting signal can be used for alarming or tripping purposes for the feeder with the failing cable end. The user can freely change both the settings and the sensitivity of the algorithm.



Restricted earth fault protection is usually used in the Y winding of a power transformer. This function is needed to prevent the main differential protection from being tripped by faults occurring outside the protection area; in some cases, the function has to be disabled or its sensitivity limited to catch earth faults inside the protection area. For this purpose, the restricted earth fault function is stable since it only monitors the side it is wired to, and compares the calculated and measured residual currents. During an outside earth fault the circulating residual current in the faulty phase winding does not cause a trip because the comparison of the measured starpoint current and the calculated residual current differential is close to zero.

Figure. 5.3.7 - 94. Restricted earth fault outside a Y winding transformer.

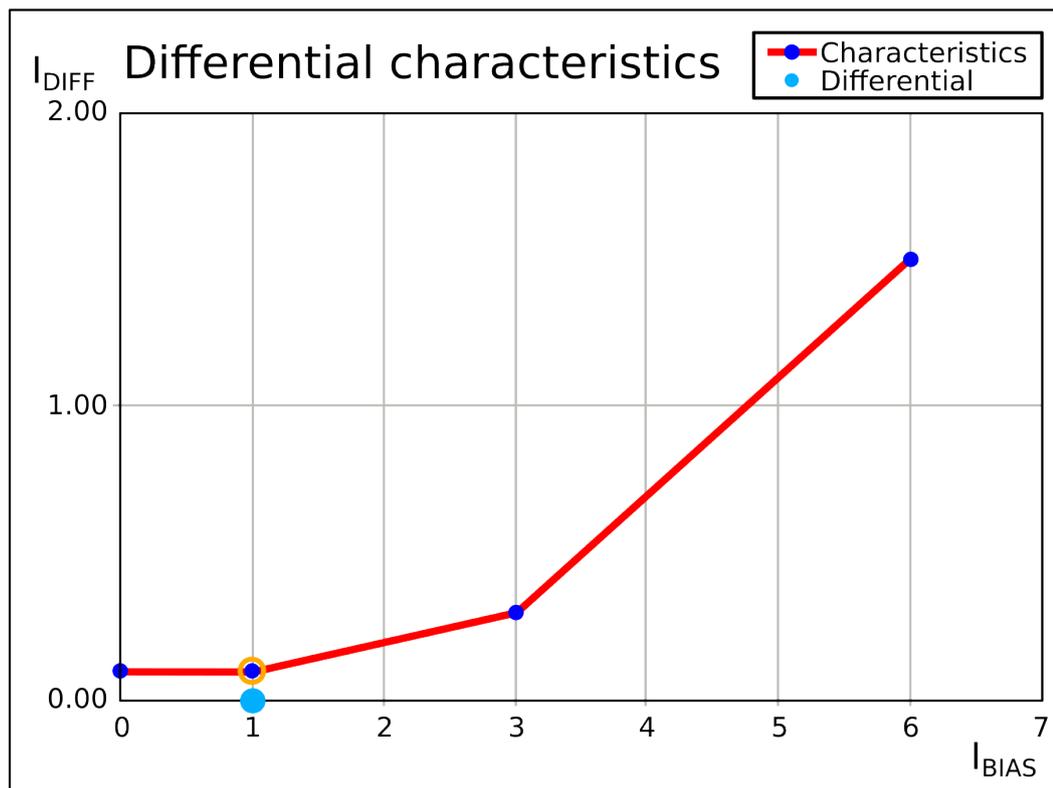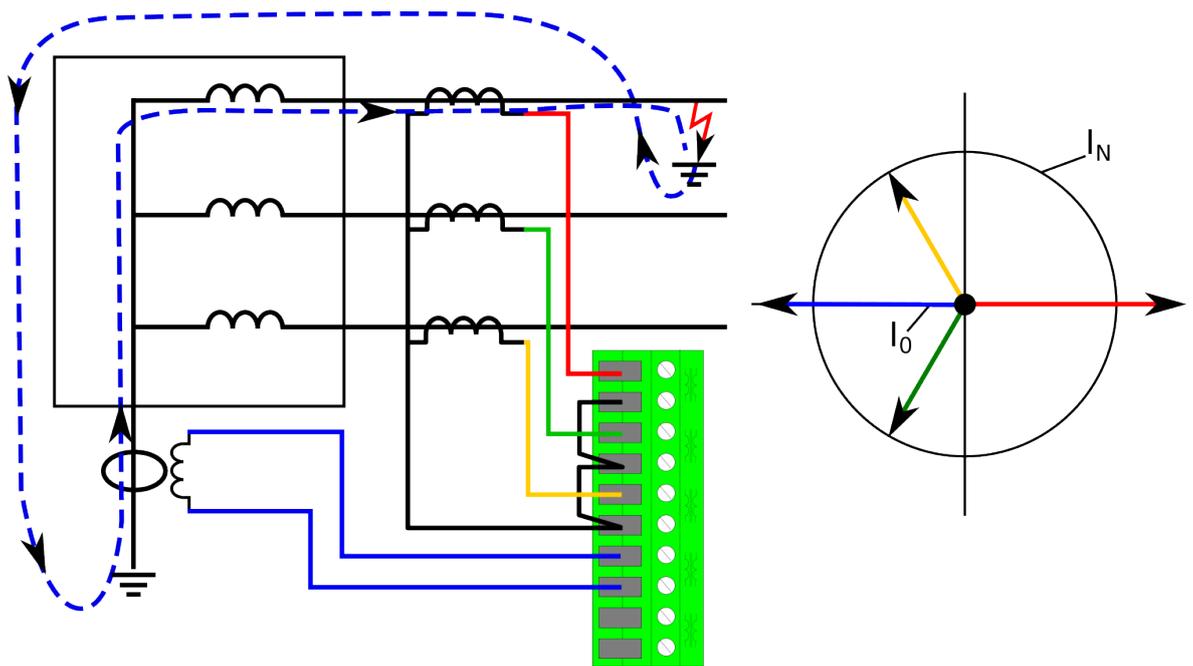

If the fault is located inside of the transformer and thus inside of the protection area, the function catches the fault with high sensitivity. Since the measured residual current now flows in the opposite direction than in the outside fault situation, the measured differential current is high.

Figure. 5.3.7 - 95. Restricted earth fault inside a Y winding transformer.

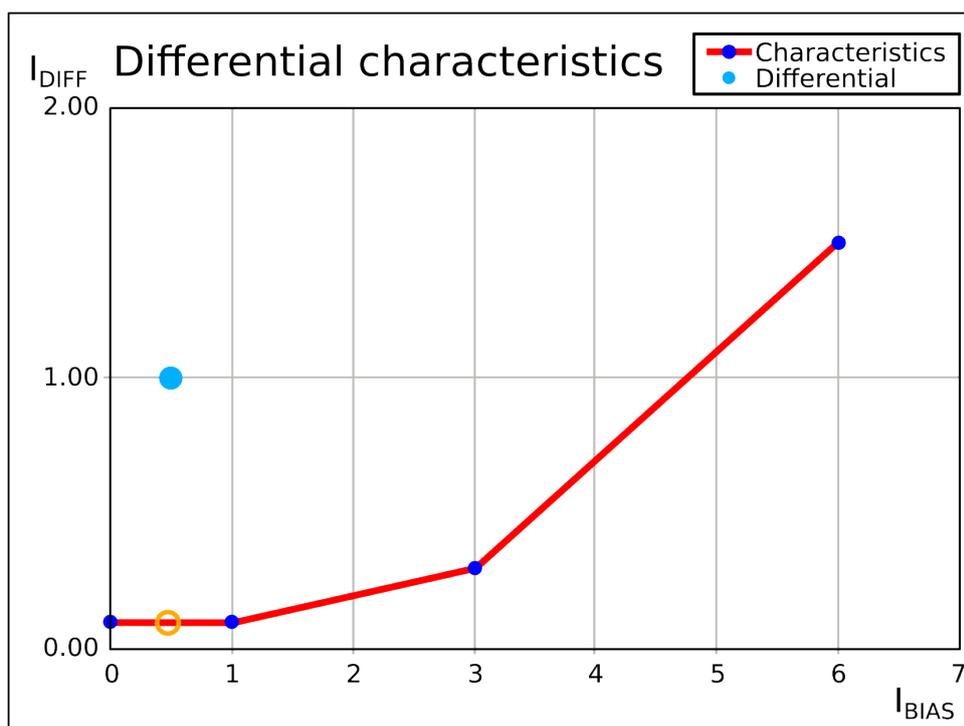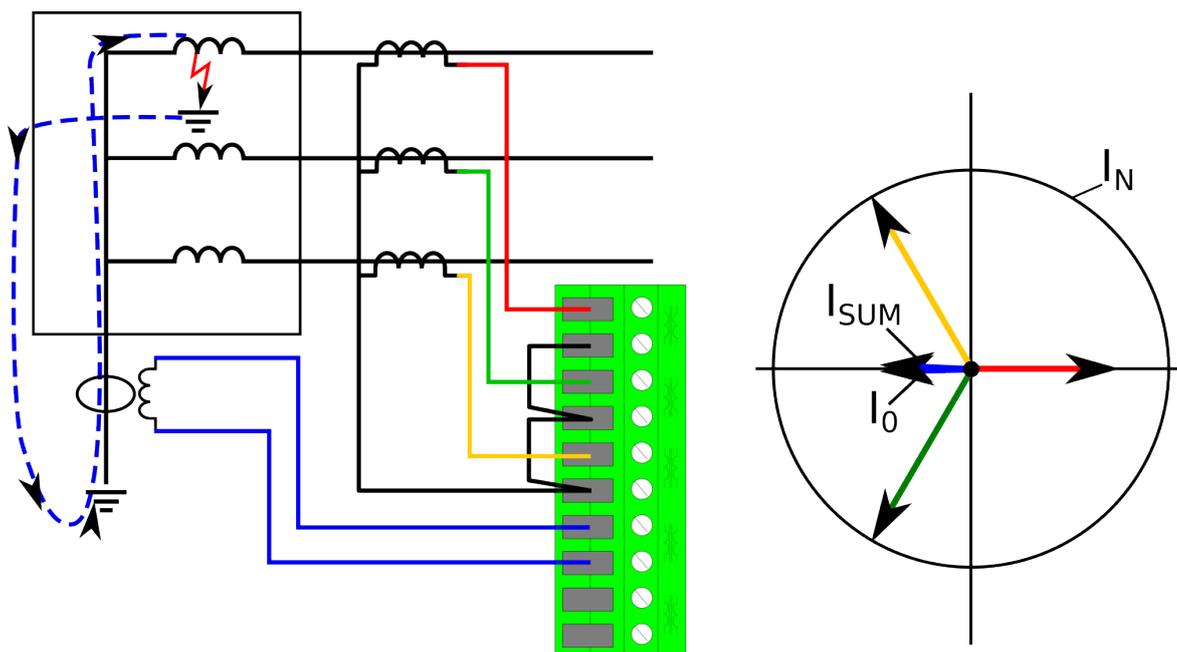

## Events and registers

The restricted earth fault function (abbreviated "REF" in event block names) generates events and registers from the status changes in TRIP-activated and BLOCKED signals. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.3.7 - 65. Event codes.

Event number	Event channel	Event block name	Event code	Description
4224	66	REF1	0	I0d> (87N) Trip ON
4225	66	REF1	1	I0d> (87N) Trip OFF
4226	66	REF1	2	I0d> (87N) Block ON
4227	66	REF1	3	I0d> (87N) Block OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for ACTIVATED, BLOCKED, etc. The table below presents the structure of the function's register content.

Table. 5.3.7 - 66. Register content.

Date and time	Event code	Average trigger currents	Maximum trigger currents	Residual currents	Used SG
dd.mm.yyyy hh:mm:ss.mss	4224-4227 Descr.	Biascurrent trig Diffcurrent trig Characteristics diff trig	Biascurrent max Diffcurrent max Characteristics diff max	I0Calc I0 meas	Setting group 1...8 active

### 5.3.8 Motor status monitoring

The motor status monitoring function is designed to be the one place where the user can set up all necessary motor data and select the used motor protection functions. Settings related to the protection functions can also be edited inside each function and any changes are updated into this function as well. In addition to the motor data settings, this function counts the number of times the motor starts, the number of times the motor start has succeeded, and the number of times the motor has been stopped. The function also keeps track of the running time and the starting time. Additionally, the function has a cumulative counter that tells the overall time the motor has been stopped, and it shows the last time the motor was stopped.


The outputs for the function are the following:

- motor stopped
- motor starting
- motor running
- motor stalled
- missing phase
- load normal
- overloading
- high overcurrent signals.

The signals can be used in indication or in application logics. They are also the basis of the events the function generates (if so chosen).


The following figure presents a simplified function block diagram of the motor status monitoring function.

Figure. 5.3.8 - 96. Simplified function block diagram of the motor status monitoring function.

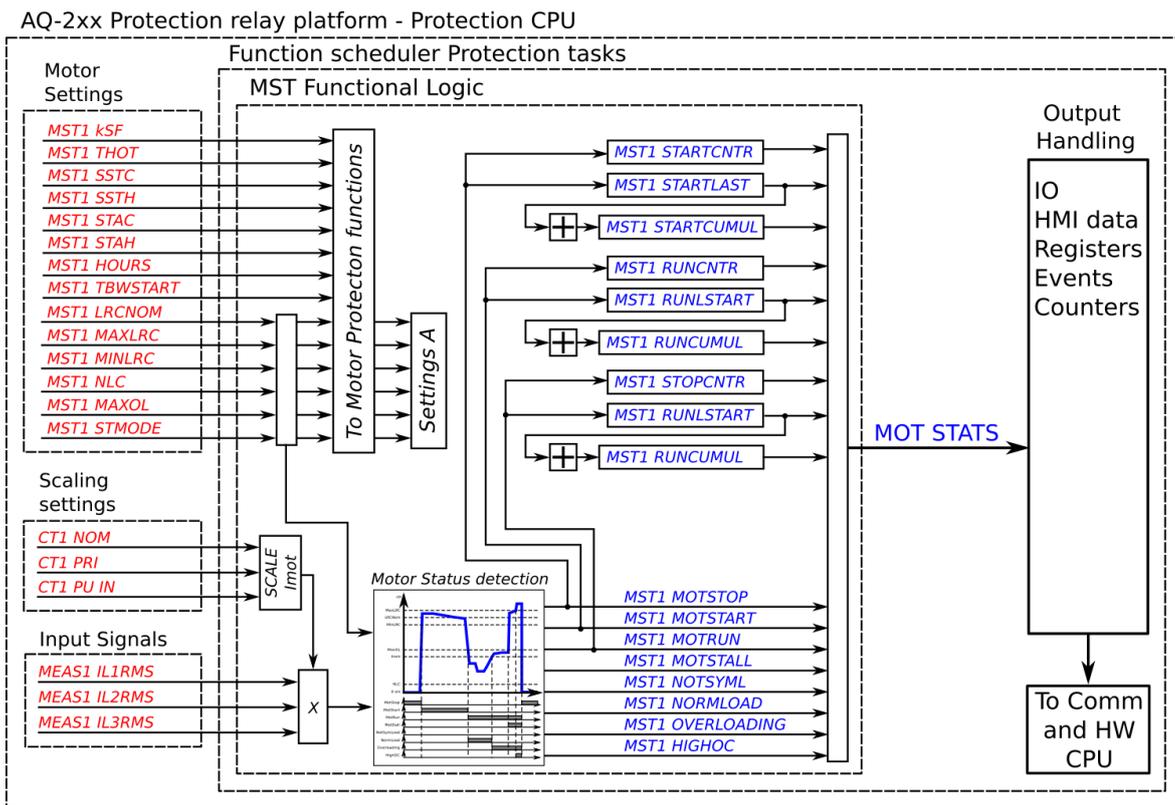

The function's outputs are dependent on the motor data the user has set. The following two diagram present the function's outputs in various situations.


Figure. 5.3.8 - 97. Activation of the function's outputs.

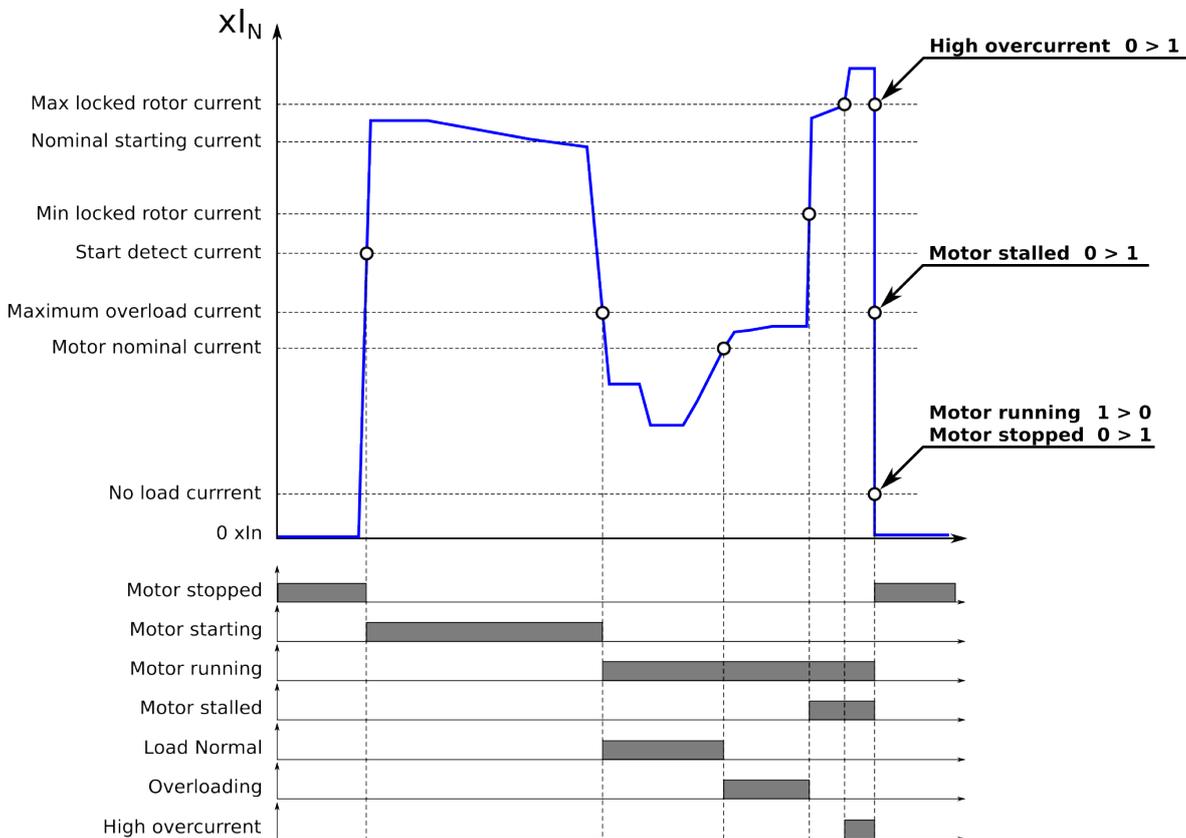

The **Motor stopped** signal is activated when the current is below the “No load current” limit for longer than 10 ms. When the current increases from this status to above the “Start detect current” setting, a start of the motor is detected and the **Motor starting** signal is activated. If the current stays below the “Max locked rotor current” setting, the start-up situation continues. When the current decreases below the “Maximum overload current” setting, the start situation is considered to be over and the motor running, resulting in the activation of the **Motor running** signal. When the measured current is between the “No load current” and the “Motor nominal current” (including the service factor and the ambient temperature factor), the load is considered to be normal, activating the **Load Normal** signal. If the current then starts rising, and exceeds the “Motor nominal current” setting but does not exceed the “Maximum overload current” setting, the **Overloading** signal is activated. If the current does exceed the “Maximum overload current” setting, the **Motor stalled** signal is activated. If the current exceeds the “Max locked rotor current” setting, the **High overcurrent** signal is activated. When the measured current decreases below the “No load current” setting, the **Motor stopped** signal is activated again. The **Missing phase** signal is activated only if one of the phases is lost during **Motor starting** or **Motor running** and the measured current in that phase is reduced below the “No load current” setting.


These motor status signals can be used in the motor protection scheme to block overcurrent stages, to change setting groups, and to release blockings (e.g if something happens during start-up).

Figure. 5.3.8 - 98. Example of application: motor starting scheme and using motor status signals.

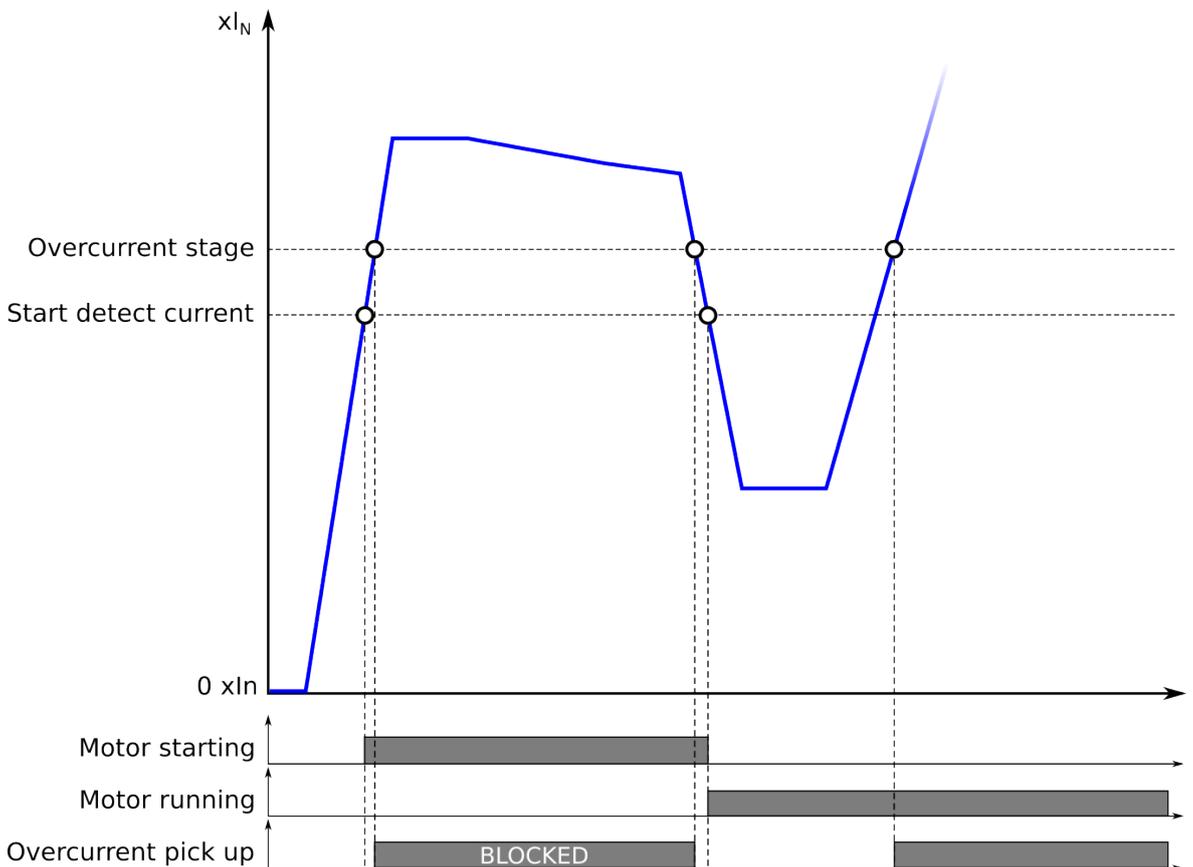


When a motor is starting, an overcurrent stage with a low pick-up setting is either blocked or –as in some relays– the setting value is multiplied by a prescribed factor. This prevents the protection stage from activating and the motor from starting, especially when the low-set overcurrent stage has an operating time that is shorter than the start-up time of the protected motor. The figure above presents how the START signals behave during a motor start-up. Also note that the **Motor starting** signal can be used to block the overcurrent stage.

Figure. 5.3.8 - 99. Blocking application in the relay configuration.

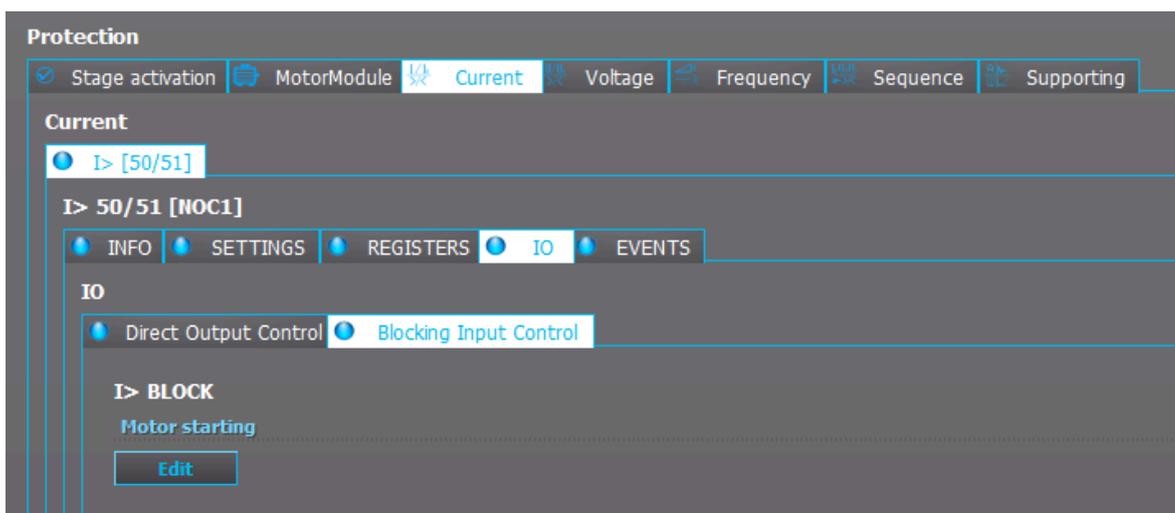

In the example above, problems may arise if, during the start-up of a motor, a short-circuit fault occurs while the overcurrent stage is blocked. This may make the fault clearing take longer as the relay still considers the situation part of starting. In this case the following logic can be used to prevent prolonging of the fault clearing time during the start-up of the motor. The main benefit of this logic is that there is no need to spend another protection stage for short-circuit faults: the one stage that is set below the starting current of the motor can also be used for short-circuits and overcurrent faults. See below for a more detailed description of the logic in question.

Figure. 5.3.8 - 100. Motor start up overcurrent control logic.

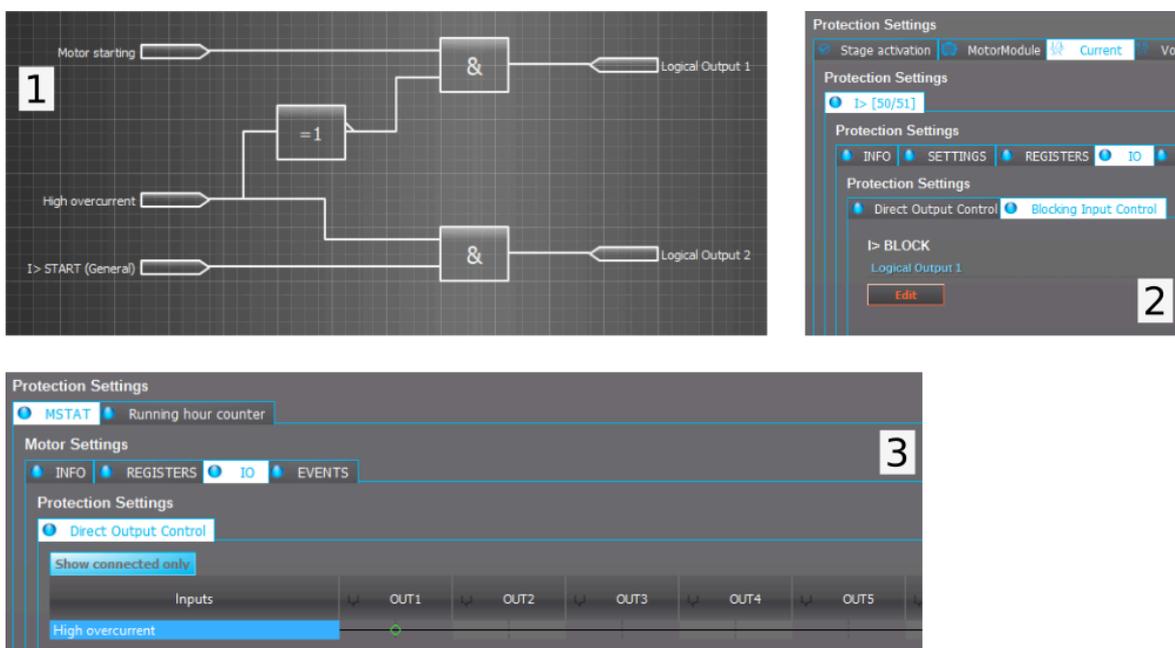

Picture 1 (upper left). During a start-up, the MST1\_MOTSTART signal is connected to the LOGIC\_OUT1 signal with an AND gate, and to the MST1\_HIGHOC signal (the function's high overcurrent detection) with a NOT gate. The overcurrent (I>) stage is blocked when a motor starts, but the blocking is released if a high overcurrent is detected during the start-up process. The user can choose to combine the high overcurrent detection with the NOC1\_START signal with an AND gate, and use the LOGIC\_OUT2 signal (for example) to change the active setting group of the I> function to operate instantly.

Picture 2 (bottom left). The LOGIC\_OUT1 signal is connected to the I> blocking input (NOC1, first stage overcurrent) function to block the stage in motor start-ups.

Picture 3 (right). The high overcurrent detection signal can also be directly connected to the output relay. This way there is no need for extra logics for fault clearing control which makes fault clearing very fast.

Alternatively, the user can release the tripping of the I> stage by letting the overcurrent function operate on its set timer settings when a high overcurrent is detected. However, this requires that the motor start detection current is set below the overcurrent stage.

## Settings and signals

The settings of the motor status monitoring function are mostly shared with other motor protection functions in the device's motor module. The following table shows these other functions that also use these settings.

Table. 5.3.8 - 67. Settings of the motor status monitoring function and how they are shared by other protection functions.

Name	Range	Step	Default	Protection functions	Description
Motor Start	0: DOL 1: Star-Delta 2: Soft start	-	0: DOL	- Motor status monitoring - Motor start monitoring (Ist>; 48)	The motor starting mode selection. The user can select between Direct On Line (DOL), Star-Delta and Soft start in future releases.
Motor In Scaled	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	-	- Motor status monitoring - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48) - Undercurrent (I<; 37) - Load jam protection (Im>; 51M)	The motor's nominal current scaled to per unit. If the user selects <i>Object In</i> in the CT settings, this value should be 1.00. If scaled to the CT nominal, this value may vary.
Motor In A	0.1...5000 A	0.1 A	-	- Motor status monitoring - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48) - Undercurrent (I<; 37) - Load jam protection (Im>; 51M)	The motor's nominal current in amperes.

Name	Range	Step	Default	Protection functions	Description
Nominal starting current	0.1...40.0xI <sub>N</sub>	0.1xI <sub>N</sub>	6.0xI <sub>N</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's locked rotor current with the nominal voltage. This setting is used for automatic curve selection and calculation. Also, the nominal starting capacity calculation is based on this value.
Nominal starting current A	0.1...5000A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's locked rotor current in amperes.
Start detect current	0.1...40.0xI <sub>N</sub>	0.1xI <sub>N</sub>	1.5xI <sub>N</sub>	- Motor status monitoring - Motor start monitoring (I <sub>st</sub> >; 48)	The motor starting current detection limit. When in DOL or Star-Delta mode, this setting defines the motor starting moment when the measured current exceeds both the no-load current limit and the start detect current limit within a ten-millisecond period. If the current increases slower, it is not defined as a motor start.
Start detect current A	0.1...5000A	0.1A	-	- Motor status monitoring - Motor start monitoring (I <sub>st</sub> >; 48)	The motor's starting current detection limit in amperes.
Min locked rotor current	0.1...40.0xI <sub>N</sub>	0.1xI <sub>N</sub>	3.5xI <sub>N</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's minimum locked rotor current. This setting defines the current limit for when this current is exceeded while the automatic curve selection and the control only short time constant (stall) are in use.
Min locked rotor current A	0.1...5000A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's minimum locked rotor current. This setting defines the current limit for when this current is exceeded while the automatic curve selection and the control only short time constant (stall) are in use.

Name	Range	Step	Default	Protection functions	Description
Max locked rotor current	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	7.5xI <sub>n</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	Maximum locked rotor current of the motor. This setting defines the current limit which is maximum current for the motor to draw in locked rotor situation (starting or stalled). If the measured current exceeds this setting limit it is considered to be overcurrent fault and corresponding measures can be applied to disconnect the feeder and motor from the supply.
Max locked rotor current A	0.1...5000A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The maximum locked rotor current in amperes.
Max overload current	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	2.0xI <sub>n</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's maximum overload current. Exceeding this setting stalls the motor. This setting defines when the thermal replica switches to the short (stall) time constant. As long as the current stays below this setting value, the motor should run even when overloaded.
Max overload current A	0.1...5000A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's maximum overload current in amperes.
No load current <	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	0.2xI <sub>n</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Undercurrent (I<; 37)	The motor's no load current. This setting defines the "Stopped" condition when the current is below this setting value. Also, when the current is below this value, the undercurrent protection stage is locked.

Name	Range	Step	Default	Protection functions	Description
No load current < A	0.1...5000A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (Tm>; 49M) - Undercurrent (I<; 37)	The motor's no load current in amperes.
Motor service factor	0.01...5.00xI <sub>n</sub>	0.01xI <sub>n</sub>	1.00xI <sub>n</sub>	- Motor status monitoring - Machine thermal overload protection (Tm>; 49M)	Service factor which corrects the maximum allowed loading according to various conditions (e.g. installation, construction, etc.) which vary from the presumption conditions. Frequently motors are stamped to a service factor of 1.15: this means that they can withstand a continuous 15% overloading from the rated current (as this is not necessary in all conditions, it is recommended to consult the motor's datasheet or manual for details). If the service factor is not known, this parameter should be left at its default setting of 1.00 x I <sub>n</sub> .
Hot condition theta limit	0.0...100.0%	0.1%	70%	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48) - Load jam protection (Im>; 51M)	Setting the motor's thermal limit in a hot or a cold situation. When this setting value is not exceed while a locked rotor situation occurs, the function uses a cold stall curve adjusted with the actually used thermal capacity. The function uses a hot stall curve when this setting value is exceeded. This setting also applies to starts when the hot/cold selection is in use. Please note that using this setting requires that the Machine thermal overload protection (Tm>) function is activated and in use.
Safe stall time cold	0.1...600.0s	0.1s	20.0s	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48) - Load jam protection (Im>; 51M)	The safe stall time when the motor is cold. Unless this value is specified, it is set to be equal to the hot stall time. Most probably this leads to overprotection with the cold motor stall (best case scenario). This setting value is used for the cold thermal stall curve selection in automatic control. This parameter is also used in the motor start-up and the number of starts calculations.

Name	Range	Step	Default	Protection functions	Description
Safe stall time hot	0.1...600.0s	0.1s	15.0s	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48) - Load jam protection (Im>; 51M)	The safe stall time when the motor is hot. This setting value is used for the hot thermal stall curve selection in automatic control. This parameter is also used in the motor start-up and the number of starts calculations.
Starts when cold	1...100	1	3	- Motor status monitoring - Frequent start protection (N>; 48)	The number of allowed starts per x hours for a cold motor.
Starts when hot	1...100	1	2	- Motor status monitoring - Frequent start protection (N>; 48)	The number of allowed starts per x hours for a hot motor.
Starts in hours	1...100h	1h	1h	- Motor status monitoring - Frequent start protection (N>; 48)	The number of hours when the parameters of the number of allowed starts (hot and cold) apply.
Min time between starts	0.1...600.0s	0.1s	20.0s	- Motor status monitoring - Frequent start protection (N>; 48)	The minimum time between starts or start attempts.

Table. 5.3.8 - 68. Output signals of the motor status monitoring function.

Name	Range	Step	Default	Description
Motor stopped	0: Not active 1: Active	-	0: Not active	The <i>Motor stopped</i> signal is active when the function detects a current below the set value of "No load current". This signal presents a situation when a motor is not running.
Motor starting	0: Not active 1: Active	-	0: Not active	The <i>Motor starting</i> signal is active when a motor start-up is detected. In DOL mode, the signal is active when the measured current exceeds the "Start detect current" (from the Motor stopped situation); the signal deactivates when the current decreases below the "Max overloading current".
Motor running	0: Not active 1: Active	-	0: Not active	The <i>Motor running</i> signal is active when the measured current is above the set "No load current" (as long as the Motor starting situation has passed). This signal is released when the measured current is below the "No load current" setting.

Name	Range	Step	Default	Description
Motor stalled	0: Not active 1: Active	-	0: Not active	The <i>Motor stalled</i> signal is active when the measured current exceeds the "Max overload current" setting (from the Motor running situation).
Missing phase	0: Not active 1: Active	-	0: Not active	The <i>Missing phase</i> signal is activated when the measured current of one phase is below the "No load current" setting, and the measured currents of two phases are above the "Min locked rotor current" setting. This signal can be used for quickly halting the motor's start-up if one phase is lost and the motor cannot start.
Load Normal	0: Not active 1: Active	-	0: Not active	The <i>Load normal</i> signal is active when the measured current is above the set "No load current" and below the motor's nominal current (including the ambient and service factor corrections).
Overloading	0: Not active 1: Active	-	0: Not active	The <i>Overloading</i> signal is active when the measured current exceeds the motor's nominal current (including the ambient and service factor corrections) but does not exceed the "Max overload current" setting.
High overcurrent	0: Not active 1: Active	-	0: Not active	The <i>High overcurrent</i> signal is active when the measured current is above the "Max locked rotor current" setting and presents a situation where the motor cannot start or stall. When this signal activates, it indicates a short-circuit fault and should immediately be used to halt start-up or stalled situations.

## Events and registers

The motor status monitoring function (abbreviated "MST" in event block names) generates events from the detected motor status. The data register is available, based on the events.

Table. 5.3.8 - 69. Event codes.

Event number	Event channel	Event block name	Event code	Description
3969	62	MST1	1	Motor Stopped OFF
3970	62	MST1	2	Motor Starting ON
3971	62	MST1	3	Motor Starting OFF
3972	62	MST1	4	Motor Running ON
3973	62	MST1	5	Motor Running OFF
3974	62	MST1	6	Motor Stalled ON
3975	62	MST1	7	Motor Stalled OFF
3976	62	MST1	8	Load not symm ON
3977	62	MST1	9	Load not symm OFF
3978	62	MST1	10	Load normal ON
3979	62	MST1	11	Load normal OFF
3980	62	MST1	12	Overload ON
3981	62	MST1	13	Overload OFF
3982	62	MST1	14	High Overcurrent ON
3983	62	MST1	15	High Overcurrent OFF

The function registers its operation into the last twelve (12) time-stamped registers. The table below presents the structure of the function's register content.

Table. 5.3.8 - 70. Register content.


Date and time	Event code	L1 current	L2 current	L3 current	Thermal delta	Motor load
dd.mm.yyyy hh:mm:ss.mss	3969-3983 Descr.	Phase L1 current x I <sub>n</sub>	Phase L2 current x I <sub>n</sub>	Phase L3 current x I <sub>n</sub>	Detected change in thermal capacity.	Motor loading when triggered.

### 5.3.9 Motor start/ locked rotor monitoring (Ist>; 48/14)

The motor start/locked rotor monitoring function is used for monitoring the start-up's duration as well as the start-up's stress on the motor. The function can also be used after starting locked rotor protection.

The operating principle of the function is either definite maximum locked rotor time monitoring, or inverse operating time based on the allowed  $I^2t$  calculation. When using the  $I^2t$ -calculated starting time, the maximum allowed starting time is automatically scaled according to the motor's current. For example, when the network voltage is lower and thus the starting current is also lower, the calculation gives the motor a longer starting time knowing these conditions prolong any start-up. The maximum allowed starting time can be set manually, or the function can be commanded to automatically follow the prescribed hot and cold safe stalling times of the motor manufacturer. Please note that this requires the following: the machine thermal overload protection function must be activated, it must pick-up the automatic safe stalling times, and the thermal status of the motor must be communicated to the Ist> function. The user can set both the allowed starting time and the speed switch input. The speed switch may be required by some high-mass applications when the start-up may last longer; the user should check and ensure that the motor is actually accelerating instead of standing still with its rotor locked.


Figure. 5.3.9 - 101. Simplified function block diagram of the motor start/ locked rotor monitoring function.

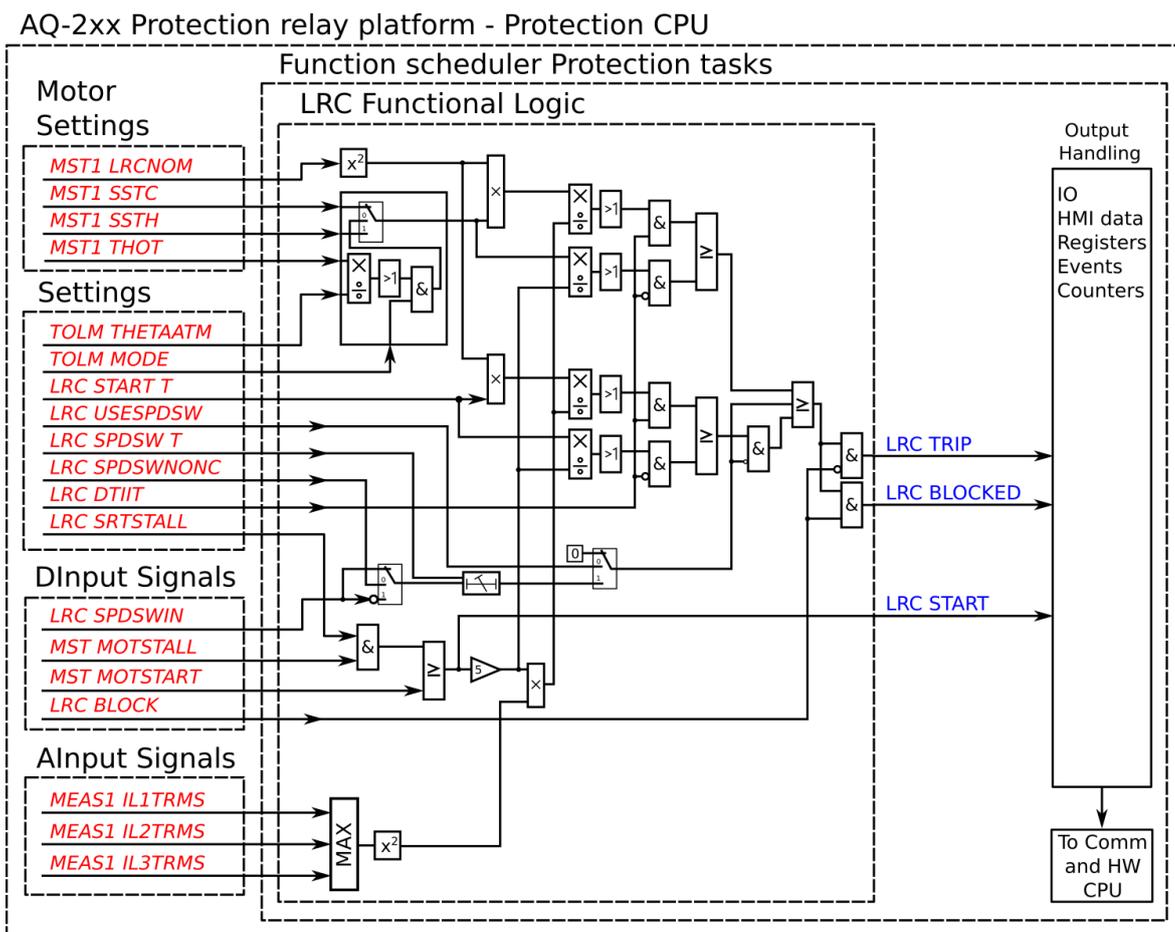

A recommended setup for this function is for the  $I^2t$  mode to be used in starting; if motor running/ locked rotor situations at times occur in some parts of the duty cycle during normal use, the locked rotor protection must also be applied. The following five figures present a number of suggested applications for the  $Ist>$  function for various situations. It is advised that the speed switch –if available– is also used for the motor start monitoring, especially when the motor has a high load when starting, thus making the start-up take very long.

Figure. 5.3.9 - 102. Outputs in normal motor start, no speed switch.

### LRC function outputs in normal motor start without speed switch

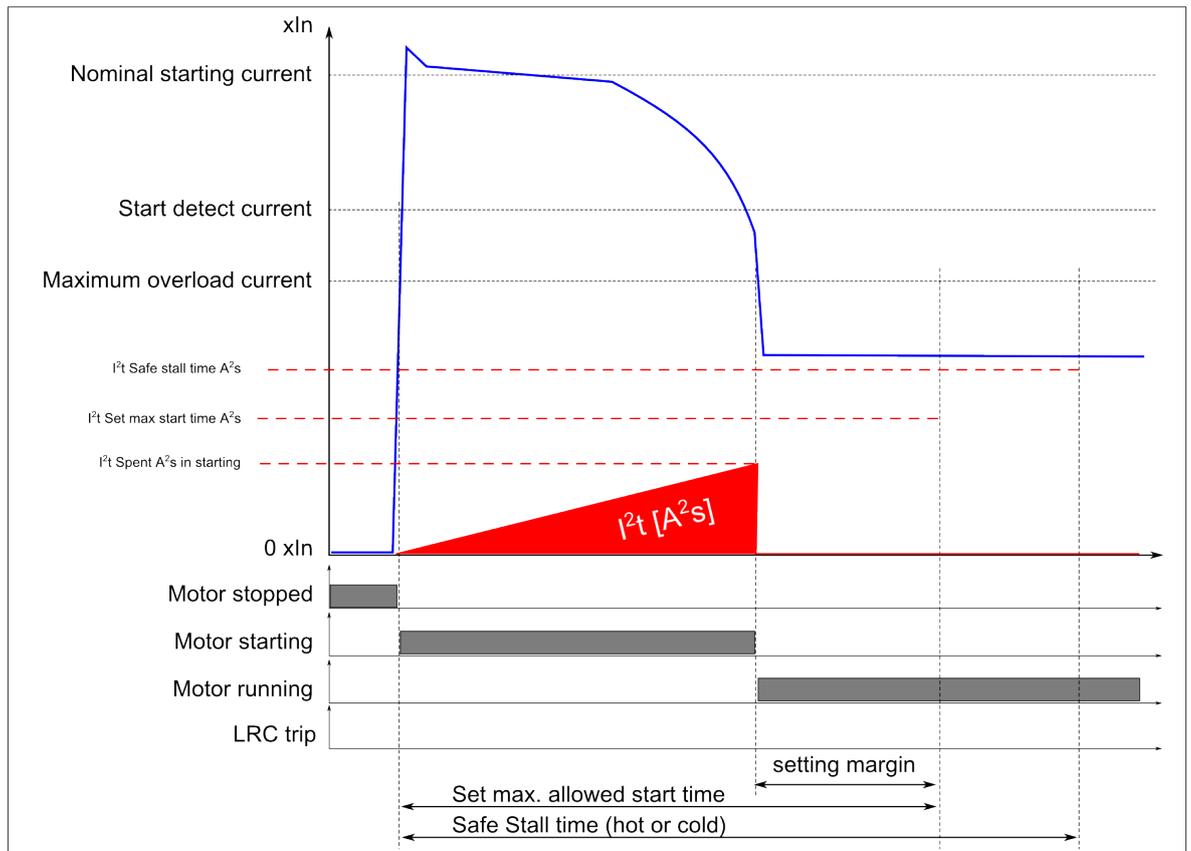


The  $I^2t >$  function should be set so that it takes into account the application's required starting time for a normal motor start. The setting of the function should include a setting margin for the expected starting time. If the starting of the motor is dependent on the process status (e.g. the motor's drive may have a full load or have no load when started), the setting should afford it the longest possible starting time as the status may affect the motor's starting time. If the start-up situation is supposed to always be the same, a sufficient setting for the function's starting monitor would be the expected starting time with an additional 10 % margin. During start-up the function monitors the accumulated  $I^2t$  value and when it drops below the calculated  $I^2t$  value, the function allows the starting process continue.

If the starting of the motor takes longer than the function's set value, the function trips the breaker and halts the starting process; if the motor cannot start normally there is something wrong with the application.

Figure. 5.3.9 - 103. Outputs when motor starting takes too long, no speed switch.

### LRC function outputs in too long motor start without speed switch

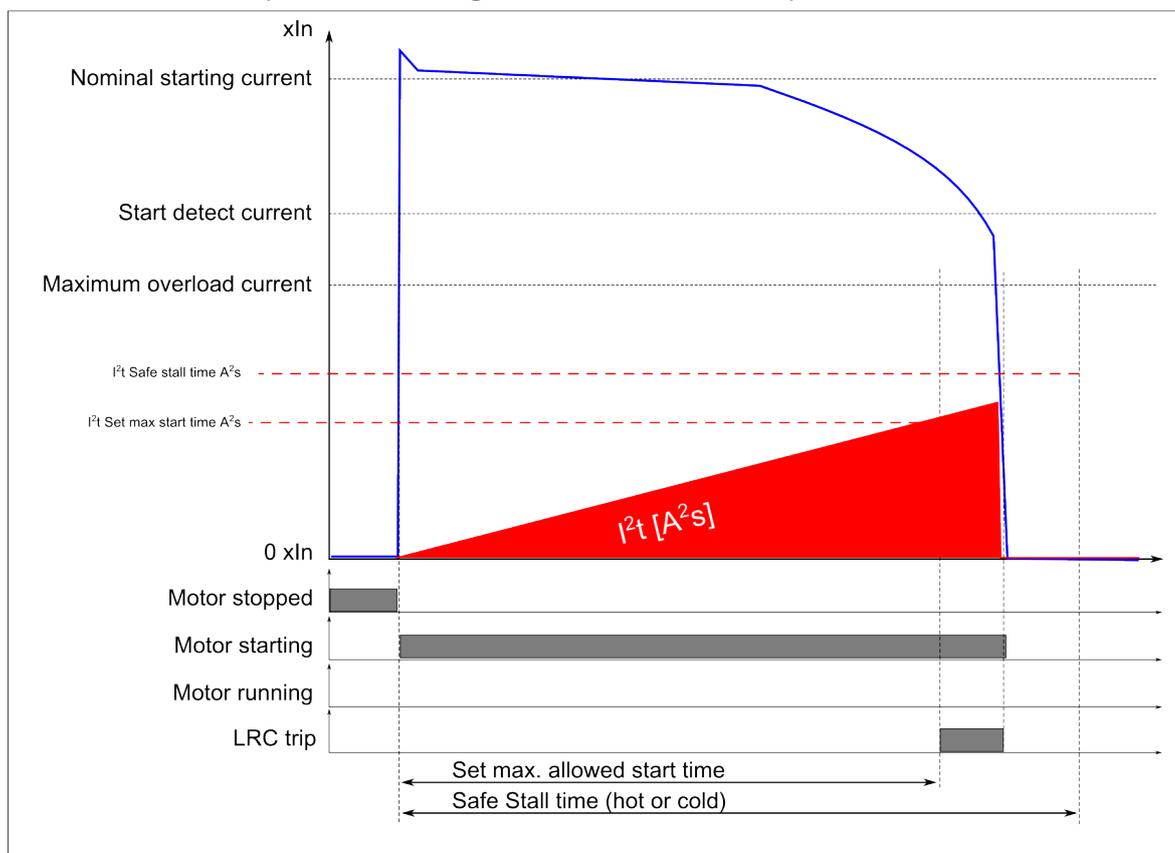


There are many reasons why the motor starting takes too long. These include problems in the drive or in the application. There may also be an issue with the feeding network: if the started motor is very large and the feeding network is weak, its voltage may drop and therefore the motor cannot provide the needed torque for normal starting, resulting in a prolonged start-up situation. This is why the  $I^2t$  mode is suggested as it can compensate for the voltage drop by taking the lower starting current caused by the lower voltage into account. If definite time is preferred for the  $Ist >$  function, it may cause a situation where the starting is well in action but the user-allowed time is spent due to the lower current and lower torque caused by the network's low voltage. In this case the function may trip before the starting is over even though the motor is not yet stressed too much and could still continue the starting.

A speed switch –if available in the application– activates when the motor shaft rotates or accelerates, and it can be used to give the motor additional time for starting beyond the set maximum starting duration. If the speed switch is in use while a similar situation happens (that is, that the motor starting is taking longer than it should), the speed switch ensures that the start-up of the motor is still going fine and the function lets the starting process continue.

Figure. 5.3.9 - 104. Outputs in long motor starting, with a speed switch.

### LRC function outputs in long motor start with speed switch

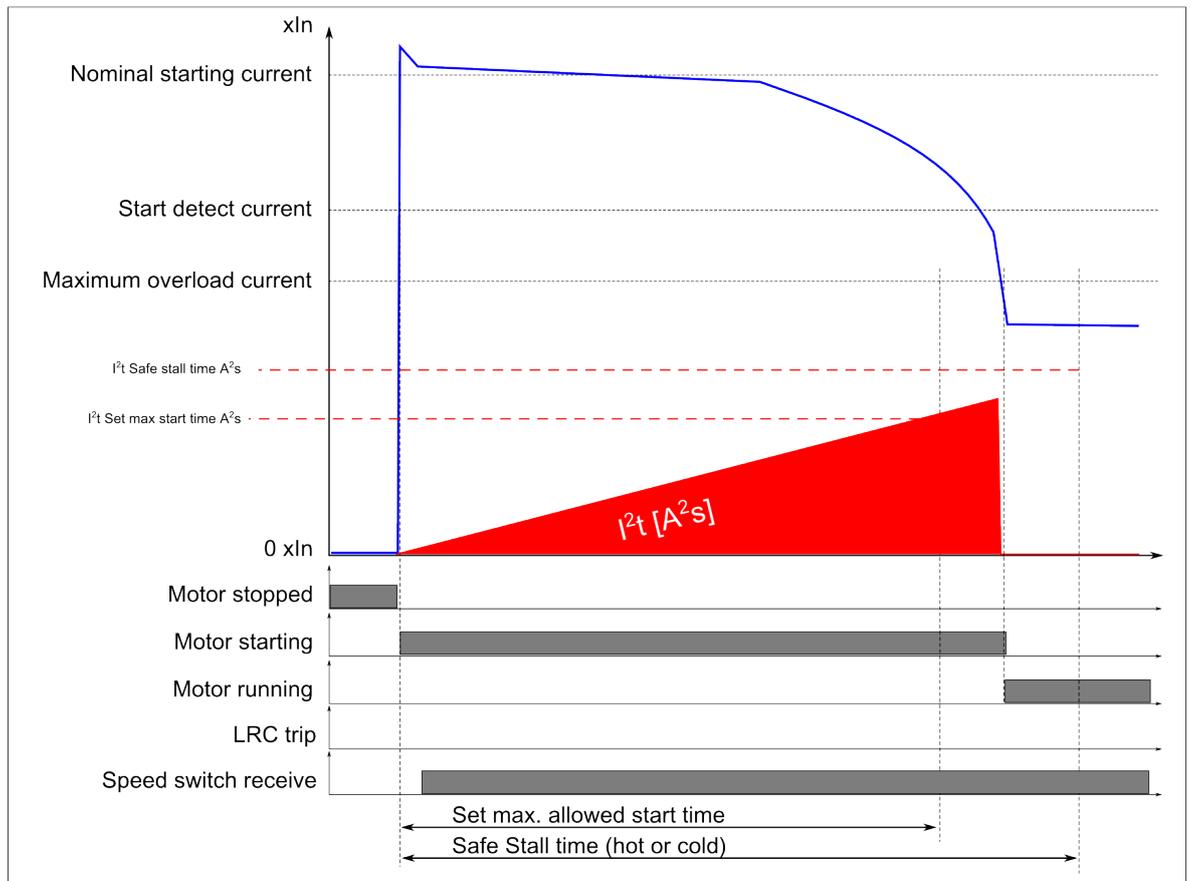


The speed switch is also useful when the motor start is naturally very long due to a high accelerating mass. In such applications a speed switch is required to know whether the start-up is actually happening, or whether the load is jammed and the motor is standing still with its rotor locked.

If the motor start-up with a speed switch exceeds the allowed safe stall time of the motor specifications, the function trips.

Figure. 5.3.9 - 105. Outputs when motor starting takes too long, with a speed switch.

### LRC function outputs in prolonged long motor start with speed switch

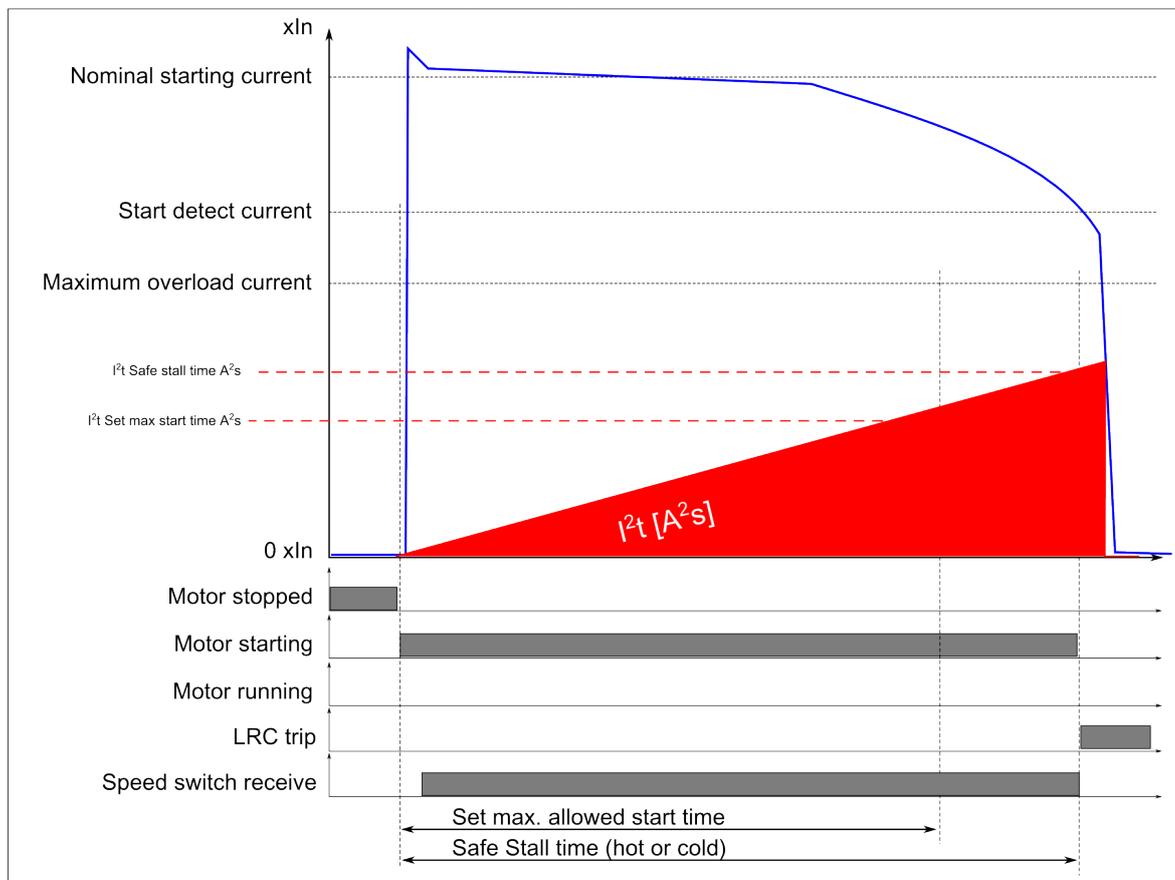


If the starting condition lasts longer than the safe stall time that has been set, the function trips the breaker. In this case the motor is either too small to accelerate within the give time frame or there is a problem with the load eventhough the motor is able to rotate. Letting the starting progress would endanger the motor.

The function can be set to monitor the situation if the motor stalls after it has started. There are the signals ("Mechanical jam" and "Motor stalled") available In the motor protection module, and both can be used to direct the tripping of the motor.

When the  $I_{st}>$  function is in stall detection and monitor mode, it uses the same default settings for the motor stall than for the starting conditions. The function monitors either given definite time, or the  $I^2t$  value and the speed switch input. If given time is exceeded during the stall time the function initiates tripping of the motor from the stall condition.

Figure. 5.3.9 - 106. Motor stall monitoring.

### LRC function outputs motor stall with speed switch

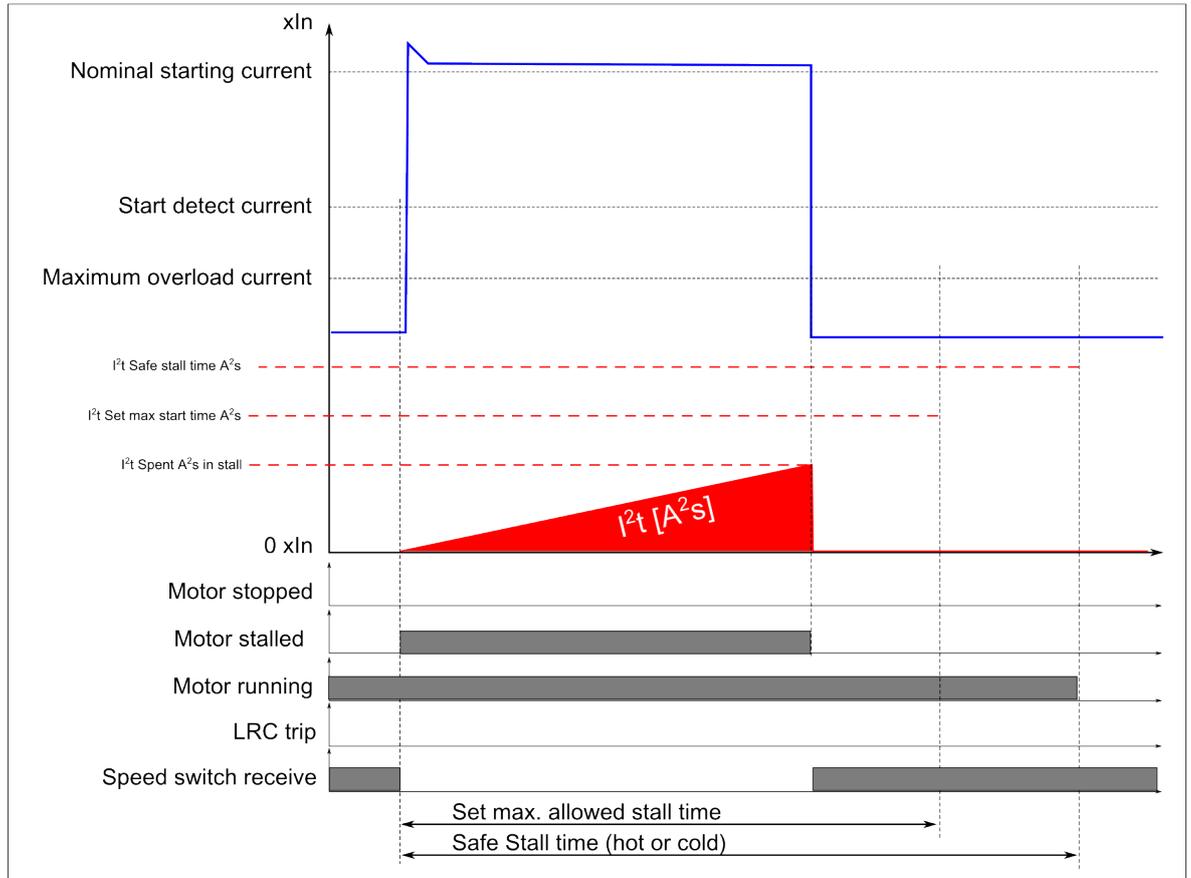

### Settings and signals

The settings of the motor start/locked rotor monitoring function are mostly shared with other motor protection functions in the device's motor module. The following table shows the motor data settings of the `Ist>` function.

Name	Range	Step	Default	Protection functions	Description
Motor Start	0: DOL 1: Y-delta 2: Soft start	-	0: DOL	- Motor status monitoring - Motor start monitoring (Ist>; 48/14)	The motor starting mode selection. The user can select between direct-on-line (DOL), Star-Delta and Soft start in future releases.
Motor In Scaled	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	-	- Motor status monitoring - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48/14) - Undercurrent (I<; 37) - Mechanical jam protection (Im>; 51M)	The motor's nominal current scaled to per unit. If the user selects <i>Object In</i> in the CT settings, this value should be 1.00. If scaled to the CT nominal, this value may vary.

Name	Range	Step	Default	Protection functions	Description
Motor In A	0.1...5000A	0.1A	-	<ul style="list-style-type: none"> <li>- Motor status monitoring</li> <li>- Machine thermal overload protection (Tm&gt;; 49M)</li> <li>- Motor start monitoring (Ist&gt;; 48/14)</li> <li>- Undercurrent (I&lt;; 37)</li> <li>- Mechanical jam protection (Im&gt;; 51M)</li> </ul>	The motor's nominal current in amperes.
Nominal starting current	0.1...40.0xIn	0.1xIn	6.0xIn	<ul style="list-style-type: none"> <li>- Motor status monitoring</li> <li>- Machine thermal overload protection (Tm&gt;; 49M)</li> <li>- Motor start monitoring (Ist&gt;; 48/14)</li> <li>- Mechanical jam protection (Im&gt;; 51M)</li> </ul>	The motor's locked rotor current with the nominal voltage. This setting is used for automatic curve selection and calculation. Also, the nominal starting capacity calculation is based on this value.
Nominal starting current A	0.1...5000A	0.1A	-	<ul style="list-style-type: none"> <li>- Motor status monitoring</li> <li>- Machine thermal overload protection (Tm&gt;; 49M)</li> <li>- Motor start monitoring (Ist&gt;; 48/14)</li> <li>- Mechanical jam protection (Im&gt;; 51M)</li> </ul>	The motor's locked rotor current in amperes.
Start detect current	0.1...40.0xIn	0.1xIn	1.5xIn	<ul style="list-style-type: none"> <li>- Motor status monitoring</li> <li>- Motor start monitoring (Ist&gt;; 48/14)</li> </ul>	The motor starting current detection limit. When in DOL or Star-Delta mode, this setting defines the motor starting moment when the measured current exceeds both the no-load current limit and the start detect current limit within a ten-millisecond period. If the current increases slower, it is not defined as a motor start.
Start detect current A	0.1...5000A	0.1A	-	<ul style="list-style-type: none"> <li>- Motor status monitoring</li> <li>- Motor start monitoring (Ist&gt;; 48/14)</li> </ul>	The motor's starting current detection limit in amperes.

Name	Range	Step	Default	Protection functions	Description
Min locked rotor current	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	3.5xI <sub>n</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48/14) - Mechanical jam protection (I <sub>m</sub> >; 51M)	The motor's minimum locked rotor current. This setting defines the current limit for when this current is exceeded while the automatic curve selection and the control only short time constant (stall) are in use.
Min locked rotor current A	0.1...5000A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48/14) - Mechanical jam protection (I <sub>m</sub> >; 51M)	The motor's minimum locked rotor current. This setting defines the current limit for when this current is exceeded while the automatic curve selection and the control only short time constant (stall) are in use.
Max locked rotor current	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	7.5xI <sub>n</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48/14) - Mechanical jam protection (I <sub>m</sub> >; 51M)	Maximum locked rotor current of the motor. This setting defines the current limit which is maximum current for the motor to draw in locked rotor situation (starting or stalled). If the measured current exceeds this setting limit it is considered to be overcurrent fault and corresponding measures can be applied to disconnect the feeder and motor from the supply.
Max locked rotor current A	0.1...5000A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48/14) - Mechanical jam protection (I <sub>m</sub> >; 51M)	The maximum locked rotor current in amperes.

Name	Range	Step	Default	Protection functions	Description
Max overload current	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	2.0xI <sub>n</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48/14) - Mechanical jam protection (I <sub>m</sub> >; 51M)	The motor's maximum overload current. Exceeding this setting stalls the motor. This setting defines when the thermal replica switches to the short (stall) time constant. As long as the current stays below this setting value, the motor should run even when overloaded.
Max overload current A	0.1...5000A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48/14) - Mechanical jam protection (I <sub>m</sub> >; 51M)	The motor's maximum overload current in amperes.
Hot condition theta limit	0.0...100.0%	0.1%	70%	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48/14) - Mechanical jam protection (I <sub>m</sub> >; 51M)	Setting the motor's thermal limit for hot and cold situations. When this setting value is not exceeded while a locked rotor situation occurs, the function uses a cold stall curve adjusted with the actually used thermal capacity. The function uses a hot stall curve when this setting value is exceeded. This hot/cold selection also applies to starts. Please note that using this setting requires that the Machine thermal overload protection (T <sub>m</sub> >) function is activated and in use.
Safe stall time cold	0.1...600.0s	0.1s	20.0s	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48/14) - Mechanical jam protection (I <sub>m</sub> >; 51M)	The safe stall time when the motor is cold. Unless this value is specified, it is set to be equal to the hot stall time. Most probably this leads to overprotection with the cold motor stall (best case scenario). This setting value is used for the cold thermal stall curve selection in automatic control. This parameter is also used in the motor start-up and the number of starts calculations.

Name	Range	Step	Default	Protection functions	Description
Safe stall time hot	0.1...600.0s	0.1s	15.0s	<ul style="list-style-type: none"> <li>- Motor status monitoring</li> <li>- Frequent start protection (N&gt;; 48)</li> <li>- Machine thermal overload protection (Tm&gt;; 49M)</li> <li>- Motor start monitoring (Ist&gt;; 48/14)</li> <li>- Mechanical jam protection (Im&gt;; 51M)</li> </ul>	The safe stall time when the motor is hot. This setting value is used for the hot thermal stall curve selection in automatic control. This parameter is also used in the motor start-up and the number of starts calculations.

Table. 5.3.9 - 71. Settings of the Ist> function.

Name	Range	Step	Default	Description
Starting time	0.000...1800.000s	0.005s	0.040s	Motor starting time the user sets. This setting should include the expected normal starting time of the protected motor as well as the operating marginal.
Definite time or I <sup>2</sup> t	0: Definite 1: I <sup>2</sup> t mode	-	0: Definite	Selection of the operating mode. If the I <sup>2</sup> t mode is selected, the function monitors the heating effect as a function of the measured current. In the Definite time mode, the function only monitors the start/stall signal duration and compares it to the "Starting time" setting.
Speed switch in use	0: No 1: Yes	-	0: No	Selection of whether or not the speed switch is used in the application.
Speed SW wait time	0.000...1800.000s	0.005s	0.040s	The setting which determines how long the function waits for the speed switch to give a signal since the starting of the motor. If the speed switch is not activated during this set time, the starting of the motor is halted. This setting is visible only if the "Speed switch in use" setting is active.
Speed SW NO/NC	0: NO 1: NC	-	0: NO	The polarity of the speed switch signal, normally open ("NO") or normally closed ("NC"). This setting is visible only if the "Speed switch in use" setting is active.
Operating mode	0: Starts only 1: Starts and stall	-	0: Starts only	Operating mode selection of the function. This setting defines whether the function monitors only the start-up conditions of the motor, or both the start-up and stall conditions of the motor.

Table. 5.3.9 - 72. Output signals of the Ist> function.

Name	Range	Step	Default	Description
Ist> START	0: Not active 1: Active	-	0: Not active	The START output of the function. This signal activates when the starting conditions are met and the function is about to initiate a trip after the time calculation is finished.
Ist> TRIP	0: Not active 1: Active	-	0: Not active	The TRIP output of the function. This signal activates when the pick-up and time conditions are met.
Ist> BLOCKED	0: Not active 1: Active	-	0: Not active	The BLOCKED output of the function. This signal activates when the START output is activated but the function is blocked from operating normally.

## Events and registers

The motor start/locked rotor monitoring function (abbreviated "LCR" in event block names) generates events from the detected motor status. The data register is available, based on the changes in the events.

Table. 5.3.9 - 73. Event codes.

Event number	Event channel	Event block name	Event code	Description
3648	57	LCR1	0	Max. Start time exceed ON
3649	57	LCR1	1	Max. Start time exceed OFF
3650	57	LCR1	2	Set start time exceed ON
3651	57	LCR1	3	Set start time exceed OFF
3652	57	LCR1	4	Speed Switch not received ON
3653	57	LCR1	5	Speed Switch not received OFF
3654	57	LCR1	6	Start ON
3655	57	LCR1	7	Start OFF
3656	57	LCR1	8	Set time Trip ON
3657	57	LCR1	9	Set time Trip OFF
3658	57	LCR1	10	Max cap Trip ON
3659	57	LCR1	11	Max cap Trip OFF
3660	57	LCR1	12	Blocked ON
3661	57	LCR1	13	Blocked OFF

The function registers its operation into the last twelve (12) time-stamped registers. The table below presents the structure of the function's register content.

Table. 5.3.9 - 74. Register content.


Date and time	Event code	Start stall time	Max. time used	Set time used	Thermal cap. used	L1 current	L2 current	L3 current	SG used
dd.mm.yyyy hh:mm:ss.mss	3648-3661 Descr.	Recorded duration of stall/start	Percentage used from max safe stall time	Percentage used from user set max time	Thermal capacity used	Phase L1 current $x I_n$	Phase L2 current $x I_n$	Phase L3 current $x I_n$	Used setting group

### 5.3.10 Frequent start protection (N>; 66)

The frequent start protection function is used for monitoring and preventing the starting of the motor to happen too frequently. This function monitors the number of the starts the motor has used within a given time frame to ensure that the start stress does not exceed the limits stated by the manufacturer. The start-up situation is most stressful normal operation situation for motors that are started with Direct On Line; the manufacturer gives safe start limits with a specified time frame for both cold and hot motors in order to guarantee the motor's lifetime. Usually the manufacturers also specify the time between consequent starts. When a set number of starts have been used or a new start or start attempt is made too quickly after the previous start or start attempt, further starting attempts should be blocked by using the N> function, thus allowing the motor to cool down sufficiently before the next start attempt.


The frequent start protection function in a motor protection module operates with the motor status monitoring function and follows the motor data set there. Motor starting is monitored internally (MST signal out) in the N> function. The user only needs to activate the N> function and then do the following: set the number of allowed starts for hot and cold situations, set the minimum time between consequent starts, and set the limits of "Hot" and "Cold" situations. The thermal overload function also needs to be activated and set, if the user wants to use the hot and cold motor status separation.

Figure. 5.3.10 - 107. Simplified function block diagram of the N> function.

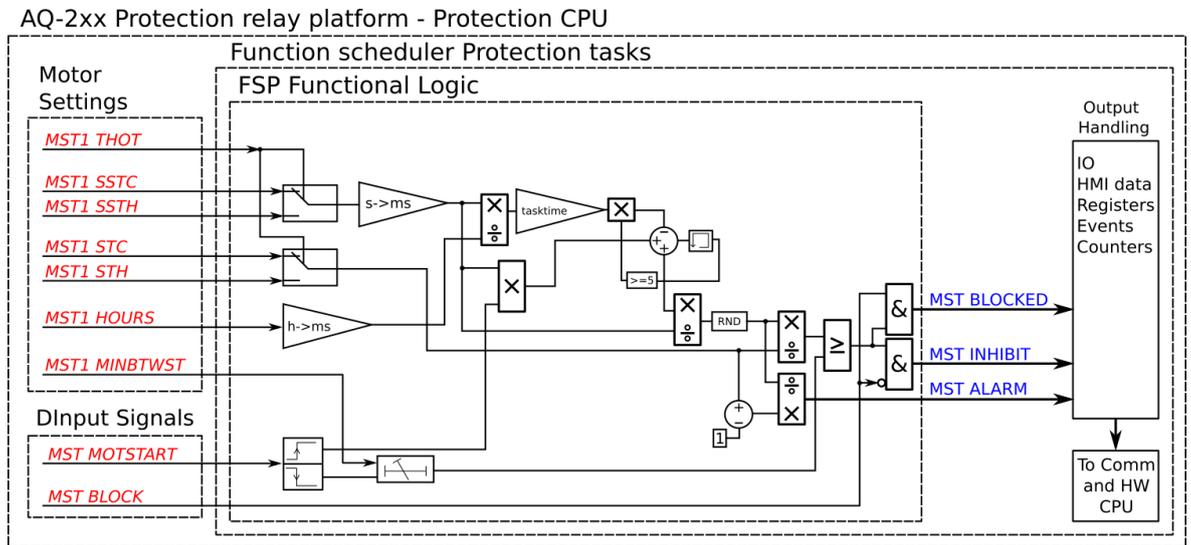

The operating principle of the frequent start protection function is to calculate an equivalent start stress in each start; the calculation is based on the set starts per hour and the safe stall time settings (hot and cold) regardless of the actual start duration. In each start attempt the function does the following calculation: a time equal to the safe stall time and is added to the starts counter, and the quotient of the safe stall time divided by the set starts time (in hours) is then subtracted from this sum. This way the start counter can be applied to follow the motor's thermal status and the number of starts per hour accurately.


Figure. 5.3.10 - 108. Updating the function's start counter (image not to scale with regard to time).

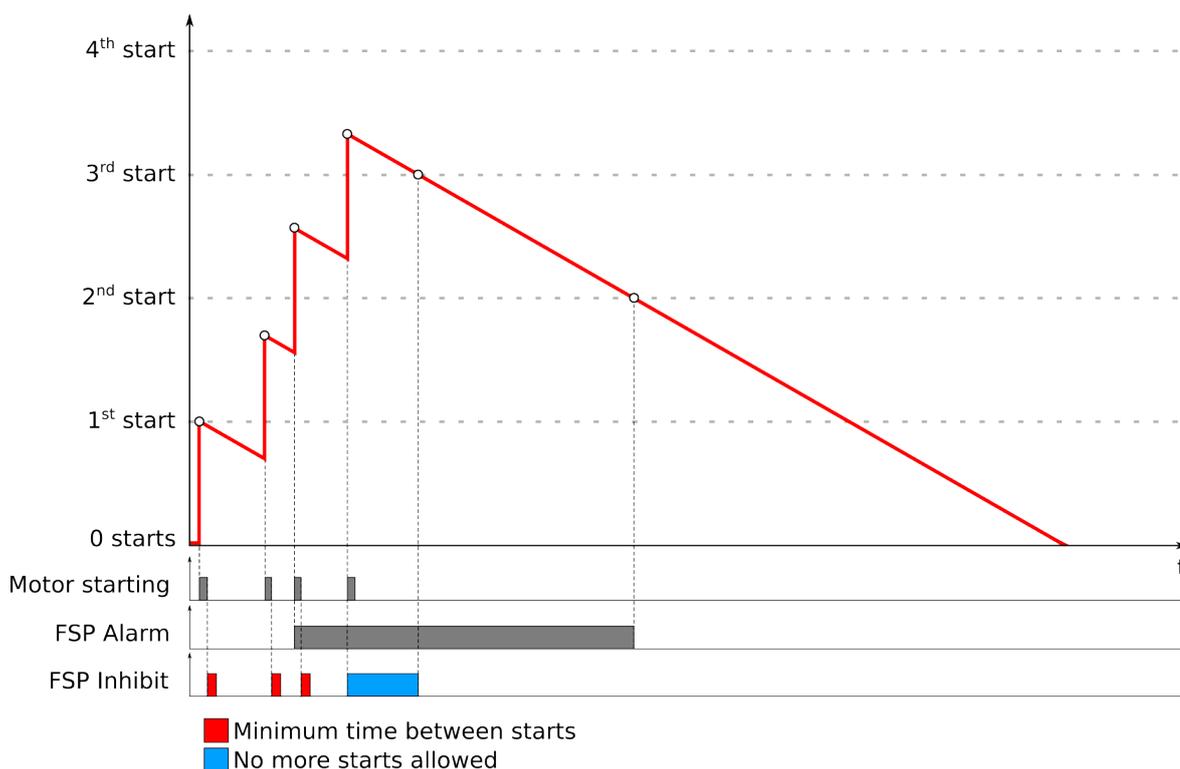

In the example above the motor is allowed four starts within a specific time frame ( $t$ ): the motor is started four times and the counter is updated accordingly. The function's alarm activates after the third start to indicate that only one more start is allowed. Once this start is used the function's restart inhibit is activated and it stays active until the motor can be started again.

The cumulative start-up counter is updated constantly in each program cycle, and the device shows the inhibit and alarm time as well as the number of used and available starts. The counter is updated in every start: the counter is increased by the product of the safe stall time multiplied by the nominal start-up current. In each start the counter is increased by this product which is then in every cycle deduct by starts/given time divided by program cycle time. This way the start-up counter can be precisely set for each motor.

Figure. 5.3.10 - 109. Updating the starts counter when thermal hot and cold status taken into consideration.

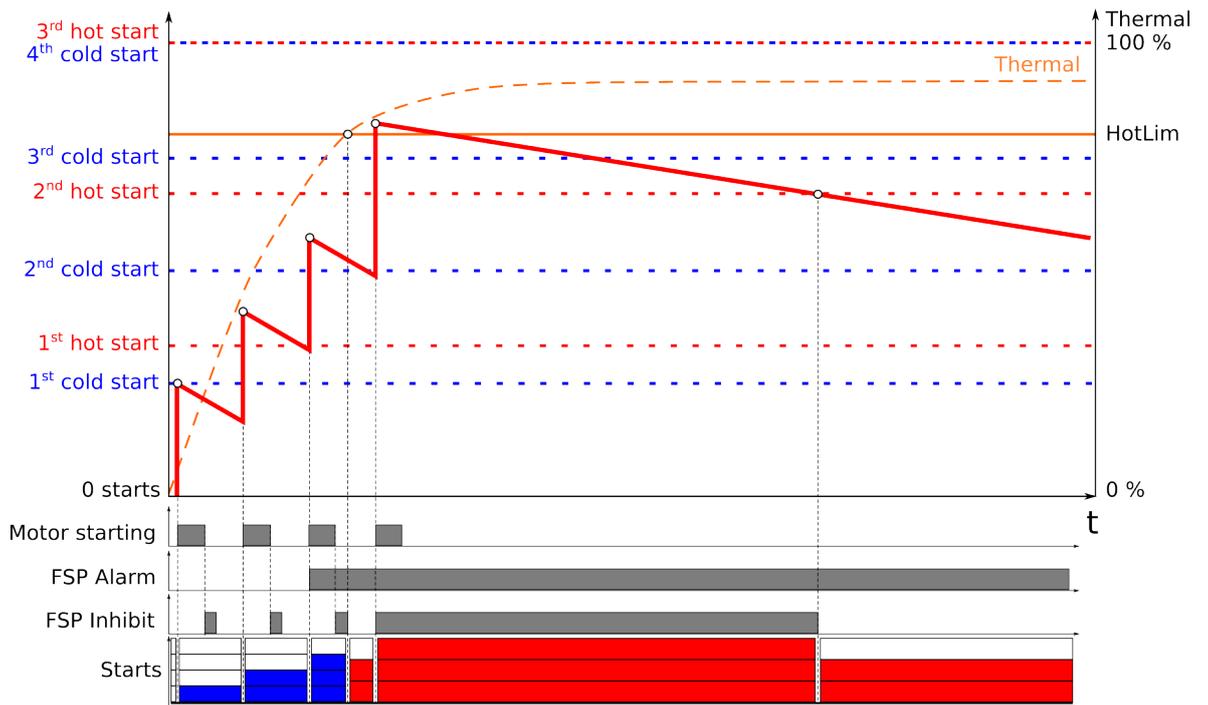

If a motor's thermal load is monitored, a correct number of starts can be allowed for the motor when the device can update the available starts online and precisely monitor the motor's status. In the example figure above, the motor is allowed four (4) starts when it is cold, and three (3) starts when it is hot. In the figure's situation the motor has been started three times cold and the hot limit is reached before the motor has started for the fourth time. Due to the three cold starts the counter only allows for one more start, as the motor has already been started three times cold. While the thermal status is "hot", the restart inhibit is activated and the start cooling time is counted according to the reduction rate for hot starts. Now, if the motor were stopped in this situation, the starts reduction would be counted according to "cold" motor status as the thermal load would reduce the count below the "hot" limit.

## Settings and signals

The settings of the frequent start protection are the directly stated motor data from the device's motor module. The following table shows the other functions that also use these settings. If these settings are edited through the frequent start protection function's setting view, they change in all other mentioned functions at the same time.

Table. 5.3.10 - 75. Motor data settings.

Name	Range	Step	Default	Protection functions	Description
Hot condition theta limit	0.0...100.0%	0.1%	70%	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48) - Load jam protection (Im>; 50M)	Setting the motor's thermal limit in a hot or a cold situation. When this setting value is not exceed while a locked rotor situation occurs, the function uses a cold stall curve adjusted with the actually used thermal capacity. The function uses a hot stall curve when this setting value is exceeded. This setting also applies to starts when the hot/cold selection is in use. Please note that using this setting requires that the Machine thermal overload protection (Tm>) function is activated and in use.
Safe stall time cold	0.1...600.0s	0.1s	20.0s	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48) - Load jam protection (Im>; 50M)	The safe stall time when the motor is cold. Unless this value is specified, it is set to be equal to the hot stall time. Most probably this leads to overprotection with the cold motor stall (best case scenario). This setting value is used for the cold thermal stall curve selection in automatic control. This parameter is also used in the motor start-up and the number of starts calculations.
Safe stall time hot	0.1...600.0s	0.1s	15.0s	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48) - Load jam protection (Im>; 50M)	The safe stall time when the motor is hot. This setting value is used for the hot thermal stall curve selection in automatic control. This parameter is also used in the motor start-up and the number of starts calculations.
Starts when cold	1...100	1	3	- Motor status monitoring - Frequent start protection (N>; 48)	The number of allowed starts per x hours for a cold motor.

Name	Range	Step	Default	Protection functions	Description
Starts when hot	1...100	1	2	- Motor status monitoring - Frequent start protection (N>; 48)	The number of allowed starts per x hours for a hot motor.
Starts in hours	1...100h	1h	1h	- Motor status monitoring - Frequent start protection (N>; 48)	The number of hours when the parameters of the number of allowed starts (hot and cold) apply.
Min time betw. starts	0.1...600.0s	0.1s	20.0s	- Motor status monitoring - Frequent start protection (N>; 48)	The minimum time between starts or start attempts.

Table. 5.3.10 - 76. Output signals of the N> function.

Name	Range	Step	Default	Description
N> Alarm on	0: Not active 1: Active	1	0	Alarm output of the function. This signal activates when there is one (1) start available for the motor.
N> Inhibit on	0: Not active 1: Active	1	0	Inhibit output of the function. This signal activates when all available starts have been used and the motor is not allowed to start before the starts counter has one (1) or more starts available.
N> BLOCKED	0: Not active 1: Active	1	0	Blocked output of the function. This signal activates when the function is activated but is blocked from operating normally.

## Events and registers

The frequent start protection function (abbreviated "FSP" in event block names) generates events from the detected motor status. The data register is available, based on the changes in the events.

Table. 5.3.10 - 77. Event codes.

Event number	Event channel	Event block name	Event code	Description
3584	56	FSP1	0	Alarm ON
3585	56	FSP1	1	Alarm OFF
3586	56	FSP1	2	Inhibit ON
3587	56	FSP1	3	Inhibit OFF
3588	56	FSP1	4	Blocked ON
3589	56	FSP1	5	Blocked OFF

The function registers its operation into the last twelve (12) time-stamped registers. The table below presents the structure of the function's register content.

Table. 5.3.10 - 78. Register content.

Date and time	Event code	Inhibit time on	Time since last start	Start count
dd.mm.yyyy hh:mm:ss.mss	3584-3589 Descr.	If on, it shows how long the inhibit is active	Time elapsed from last starting	Starts used at the triggering moment

### 5.3.11 Non-directional undercurrent protection (I<; 37)

The non-directional undercurrent function is used for monitoring motor loading especially in conveyor-type of applications. A sudden loss in the motor load indicates problems in the actual load rather than in the motor itself. In a conveyor application this may indicate a broken belt and the motor should be turned off immediately to avoid further problems. The cause may also be a mechanical breakdown of the apparatus the motor uses. In some cases this undercurrent function's output may be also used in an automation system to indicate that the device has finished its work load and is ready for a next task. In order to operate this function requires *motor running* status signal to be active. *Motor running* is connected internally from *Motor status monitoring* function. The operation of undercurrent protection is blocked when the motor is not running.

The non-directional undercurrent function is used for instant and time-delayed undercurrent protection. The operating decisions are based on phase current magnitude, constantly measured by the function. The available phase current magnitudes are equal to RMS values. The blocking signal and the setting group selection control the operating characteristics of the function during normal operation, i.e. the user or user-defined logic can change function parameters while the function is running.

The outputs of the function are the START, TRIP and BLOCKED signals. The undercurrent function uses a total of eight (8) separate setting groups which can be selected from one common source.

The function can operate on instant or time-delayed mode. In the time-delayed mode the operation can be set to operate on definite time (DT) delay.


The inputs for the function are the following:

- setting parameters
- digital inputs and logic signals
- measured and pre-processed current magnitudes.

The function outputs the START, TRIP and BLOCKED signals which can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the three (3) output signals. In the instant operating mode the function outputs START and TRIP events simultaneously with an equivalent time stamp. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the START, TRIP and BLOCKED events.

The following figure presents a simplified function block diagram of the undercurrent function.

Figure. 5.3.11 - 110. Simplified function block diagram of the I< function.

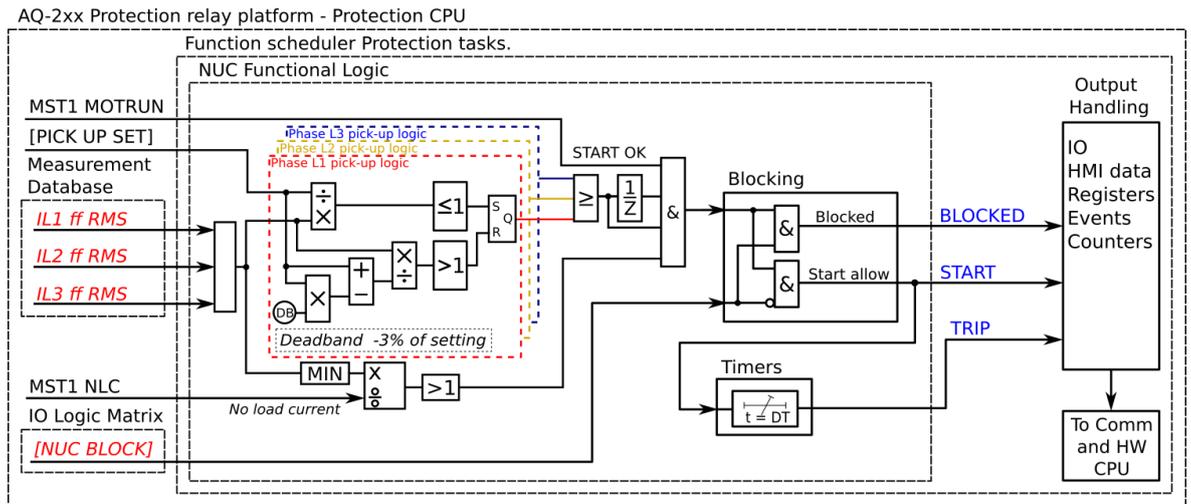

## Measured input

The function block uses analog current measurement values and uses RMS phase current measurements. A -20 ms averaged value of the selected magnitude is used for pre-fault data registering.

Table. 5.3.11 - 79. Measurement inputs of the I< function.

Signal	Description	Time base
IL1RMS	RMS measurement of phase L1 (A) current	5ms
IL2RMS	RMS measurement of phase L2 (B) current	5ms
IL3RMS	RMS measurement of phase L3 (C) current	5ms

In all possible input channel variations the pre-fault condition is presented with a 20 ms averaged history value from -20 ms from a START or TRIP event.

## Pick-up

The  $I_{set}$  setting parameter controls the the pick-up of the I< function. This defines the minimum allowed measured current before action from the function. The function constantly calculates the ratio between the  $I_{set}$  and the measured magnitude ( $I_m$ ) for each of the three phases. The reset ratio of 103 % is built into the function and is always relative to the  $I_{set}$  value. The setting value is common for all measured phases. When the  $I_m$  exceeds the  $I_{set}$  value (in single, dual or all phases) it triggers the pick-up operation of the function.

Table. 5.3.11 - 80. Motor data settings.

Name	Range	Step	Default	Protection functions	Description
Motor In Scaled	0.1... 40.0 x I <sub>n</sub>	0.1 x I <sub>n</sub>	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor starting monitoring (I <sub>st</sub> >; 48) - Undercurrent (I<; 37) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's nominal current scaled to per unit. If the user selects <i>Object In</i> in the CT settings, this value should be 1.00. If scaled to the CT nominal, this value may vary.
Motor In A	0.1...5,000 A	0.1 A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor starting monitoring (I <sub>st</sub> >; 48) - Undercurrent (I<; 37) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's nominal current in amperes.
No load current<	0.1...40.0 x I <sub>n</sub>	0.1 x I <sub>n</sub>	0.2 x I <sub>n</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Undercurrent (I<; 37)	The motor's no load current. This setting defines the "Stopped" condition when the current is below this setting value. Also, when the current is below this value, the undercurrent protection stage is locked.
No load current< A	0.1...5 000 A	0.1 A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Undercurrent (I<; 37)	The motor's no load current in amperes.

Table. 5.3.11 - 81. Pick-up settings.

Name	Description	Range	Step	Default
I <sub>set</sub>	Pick-up setting	0.10...40.00xI <sub>n</sub>	0.01xI <sub>n</sub>	0.5xI <sub>n</sub>

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active.

## Operating time characteristics for trip and reset

This function supports definite time delay (DT). For detailed information on these delay types please refer to the chapter "General properties of a protection function" and its section "Operating time characteristics for trip and reset".

## Read-only parameters

The relay's *Info* page displays useful, real-time information on the state of the protection function. It is accessed either through the relay's HMI display, or through the setting tool software when it is connected to the relay and its Live Edit mode is active.

Table. 5.3.11 - 82. Information displayed by the function.

Name	Range	Step	Description
I< condition	0: Normal 1: Start 2: Trip 3: Blocked	-	Displays status of the protection function.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and the release time characteristics are processed similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Events and registers

The undercurrent function (abbreviated "NUC" in event block names) generates events and registers from the status changes in START, TRIP and BLOCKED. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.3.11 - 83. Event codes.

Event number	Event channel	Event block name	Event code	Description
3840	60	NUC1	0	Start ON
3841	60	NUC1	1	Start OFF
3842	60	NUC1	2	Trip ON

Event number	Event channel	Event block name	Event code	Description
3843	60	NUC1	3	Trip OFF
3844	60	NUC1	4	Block ON
3845	60	NUC1	5	Block OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for START, TRIP or BLOCKED. The table below presents the structure of the function's register content.

Table. 5.3.11 - 84. Register content.

Date and time	Event code	Fault type	Trigger current	Fault current	Prefault current	Trip time remaining	Used SG
dd.mm.yyyy hh:mm:ss.mss	3840-3845 Descr.	L1-G...L1-L2-L3	Start average current	Trip -20ms averages	Start -200ms averages	0 ms...1800s	Setting group 1...8 active

### 5.3.12 Mechanical jam protection (Im>; 51M)

The mechanical jam protection function is used for monitoring motor loading after motor starting. When a motor-run apparatus jams during its work load, this function can be used to disconnect the motor from the feeding network in order to avoid further damage to the motor drive. The function is active only after the motor has started, and it is blocked during motor starting. This is done through an internal connection of *Motor running* and through a *Motor starting* signal taken from the *Motor status monitoring* function. This function operates similarly to the motor starting/locked rotor function (Ist>; 48/14) although it operates on Definite Time delay and does not work during motor starting. Also, with the help of a dedicated locked rotor function and mechanical jam protection the user can divide all possible fault situations based on a quick definition of the fault types in relay events. Additionally, the Ist> function's setup can be problematic with heavy inertia loads that experience a locked rotor situation during work load. Having separate functions for start-up and for mechanical jams divides the situations clearly; for example, the mechanical jam protection can be set to instant operation while the locked rotor function allows motor starting several tens of seconds.

The outputs of the function are the START, TRIP and BLOCKED signals. The load jam protection function uses a total of eight (8) separate setting groups which can be selected from one common source.

The function can operate on instant or time-delayed mode. In the time-delayed mode the operation can be set to definite time (DT) delay.


The inputs for the function are the following:

- setting parameters
- digital inputs and logic signals
- measured and pre-processed current magnitudes.

The function outputs the START, TRIP and BLOCKED signals which can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the three (3) output signals. In the instant operating mode the function outputs START and TRIP events simultaneously with an equivalent time stamp. The time stamp resolution is 1 ms. The function also provides a cumulative counter for the START, TRIP and BLOCKED events.

The following figure presents a simplified function block diagram of the load jam protection function.

Figure. 5.3.12 - 111. Simplified function block diagram of the Im> function.

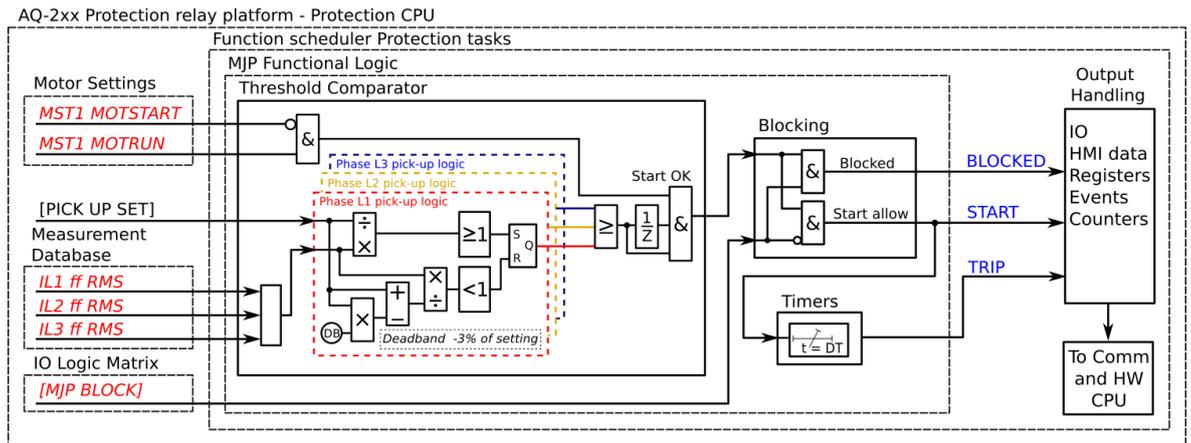

## Measured input

The function block uses analog current measurement values and uses RMS phase current measurements. A -20 ms averaged value of the selected magnitude is used for pre-fault data registering.

Table. 5.3.12 - 85. Measurement inputs of the Im> function.

Signal	Description	Time base
IL1RMS	RMS measurement of phase L1 (A) current	5ms
IL2RMS	RMS measurement of phase L2 (B) current	5ms
IL3RMS	RMS measurement of phase L3 (C) current	5ms

The selection of the used AI channel is made with a setting parameter. In all possible input channel variations the pre-fault condition is presented with a 20 ms averaged history value from -20 ms from a START or TRIP event.

## Pick-up

The  $I_{set}$  setting parameter controls the pick-up of the Im> function. This defines the maximum allowed measured current before action from the function. The function constantly calculates the ratio between the  $I_{set}$  and the measured magnitude ( $I_m$ ) for each of the three phases. The reset ratio of 97 % is built into the function and is always relative to the  $I_{set}$  value. The setting value is common for all measured phases, and when the  $I_m$  exceeds the  $I_{set}$  value (in single, dual or all phases) it triggers the pick-up operation of the function.

Table. 5.3.12 - 86. Motor data settings.

Name	Range	Step	Default	Prot.funcs.	Description
Motor In Scaled	0.1... 40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Undercurrent (I<; 37) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's nominal current scaled to per unit. If the user selects <i>Object In</i> in the CT settings, this value should be 1.00. If scaled to the CT nominal, this value may vary.
Motor In A	0.1...5 000.0A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Undercurrent (I<; 37) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's nominal current in amperes.
Nominal starting current	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	6.0xI <sub>n</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49 M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's locked rotor current with the nominal voltage. This setting is used for automatic curve selection and calculation. Also, the nominal starting capacity calculation is based on this value.
Nominal starting current A	0.1...5 000.0A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's locked rotor current in amperes.

Name	Range	Step	Default	Prot.funcs.	Description
Min locked rotor current	0.1...40.0xI <sub>N</sub>	0.1xI <sub>N</sub>	3.5xI <sub>N</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's minimum locked rotor current. This setting defines the current limit for when this current is exceeded while the automatic curve selection and the control only short time constant (stall) are in use.
Min locked rotor current A	0.1...5 000.0A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The motor's minimum locked rotor current. This setting defines the current limit for when this current is exceeded while the automatic curve selection and the control only short time constant (stall) are in use.
Max locked rotor current	0.1...40.0xI <sub>N</sub>	0.1xI <sub>N</sub>	7.5xI <sub>N</sub>	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	Maximum locked rotor current of the motor. This setting defines the current limit which is maximum current for the motor to draw in locked rotor situation (starting or stalled). If the measured current exceeds this setting limit it is considered to be overcurrent fault and corresponding measures can be applied to disconnect the feeder and motor from the supply.
Max locked rotor current A	0.1...5 000.0A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (T <sub>m</sub> >; 49M) - Motor start monitoring (I <sub>st</sub> >; 48) - Load jam protection (I <sub>m</sub> >; 51M)	The maximum locked rotor current in amperes.

Name	Range	Step	Default	Prot.funcs.	Description
Max overload current	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	2.0xI <sub>n</sub>	- Motor status monitoring - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48) - Load jam protection (Im>; 51M)	The motor's maximum overload current. Exceeding this setting stalls the motor. This setting defines when the thermal replica switches to the short (stall) time constant. As long as the current stays below this setting value, the motor should run even when overloaded.
Max overload current A	0.1...5000.0A	0.1A	-	- Motor status monitoring - Machine thermal overload protection (Tm>; 49M) - Motor start monitoring (Ist>; 48) - Load jam protection (Im>; 51M)	The maximum overload current of the motor in amperes.
Hot condition theta limit	0.0...100.0%	0.1%	70%	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (Ist>; 48) - Load jam protection (Im>; 51M)	Setting the motor's thermal limit in a hot or a cold situation. When this setting value is not exceeded while a locked rotor situation occurs, the function uses a cold stall curve adjusted with the actually used thermal capacity. The function uses a hot stall curve when this setting value is exceeded. This setting also applies to starts when the hot/cold selection is in use. Please note that using this setting requires that the Machine thermal overload protection (Tm>) function is activated and in use.
Safe stall time cold	0.1...600.0s	0.1s	20.0s	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (Ist>; 48) - Load jam protection (Im>; 51M)	The safe stall time when the motor is cold. Unless this value is specified, it is set to be equal to the hot stall time. Most probably this leads to overprotection with the cold motor stall (best case scenario). This setting value is used for the cold thermal stall curve selection in automatic control. This parameter is also used in the motor start-up and the number of starts calculations.

Name	Range	Step	Default	Prot.funcs.	Description
Safe stall time hot	0.1...600.0s	0.1s	15.0s	- Motor status monitoring - Frequent start protection (N>; 48) - Machine thermal overload protection (Ist>; 48) - Load jam protection (Im>; 51M)	The safe stall time when the motor is hot. This setting value is used for the hot thermal stall curve selection in automatic control. This parameter is also used in the motor start-up and the number of starts calculations.

Table. 5.3.12 - 87. Pick-up settings.

Name	Description	Range	Step	Default
Iset	Pick-up setting	0.10...40.00xI <sub>n</sub>	0.10xI <sub>n</sub>	6.00xI <sub>n</sub>

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active.

## Operating time characteristics for trip and reset

This function supports definite time delay (DT). For detailed information on this delay type please refer to the chapter "General properties of a protection function" and its section "Operating time characteristics for trip and reset".

## Read-only parameters

The relay's *Info* page displays useful, real-time information on the state of the protection function. It is accessed either through the relay's HMI display, or through the setting tool software when it is connected to the relay and its Live Edit mode is active.

Table. 5.3.12 - 88. Information displayed by the function.

Name	Range	Step	Description
Im> condition	0: Normal 1: Start 2: Trip 3: Blocked	-	Displays status of the protection function.
Expected operating time	0.000...1800.000s	0.005s	Displays the expected operating time when a fault occurs. When IDMT mode is used, the expected operating time depends on the measured highest phase current value. If the measured current changes during a fault, the expected operating time changes accordingly.
Time remaining to trip	-1800.000...1800.000s	0.005s	When the function has detected a fault and counts down time towards a trip, this displays how much time is left before tripping occurs.
I <sub>meas</sub> /I <sub>set</sub> at the moment	0.00...1250.00	0.01	The ratio between the highest measured phase current and the pick-up value.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and the release time characteristics are processed similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Events and registers

The load jam protection function (abbreviated "MJP" in event block names) generates events and registers from the status changes in START, TRIP, and BLOCKED. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.3.12 - 89. Event codes.

Event number	Event channel	Event block name	Event code	Description
3776	59	MJP1	0	Start ON
3777	59	MJP1	1	Start OFF
3778	59	MJP1	2	Trip ON
3779	59	MJP1	3	Trip OFF
3780	59	MJP1	4	Block ON
3781	59	MJP1	5	Block OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for START, TRIP or BLOCKED. The table below presents the structure of the function's register content.

Table. 5.3.12 - 90. Register content.

Date and time	Event code	Fault type	Trigger current	Fault current	Pre-fault current	Trip time remaining	Used SG
dd.mm.yyyy hh:mm:ss.mss	3776-3781 Descr.	L1-G...L1-L2-L3	Start average current	Trip -20ms averages	Start -200ms averages	0 ms...1800s	Setting group 1...8 active

### 5.3.13 Machine thermal overload protection (TM>; 49M)

The thermal overload protection function for machines is used for the thermal capacity monitoring and protection of electric machines like synchronous and asynchronous motors and generators. This function can also be used for any applications with single or multiple time constants, such as inductor chokes, certain types of transformers and any other static units which do not have active cooling apart from cables and overhead lines.

The function constantly monitors the instant values of phase TRMS currents (including harmonics up to 31<sup>st</sup>) and calculates the set thermal replica status in 5 ms cycles. The function includes a total memory function of the load current conditions according to IEC 60255-8.

The function is based on a thermal replica which represents the protected object's thermal loading in relation to the effective current in the object. The thermal replica includes the calculated thermal capacity that the "memory" uses; it is an integral function which tells apart this function from a normal overcurrent function and its operating principle for overload protection applications.

In heating and cooling situations the thermal image for this function is calculated according to the two equations described below:

Figure. 5.3.13 - 112. Long time constant thermal image calculation.

$$\theta_{tL} = \left( \left( \theta_{t-1} - \left( \frac{I_{EM}}{I_N \times k_{SF} \times k_{AMB}} \right)^2 \times e^{-\frac{t}{\tau_{1h}/\tau_{1c0}/\tau_{1cr}}} \right) + \left( \frac{I_{EM}}{I_N \times k_{SF} \times k_{AMB}} \right)^2 \right) \times (1 - W_f)$$

Where:

- $\theta_{t-1}$  = Thermal image status in a previous calculation cycle (the memory of the function)
- $I_{EM}$  = (see below)
- $I_N$  = Current for the 100 % thermal capacity to be used (pick-up current in p.u., with this current  $t_{max}$  achieved in time  $t$ )
- $k_{SF}$  = Loading factor (service factor) coefficient, the maximum allowed load current in p.u., depending on the protected object
- $k_{AMB}$  = Temperature correction factor, either from a linear approximation or from a settable ten-point thermal capacity curve
- $e$  = Euler's number
- $t$  = Calculation time step in seconds (0.005 s)
- $\tau_{1h}$  = Long thermal heating time constant of the protected object (in minutes)
- $\tau_{1c0}$  = Long thermal cooling time constant (motor stopped) of the protected object (in minutes)
- $\tau_{1cr}$  = Long thermal cooling time constant (motor running) of the protected object (in minutes)
- $W_f$  = Correction factor between the times  $t_1$  and  $t_2$

Figure. 5.3.13 - 113. Short time constant thermal image calculation.

$$\theta_{tS} = \left( \left( \theta_{t-1} - \left( \frac{I_{EM}}{I_N \times k_{SF} \times k_{AMB}} \right)^2 \times e^{-\frac{t}{\tau_{2h}/\tau_{2c}}} \right) + \left( \frac{I_{EM}}{I_N \times k_{SF} \times k_{AMB}} \right)^2 \right) \times W_f$$

Where:

- $\theta_{t-1}$  = Thermal image status in a previous calculation cycle (the memory of the function)
- $I_{EM}$  = (see below)
- $I_N$  = Current for the 100 % thermal capacity to be used (pick-up current in p.u., with this current  $t_{max}$  achieved in time t)
- $k_{SF}$  = Loading factor (service factor) coefficient, the maximum allowed load current in p.u. value, depending on the protected object
- $k_{AMB}$  = Temperature correction factor, either from a linear approximation or from a settable ten-point thermal capacity curve
- $e$  = Euler's number
- $t$  = Calculation time step in seconds (0.005 s)
- $\tau_{2h}$  = Short thermal heating time constant of the protected object (in minutes)
- $\tau_{2c}$  = Short thermal cooling time constant of the protected object (in minutes)
- $W_f$  = Correction factor between the times  $t_1$  and  $t_2$

The equation below is that of the effective current of the protected object including the TRMS measurement maximum phase current as well as a possible phase current unbalance condition.

$$I_{EM} = \sqrt{\left( \left( 1 + \left( \frac{I_2}{I_1} \right)^2 \times k_{NPS} \right) \times I_{MAX}^2 \right)}$$

Where:




- $I_1$  = Calculated positive sequence current of the measured RMS phase currents
- $I_2$  = Calculated negative sequence current of the measured RMS phase currents
- $k_{NPS}$  = Correction factor of the NPS current biasing to the equivalent current calculation
- $I_{MAX}$  = Measured maximum of the three TRMS phase currents

The thermal image status ( $\theta_{t\%}$ , in percentages of the maximum thermal capacity used) calculation is based on the sum of the long and short time constant thermal image calculation:

$$\theta_{t\%} = (\theta_{tL} + \theta_{tS}) \times 100\%$$

The basic operating principle of the thermal replica is based on the nominal temperature rise, which is achieved when the protected object is loaded with a nominal load in a nominal ambient temperature. When the object is loaded with a nominal load for a time equal to its heating constant tau ( $\tau$ ), 63% of the nominal thermal capacity is used. When the loading continues until five times this given constant, the used thermal capacity approaches 100 % indefinitely but never exceeds it. With a single time constant model the cooling of the object follows this same behavior, the reverse of the heating when the current feeding is completely zero.

Figure. 5.3.13 - 114. Thermal image calculation with nominal conditions: single time constant thermal replica.

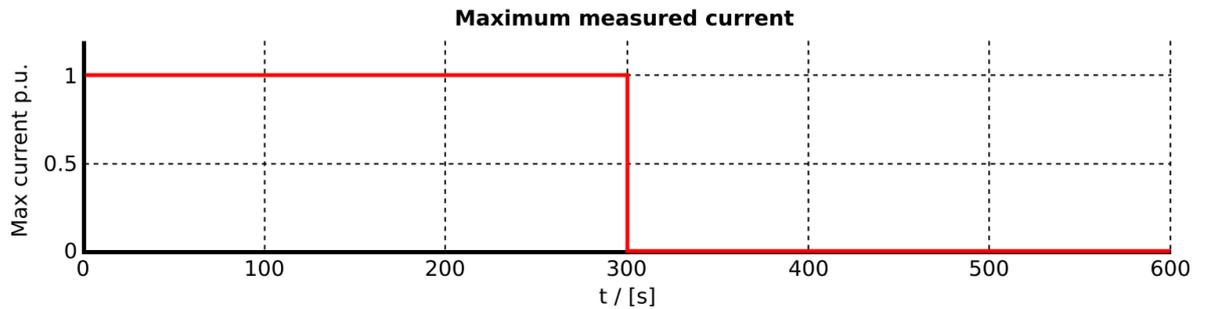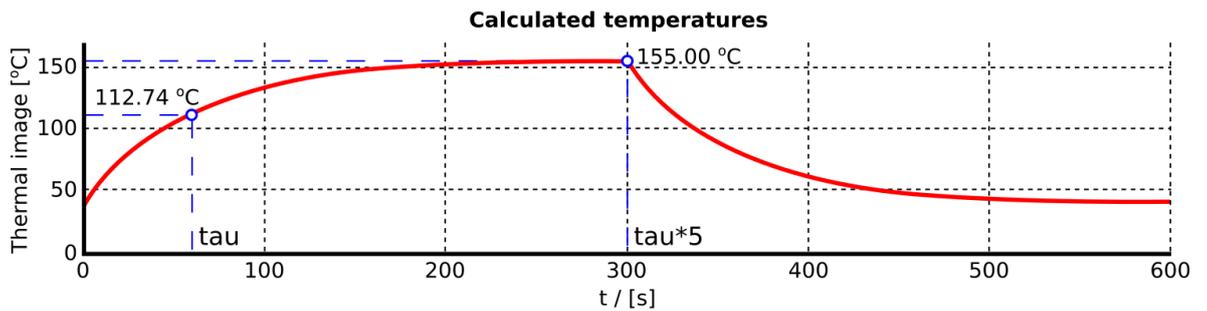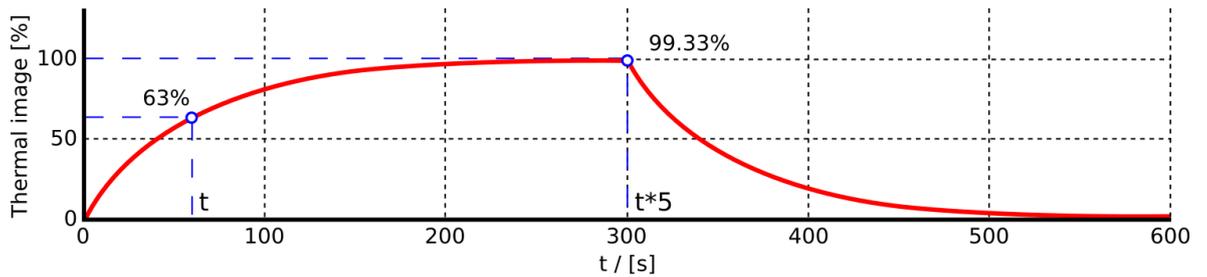

**Settings**

- Qt-1 = 0.01 %
- tau = 1.00 minutes
- Serv.Fact = 1.00
- Max. temperature rise = 115 °C
- Ambient temperature = 40 °C
- Max End. Temp = 155.00 °C
- Temp k fact = 1.00

The described behavior is based on the assumption that the monitored object has a homogenous body which generates and dissipates heat with a rate proportional to the temperature rise caused by the current squared. Installation conditions considering the prevailing conditions in the thermal replica are compensated with the ambient temperature coefficient which is constantly calculated and changing when using RTD sensor for the measurement. When the ambient temperature of the protected object is stable it can be set manually.

The ambient temperature compensation takes into account the set minimum and maximum temperatures and the load capacity of the protected object as well as the measured or set ambient temperature. The formulas below present examples of the calculation of the ambient temperature coefficient (a linear correction factor to the maximum allowed current):

$$t_{Amb < t_{min}} = k_{min}$$


$$t_{Amb < t_{ref}} = \left( \frac{1 - k_{min}}{t_{ref} - t_{min}} \times (t_{AMB} - t_{min}) \right) + k_{min}$$

$$t_{Amb > t_{ref}} = \left( \frac{k_{max} - 1}{t_{max} - t_{ref}} \times (t_{AMB} - t_{ref}) \right) + 1.0$$

$$t_{Amb > t_{max}} = k_{max}$$


- $t_{amb}$  = Measured (set) ambient temperature (can be set in °C or °F)
- $t_{max}$  = Maximum temperature (can be set in °C or °F) for the protected object
- $k_{max}$  = Ambient temperature correction factor for the maximum temperature
- $t_{min}$  = Minimum temperature (can be set in °C or °F) for the protected object
- $k_{min}$  = Ambient temperature correction factor for the minimum temperature
- $t_{ref}$  = Ambient temperature reference (can be set in °C or °F, the temperature in which the given manufacturer presumptions apply and the temperature correction factor is 1.0)

Figure. 5.3.13 - 115. Ambient temperature coefficient calculation (linear approximation, three points).

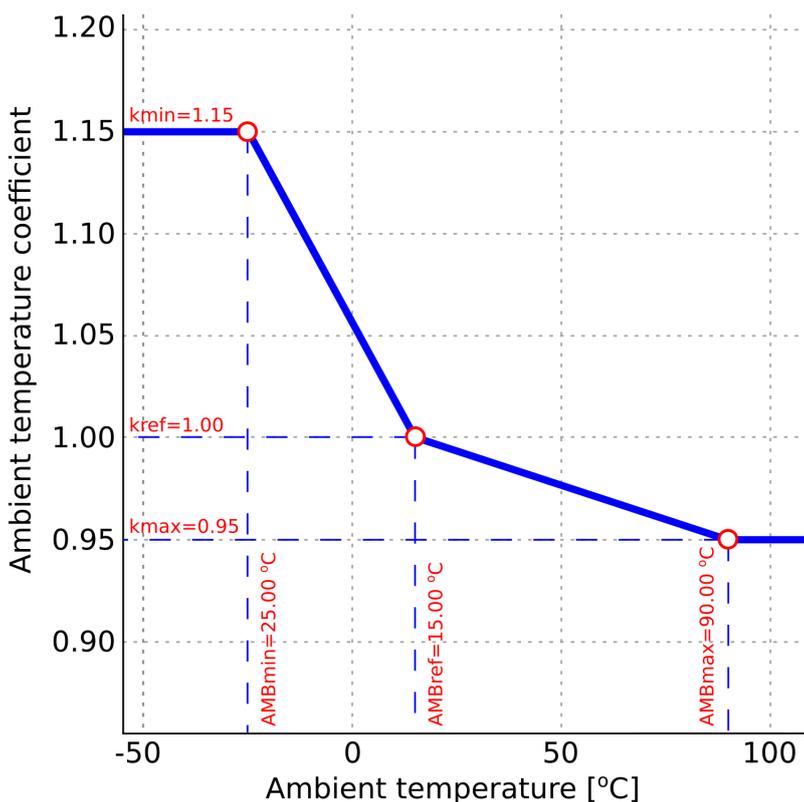

This ambient temperature coefficient relates to a nominal reference temperature. The default is +40 °C (the standard ambient temperature rating for machines) which gives the coefficient value of 1.00 for the thermal replica. The settable thermal capacity curve uses linear interpolation for ambient temperature correction with a maximum of ten (10) pairs of temperature–correction factor pairs. The temperature and coefficient pairs are set to the TM> function's settable correction curve.

Figure. 5.3.13 - 116. Ambient temperature coefficient calculation (linear approximation, indefinite points).

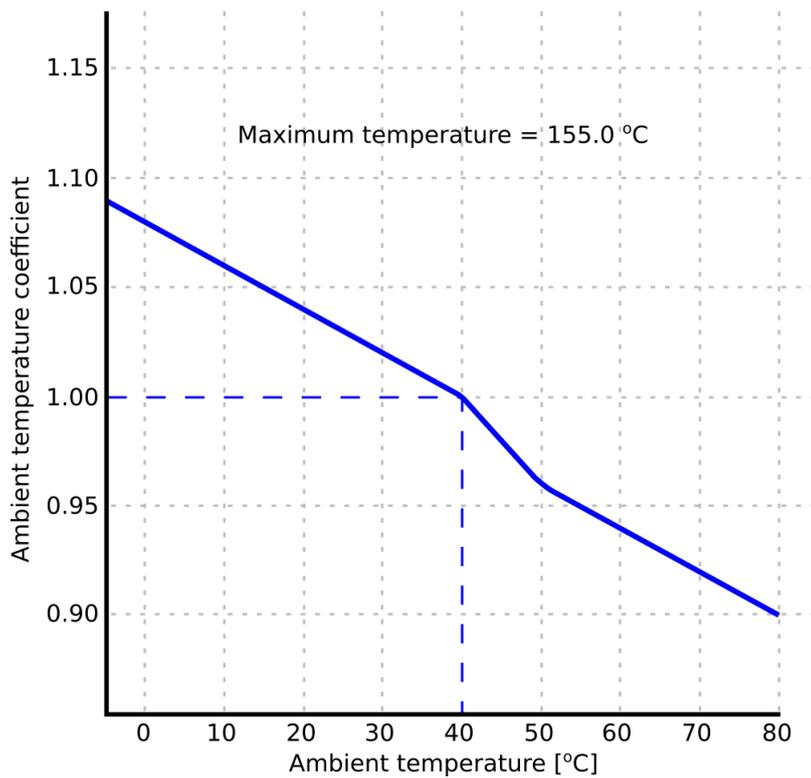

As mentioned in the previous diagram, the reference temperature for electric machines usually is +40 °C; this gives a correction coefficient of 1.00 which can be referred to as the nominal temperature in this case. The correction curve does not need to be set with as many points as there are available. The minimum setting is two pairs and the result is a straight line, for which the linear approximation is the better choice.

## Multiple time constants


The thermal behaviour of the single time constant model was presented in the introduction of this chapter. However, it is not the optimal solution for electric machines, especially when the motor is stopped and started frequently. The following explains the main reasons as well as the differences between the single and the multiple time constant models.

By the terms of electrical machine the thermal behavior and time constants varies in between of heating and cooling as well as at certain point within heating and cooling when the loading current is decreased or increased instantly to minimum or maximum. In practice this means that the thermal replica needs to have more settable time constants than one common constant for heating and cooling, as is the case with single time constant objects like cables.

The most common practice is to separate the minimum settable time constants for heating and cooling. The main reason for this is fairly simple: the rotating machine (especially a motor) usually has a cooling fan in the same shaft with its drive, and it cools both the motor and its own surface when the motor is running. Unfortunately, the cooling stops when the motor stops, and the time constant becomes longer as the heat is slower to dissipate into the surrounding air. The cooling time constant ( $\tau_c$ ) may be the same as the heating time constant ( $\tau_h$ ) if the machine has active cooling. Additionally, the starting method (DOL/Soft start/Y-delta) also tells whether there is a need for another time constant (locked rotor, overloading situations) in order to achieve a suitable thermal image for the machine.


The following figure presents the various differences to consider when solve the time constants in the motor (as compared to single time constant objects like cables).

Figure. 5.3.13 - 117. Factors affecting the cooling and current-carrying capacity of a cable.

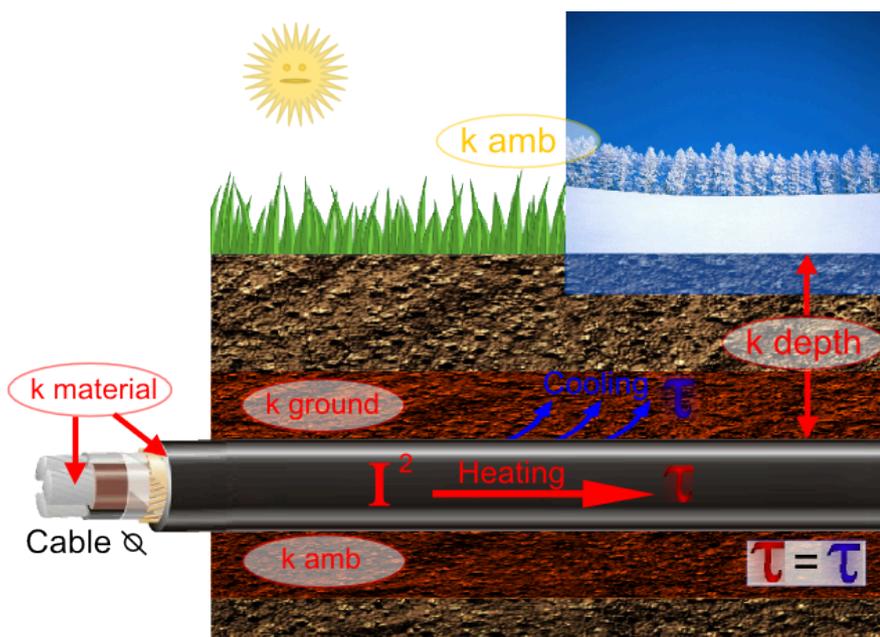

The current-carrying capacity of a cable mostly depends on the conductor's material and its diameter. The second most important factor is the cable's insulating material and how much it can withstand temperature. As can be seen in the image above, all factors (apart from the air temperature) are quite stable, especially when the cable lies below the ground frost limit in places where the outside temperature can dip well below 0 °C. The heat conduction from the cable into the surrounding ground is the same, regardless whether the cable is heating or cooling. The composition of the soil defines how well the ground conducts heat. However, these loading factors only affect the maximum current-carrying capacity of the cable; they are not the cable's time constants. The only time constant to consider is the heating time constant, which is equal to the cooling time constant for underground cables.

Figure. 5.3.13 - 118. Simplified motor construction and time constants.

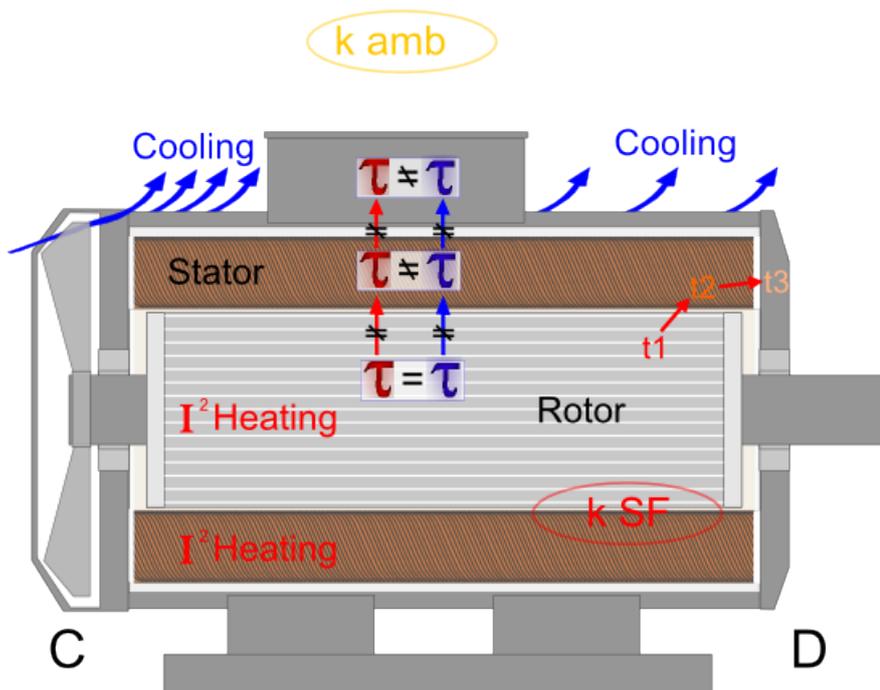

Any normal induction machine such as electric motors have the following major components:


- the rotor: rotates, its shaft used as a power outlet for the motor (drive end),
- the stator: generates the electromagnetic field which induces into the rotor and makes it rotate (hence the name "induction motor"),
- the body: contains the stator and rotor.

Motors always have some kind of a cooling system. The most common cooling system is the rotor's shaft-mounted fan (cooling end). Bigger motors or slowly rotating motors can have additional fans or liquid cooling.

By observing motor thermal properties, one can find several very different components which all have their own thermal time constants. The rotor has a constant that is the same for both heating and cooling ( $\tau_h = \tau_c$ ), the stator has a constant where the heating time constant is different from the cooling constant ( $\tau_h \neq \tau_c$ ), and even the motor body has its own time constant for heating and cooling. Keeping the rotor and the stator from being overheated are required for the overall motor protection as it can cause insulator damage in the stator and melt the rotor bars. Both of these faults result in the malfunction of the motor.

When considering the thermal behavior, one can see another fundamental difference between single and multiple time constant objects like cables and electric motors. While the cable loading may vary during the operating conditions, currents higher than the nominal current are not part of the normal usage but always indicate a fault of some sort. Motor with direct-on-line (DOL) starting have a high starting current (up to  $6-7 \times I_n$ ) and heat generation that are part of its normal operation and happen every time the motor is started. The following figure describes the process of motor heating from the ambient temperature to the nominal temperature with direct-on-line (DOL) starting.

Table. 5.3.13 - 91. Motor heating during DOL starting.

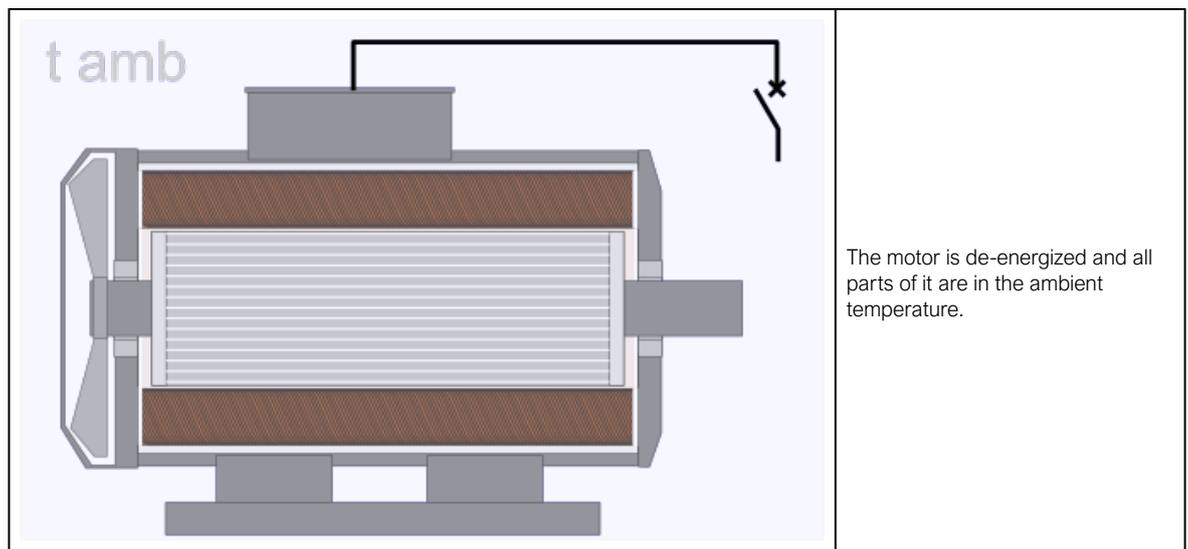

<p>The diagram illustrates a motor's internal components during acceleration. The rotor, shown in red, is labeled with <math>I^2</math> Heating. It is surrounded by the stator, which is labeled with <math>I^1</math> Heating. A blue arrow on the left indicates the rotor is accelerating. A red arrow on the right indicates the rotor current is <math>6 \times I_n</math>. The ambient temperature is denoted as <math>t_{amb}</math>.</p>	<p>When the motor is energized the stator generates a magnetic field which induces a voltage to the squirrel cage rotor. While the rotor is not yet rotating, the induced voltage and the current it causes are at maximum in the rotor. This is due to the rotating magnetic field in the stator with synchronous speed and the rotors slip now is 1 which causes that the induced voltage to the rotor is maximum and the current is maximum also). The rotor starts to heat up very quickly compared to the stator. When the rotor is speeding up, the difference between the stator's magnetic field rotation and the rotor's magnetic field rotation decreases.</p> <p>The rotor speeding up leads to the rotor current decreasing, simultaneously decreasing the rotor heating. This also makes the cooling fan start to rotate and thus cool the surface of the motor while the rotor speeds up. Depending on the size of the motor and the masses of the rotor and of the stator, the thermal capacity spent during start-up varies. The motor start-up can be rotor-limited or stator-limited, which defined which of the components limits the maximum start-up time for the motor. Most motors are rotor-limited which results in the rotor heating up to dangerously high temperatures before the stator.</p>
---	---

	<p>Once the motor has started and is running with or without a load, the heat generation is switched between the rotor and the stator. When the rotor's rotating is within the range of the nominal slip, the magnetic fields of the rotor and the stator "cut" within the nominal designed range and therefore the voltage and the current it causes in the rotor are also within the nominal range. Now, when the motor is loaded or overloaded while still rotating, the generated overheating is only experienced by the stator (unless the load is so big that it stalls the motor and the motor thinks it is back at the start with a non-rotating rotor).</p> <p>The cooling of the motor with a rotor shaft-mounted fan is operational after the starting. Additionally, the stator windings conduct the heat generated in the rotor during starting and into the motor's body. This heat transfer (rotor to stator, stator to body) also depends on the masses of motor's components. In big motors the body can be slightly warm while the rotor and/or stator have completely melted because they have not been able to transfer the heat quickly enough into the body.</p>
--	--


Table. 5.3.13 - 92. Motor heating during overloading and motor cooling.

	<p>The motor is said to be running in its nominal temperature, when the motor is run with a nominal load, it has enough time for the temperatures to stabilize (5 x time constant) and the final temperatures are reached. Now, the heat transfer is stabilized and the heat generated in the motor is transferred to the surrounding air and the temperatures of the internal components are not increasing any longer.</p>
--	--

	<p>If the motor is overloaded, the stator winding starts to heat up according to its heating time constant. If the overload is not released in time, it can lead to the melting of the stator's winding insulations which in turn leads to a short-circuit; the motor is said to "burn". This situation does not differ much from the rotor's nominal conditions. When the load increases, the slip increases slightly as well and causes a small increase to the induced voltage and current. However, when rotating the heating does not differ significantly from the nominal load.</p>
	<p>When a hot motor is de-energized the temperatures inside the motor start to stabilize. The hottest part of the motor is the rotor: its heat is transferred to the motor body through the stator windings and from the body to the surrounding air. This is why it seems that the motor body's temperature keeps rising even after a surface-cooled motor is stopped. The stopped motor cooling follows the same equation than heating, with one exception: when the surrounding air is not moving (as the fan has stopped) and the air temperature is increasing, the cooling is faster in the beginning and slows over time as the temperature difference decreases (since heat is transferred slower than in the beginning of the cooling). When the motor is run with a cyclic load, the start and stop applications for the cooling of the motor have to be modeled accurately in the thermal replica in order to avoid a situation where the calculated used thermal capacity "runs" from the actual used thermal capacity causing the protection to overshoot significantly.</p>

The previous figures presented the thermal behavior of a motor on a theoretical level. In reality, the temperature of a rotor inside the motor windings can also be measured with RTD elements. The rotor temperature is highest on the drive end because the cooling is the weakest there (as can be seen in the image below).

Figure. 5.3.13 - 119. Running motor's temperature with thermal image camera.

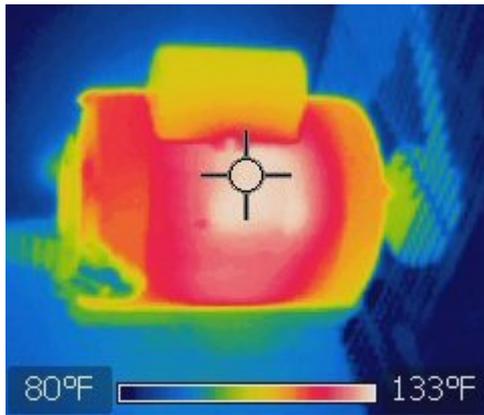

Measuring the rotor's temperature is very complicated due to its rotating nature. This is why normally there are no measurements available and why the protection of the rotor always requires a calculated thermal image. Relying solely on the measurements from RTDs installed in the motor's stator windings is not recommended as they may not be in the actual hot spot and thus give false readings. For these reasons motor protection should not be either thermal images or RTDs but rather a combination of them both for accurate monitoring of the motor's temperature.

Thermal image modeling in protection relays requires certain things to be ensured for the model to correctly match the motor thermal behavior. As was seen in the previous section, a motor usually has many states which differ from one another in terms of heating and of the parts in danger of damage. Sometimes the thermal image needs to be adjusted and fine-tuned for the application so that it matches the motor's actual temperature perfectly. This is why the thermal replica needs to offer enough setting points for various situations where the motor may be running at that time. The relay needs to recognize these situations so that the thermal model can be updated correctly.

### Thermal image characteristics and operating modes

To demonstrate the various settings available in the thermal image, the following figure presents the data from a field test: a motor was loaded with a stable load, run until the final temperature was reached and then de-energized and left to cool. The motor temperature was monitored with RTDs installed into the drive end of the relay. The motor was loaded with a nominal current, its service factor was 1.15 and the ambient temperature was measured to be 24 degrees Celsius. In this case the motor was started without a load, and the loading was increased directly after starting in order to concentrate the heating effects of stable loading.

Figure. 5.3.13 - 120. Measured motor temperature in heating/cooling test.


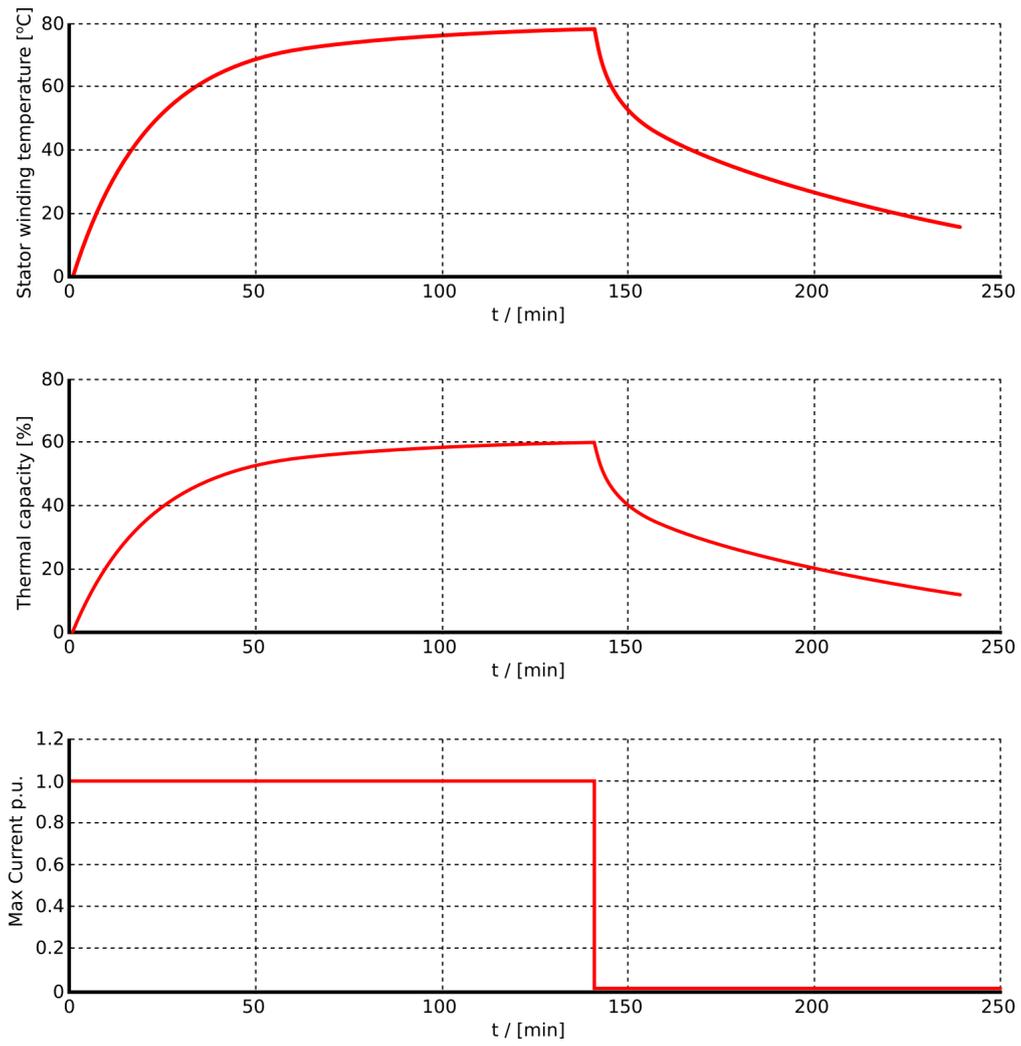


Figure. 5.3.13 - 121. Matching thermal replicas to the measured thermal capacity of the motor.

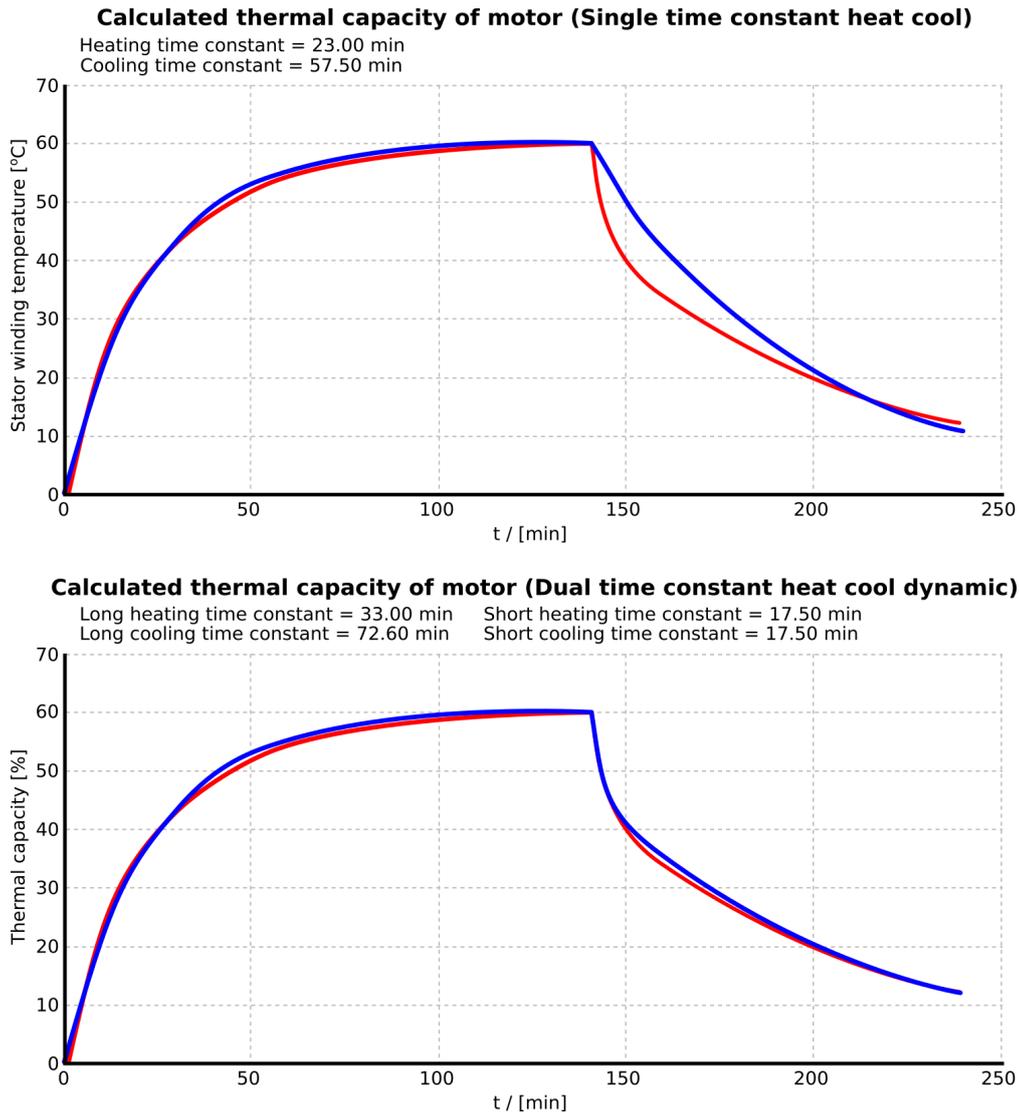


As can be seen in the figures above, when the motor is loaded with a constant current both of the replicas (single and dual time constant) follow the motor heating quite accurately. The operational difference is during cooling. With a single cooling time constant the replica does not follow the actual cooling of the motor and the match can be said to be very poor. With dynamically-controlled cooling time constants the match is very accurate. If this motor were used for cyclic loads with repeating cooling times, the single time constant model would stretch into the next duty cycle and probably cause unnecessary alarms or even trips even though the motor were still running in safe temperatures.

### Thermal trip curves

Motor thermal curves are useful when studying motor heating in possible overload and start-up situations. These are usually available upon request from manufacturers, and the relay operation can be set according to these.

Figure. 5.3.13 - 122. Example of thermal limit curves in a motor.

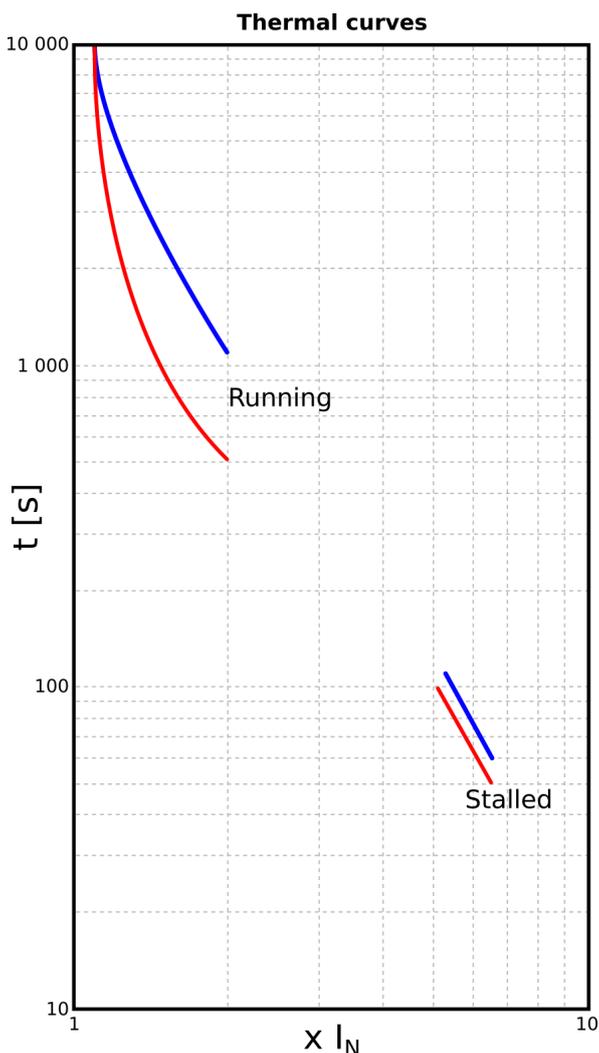

From motor thermal limit curves –if available– one can see the time constants for overloading as well as the safe stall times for hot and cold situations. Additionally, the cooling time constant must be checked from the motor datasheet or alternatively measured. From the image above one can estimate the safe stall time in cold situations to be approximately 80 seconds, and in hot situation approximately 67 seconds. When the thermal limit curves are available, the operation of the thermal replica can be set very accurately for both overloading and stall conditions.

The cooling time constant as presented in the previous example is very crucial in the case of variable duty cycle motor applications. If the motor is continuously running with a constant load, the cooling time constant is not that significant and can be estimated to be e.g. two to three times longer than the heating time constant.

Figure. 5.3.13 - 123. Comparing single time constant thermal replica tripping curves to given motor thermal characteristics.


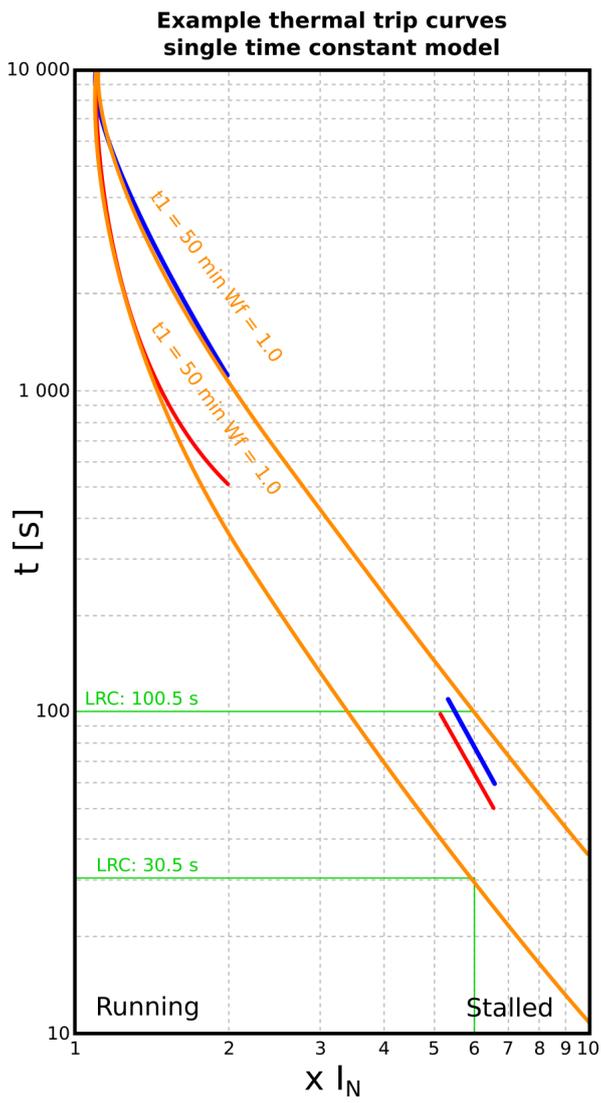


Figure. 5.3.13 - 124. Comparing dual time constant thermal replica tripping curves to given motor thermal characteristics.

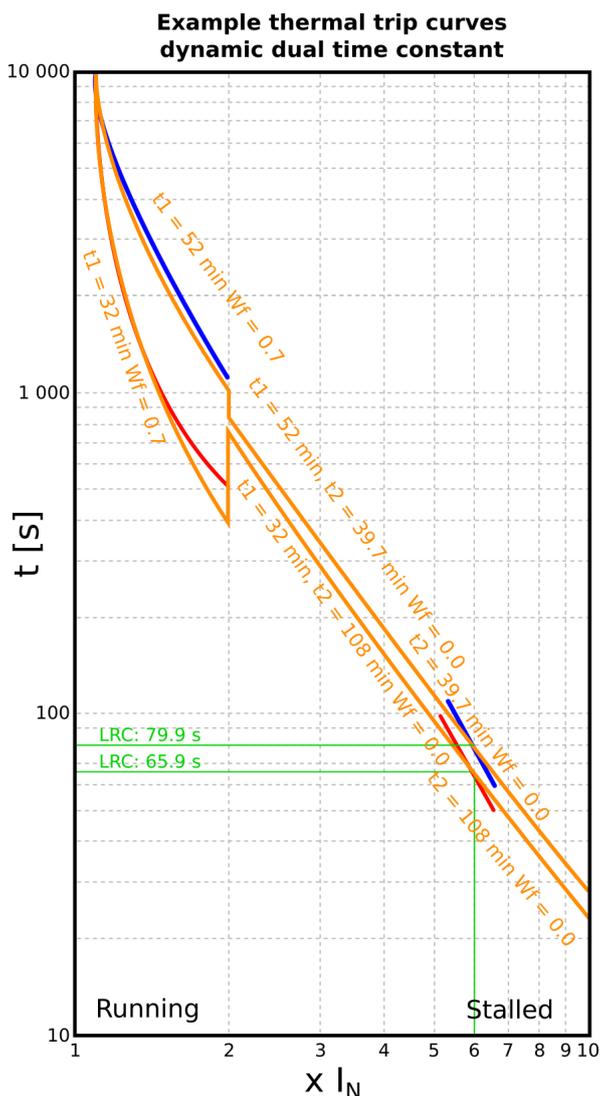

As the figures above have shown, with estimated time constants from the motor thermal limit curves the single time constant model underprotects the motor in the stall condition when the motor is cold. When the motor is hot the model overprotects with a heavy hand, allowing the motor only 30.5 seconds of stalling time of the approximately 67 seconds the motor can withstand. When dual time constants and dynamic time constants are in use, the relay automatically selects the correct tripping curves for the thermal replica according to the settings, producing therefore an exact thermal image response (as compared to the single time constant thermal image). In overload conditions the response from both of the thermal replicas is acceptable as even a small overshoot is noticed when the motor is hot. In the curve simulations the hot condition was defined as 70 % of the thermal capacity.

The following figures present the tripping and cooling curves of the thermal replica.

Figure. 5.3.13 - 125. Thermal tripping curves with single time constant, pre-load 0% (cold).

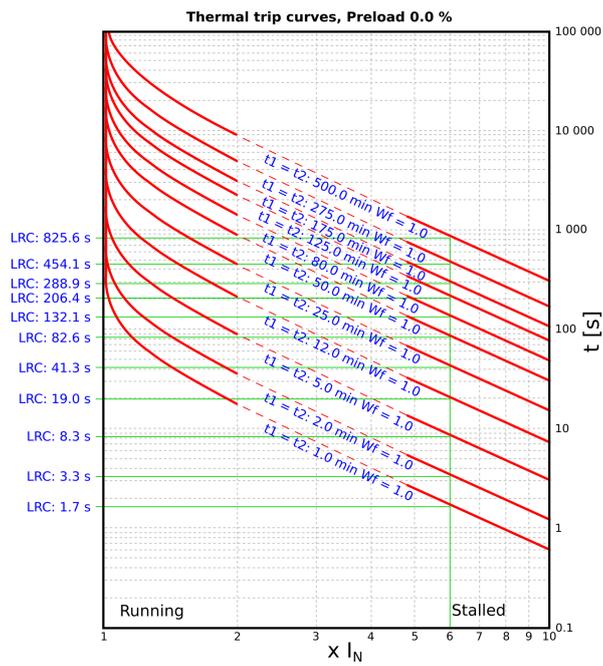


Figure. 5.3.13 - 126. Thermal tripping curves with single time constant, pre-load 90% (hot).

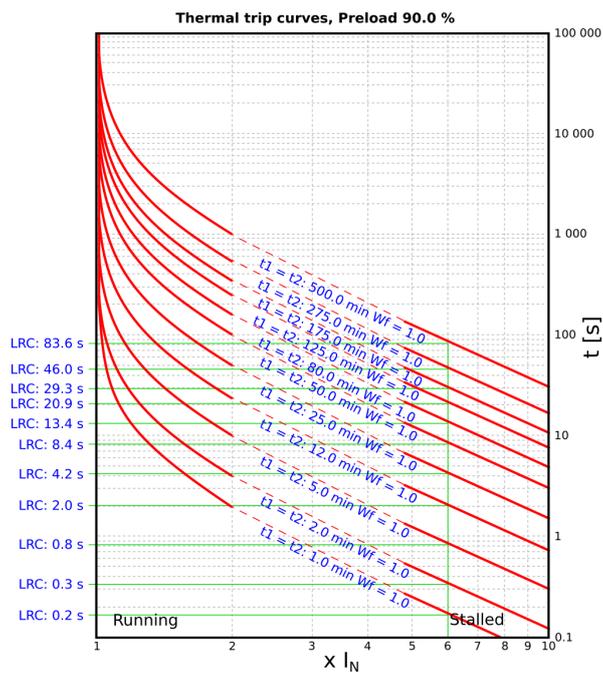


Figure. 5.3.13 - 127. Thermal tripping curves with dual dynamic time constants and correction factor, pre-load 0% (cold)

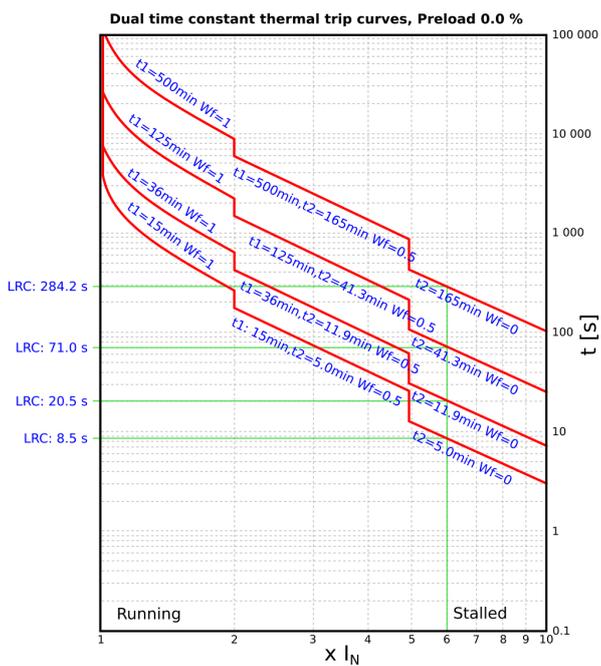


Figure. 5.3.13 - 128. Thermal tripping curves with dual dynamic time constants and correction factor, pre-load 90% (hot)

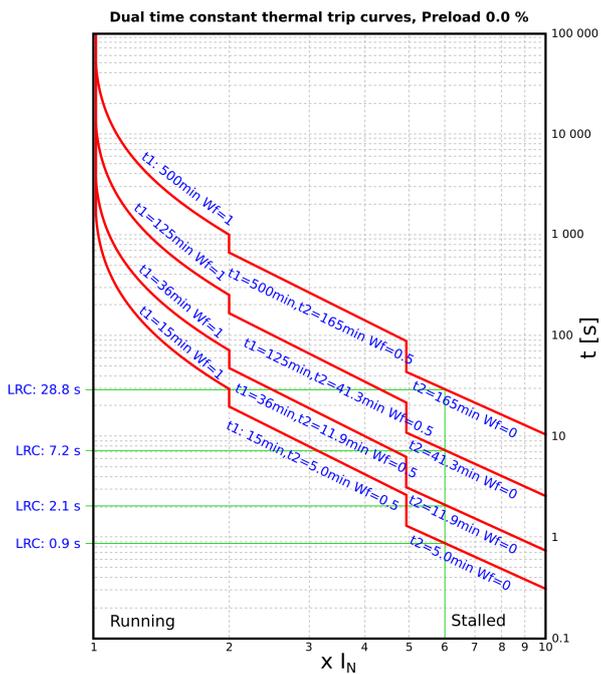


Figure. 5.3.13 - 129. Thermal cooling curves, single cooling time constant.

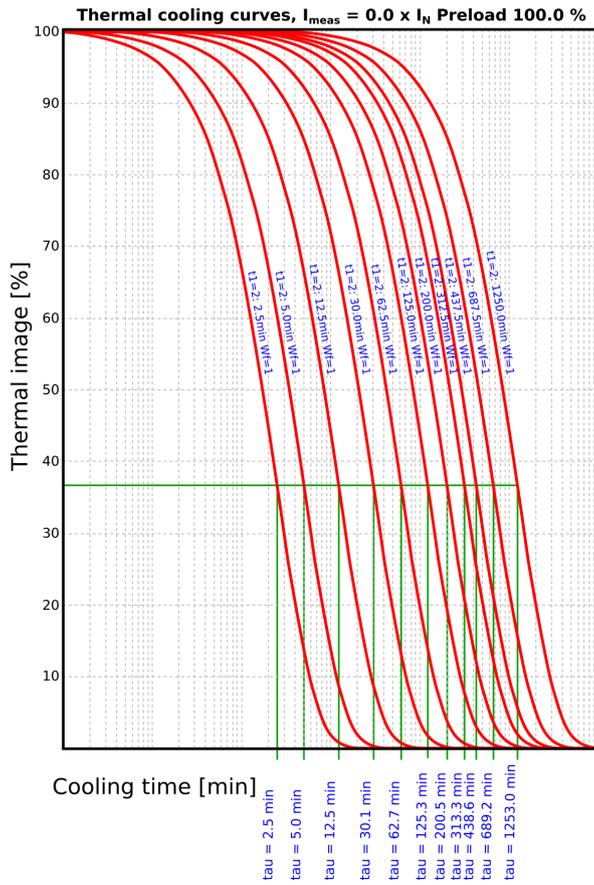


Figure. 5.3.13 - 130. Thermal cooling curves, dynamic dual time constant.

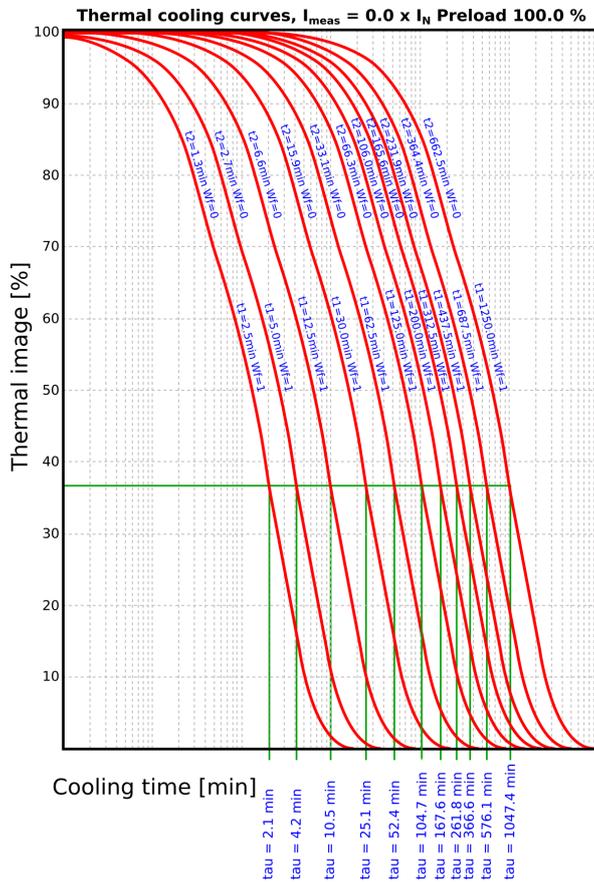


Figure. 5.3.13 - 131. Thermal cooling curves, dynamic triple time constant (motor is running without load in the first part with dedicated time constant).

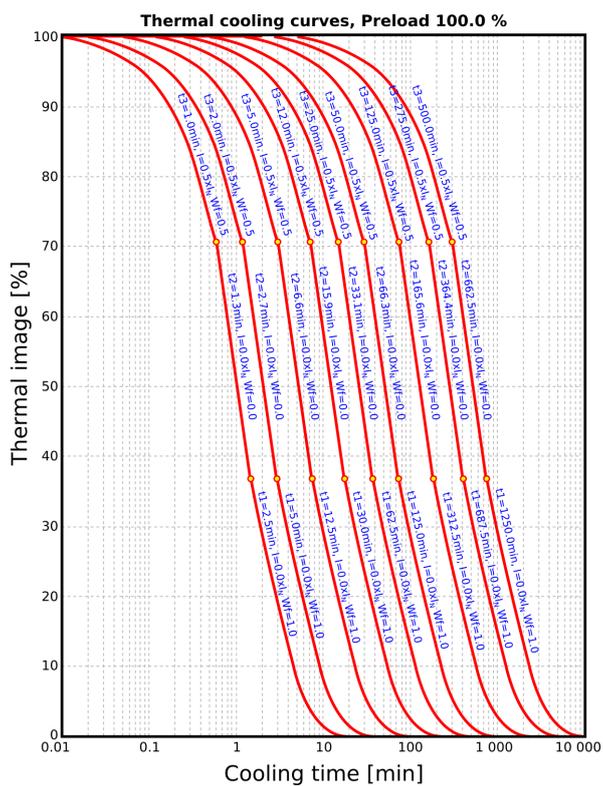


Figure. 5.3.13 - 132. NPS-biased thermal trip curves with  $k_{NPS}$  value of 1.

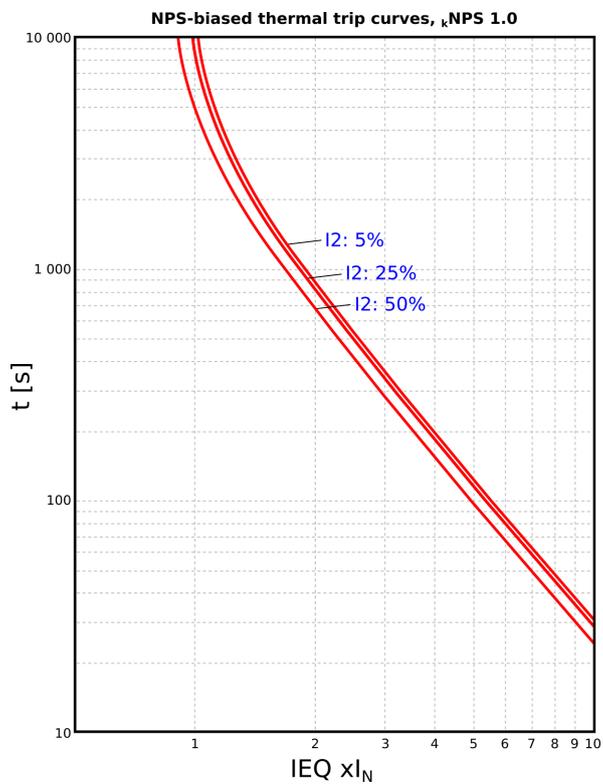


Figure. 5.3.13 - 133. NPS-biased thermal trip curves with  $k_{NPS}$  value of 3.

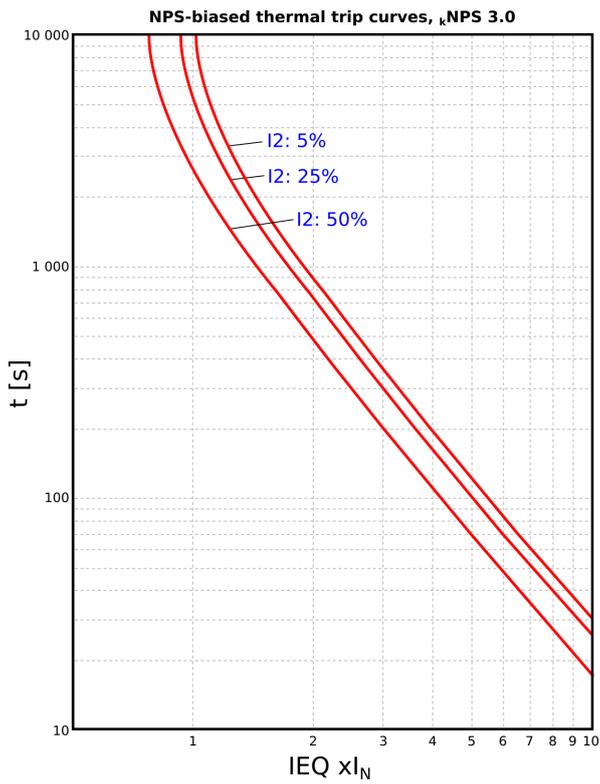


Figure. 5.3.13 - 134. NPS-biased thermal trip curves with  $k_{NPS}$  value of 7.


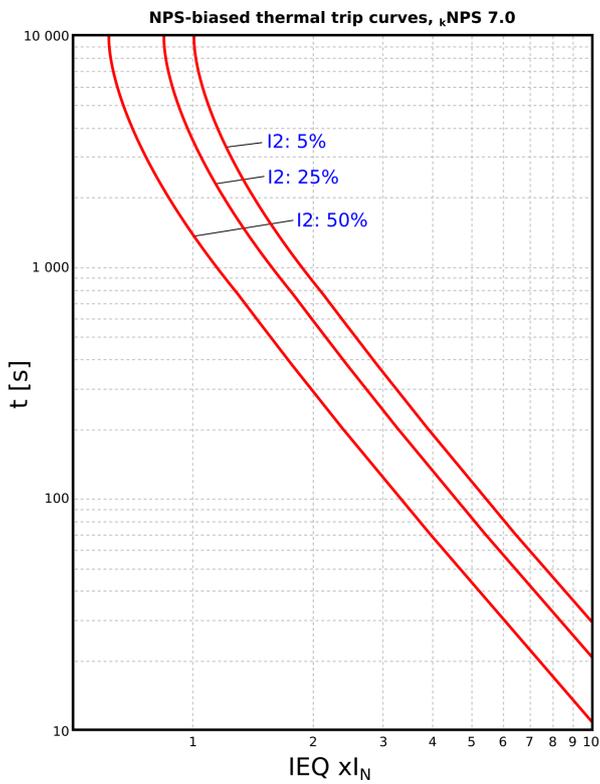


Figure. 5.3.13 - 135. NPS-biased thermal trip curves with  $k_{NPS}$  value of 10.

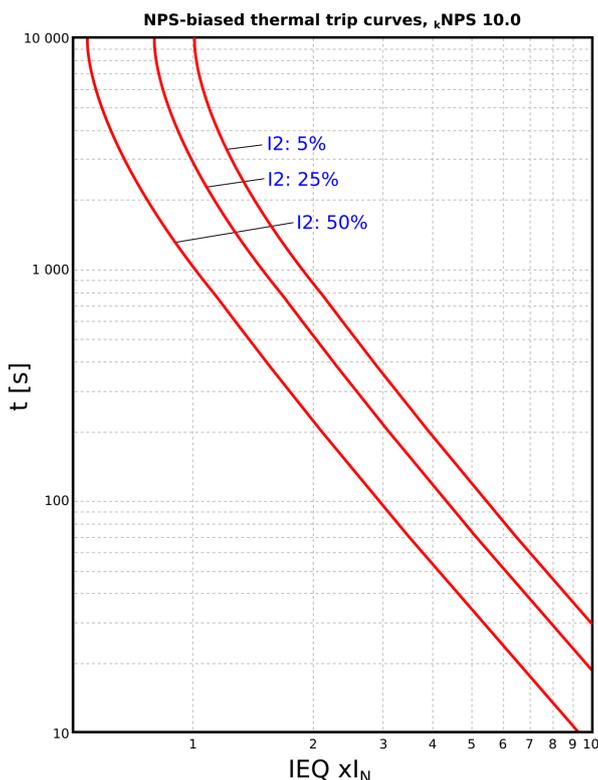

## Function inputs and outputs

The blocking signal and the setting group selection control the operating characteristics of the function during normal operation, i.e. the user or user-defined logic can change function parameters while the function is running.

The outputs of the function are the TRIP and BLOCKED signals. The overvoltage function uses a total of eight (8) separate setting groups which can be selected from one common source. Additionally, the function's operating mode can be changed via the setting group selection.

The operational logic consists of the following:

- input magnitude processing
- thermal replica
- comparator
- block signal check
- output processing.


The inputs for the function are the following:

- setting parameters
- measured and pre-processed current magnitudes.

The function's output signals can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the two (2) output signal. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the TRIP, ALARM 1, ALARM 2, INHIBIT and BLOCKED events.

The following figure presents a simplified function block diagram of the machine thermal overload protection function.

Figure. 5.3.13 - 136. Simplified function block diagram of the TM> function.

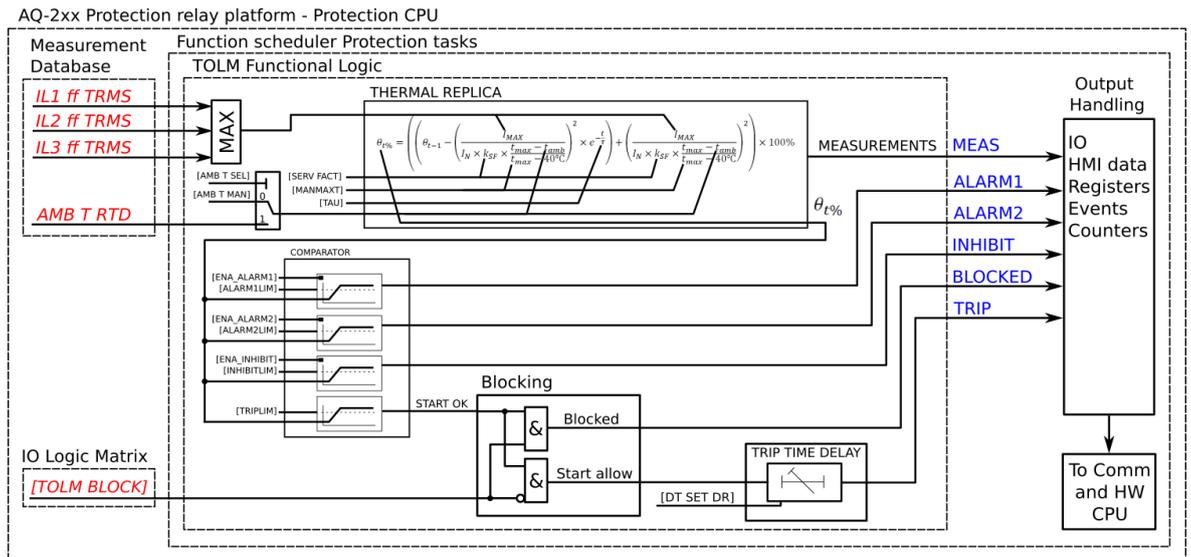

### Measured input

The function block uses analog phase current measurement values. The function block uses TRMS values from the whole harmonic specter of 32 components.

Table. 5.3.13 - 93. Measurement inputs of the TM> function.

Signal	Description	Time base
IL1TRMS	TRMS measurement of phase L1 (A) current	5ms
IL2TRMS	TRMS measurement of phase L2 (B) current	5ms
IL3TRMS	TRMS measurement of phase L3 (C) current	5ms
I1	Positive sequence current	5ms
I2	Negative sequence current	5ms
RTD	Temperature measurement for the ambient correction	5ms

### Setting parameters

Table. 5.3.13 - 94. General settings (not selectable under setting groups)

Name	Range	Step	Default	Description
TM> mode	0: Disabled 1: Activated	-	0: Disabled	The selection of the function is activated or disabled in the configuration. By default it is not in use.
Temp C or F deg	0: C 1: F	-	0: C	The selection of whether the temperature values of the thermal image and RTD compensation are shown in Celsius or in Fahrenheit.

Table. 5.3.13 - 95. Settings of the motor status monitoring function and how they are shared by other protection functions.

Name	Range	Step	Default	Prot.funcs.	Description
Motor In Scaled	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	-	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - non-directional undercurrent protection (I<; 37) - mechanical jam protection (Im>; 51M)	The motor's nominal current scaled to per unit. If the user selects <i>Object In</i> in the CT settings, this value should be 1.00. If scaled to the CT nominal, this value may vary.
Motor In A	0.1 ... 5000.0A	0.1A	-	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - non-directional undercurrent protection (I<; 37) - mechanical jam protection (Im>; 51M)	The motor's nominal current in amperes.
Nominal starting current	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	6.0xI <sub>n</sub>	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M)	The motor's locked rotor current with the nominal voltage. This setting is used for automatic curve selection and calculation. Also, the nominal starting capacity calculation is based on this value.
Nominal starting current A	0.1...5000.0A	0.1A	-	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M)	The motor's locked rotor current in amperes.

Name	Range	Step	Default	Prot.funcs.	Description
Min locked rotor current	0.1...40.0xI <sub>N</sub>	0.1xI <sub>N</sub>	3.5xI <sub>N</sub>	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M)	The motor's minimum locked rotor current. This setting defines the current limit for when this current is exceeded while the automatic curve selection and the control only short time constant (stall) are in use.
Min locked rotor current A	0.1...5000.0A	0.1A	-	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M)	The motor's minimum locked rotor current. This setting defines the current limit for when this current is exceeded while the automatic curve selection and the control only short time constant (stall) are in use.
Max locked rotor current	0.1...40.0xI <sub>N</sub>	0.1xI <sub>N</sub>	7.5xI <sub>N</sub>	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M)	The maximum locked rotor current of the motor. This setting defines the current limit which is maximum current for the motor to draw in locked rotor situation (starting or stalled). If the measured current exceeds this setting limit it is considered to be overcurrent fault and corresponding measures can be applied to disconnect the feeder and motor from the supply.
Max locked rotor current A	0.1...5000.0A	0.1A	-	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M)	The maximum locked rotor current in amperes.

Name	Range	Step	Default	Prot.funcs.	Description
Max overload current	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	2.0xI <sub>n</sub>	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M)	The motor's maximum overload current. Exceeding this setting stalls the motor. This setting defines when the thermal replica switches to the short (stall) time constant. As long as the current stays below this setting value, the motor should run even when overloaded.
Max overload current A	0.1...5000.0A	0.1A	-	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M)	The maximum overload current of the motor in amperes.
No load current <	0.1...40.0xI <sub>n</sub>	0.1xI <sub>n</sub>	0.2xI <sub>n</sub>	- motor status monitoring - machine thermal overload protection (TM>; 49M) - non-directional undercurrent protection (I<; 37)	The motor's no load current. This setting defines the "Stopped" condition when the current is below this setting value. Also, when the current is below this value, the undercurrent protection stage is locked.
No load current < A	0.1...5000.0A	0.1A	-	- motor status monitoring - machine thermal overload protection (TM>; 49M) - non-directional undercurrent protection (I<; 37)	The motor's no load current in amperes.
Motor service factor	0.01...5.00xI <sub>n</sub>	0.01xI <sub>n</sub>	1.00xI <sub>n</sub>	- motor status monitoring - machine thermal overload protection (TM>; 49M)	Service factor which corrects the maximum allowed loading according to various conditions (e.g. installation, construction, etc.) which vary from the presumption conditions. Frequently motors are stamped to a service factor of 1.15: this means that they can withstand a continuous 15% overloading from the rated current (as this is not necessary in all conditions, it is recommended to consult the motor's datasheet or manual for details). If the service factor is not known, this parameter should be left at its default setting of 1.00 x I <sub>n</sub> .

Name	Range	Step	Default	Prot.funcs.	Description
Hot condition theta limit	0.0...100.0%	0.1%	70%	- motor status monitoring - frequent start protection (N>) - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M)	Setting the thermal limit for a hot motor and a cold motor. When this setting value is not exceeded while a locked rotor situation occurs, the function uses a cold stall curve adjusted with the actually used thermal capacity. The function uses a hot stall curve when this setting value is exceeded. This also applies to starts when the motor is hot or cold. Please note that using this setting requires that the Machine thermal overload protection (TM>) function is activated and in use.
Safe stall time cold	0.1...600.0s	0.1s	20.0s	- motor status monitoring - machine thermal overload protection (TM>; 49M) - motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M) - frequent start protection (N>; 66)	The safe stall time when the motor is cold. Unless this value is specified, it is set to be equal to the hot stall time. Most probably this leads to overprotection with the cold motor stall (best case scenario). This setting value is used for the cold thermal stall curve selection in automatic control. This parameter is also used in the motor start-up and the number of starts calculations.
Safe stall time hot	0.1...600.0s	0.1s	15.0s	- motor status monitoring - machine thermal overload protection (TM>; 49M) - Motor start/locked rotor monitoring (Ist>; 48/14) - mechanical jam protection (Im>; 51M) - frequent start protection (N>; 66)	The safe stall time when the motor is hot. This setting value is used for the hot thermal stall curve selection in automatic control. This parameter is also used in the motor start-up and the number of starts calculations.

Table. 5.3.13 - 96. Motor's thermal image settings.

Name	Range	Step	Default	Description
Pick-up current	0.00...40.00xI <sub>n</sub>	0.01xI <sub>n</sub>	1.00xI <sub>n</sub>	The current for 100 % thermal capacity to be used (the pick-up current in p.u., this current $t_{max}$ achieved in $t \times 5$ ).
NPS-biasing in use	0: No NPS-biasing 1: NPS-biasing in use	-	0: No NPS-biasing in use	The selection of whether or not the thermal replica reference current is biased with the NPS current.
NPS-bias factor	0.1...10.0	0.1	3.0	The negative sequence current biasing factor. This factor depends on the motor's construction and is in relation to the positive and negative sequence rotor resistances. A typical value for this is the default setting 3.0.

Name	Range	Step	Default	Description
Time constants	0: Single 1: Multiple	-	0: Single	The selection of whether the thermal replica uses single or multiple heating and cooling time constants. If "Single" is selected, only the time constants Long heating (cold) and Long cool Stop are shown. If "Multiple" is selected, all available time constants are shown.
Estimate short TC and timings	0: Set manually 1: Estimate (online)	-	0: Set manually	The selection of whether the relay estimates short time constants for heating and cooling. It also selects the timing for short and long time constants when the motor is stopped.
Long heat T const (cold)	0...500.0min	1.0min	10.0min	The setting for the long heating time constant. This setting is for "Cold" motor conditions and is used when the calculated thermal capacity is below the set value for "Hot condition theta limit".
Long heat T const (hot)	0...500.0min	1.0min	10.0min	The setting for the long heating time constant. This setting is for "Hot" motor conditions and is used when the calculated thermal capacity is above the set value for "Hot condition theta limit". This setting can be modified for when the motor's thermal characteristics vary between "hot" and "cold" situation. If the characteristics do not change, this setting should be the same as the setting value of "Long heat T const (cold)". This setting is visible when the time constant option "Multiple" is selected.
Long cool T const Run	0...3000.0min	1.0min	10.0min	The setting for the long cooling time constant for the "Run" condition of the motor. When the motor cools while running, its time constant is not the same as the stopped cooling constant but instead typically a lot shorter (since the motor cooling fan is active). This setting may need the testing of the motor cooling characteristics. If unknown, this setting should be the same as the setting value of "Long Cool T const Stop" (slower cooling) or "Long heat T const" (faster cooling). This setting is visible when the time constant option "Multiple" is selected.
Long cool T const Stop	0...3000.0min	1.0min	10.0min	The setting for the stopped motor cooling time constant. When the motor is stopped, the thermal replica calculates the cooling according to this setting value. Typically this time constant is about 2.5 – 3.5 times the heating time constant.
Short heat T const (cold)	0...500.0min	1.0min	10.0min	The setting for short heating time constant for "cold" motor status. This time constant defines the locked rotor and stalled tripping curve selection. While this setting is not the safe stall time directly, it defines the used tripping curve for the locked rotor condition. This setting is visible when the time constants option "Multiple" and the "Set manually" option from "Estimate short TC and timings" are both selected.
Short heat T const (cold) est	0...500.0min	1.0min	10.0min	The estimated setting for short heating time constant for "cold" motor status. This time constant defines the locked rotor and stalled tripping curve selection. This setting value is calculated based on the information given by the locked rotor current (LRC) and the cold safe stall time. This setting value is visible when the time constants option "Multiple" and the "Estimate" option from "Estimate short TC and timings" are both selected.
Short heat T const (hot)	0...500.0min	1.0min	10.0min	The setting for short heating time constant for "hot" motor status. This time constant defines the locked rotor and stalled tripping curve selection. While this setting is not the safe stall time directly, it defines the used tripping curve for the locked rotor condition. This setting is visible when the time constants option "Multiple" and the "Set manually" option from "Estimate short TC and timings" are both selected.
Short heat T const (hot) est	0...500.0min	1.0min	10.0min	The estimated setting for short heating time constant for "hot" motor status. This time constant defines the locked rotor and stalled tripping curve selection. This setting value is calculated based on the information given by the LRC and the hot safe stall time. This setting value is visible when the time constants option "Multiple" and the "Estimate" option from "Estimate short TC and timings" are both selected.
Short cool T const	0...3000.0min	1.0min	10.0min	The setting for the short cooling time constant. This value is the same for both running and stopped conditions, and typically it is the same between heating and cooling. This setting is visible when the time constants option "Multiple" and the "Set manually" option from "Estimate short TC and timings" are both selected.

Name	Range	Step	Default	Description
Wf factor for L/S T const	0.0...1.0	0.1	0.5	The correction factor between the currently used long and short time constants. With this setting the heating and cooling calculations can be fine-tuned. A setting value of 0.5 means that 50 % of the heating or cooling calculation is based on the long time constant and another 50 % is based on the short time constant. A setting value of 0.0 means the calculation is completely based on the short time constant, while a value of 1.0 means it is completely based on the long time constant. This setting value is visible when the time constants option "Multiple" is selected.
T const dyn. balancing	0: Fixed 1: Dynamic	-	0: Fixed	The selection of whether or not the thermal replica balances and switches the time constants dynamically based on the detected motor status. The switching is based on the settings given for maximum overload current and for minimum locked rotor current. If "Dynamic" is selected, the thermal replica switches the time constants. If "Fixed" is selected, no time constants are switched. This setting value is visible when the time constants option "Multiple" is selected.
Short cool T used when stop	0.0...3000min	0.1min	30.0min	The setting for how long the short cooling time constant is used when the motor is stopped. The cooling is typically faster in right after the motor has stopped. This setting may need adjusting depending on the application for a perfect match. This setting value is visible when the time constants option "Multiple" is selected.
Short cool T used when stop (est)	0.0...3000min	0.1min	30.0min	The estimated setting for how long the short cooling time constant is used when the motor is stopped. The cooling is typically faster right after the motor has stopped. This setting value is visible when the time constants option "Multiple" is selected.
Cold reset default theta	0.0...150.0%	0.1%	60.0%	The default theta when the function is restarted. It is also possible to fully reset the thermal element.  This parameter can be used when testing the function to manually set the current thermal cap to any value.

Table. 5.3.13 - 97. Environmental settings

Name	Range	Step	Default	Description
Dev. temp (tmax)	0: A 1: B 2: F 3: H 4: Manual set	-	2: F	The maximum allowed temperature for the protected object. The default setting is "F" which is +155 °C.
Obj. max. temp (tmax = 100 %)	0...500 deg	1 deg	125 deg	Visible when the Dev. temp. (tmax) is set to "4: Manual set".
Ambient temp. sel.	0: Manual set 1: RTD	-	0: Manual set	The selection of whether the thermal image biasing uses a fixed or a measured ambient temperature.
Man. amb. temp. set.	0...500 deg	1 deg	40 deg	The manual fixed ambient temperature setting for thermal image biasing. Underground cables commonly use +15 °C. This setting is visible if "Ambient temp. sel." is set to "Manual set".
RTD amb. temp. read.	0...500 deg	1 deg	40 deg	The RTD ambient temperature reading for the thermal image biasing. This setting is visible if "Ambient temp. sel." is set to "RTD".
Ambient lin. or curve	0: Linear est. 1: Set curve	-	0: Linear est	The selection of how to correct the ambient temperature, either by internally calculated compensation based on end temperatures or by a user-settable curve. The default setting is "0: Linear est." which means the internally calculated correction for ambient temperature.

Name	Range	Step	Default	Description
Temp. reference (tref) kamb = 1.0	-60...500 deg	1 deg	15 deg	The temperature reference setting. The manufacturer's temperature presumptions apply and the thermal correction factor is 1.00 (rated temperature). For underground cables the set value for this is usually 15 °C and for cables in the air it is usually 25 °C.  This setting is visible if "Ambient lin. or curve" is set to "Linear est."
Max. ambient temp.	0...500 deg	1 deg	45 deg	The maximum ambient temperature setting. If the measured temperature is more than the maximum set temperature, the set correction factor for the maximum temperature is used. This setting is visible if "Ambient lin. or curve" is set to "Linear est."
k at max. amb. temp.	0.01...5.00 x ln	0.01 x ln	1.00 x ln	The temperature correction factor for the maximum ambient temperature setting. This setting is visible if "Ambient lin. or curve" is set to "Linear est."
Min. ambient temp.	-60...500 deg	1 deg	0 deg	The minimum ambient temperature setting. If the measured temperature is below the minimum set temperature, the set correction factor for minimum temperature is used. This setting is visible if "Ambient lin. or curve" is set to "Linear est."
k at min. amb. temp.	0.01...5.00 x ln	0.01 x ln	1.00 x ln	The temperature correction factor for the minimum ambient temperature setting. This setting is visible if "Ambient lin. or curve" is set to "Linear est."
Amb. temp. ref. 1...10	-50.0...500.0 deg	0.1 deg	15 deg	The temperature reference points for the user-settable ambient temperature coefficient curve. This setting is visible if "Ambient lin. or curve" is set to "Set curve".
Amb. temp. k1...k10	0.01...5.00	1.00	0.01	The coefficient value for the temperature reference point. The coefficient and temperature reference points must be set as pairs. This setting is visible if "Ambient lin. or curve" is set to "Set curve".
Add curvepoint 3...10	0: Not used 1: Used	-	0: Not used	The selection of whether or not the curve temperature/coefficient pair is in use. The minimum number to be set for the temperature/coefficient curve is two pairs and the maximum is ten pairs. If the measured temperature is below the set minimum temperature reference or above the maximum set temperature reference, the used temperature coefficient is the first or last value in the set curve. This setting is visible if "Ambient lin. or curve" is set to "Set curve".

## Operating characteristics

The operating characteristics of the machine thermal overload protection function are completely controlled by the thermal image. The thermal capacity value calculated from the thermal image can set the I/O controls with ALARM 1, ALARM 2, INHIBIT and TRIP signals.

Table. 5.3.13 - 98. Pick-up settings.

Name	Range	Step	Default	Description
Enable TM> Alarm 1	0: Disabled 1: Enabled	-	0: Disabled	Enabling/disabling the ALARM 1 signal and the I/O.
TM> Alarm 1 level	0.0...150.0 %	0.1 %	40 %	ALARM 1 activation threshold.
Enable TM> Alarm 2	0: Disabled 1: Enabled	-	0: Disabled	Enabling/disabling the ALARM 2 signal and the IO.
TM> Alarm 2 level	0.0...150.0 %	0.1 %	40 %	ALARM 2 activation threshold.

Name	Range	Step	Default	Description
Enable TM> Rest Inhibit	0: Disabled 1: Enabled	-	0: Disabled	Enabling/disabling the INHIBIT signal and the IO.
TM> Inhibit level	0.0...150.0 %	0.1 %	80 %	INHIBIT activation threshold.
TM> Trip level	0.0...150.0 %	0.1 %	100 %	TRIP activation threshold.
TM> Trip delay	0.000...3600.000 s	0.005 s	0.000 s	The trip signal's additional delay. This delay delays the trip signal generation by a set time. The default setting is 0.000 s which does not give an added time delay for the trip signal.

The pick-up activation of the function is direct for all other signals except the TRIP signal which also has a blocking check before the signal is generated.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and processes the release time characteristics similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Measurements and indications

The function outputs measured process data from the following magnitudes:

Table. 5.3.13 - 99. General status codes.

Name	Range	Description
TM> Condition	0: Normal 1: Alarm 1 ON 2: Alarm 2 ON 3: Inhibit ON 4: Trip ON 5: Blocked	The function's operating condition. No outputs are controlled when the status is "Normal".

Name	Range	Description
Motor status	0: Stopped 1: Stalled 2: Just Stopped 3: Overloading 4: Running normal	The function's thermal image status. When the measured current is below 1 % of the nominal current, the status "Light/No load" is shown. When the measured current is below the trip limit, the status "Load normal" is shown. When the measured current is above the pick-up limit but below $2 \times I_n$ , the status "Overloading" is shown. When the measured current is above $2 \times I_n$ , the status "High overload" is shown.
TM> Setting alarm	0: SF setting ok 1: Service factor set fault. Override to 1.0	Indicates if SF setting has been set wrong and the actually used setting is 1.0. Visible only when there is a setting fault.
TM> Setting alarm	0: Ambient setting ok 1: Ambient t set fault. Override to 1.0	Indicates if ambient temperature settings have been set wrong and actually used setting is 1.0. Visible only when there is a setting fault.
TM> Setting alarm	0: Nominal current calc ok 1: Nominal current set fault. Override to 1.0	Indicates if nominal current calculation is set wrong and actually used setting is 1.0. Visible only when there is a setting fault.
TM> Setting alarm	0: Ambient setting ok 1: Inconsistent setting of ambient k	Indicates if ambient k setting has been set wrong. Visible only when there is a setting fault.

Table. 5.3.13 - 100. Measurements.

Name	Range	Description / values
Currents	0: Primary A 1: Secondary A 2: Per unit	The active phase current measurement from IL1 (A), IL2 (B) and IL3 (C) phases in given scalings.
Thermal image	0: Thermal image calc.	<ul style="list-style-type: none"> <li>- TM&gt; Trip expect mode: No trip expected/Trip expected</li> <li>- TM&gt; Time to 100 % theta: Time to reach the 100 % thermal cap</li> <li>- TM&gt; Rreference T curr.: reference/pick-up value (IEQ)</li> <li>- TM&gt; Active meas. curr.: the measured maximum TRMS current at a given moment</li> <li>- TM&gt; T est. with act. curr.: estimation of the used thermal capacity including the current at a given moment</li> <li>- TM&gt; T at a given moment: the thermal capacity used at that moment</li> </ul>
	1: Temp. estimates	<ul style="list-style-type: none"> <li>- TM&gt; Used k for amb. temp: the ambient correction factor at a givenmoment</li> <li>- TM&gt; Max. temp. rise all.: the maximum allowed temperature rise</li> <li>- TM&gt; Temp. rise atm: the calculated temperature rise at a given moment</li> <li>- TM&gt; Hot spot estimate: the estimated hot spot temperature including the ambient temperature</li> <li>- TM&gt; Hot spot max. all.: the maximum allowed temperature for the object</li> </ul>

Name	Range	Description / values
	2: Timing status	<ul style="list-style-type: none"> <li>- TM&gt; Trip delay remaining: the time to reach 100% theta</li> <li>- TM&gt; Trip time to rel.: the time to reach theta while staying below the trip limit during cooling</li> <li>- TM&gt; Alarm 1 time to rel.: the time to reach theta while staying below the Alarm 1 limit during cooling</li> <li>- TM&gt; Alarm 2 time to rel.: the time to reach theta while staying below the Alarm 2 limit during cooling</li> <li>- TM&gt; Inhibit time to rel.: the time to reach theta while staying below the Inhibit limit during cooling</li> </ul>

Table. 5.3.13 - 101. Counters.

Name	Description / values
Alarm1 inits	The number of times the function has activated the Alarm 1 output
Alarm2 inits	The number of times the function has activated the Alarm 2 output
Restart inhibits	The number of times the function has activated the Restart inhibit output
Trips	The number of times the function has tripped
Trips Blocked	The number of times the function trips has been blocked

## Events and registers

The machine thermal overload protection function (abbreviated "TOLM" in event block names) generates events and registers from the status changes in TRIP and BLOCKED signals. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.3.13 - 102. Event codes.

Event number	Event channel	Event block name	Event code	Description
4352	68	TOLM1	0	Alarm1 ON
4353	68	TOLM1	1	Alarm1 OFF
4354	68	TOLM1	2	Alarm2 ON
4355	68	TOLM1	3	Alarm2 OFF
4356	68	TOLM1	4	Inhibit ON
4357	68	TOLM1	5	Inhibit OFF
4358	68	TOLM1	6	Trip ON
4359	68	TOLM1	7	Trip OFF
4360	68	TOLM1	8	Block ON
4361	68	TOLM1	9	Block OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for TRIP, BLOCKED, etc. signals. The table below presents the structure of the function's register content.

Table. 5.3.13 - 103. Register content.


Name	Description
Date and time	dd.mm.yyyy hh:mm:ss.mss

Name	Description
Event code	4352-4361 Descr.
Time to reach 100 % theta	seconds
Ref. T current	$\times I_n$
Active meas. current	$\times I_n$
T at a given moment	%
Max. temp. rise allowed	degrees
Temp. rise at a given moment	degrees
Hot spot estimate	degrees
Hot spot max. all.	degrees
Trip delay rem.	Remaining time to trip in seconds
Used SG	Setting group 1...8 active

### 5.3.14 Resistance temperature detectors

Resistance temperature detectors (or RTDs) can be used to measure both temperatures of motors/generators and ambient temperatures. Typically an RTD is a thermocouple or of type PT100. Up to three (3) separate RTD modules based on an external Modbus are supported; each can hold up to eight (8) measurement elements. Up to two (2) separate RTD option cards are supported by this function. Sixteen (16) individual element monitors can be set for this alarm function, and each of those can be set to alarm two (2) separate alarms from one selected input. The user can set alarms and measurements to be either in degrees Celsius or Fahrenheit.

The following figure shows the principal structure of the resistance temperature detection function.

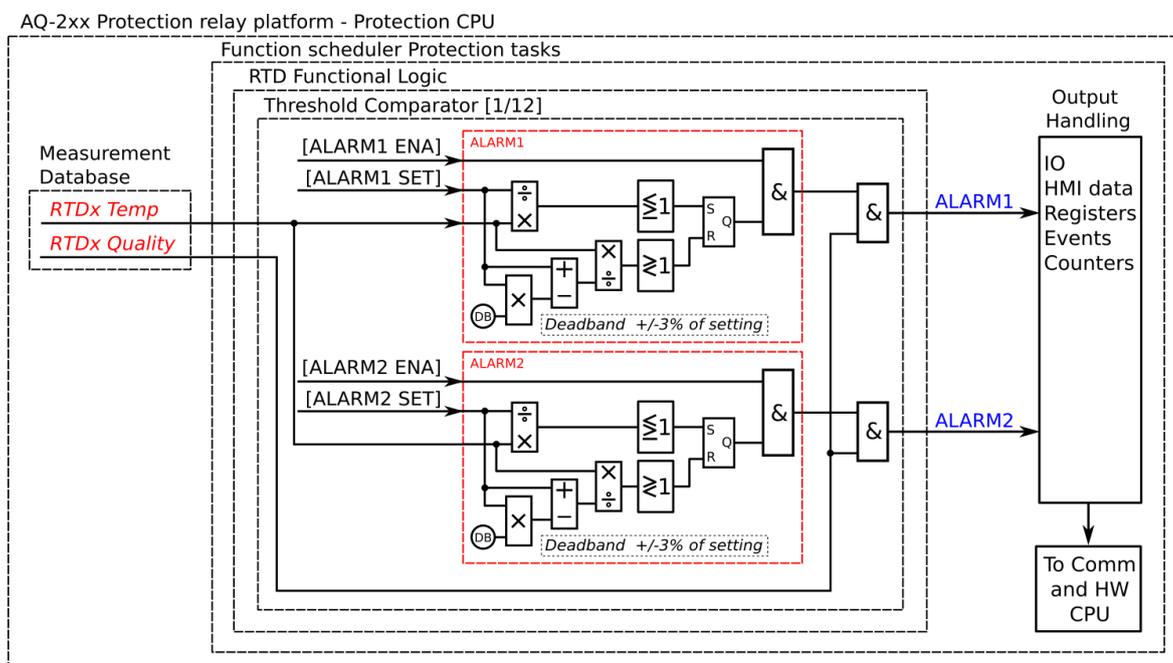

Setting up an RTD measurement, the user first needs to set the measurement module to scan the wanted RTD elements. A multitude of Modbus-based modules are supported. Communication requires bitrate, databits, parity, stopbits and Modbus I/O protocol to be set; this is done at *Communication* → *Connections*. Once communication is set, the wanted channels are selected at *Communication* → *Protocols* → *ModbusIO*. Then the user selects the measurement module from the three (3) available modules (A, B and C), as well as the poll address. Additionally, both the module type and the polled channels need to be set. When using a thermocouple module, the thermo element type also needs to be set for each of the measurement channels. Once these settings are done the RTDs are ready for other functions.

Figure. 5.3.14 - 137. RTD alarm setup.



Function can be set to monitor the measurement data from previously set RTD channels. A single channel can be set to have several alarms if the user sets the channel to multiple sensor inputs. In each sensor setting the user can select the monitored module and channel, as well as the monitoring and alarm setting units (°C or °F). The alarms can be enabled, given a setting value (in degrees), and be set to trigger either above or below the setting value. There are sixteen (16) available sensor inputs in the function. An active alarm requires a valid channel measurement. It can be invalid if communication is not working or if a sensor is broken.

## Settings

Table. 5.3.14 - 104. Function settings for Channel x (Sx).

Name	Range	Step	Default	Description
S1...S16 enable	0: No 1: Yes	-	0: No	Enables/disables the selection of sensor measurements and alarms.
S1...S16 module	0: InternalRTD1 1: InternalRTD2 2: ExtModuleA 3: ExtModuleB 4: ExtModuleC	-	0: InternalRTD1	Selects the measurement module. Internal RTD modules are option cards installed to the relay. External modules are Modbus based external devices.
S1...S16 channel	0: Channel 0 1: Channel 1 3: Channel 2 4: Channel 3 5: Channel 4 6: Channel 5 7: Channel 6 8: Channel 7	-	0: Channel 0	Selects the measurement channel in the selected module.
S1...S16 Deg C/Dec F	0: Deg C 1: Deg F	-	0: Deg C	Selects the measurement temperature scale (Celsius or Fahrenheit).
S1...S16 Measurement	-	-	-	Displays the measurement value in the selected temperature scale.
S1...S16 Sensor	0: Ok 1: Invalid	-	-	Displays the measured sensor's data validity. If the sensor reading has any problems, the sensor data is set to "Invalid" and the alarms are not activated.
S1...S16 Enable alarm 1	0: Disable 1: Enable	-	0: Disable	Enables/disables the selection of Alarm 1 for the measurement channel x.
S1...S16 Alarm1 >/<	0: > 1: <	-	0: >	Selects whether the alarm activates when measurement is above or below the pick-up setting value.
S1...S16 Alarm1	-101.0...2000.0deg	0.1deg	0.0deg	Sets the pick-up value for Alarm 1. The alarm is activated if the measurement goes above or below this setting mode (depends on the selected mode in "Sx Alarm1 >/<").
S1...S16 sensor	0: Ok 1: Invalid	-	-	Displays the measured sensor's data validity. If the sensor reading has any problems, the sensor data is set to "Invalid" and the alarms are not activated.
S1...S16 Enable alarm 2	0: Disable 1: Enable	-	0: Disable	Enables/disables the selection of Alarm 2 for the measurement channel x.
S1...S16 Alarm2 >/<	0: > 1: <	-	0: >	Selects whether the measurement is above or below the setting value.
S1...S16 Alarm2	-101.0...2000.0deg	0.1deg	0.0deg	Sets the value for Alarm 2. The alarm is activated if the measurement goes above or below this setting mode (depends on the selected mode in "Sx Alarm2 >/<").

When the RTDs have been set, the values can be read to SCADA (or some other control system). The alarms can also be used for direct output control as well as in logics.

## Events

The resistance temperature detector function (abbreviated "RTD" in event block names) generates events and registers from the status changes in ALARM and MEAS INVALID. The user can select which event messages are stored in the main event buffer: ON, OFF, or both. The function offers sixteen (16) independent stages; the events are segregated for each stage operation.

The events triggered by the function are recorded with a time stamp and with process data values. The function registers its operation into the last twelve (12) time-stamped registers.

Table. 5.3.14 - 105. Event codes.

Event number	Event channel	Event block name	Event code	Description
4416	69	RTD1	0	S1 Alarm1 ON
4417	69	RTD1	1	S1 Alarm1 OFF
4418	69	RTD1	2	S1 Alarm2 ON
4419	69	RTD1	3	S1 Alarm2 OFF
4420	69	RTD1	4	S2 Alarm1 ON
4421	69	RTD1	5	S2 Alarm1 OFF
4422	69	RTD1	6	S2 Alarm2 ON
4423	69	RTD1	7	S2 Alarm2 OFF
4424	69	RTD1	8	S3 Alarm1 ON
4425	69	RTD1	9	S3 Alarm1 OFF
4426	69	RTD1	10	S3 Alarm2 ON
4427	69	RTD1	11	S3 Alarm2 OFF
4428	69	RTD1	12	S4 Alarm1 ON
4429	69	RTD1	13	S4 Alarm1 OFF
4430	69	RTD1	14	S4 Alarm2 ON
4431	69	RTD1	15	S4 Alarm2 OFF
4432	69	RTD1	16	S5 Alarm1 ON
4433	69	RTD1	17	S5 Alarm1 OFF
4434	69	RTD1	18	S5 Alarm2 ON
4435	69	RTD1	19	S5 Alarm2 OFF
4436	69	RTD1	20	S6 Alarm1 ON
4437	69	RTD1	21	S6 Alarm1 OFF
4438	69	RTD1	22	S6 Alarm2 ON
4439	69	RTD1	23	S6 Alarm2 OFF
4440	69	RTD1	24	S7 Alarm1 ON
4441	69	RTD1	25	S7 Alarm1 OFF
4442	69	RTD1	26	S7 Alarm2 ON
4443	69	RTD1	27	S7 Alarm2 OFF
4444	69	RTD1	28	S8 Alarm1 ON
4445	69	RTD1	29	S8 Alarm1 OFF
4446	69	RTD1	30	S8 Alarm2 ON
4447	69	RTD1	31	S8 Alarm2 OFF
4448	69	RTD1	32	S9 Alarm1 ON
4449	69	RTD1	33	S9 Alarm1 OFF
4450	69	RTD1	34	S9 Alarm2 ON


Event number	Event channel	Event block name	Event code	Description
4451	69	RTD1	35	S9 Alarm2 OFF
4452	69	RTD1	36	S10 Alarm1 ON
4453	69	RTD1	37	S10 Alarm1 OFF
4454	69	RTD1	38	S10 Alarm2 ON
4455	69	RTD1	39	S10 Alarm2 OFF
4456	69	RTD1	40	S11 Alarm1 ON
4457	69	RTD1	41	S11 Alarm1 OFF
4458	69	RTD1	42	S11 Alarm2 ON
4459	69	RTD1	43	S11 Alarm2 OFF
4460	69	RTD1	44	S12 Alarm1 ON
4461	69	RTD1	45	S12 Alarm1 OFF
4462	69	RTD1	46	S12 Alarm2 ON
4463	69	RTD1	47	S12 Alarm2 OFF
4464	69	RTD1	48	S13 Alarm1 ON
4465	69	RTD1	49	S13 Alarm1 OFF
4466	69	RTD1	50	S13 Alarm2 ON
4467	69	RTD1	51	S13 Alarm2 OFF
4468	69	RTD1	52	S14 Alarm1 ON
4469	69	RTD1	53	S14 Alarm1 OFF
4470	69	RTD1	54	S14 Alarm2 ON
4471	69	RTD1	55	S14 Alarm2 OFF
4472	69	RTD1	56	S15 Alarm1 ON
4473	69	RTD1	57	S15 Alarm1 OFF
4474	69	RTD1	58	S15 Alarm2 ON
4475	69	RTD1	59	S15 Alarm2 OFF
4476	69	RTD1	60	S16 Alarm1 ON
4477	69	RTD1	61	S16 Alarm1 OFF
4478	69	RTD1	62	S16 Alarm2 ON
4479	69	RTD1	63	S16 Alarm2 OFF
4480	70	RTD2	0	S1 Meas Ok
4481	70	RTD2	1	S1 Meas Invalid
4482	70	RTD2	2	S2 Meas Ok
4483	70	RTD2	3	S2 Meas Invalid
4484	70	RTD2	4	S3 Meas Ok
4485	70	RTD2	5	S3 Meas Invalid
4486	70	RTD2	6	S4 Meas Ok
4487	70	RTD2	7	S4 Meas Invalid
4488	70	RTD2	8	S5 Meas Ok

Event number	Event channel	Event block name	Event code	Description
4489	70	RTD2	9	S5 Meas Invalid
4490	70	RTD2	10	S6 Meas Ok
4491	70	RTD2	11	S6 Meas Invalid
4492	70	RTD2	12	S7 Meas Ok
4493	70	RTD2	13	S7 Meas Invalid
4494	70	RTD2	14	S8 Meas Ok
4495	70	RTD2	15	S8 Meas Invalid
4496	70	RTD2	16	S9 Meas Ok
4497	70	RTD2	17	S9 Meas Invalid
4498	70	RTD2	18	S10 Meas Ok
4499	70	RTD2	19	S10 Meas Invalid
4500	70	RTD2	20	S11 Meas Ok
4501	70	RTD2	21	S11 Meas Invalid
4502	70	RTD2	22	S12 Meas Ok
4503	70	RTD2	23	S12 Meas Invalid
4504	70	RTD2	24	S13 Meas Ok
4505	70	RTD2	25	S13 Meas Invalid
4506	70	RTD2	26	S14 Meas Ok
4507	70	RTD2	27	S14 Meas Invalid
4508	70	RTD2	28	S15 Meas Ok
4509	70	RTD2	29	S15 Meas Invalid
4510	70	RTD2	30	S16 Meas Ok
4511	70	RTD2	31	S16 Meas Invalid

### 5.3.15 Arc fault protection (IArc>/IOArc>; 50Arc/50NArc)

Arc faults occur for a multitude of reasons: e.g. insulation failure, incorrect operation of the protected device, corrosion, overvoltage, dirt, moisture, incorrect wiring, or even because of aging caused by electric load. It is important to detect the arc as fast as possible in order to minimize its effects. Using arc sensors to detect arc faults is much faster than merely measuring currents and voltages. In busbar protection IEDs with normal protection can be too slow to disconnect arcs within a safe time frame. For example, it may be necessary to delay operation time for hundreds of milliseconds when setting up an overcurrent protection relay to control the feeder breakers to achieve selectivity. This delay can be avoided by using arc protection. The arc protection card has a high-speed output to trip signals faster as well as to extend the speed of arc protection.

Figure. 5.3.15 - 138. IED equipped with arc protection.

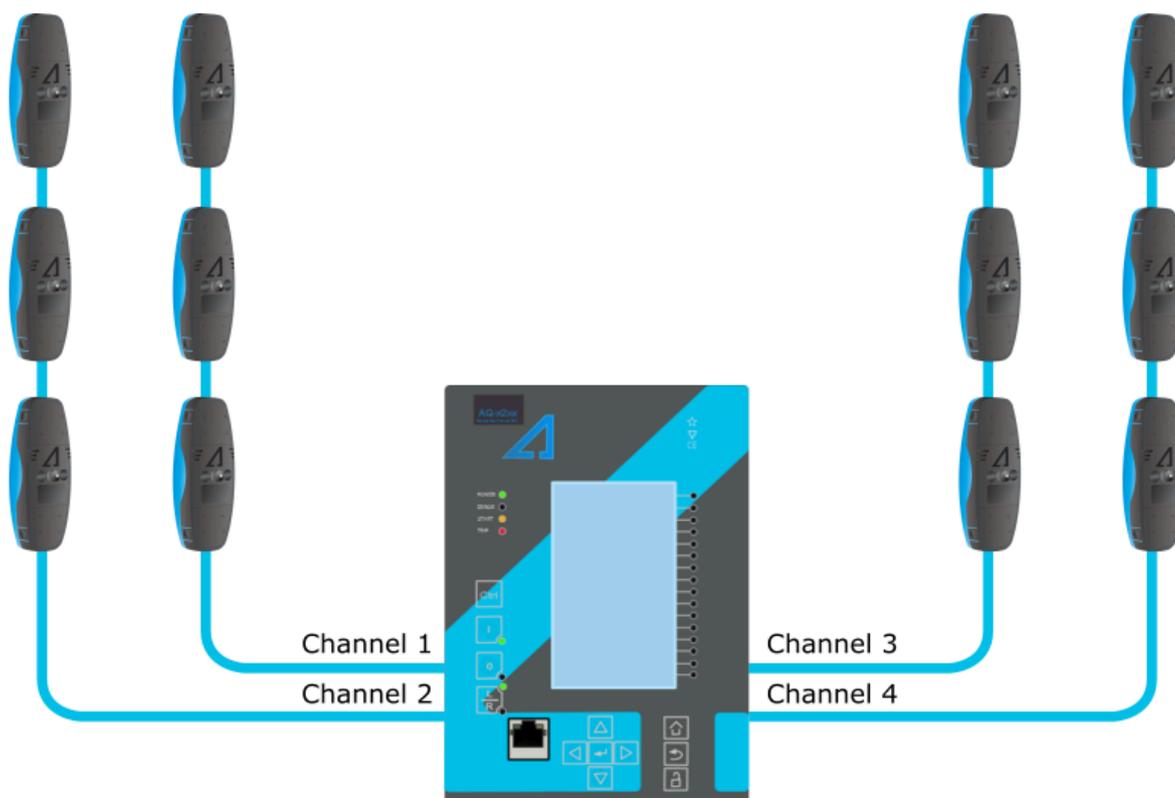

The arc protection card has four (4) sensor channels, and up to three (3) arc point sensors can be connected to each channel. The sensor channels support ArcTeq AQ-01 (light sensing) and AQ-02 (pressure and light sensing) units. Optionally, the protection function can also be applied with a phase current or a residual current condition: the function trips only if the light and overcurrent conditions are met.

The outputs of the function are the following:

- Light In
- Pressure In
- Arc binary input signal status
- Zone trip
- Zone blocked
- Sensor fault signals.

The arc protection function uses a total of eight (8) separate setting groups which can be selected from one common source.

Table. 5.3.15 - 106. Output signals of the IArc>/IOArc> function.

Outputs	Activation condition
Channel 1 Light In Channel 2 Light In Channel 3 Light In Channel 4 Light In	The arc protection card's sensor channel detects light.
Channel 1 Pressure In Channel 2 Pressure In Channel 3 Pressure In Channel 4 Pressure In	The arc protection card's sensor channel detects pressure.
ARC Binary input signal	The arc protection card's binary input is energized.

Outputs	Activation condition
I/O Arc> Ph. curr. START I/O Arc> Res. curr. START	The measured phase current or the residual current is over the set limit.
I/O Arc> Ph. curr. BLOCKED I/O Arc> Res. curr. BLOCKED	The phase current or the residual current measurement is blocked by an input.
I/O Arc> Zone 1 TRIP I/O Arc> Zone 2 TRIP I/O Arc> Zone 3 TRIP I/O Arc> Zone 4 TRIP	All required conditions for tripping the zone are met (light OR light and current).
I/O Arc> Zone 1 BLOCKED I/O Arc> Zone 2 BLOCKED I/O Arc> Zone 3 BLOCKED I/O Arc> Zone 4 BLOCKED	All required conditions for tripping the zone are met (light OR light and current) but the tripping is blocked by an input.
I/O Arc> S1 Sensor fault I/O Arc> S2 Sensor fault I/O Arc> S3 Sensor fault I/O Arc> S4 Sensor fault	The detected number of sensors in the channel does not match the settings.
I/O Arc> IO unit fault	The number of connected AQ-100 series units does not match the number of units set in the settings.

The operational logic consists of the following:

- input magnitude selection
- input magnitude processing
- threshold comparator
- two block signal checks
- output processing.

The inputs for the function are the following:

- operating mode selections
- setting parameters
- digital inputs and logic signals
- measured and pre-processed current magnitudes.


The function outputs the TRIP, BLOCKED, light sensing etc. signals which can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the 26 output signals. The time stamp resolution is 1 ms. The function also a resettable cumulative counter for the TRIP and BLOCKED events for each zone.

### Example of scheme setting

The following examples helps the user better understand how the arc protection function is set. In the examples AQ-101 models are used to extend the protection of Zone 2 and to protect each outgoing feeder (Zone 3).

Scheme IA1 is a single-line diagram with AQ-2xx series relays and with AQ-101 arc protection relays. The settings are for an incomer AQ-200 relay.


Figure. 5.3.15 - 139. Scheme IA1 (with AQ-101 arc protection relays).

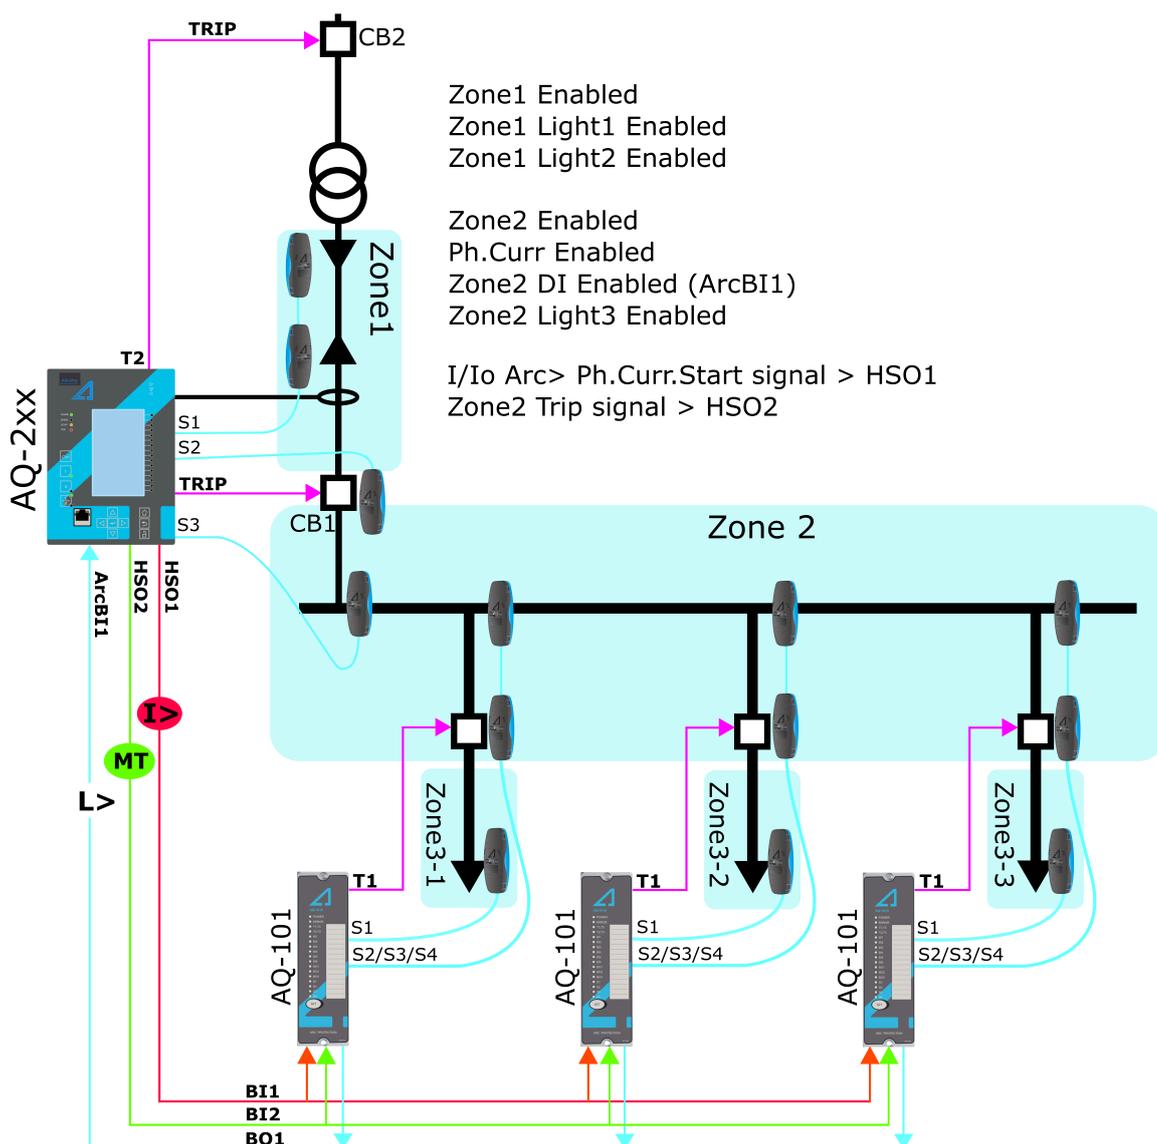

To set the zones for the AQ-2xx models sensor channels start by enabling the protected zones (in this case, Zones 1 and 2). Then define which sensor channels are sensing which zones (in this case, sensor channels S1 and S2 are protecting Zone 1). Enable Light 1 of Zone 1 as well as Light 2 of Zone 2. The sensor channel S3 deals with Zone 2. Enable Light 3 of Zone 2. The high-speed output contacts HSO1 and HSO2 have been set to send overcurrent and master trip signals to the AQ-101 arc protection relays. The AQ-100 series units send out test pulses in specific intervals to check the health of the wiring between the AQ-100 series units. The parameter *I/Io Arc > Self supervision test pulse* should be activated when connecting the AQ-100 series units to the AQ-200 series arc protection card to prevent the pulses from activating ArcBI1.

The next example is almost like the previous one: it is also a single-line diagram with AQ-2xx series relays. However, this time each outgoing feeder has an AQ-2xx protection relay instead of an AQ-101 arc protection relay.

Figure. 5.3.15 - 140. Scheme IA1 (with AQ-200 protection relays).

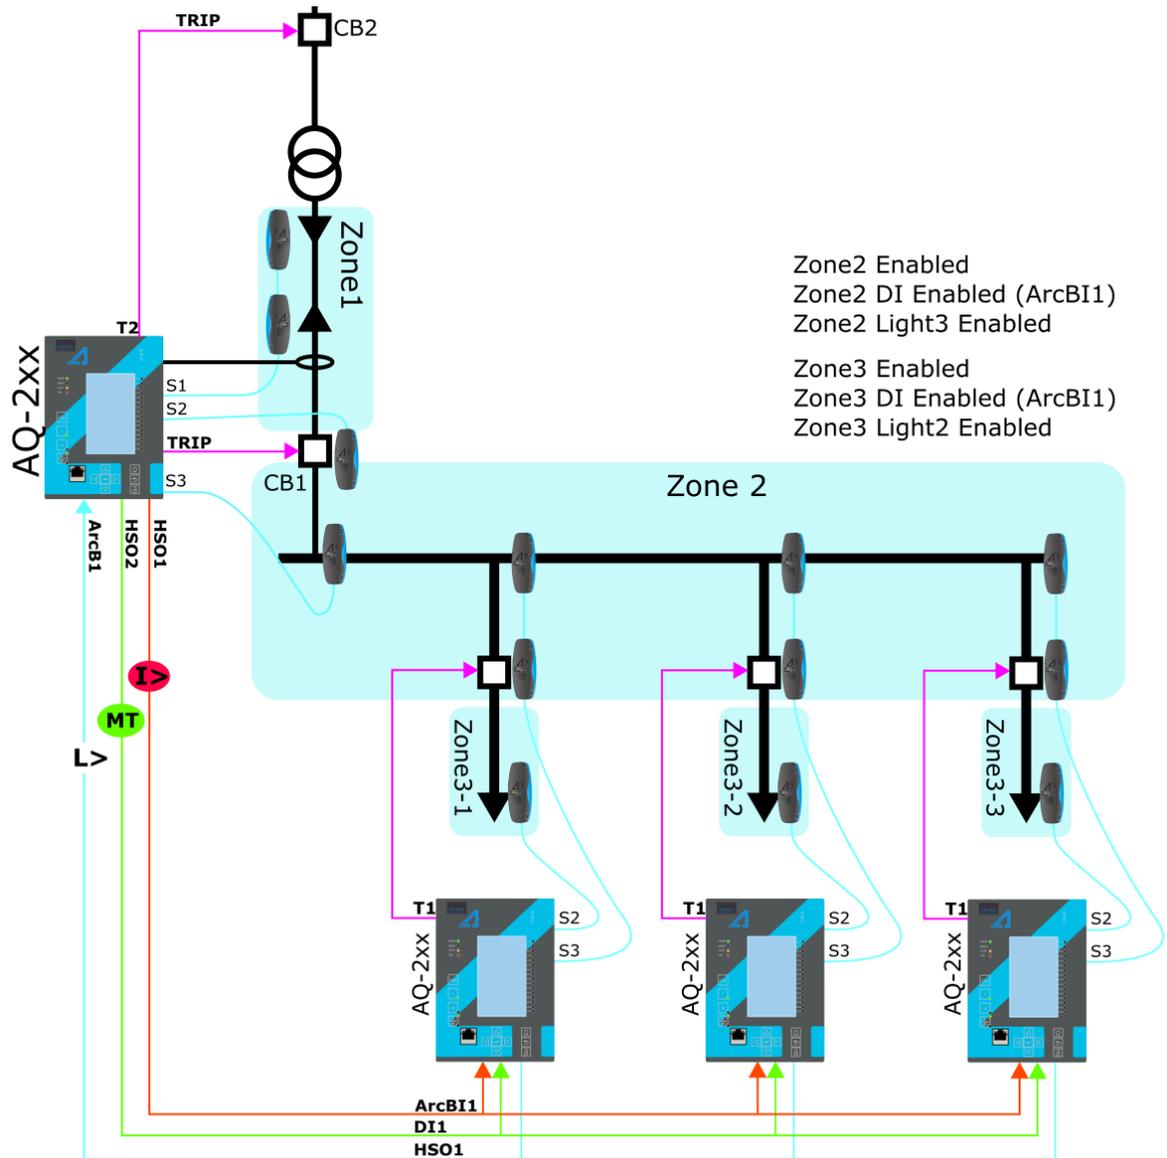

The settings for the relay supervising the incoming feeder are the same as in the first example. The relays supervising the busbar and the outgoing feeder, however, have a different setting. Both Zones 2 and 3 need to be enabled as there are sensors connected to both Zone 2 and 3 starts. Sensors connected to the channel S3 are in Zone 2. Then enable Light 3 of Zone 2. The sensor connected to the channel S2 is in Zone 3. Then enable Light 2 of Zone 3.

If any of the channels have a pressure sensing sensor, enable it the same way as the regular light sensors. If either phase overcurrent or residual overcurrent is needed for the tripping decision, they can be enabled in the same way as light sensors in the zone. When a current channel is enabled, the measured current needs to be above the set current limit in addition to light sensing.

### Measured input

Arc protection uses samples based on current measurements. If the required number of samples is found to be above the setting limit, the current condition activates. The arc protection can alternatively use either phase currents or residual currents in the tripping decision.

## General settings

The following general settings define the general behavior of the function. These settings are static i.e. it is not possible to change them by editing the setting group.

Table. 5.3.15 - 107. General settings of the function.

Name	Description	Range	Step	Default
Channel 1 sensors	Defines the amount of sensors connected to channel 1/2/3/4.	0: No sensors 1: 1 sensor 2: 2 sensors 3: 3 sensors	-	1: No sensors
Channel 2 sensors				
Channel 3 sensors				
Channel 4 sensors				
Channel 1 sensor status	Displays the status of the sensor channel. If amount of sensors connected to the channel don't match with "Channel 1/2/3/4 sensors" setting, this parameter will go to "Configuration fault" state.	0: Sensors OK 1: Configuration fault state	-	-
Channel 2 sensor status				
Channel 3 sensor status				
Channel 4 sensor status				

## Pick-up

The pick-up of each zone of the  $I_{arc} > I_0$  function is controlled by one of the following: the phase current pick-up setting, the residual current pick-up setting, or the sensor channels. The pick-up setting depends on which of these are activated in the zone.

Table. 5.3.15 - 108. Enabled Zone pick-up settings.

Name	Description	Range	Step	Default
Phase current pick-up	The phase current measurement's pick-up value (in p.u.).	0.05...40.00 x $I_n$	0.01 x $I_n$	1.2 x $I_n$
I0 input selection	Selects the residual current channel (I01 or I02).	0: None 1: I01 2: I02	-	0: None
Res.current pick-up	The residual current measurement's pick-up value (in p.u.).	0.05...40.00 x $I_{0n}$	0.01 x $I_{0n}$	1.2 x $I_{0n}$
Zone1/2/3/4 Enabled	Enables the chosen zone. Up to 4 zones can be enabled.	0: Disabled 1: Enabled	-	0: Disabled
Zone1/2/3/4 Ph. curr. Enabled	The phase overcurrent allows the zone to trip when light is detected.	0: Disabled 1: Enabled	-	0: Disabled
Zone1/2/3/4 Res. curr. Enabled	The residual overcurrent allows the zone to trip when light is detected.	0: Disabled 1: Enabled	-	0: Disabled

Name	Description	Range	Step	Default
Zone1/2/3/4 Light 1 Enabled	Light detected in sensor channel 1 trips the zone.	0: Disabled 1: Enabled	-	0: Disabled
Zone1/2/3/4 Light 2 Enabled	Light detected in sensor channel 2 trips the zone.	0: Disabled 1: Enabled	-	0: Disabled
Zone1/2/3/4 Light 3 Enabled	Light detected in sensor channel 3 trips the zone.	0: Disabled 1: Enabled	-	0: Disabled
Zone1/2/3/4 Light 4 Enabled	Light detected in sensor channel 4 trips the zone.	0: Disabled 1: Enabled	-	0: Disabled
Zone1/2/3/4 Pres. 1 Enabled	Pressure detected in sensor channel 1 trips the zone.	0: Disabled 1: Enabled	-	0: Disabled
Zone1/2/3/4 Pres. 2 Enabled	Pressure detected in sensor channel 2 trips the zone.	0: Disabled 1: Enabled	-	0: Disabled
Zone1/2/3/4 Pres. 3 Enabled	Pressure detected in sensor channel 3 trips the zone.	0: Disabled 1: Enabled	-	0: Disabled
Zone1/2/3/4 Pres. 4 Enabled	Pressure detected in sensor channel 4 trips the zone.	0: Disabled 1: Enabled	-	0: Disabled
Zone1/2/3/4 DI Enabled	Arc protection option card digital input has to be active for the zone to trip.	0: Disabled 1: Enabled	-	0: Disabled

The pick-up activation of the function is not directly equal to the TRIP signal generation of the function. The TRIP signal is allowed if the blocking condition is not active.

## Read-only parameters

The relay's *Info* page displays useful, real-time information on the state of the protection function. It is accessed either through the relay's HMI display, or through the setting tool software when it is connected to the relay and its Live Edit mode is active.

Table. 5.3.15 - 109. Information displayed by the function.

Name	Range	Step	Description
I/O Arc> condition	0: Z1 Trip 1: Z1 Blocked 2: Z2 Trip 3: Z2 Blocked 4: Z3 Trip 5: Z3 Blocked 6: Z4 Trip 7:Z4 Blocked	-	Displays status of the protection function.
Sensor status	0: Ph Curr Blocked 1: Ph Curr Start 2: Res Curr Blocked 3: Res Curr Start 4: Channel1 Light 5: Channel1 Pressure 6: Channel2 Light 7: Channel2 Pressure 8: Channel3 Light 9: Channel3 Pressure 10: Channel4 Ligh t11: Channel4 Pressure 12: Digital input 13: I/O Arc> Sensor 1 Fault 14: I/O Arc> Sensor 2 Fault 15: I/O Arc> Sensor 3 Fault 16: I/O Arc> Sensor 4 Fault 17: I/O Arc> I/O-unit Fault	-	Displays the general status of sensors.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a TRIP signal is generated.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Events and registers

The arc fault protection function (abbreviated "ARC" in event block names) generates events and registers from the status changes in START, TRIP, and BLOCKED. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.3.15 - 110. Event codes.

Event number	Event channel	Event block name	Event code	Description
4736	74	ARC1	0	Zone 1 Trip ON
4737	74	ARC1	1	Zone 1 Trip OFF
4738	74	ARC1	2	Zone 1 Block ON
4739	74	ARC1	3	Zone 1 Block OFF
4740	74	ARC1	4	Zone 2 Trip ON
4741	74	ARC1	5	Zone 2 Trip OFF
4742	74	ARC1	6	Zone 2 Block ON
4743	74	ARC1	7	Zone 2 Block OFF
4744	74	ARC1	8	Zone 3 Trip ON
4745	74	ARC1	9	Zone 3 Trip OFF
4746	74	ARC1	10	Zone 3 Block ON
4747	74	ARC1	11	Zone 3 Block OFF
4748	74	ARC1	12	Zone 4 Trip ON
4749	74	ARC1	13	Zone 4 Trip OFF
4750	74	ARC1	14	Zone 4 Block ON
4751	74	ARC1	15	Zone 4 Block OFF
4752	74	ARC1	16	Phase current Blocked ON
4753	74	ARC1	17	Phase current Blocked OFF
4754	74	ARC1	18	Phase current Start ON

Event number	Event channel	Event block name	Event code	Description
4755	74	ARC1	19	Phase current Start OFF
4756	74	ARC1	20	Residual current Blocked ON
4757	74	ARC1	21	Residual current Blocked OFF
4758	74	ARC1	22	Residual current Start ON
4759	74	ARC1	23	Residual current Start OFF
4760	74	ARC1	24	Channel 1 Light ON
4761	74	ARC1	25	Channel 1 Light OFF
4762	74	ARC1	26	Channel 1 Pressure ON
4763	74	ARC1	27	Channel 1 Pressure OFF
4764	74	ARC1	28	Channel 2 Light ON
4765	74	ARC1	29	Channel 2 Light OFF
4766	74	ARC1	30	Channel 2 Pressure ON
4767	74	ARC1	31	Channel 2 Pressure OFF
4768	74	ARC1	32	Channel 3 Light ON
4769	74	ARC1	33	Channel 3 Light OFF
4770	74	ARC1	34	Channel 3 Pressure ON
4771	74	ARC1	35	Channel 3 Pressure OFF
4772	74	ARC1	36	Channel 4 Light ON
4773	74	ARC1	37	Channel 4 Light OFF
4774	74	ARC1	38	Channel 4 Pressure ON
4775	74	ARC1	39	Channel 4 Pressure OFF
4776	74	ARC1	40	DI Signal ON
4777	74	ARC1	41	DI Signal OFF
4778	74	ARC1	42	I/O Arc> Sensor 1 Fault ON
4779	74	ARC1	43	I/O Arc> Sensor 1 Fault OFF
4780	74	ARC1	44	I/O Arc> Sensor 2 Fault ON
4781	74	ARC1	45	I/O Arc> Sensor 2 Fault OFF
4782	74	ARC1	46	I/O Arc> Sensor 3 Fault ON
4783	74	ARC1	47	I/O Arc> Sensor 3 Fault OFF
4784	74	ARC1	48	I/O Arc> Sensor 4 Fault ON
4785	74	ARC1	49	I/O Arc> Sensor 4 Fault OFF
4786	74	ARC1	50	I/O Arc> I/O-unit Fault ON
4787	74	ARC1	51	I/O Arc> I/O-unit Fault OFF

The function registers its operation into the last twelve (12) time-stamped registers. The table below presents the structure of the function's register content.

Table. 5.3.15 - 111. Register content.


Date and time	Event code	Phase A current	Phase B current	Phase C current	Residual current	Active sensors	Used SG
dd.mm.yyyy hh:mm:ss.mss	4736-4787 Descr.	Trip -20ms averages	Trip -20ms averages	Trip -20ms averages	Trip -20ms averages	1...4	Setting group 1...8 active

### 5.3.16 Programmable stage (PGx>/<; 99)

The programmable stage is a stage that the user can program to create more advanced applications, either as an individual stage or together with programmable logic. The relay has ten programmable stages, and each can be set to follow one to three analog measurements. The programmable stages have three available pick up terms options: overX, underX and rate-of-change of the selected signal. Each stage includes a definite time delay to trip after a pick-up has been triggered.

The programmable stage cycle time is 5 ms. The pick-up delay depends on which analog signal is used as well as its refresh rate (typically under a cycle in a 50 Hz system).

The number of programmable stages to be used is set in the *INFO* tab. When this function has been set as "Activated", the number of programmable stages can be set anywhere between one (1) and ten (10) depending on how many the application needs. In the image below, the number of programmable stages have been set to two which makes PS1 and PS2 to appear. Inactive stages are hidden until they are activated.

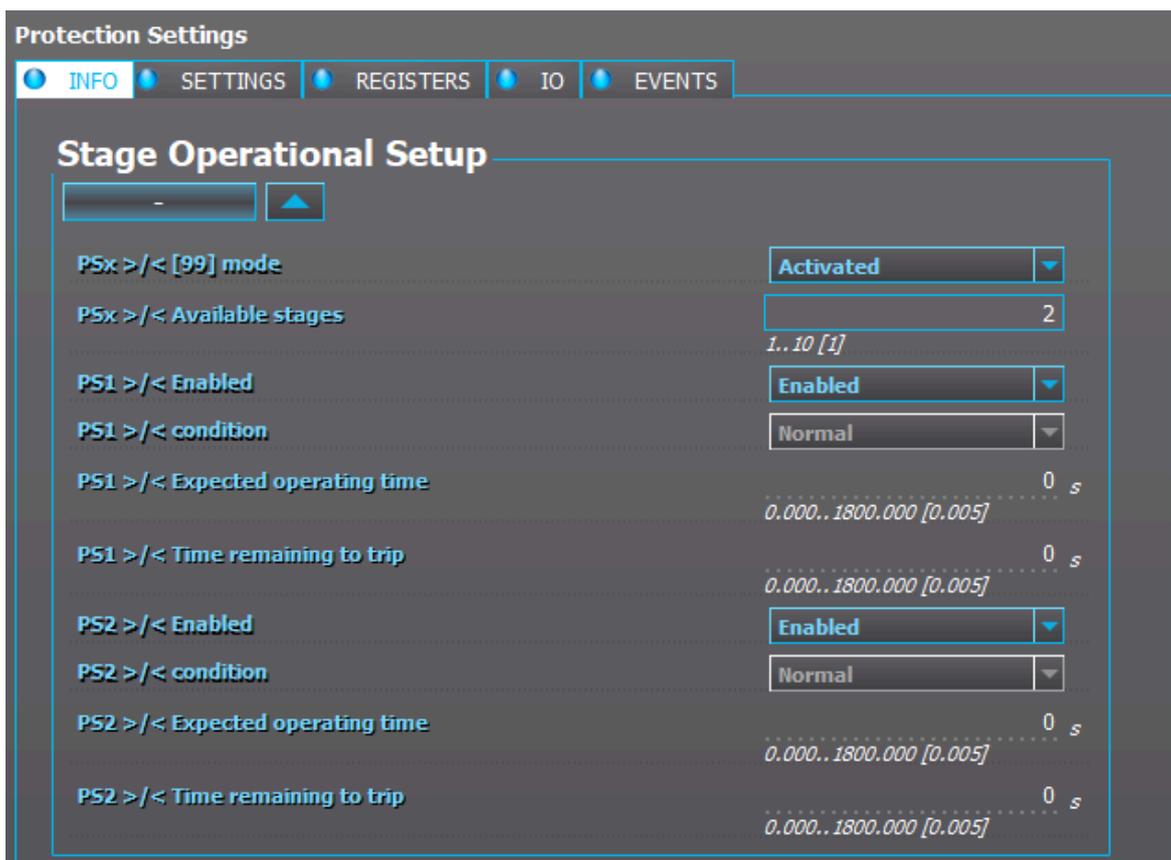

Please note that setting the number of available stages does not activate those stages, as they also need to be enabled individually with the *PSx >/< Enabled* parameter. When enabled an active stage shows its current state (condition), the expected operating time and the time remaining to trip under the activation parameters. If a stage is not active the *PSx >/< condition* parameter will merely display "Disabled".


## Setting up programmable stages

Programmable stages can be set to follow one, two or three analog measurements with the *PSx >/< Measurement setting* parameter. The user must choose a measurement signal value to be compared to the set value, and possibly also set a scaling for the signal. The image below is an example of scaling: a primary neutral voltage has been scaled to a percentage value for easier handling when setting up the comparator.

The scaling factor was calculated by taking the inverse value of a 20 kV system:

$$k = \frac{1}{20\,000\text{ V}/\sqrt{3}} = 0.008\,66$$

When this multiplier is in use, the full earth fault neutral voltage is 11 547 V primary which is then multiplied with the above-calculated scaling factor, inverting the final result to 100%. This way a pre-processed signal is easier to set, although it is also possible to just use the scaling factor of 1.0 and set the desired pick-up limit as the primary voltage. Similarly, any chosen measurement value can be scaled to the desired form.

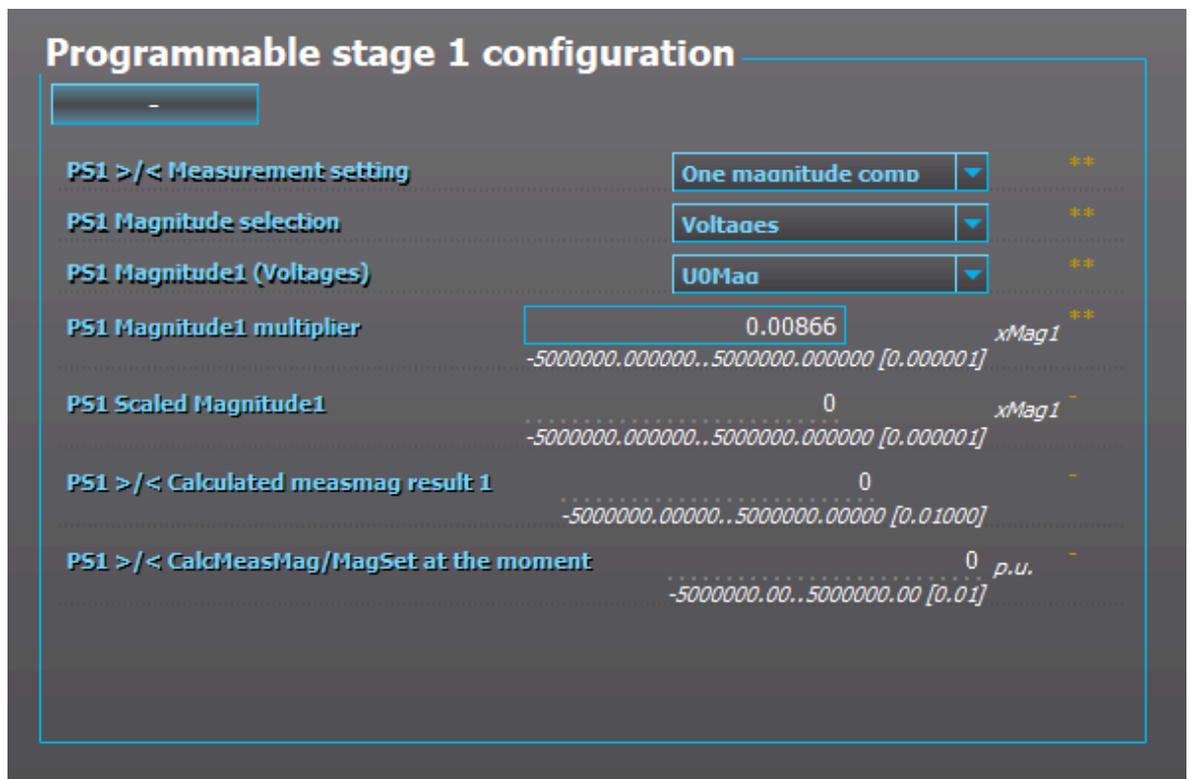


When two or three signals are chosen for comparison, an additional signal (*PSx Magnitude handling*) setting appears. From its drop-down menu the user chooses how the signals are pre-processed for comparison. The table below presents the available modes for a two-signal comparison.

Mode	Description
0: Mag1 x Mag2	Multiplies Signal 1 by Signal 2. The comparison uses the product of this calculation.
1: Mag1 / Mag2	Divides Signal 1 by Signal 2. The comparison uses the product of this calculation.
2: Max (Mag1, Mag2)	The bigger value of the chosen signals is used in the comparison.
3: Min (Mag1, Mag2)	The smaller value of the chosen signals is used in the comparison.



Mode	Description
4: Mag1 AND Mag2 AND Mag3	All of the signals need to fulfill the pick-up condition. Each signal has their own pick-up setting.
5: (Mag1 OR Mag2) AND Mag3	Signals 1 OR 2 AND 3 need to fulfill the pick-up condition. Each signal has their own pick-up setting.

The image below is an example of setting an analog comparison with three signals. The stage will trip if Signal 1 or Signal 2 as well as Signal 3 fulfill the pick-up condition.

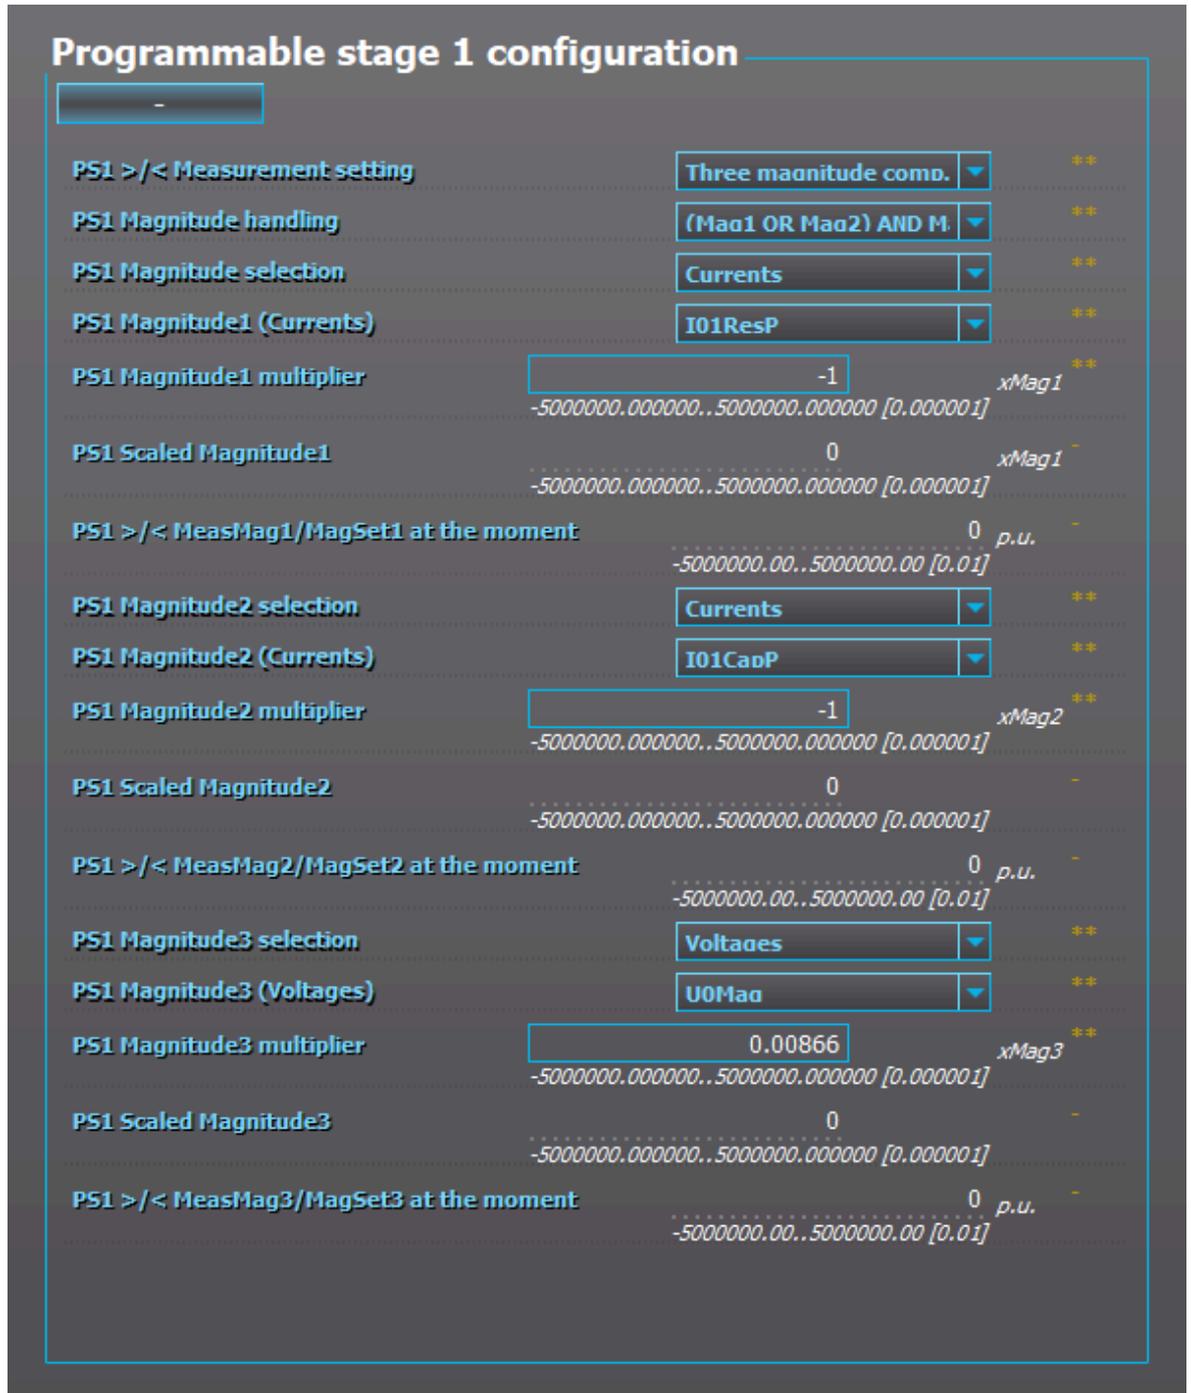

The settings for different comparisons are in the setting groups. This means that each signal parameter can be changed by changing the setting group.

When setting the comparators, the user must first choose a comparator mode. The following modes are available:

Mode	Description
0: Over >	<b>Greater than.</b> If the measured signal is greater than the set pick-up level, the comparison condition is fulfilled.
1: Over (abs) >	<b>Greater than (absolute).</b> If the absolute value of the measured signal is greater than the set pick-up level, the comparison condition is fulfilled.
2: Under <	<b>Less than.</b> If the measured signal is less than the set pick-up level, the comparison condition is fulfilled. The user can also set a blocking limit: the comparison is not active when the measured value is less than the set blocking limit.
3: Under (abs) <	<b>Less than (absolute).</b> If the absolute value of the measured signal is less than the set pick-up level, the comparison condition is fulfilled. The user can also set a blocking limit: the comparison is not active when the measured value is less than the set blocking limit.
4: Delta set (%) +/- >	<b>Relative change over time.</b> If the measured signal changes more than the set relative pick-up value in 20 ms, the comparison condition is fulfilled. The condition is dependent on direction.
5: Delta abs (%) >	<b>Relative change over time (absolute).</b> If the measured signal changes more than the set relative pick-up value in 20 ms in either direction, the comparison condition is fulfilled. The condition is not dependent on direction.
6: Delta +/- measval	<b>Change over time.</b> If the measured signal changes more than the set pick-up value in 20 ms, the comparison condition is fulfilled. The condition is dependent on direction.
7: Delta abs measval	<b>Change over time (absolute).</b> If the measured signal changes more than the set pick-up value in 20 ms in either direction, the comparison condition is fulfilled. The condition is not dependent on direction.

The pick-up level is set individually for each comparison. When setting up the pick-up level, the user needs to take into account the modes in use as well as the desired action. The pick-up limit can be set either as positive or as negative. Each pick-up level has a separate hysteresis setting which is 3 % by default.

The user can set the operating and releasing time delays for each stage.

## Analog signals

The numerous analog signals have been divided into categories to help the user find the desired value.

### Currents

IL1	Description
IL1 ff (p.u.)	IL1 Fundamental frequency RMS value (in p.u.)
IL1 2 <sup>nd</sup> h.	IL1 2 <sup>nd</sup> harmonic value (in p.u.)
IL1 3 <sup>rd</sup> h.	IL1 3 <sup>rd</sup> harmonic value (in p.u.)
IL1 4 <sup>th</sup> h.	IL1 4 <sup>th</sup> harmonic value (in p.u.)
IL1 5 <sup>th</sup> h.	IL1 5 <sup>th</sup> harmonic value (in p.u.)
IL1 7 <sup>th</sup> h.	IL1 7 <sup>th</sup> harmonic value (in p.u.)
IL1 9 <sup>th</sup> h.	IL1 9 <sup>th</sup> harmonic value (in p.u.)
IL1 11 <sup>th</sup> h.	IL1 11 <sup>th</sup> harmonic value (in p.u.)
IL1 13 <sup>th</sup> h.	IL1 13 <sup>th</sup> harmonic value (in p.u.)

IL1	Description
IL1 15 <sup>th</sup> h.	IL1 15 <sup>th</sup> harmonic value (in p.u.)
IL1 17 <sup>th</sup> h.	IL1 17 <sup>th</sup> harmonic value (in p.u.)
IL1 19 <sup>th</sup> h.	IL1 19 <sup>th</sup> harmonic value (in p.u.)
<b>IL2</b>	<b>Description</b>
IL2 ff (p.u.)	IL2 Fundamental frequency RMS value (in p.u.)
IL2 2 <sup>nd</sup> h.	IL2 2 <sup>nd</sup> harmonic value (in p.u.)
IL2 3 <sup>rd</sup> h.	IL2 3 <sup>rd</sup> harmonic value (in p.u.)
IL2 4 <sup>th</sup> h.	IL2 4 <sup>th</sup> harmonic value (in p.u.)
IL2 5 <sup>th</sup> h.	IL2 5 <sup>th</sup> harmonic value (in p.u.)
IL2 7 <sup>th</sup> h.	IL2 7 <sup>th</sup> harmonic value (in p.u.)
IL2 9 <sup>th</sup> h.	IL2 9 <sup>th</sup> harmonic value (in p.u.)
IL2 11 <sup>th</sup> h.	IL2 11 <sup>th</sup> harmonic value (in p.u.)
IL2 13 <sup>th</sup> h.	IL2 13 <sup>th</sup> harmonic value (in p.u.)
IL2 15 <sup>th</sup> h.	IL2 15 <sup>th</sup> harmonic value (in p.u.)
IL2 17 <sup>th</sup> h.	IL2 17 <sup>th</sup> harmonic value (in p.u.)
IL2 19 <sup>th</sup> h.	IL2 19 <sup>th</sup> harmonic value (in p.u.)
<b>IL3</b>	<b>Description</b>
IL3 ff (p.u.)	IL3 Fundamental frequency RMS value (in p.u.)
IL3 2 <sup>nd</sup> h.	IL3 2 <sup>nd</sup> harmonic value (in p.u.)
IL3 3 <sup>rd</sup> h.	IL3 3 <sup>rd</sup> harmonic value (in p.u.)
IL3 4 <sup>th</sup> h.	IL3 4 <sup>th</sup> harmonic value (in p.u.)
IL3 5 <sup>th</sup> h.	IL3 5 <sup>th</sup> harmonic value (in p.u.)
IL3 7 <sup>th</sup> h.	IL3 7 <sup>th</sup> harmonic value (in p.u.)
IL3 9 <sup>th</sup> h.	IL3 9 <sup>th</sup> harmonic value (in p.u.)
IL3 11 <sup>th</sup> h.	IL3 11 <sup>th</sup> harmonic value (in p.u.)
IL3 13 <sup>th</sup> h.	IL3 13 <sup>th</sup> harmonic value (in p.u.)
IL3 15 <sup>th</sup> h.	IL3 15 <sup>th</sup> harmonic value (in p.u.)
IL3 17 <sup>th</sup> h.	IL3 17 <sup>th</sup> harmonic value (in p.u.)
IL3 19 <sup>th</sup> h.	IL3 19 <sup>th</sup> harmonic value (in p.u.)
<b>I01</b>	<b>Description</b>
I01 ff (p.u.)	I01 Fundamental frequency RMS value (in p.u.)
I01 2 <sup>nd</sup> h.	I01 2 <sup>nd</sup> harmonic value (in p.u.)
I01 3 <sup>rd</sup> h.	I01 3 <sup>rd</sup> harmonic value (in p.u.)
I01 4 <sup>th</sup> h.	I01 4 <sup>th</sup> harmonic value (in p.u.)

IL1	Description
I01 5 <sup>th</sup> h.	I01 5 <sup>th</sup> harmonic value (in p.u.)
I01 7 <sup>th</sup> h.	I01 7 <sup>th</sup> harmonic value (in p.u.)
I01 9 <sup>th</sup> h.	I01 9 <sup>th</sup> harmonic value (in p.u.)
I01 11 <sup>th</sup> h.	I01 11 <sup>th</sup> harmonic value (in p.u.)
I01 13 <sup>th</sup> h.	I01 13 <sup>th</sup> harmonic value (in p.u.)
I01 15 <sup>th</sup> h.	I01 15 <sup>th</sup> harmonic value (in p.u.)
I01 17 <sup>th</sup> h.	I01 17 <sup>th</sup> harmonic value (in p.u.)
I01 19 <sup>th</sup> h.	I01 19 <sup>th</sup> harmonic value (in p.u.)
IL02	Description
I02 ff (p.u.)	I02 Fundamental frequency RMS value (in p.u.)
I02 2 <sup>nd</sup> h.	I02 2 <sup>nd</sup> harmonic value (in p.u.)
I02 3 <sup>rd</sup> h.	I02 3 <sup>rd</sup> harmonic value (in p.u.)
I02 4 <sup>th</sup> h.	I02 4 <sup>th</sup> harmonic value (in p.u.)
I02 5 <sup>th</sup> h.	I02 5 <sup>th</sup> harmonic value (in p.u.)
I02 7 <sup>th</sup> h.	I02 7 <sup>th</sup> harmonic value (in p.u.)
I02 9 <sup>th</sup> h.	I02 9 <sup>th</sup> harmonic value (in p.u.)
I02 11 <sup>th</sup> h.	I02 11 <sup>th</sup> harmonic value (in p.u.)
I02 13 <sup>th</sup> h.	I02 13 <sup>th</sup> harmonic value (in p.u.)
I02 15 <sup>th</sup> h.	I02 15 <sup>th</sup> harmonic value (in p.u.)
I02 17 <sup>th</sup> h.	I02 17 <sup>th</sup> harmonic value (in p.u.)
I02 19 <sup>th</sup> h.	I02 19 <sup>th</sup> harmonic value (in p.u.)
TRMS	Description
IL1 TRMS	IL1 TRMS value (in p.u.)
IL2 TRMS	IL2 TRMS value (in p.u.)
IL3 TRMS	IL3 TRMS value (in p.u.)
I01 TRMS	I01 TRMS value (in p.u.)
I02 TRMS	I02 TRMS value (in p.u.)
Calculated	Description
I0Z Mag	Zero sequence current value (in p.u.)
I0CALC Mag	Calculated I0 value (in p.u.)
I1 Mag	Positive sequence current value (in p.u.)
I2 Mag	Negative sequence current value (in p.u.)
IL1 Ang	IL1 angle of current
IL2 Ang	IL2 angle of current
IL3 Ang	IL3 angle of current
I01 Ang	I01 angle of current

IL1	Description
I02 Ang	I02 angle of current
I0CALC Ang	Angle of calculated residual current
I1 Ang	Angle of positive sequence current
I2 Ang	Angle of negative sequence current
I01ResP	I01 primary current of a current-resistive component
I01CapP	I01 primary current of a current-capacitive component
I01ResS	I01 secondary current of a current-resistive component
I01CapS	I01 secondary current of a current-capacitive component
I02ResP	I02 primary current of a current-resistive component
I02CapP	I02 primary current of a current-capacitive component

### Voltages

Phase-to-phase voltages	Description
UL12Mag	UL12 Primary voltage V
UL23Mag	UL23 Primary voltage V
UL31Mag	UL31 Primary voltage V
Phase-to-neutral voltages	Description
UL1Mag	UL1 Primary voltage V
UL2Mag	UL2 Primary voltage V
UL3Mag	UL3 Primary voltage V
U0Mag	U0 Primary voltage V
Angles	Description
UL12Ang	UL12 angle
UL23Ang	UL23 angle
UL31Ang	UL31 angle
UL1Ang	UL1 angle
UL2Ang	UL2 angle
UL3Ang	UL3 angle
U0Ang	U0 angle
Calculated	Description
U0CalcMag	Calculated residual voltage
U1 pos.seq.V Mag	Positive sequence voltage
U2 neg.seq.V Mag	Negative sequence voltage
U0CalcAng	Calculated residual voltage angle
U1 pos.seq.V Ang	Positive sequence voltage angle
U2 neg.seq.V Ang	Negative sequence voltage angle

### Powers

Name	Description
S3PH	Three-phase apparent power S (kVA)
P3PH	Three-phase active power P (kW)
Q3PH	Three-phase reactive power Q (kvar)
tanfi3PH	Three-phase active power direction
cosfi3PH	Three-phase reactive power direction
SL1	Apparent power L1 S (kVA)
PL1	Active power L1 P (kW)
QL1	Reactive power L1 Q (kVar)
tanfil1	Phase active power direction L1
cosfil1	Phase reactive power direction L1
SL2	Apparent power L2 S (kVA)
PL2	Active power L2 P (kW)
QL2	Reactive power L2 Q (kVar)
tanfil2	Phase active power direction L2
cosfil2	Phase reactive power direction L2
SL3	Apparent power L3 S (kVA)
PL3	Active power L3 P (kW)
QL3	Reactive power L3 Q (kVar)
tanfil3	Phase active power direction L3
cosfil3	Phase reactive power direction L3

#### Impedance and admittance (ZRX & YGB)

Name	Description
RL12Pri	Resistance R L12 primary ( $\Omega$ )
XL12Pri	Reactance X L12 primary ( $\Omega$ )
RL23Pri	Resistance R L23 primary ( $\Omega$ )
XL23Pri	Reactance X L23 primary ( $\Omega$ )
RL31Pri	Resistance R L31 primary ( $\Omega$ )
XL31Pri	Reactance X L31 primary ( $\Omega$ )
RL12Sec	Resistance R L12 secondary ( $\Omega$ )
XL12Sec	Reactance X L12 secondary ( $\Omega$ )
RL23Sec	Resistance R L23 secondary ( $\Omega$ )
XL23Sec	Reactance X L23 secondary ( $\Omega$ )
RL31Sec	Resistance R L31 secondary ( $\Omega$ )
XL31Sec	Reactance X L31 secondary ( $\Omega$ )
Z12Pri	Impedance Z L12 primary ( $\Omega$ )
Z23Pri	Impedance Z L23 primary ( $\Omega$ )
Z31Pri	Impedance Z L31 primary ( $\Omega$ )

Name	Description
Z12Sec	Impedance Z L12 secondary ( $\Omega$ )
Z23Sec	Impedance Z L23 secondary ( $\Omega$ )
Z31Sec	Impedance Z L31 secondary ( $\Omega$ )
Z12Angle	Impedance Z L12 angle
Z23Angle	Impedance Z L23 angle
Z31Angle	Impedance Z L31 angle
RL1Pri	Resistance R L1 primary ( $\Omega$ )
XL1Pri	Reactance X L1 primary ( $\Omega$ )
RL2Pri	Resistance R L2 primary ( $\Omega$ )
XL2Pri	Reactance X L2 primary ( $\Omega$ )
RL3Pri	Resistance R L3 primary ( $\Omega$ )
XL3Pri	Reactance X L3 primary ( $\Omega$ )
RL1Sec	Resistance R L1 secondary ( $\Omega$ )
XL1Sec	Reactance X L1 secondary ( $\Omega$ )
RL2Sec	Resistance R L2 secondary ( $\Omega$ )
XL2Sec	Reactance X L2 secondary ( $\Omega$ )
RL3Sec	Resistance R L3 secondary ( $\Omega$ )
XL3Sec	Reactance X L3 secondary ( $\Omega$ )
Z1Pri	Impedance Z L1 primary ( $\Omega$ )
Z2Pri	Impedance Z L2 primary ( $\Omega$ )
Z3Pri	Impedance Z L3 primary ( $\Omega$ )
Z1Sec	Impedance Z L1 secondary ( $\Omega$ )
Z2Sec	Impedance Z L2 secondary ( $\Omega$ )
Z3Sec	Impedance Z L3 secondary ( $\Omega$ )
Z1Angle	Impedance Z L1 angle
Z2Angle	Impedance Z L2 angle
Z3Angle	Impedance Z L3 angle
RSeqPri	Positive Resistance R primary ( $\Omega$ )
XSeqPri	Positive Reactance X primary ( $\Omega$ )
RSeqSec	Positive Resistance R secondary ( $\Omega$ )
XSeqSec	Positive Reactance X secondary ( $\Omega$ )
ZSeqPri	Positive Impedance Z primary ( $\Omega$ )
ZSeqSec	Positive Impedance Z secondary ( $\Omega$ )
ZSeqAngle	Positive Impedance Z angle
GL1Pri	Conductance G L1 primary (mS)
BL1Pri	Susceptance B L1 primary (mS)
GL2Pri	Conductance G L2 primary (mS)
BL2Pri	Susceptance B L2 primary (mS)

Name	Description
GL3Pri	Conductance G L3 primary (mS)
BL3Pri	Susceptance B L3 primary (mS)
GL1Sec	Conductance G L1 secondary (mS)
BL1Sec	Susceptance B L1 secondary (mS)
GL2Sec	Conductance G L2 secondary (mS)
BL2Sec	Susceptance B L2 secondary (mS)
GL3Sec	Conductance G L3 secondary (mS)
BL3Sec	Susceptance B L3 secondary (mS)
YL1PriMag	Admittance Y L1 primary (mS)
YL2PriMag	Admittance Y L2 primary (mS)
YL3PriMag	Admittance Y L3 primary (mS)
YL1SecMag	Admittance Y L1 secondary (mS)
YL2SecMag	Admittance Y L2 secondary (mS)
YL3SecMag	Admittance Y L3 secondary (mS)
YL1Angle	Admittance Y L1 angle
YL2Angle	Admittance Y L2 angle
YL3Angle	Admittance Y L3 angle
G0Pri	Conductance G0 primary (mS)
B0Pri	Susceptance B0 primary (mS)
G0Sec	Conductance G0 secondary (mS)
B0Sec	Susceptance B0 secondary (mS)
Y0Pri	Admittance Y0 primary (mS)
Y0Sec	Admittance Y0 secondary (mS)
Y0Angle	Admittance Y0 angle

### Others

Name	Description
System f.	System frequency
Ref f1	Reference frequency 1
Ref f2	Reference frequency 2
M Thermal T	Motor thermal temperature
F Thermal T	Feeder thermal temperature
T Thermal T	Transformer thermal temperature
RTD meas 1...16	RTD measurement channels 1...16
Ext RTD meas 1...8	External RTD measurement channels 1...8 (ADAM)
mA input 7,8,15,16	mA input channels 7, 8, 15, 16
ASC 1...4	Analog scaled curves 1...4

The outputs of the function are the START, TRIP and BLOCKED signals. The overvoltage function uses a total of eight (8) separate setting groups which can be selected from one common source.

The function can operate on instant or time-delayed mode. Definite time (DT) delay can be selected in the In time-delayed mode.

The inputs for the function are the following:

- operating mode selections
- setting parameters
- digital inputs and logic signals
- measured and pre-processed magnitudes.

The function outputs the START, TRIP and BLOCKED signals which can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the three (3) output signals. In the instant operating mode the function outputs START and TRIP events simultaneously with an equivalent time stamp. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the START, TRIP and BLOCKED events.

## Pick-up

The *Pick-up setting Mag* setting parameter controls the pick-up of the PGx>/< function. This defines the maximum or minimum allowed measured magnitude before action from the function. The function constantly calculates the ratio between the set and the measured magnitudes. The user can set the reset hysteresis in the function (by default 3 %). It is always relative to the *Pick-up setting Mag* value.

Table. 5.3.16 - 112. Pick-up settings.

Name	Description	Range	Step	Default
PS# Pick-up setting Mag#/calc >/<	Pick-up magnitude	-5 000 000.0000...5 000 000.0000	0.0001	0.01
PS# Setting hysteresis Mag#	Setting hysteresis	0.0000...50.0000%	0.0001%	3%
Definite operating time delay	Delay setting	0.000...1800.000s	0.005s	0.04s
Release time delays	Pick-up release delay	0.000...1800.000s	0.005s	0.06s

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active.

The user can reset characteristics through the application. The default setting is a 60 ms delay; the time calculation is held during the release time.

In the release delay option the operating time counter calculates the operating time during the release. When using this option the function does not trip if the input signal is not re-activated while the release time count is on-going.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and the release time characteristics are processed similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup values of the selected signal and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Events and registers

The programmable stage function (abbreviated "PGS" in event block names) generates events and registers from the status changes in START, TRIP, and BLOCKED. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.3.16 - 113. Event codes.

Event number	Event channel	Event block name	Event code	Description
8576	134	PGS1	0	PS1 >/< Start ON
8577	134	PGS1	1	PS1 >/< Start OFF
8578	134	PGS1	2	PS1 >/< Trip ON
8579	134	PGS1	3	PS1 >/< Trip OFF
8580	134	PGS1	4	PS1 >/< Block ON
8581	134	PGS1	5	PS1 >/< Block OFF
8582	134	PGS1	6	PS2 >/< Start ON
8583	134	PGS1	7	PS2 >/< Start OFF
8584	134	PGS1	8	PS2 >/< Trip ON
8585	134	PGS1	9	PS2 >/< Trip OFF
8586	134	PGS1	10	PS2 >/< Block ON
8587	134	PGS1	11	PS2 >/< Block OFF
8588	134	PGS1	12	PS3 >/< Start ON
8589	134	PGS1	13	PS3 >/< Start OFF
8590	134	PGS1	14	PS3 >/< Trip ON
8591	134	PGS1	15	PS3 >/< Trip OFF
8592	134	PGS1	16	PS3 >/< Block ON
8593	134	PGS1	17	PS3 >/< Block OFF
8594	134	PGS1	18	PS4 >/< Start ON
8595	134	PGS1	19	PS4 >/< Start OFF
8596	134	PGS1	20	PS4 >/< Trip ON
8597	134	PGS1	21	PS4 >/< Trip OFF
8598	134	PGS1	22	PS4 >/< Block ON
8599	134	PGS1	23	PS4 >/< Block OFF
8600	134	PGS1	24	PS5 >/< Start ON

Event number	Event channel	Event block name	Event code	Description
8601	134	PGS1	25	PS5 >/< Start OFF
8602	134	PGS1	26	PS5 >/< Trip ON
8603	134	PGS1	27	PS5 >/< Trip OFF
8604	134	PGS1	28	PS5 >/< Block ON
8605	134	PGS1	29	PS5 >/< Block OFF
8606	134	PGS1	30	reserved
8607	134	PGS1	31	reserved
8608	134	PGS1	32	PS6 >/< Start ON
8609	134	PGS1	33	PS6 >/< Start OFF
8610	134	PGS1	34	PS6 >/< Trip ON
8611	134	PGS1	35	PS6 >/< Trip OFF
8612	134	PGS1	36	PS6 >/< Block ON
8613	134	PGS1	37	PS6 >/< Block OFF
8614	134	PGS1	38	PS7 >/< Start ON
8615	134	PGS1	39	PS7 >/< Start OFF
8616	134	PGS1	40	PS7 >/< Trip ON
8617	134	PGS1	41	PS7 >/< Trip OFF
8618	134	PGS1	42	PS7 >/< Block ON
8619	134	PGS1	43	PS7 >/< Block OFF
8620	134	PGS1	44	PS8 >/< Start ON
8621	134	PGS1	45	PS8 >/< Start OFF
8622	134	PGS1	46	PS8 >/< Trip ON
8623	134	PGS1	47	PS8 >/< Trip OFF
8624	134	PGS1	48	PS8 >/< Block ON
8625	134	PGS1	49	PS8 >/< Block OFF
8626	134	PGS1	50	PS9 >/< Start ON
8627	134	PGS1	51	PS9 >/< Start OFF
8628	134	PGS1	52	PS9 >/< Trip ON
8629	134	PGS1	53	PS9 >/< Trip OFF
8630	134	PGS1	54	PS9 >/< Block ON
8631	134	PGS1	55	PS9 >/< Block OFF
8632	134	PGS1	56	PS10 >/< Start ON
8633	134	PGS1	57	PS10 >/< Start OFF
8634	134	PGS1	58	PS10 >/< Trip ON
8635	134	PGS1	59	PS10 >/< Trip OFF
8636	134	PGS1	60	PS10 >/< Block ON
8637	134	PGS1	61	PS10 >/< Block OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for START, TRIP or BLOCKED. The table below presents the structure of the function's register content.

Table. 5.3.16 - 114. Register content.

Date and time	Event code	>/< Mag#	Mag#/Set#	Trip time remaining	Used SG
dd.mm.yyyy hh:mm:ss.mss	8576-8637 Descr.	The numerical value of the magnitude	Ratio between the measured magnitude and the pick-up setting	0 ms...1800s	Setting group 1...8 active


## 5.4 Control functions

### 5.4.1 Setting group selection

All relay types support up to eight (8) separate setting groups. The Setting group selection function block controls the availability and selection of the setting groups. By default, only Setting group 1 (SG1) is active and therefore the selection logic is idle. When more than one setting group is enabled, the setting group selector logic takes control of the setting group activations based on the logic and conditions the user has programmed.

The following figure presents a simplified function block diagram of the setting group selection function.

Figure. 5.4.1 - 141. Simplified function block diagram of the setting group selection function.

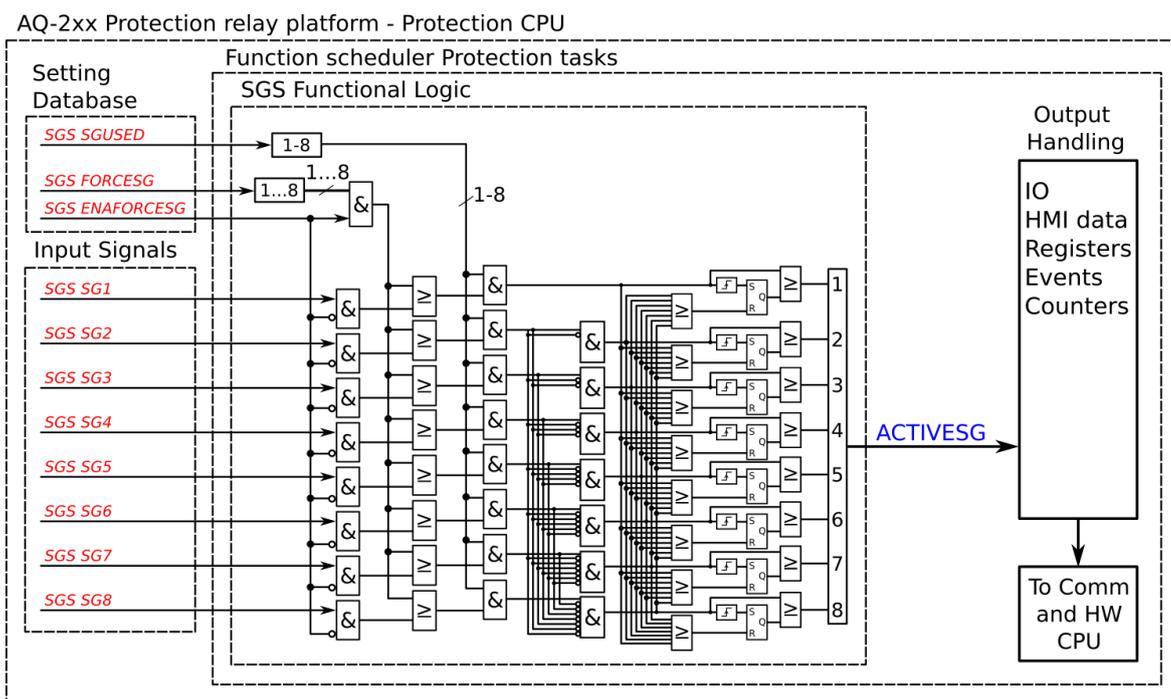


Setting group selection can be applied to each of the setting groups individually by activating one of the various internal logic inputs and connected digital inputs. The user can also force any of the setting groups on when the "Force SG change" setting is enabled by giving the wanted quantity of setting groups as a number in the communication bus or in the local HMI, or by selecting the wanted setting group from *Control* → *Setting groups*. When the forcing parameter is enabled, the automatic control of the local device is overridden and the full control of the setting groups is given to the user until the "Force SG change" is disabled again.

Setting groups can be controlled either by pulses or by signal levels. The setting group controller block gives setting groups priority values for situations when more than one setting group is controlled at the same time: the request from a higher-priority setting group is taken into use.

Setting groups follow a hierarchy in which setting group 1 has the highest priority, setting group 2 has second highest priority etc. If a static activation signal is given for two setting groups, the setting group with higher priority will be active. If setting groups are controlled by pulses, the setting group activated by pulse will stay active until another setting groups receives an activation signal.

Figure. 5.4.1 - 142. Example sequences of group changing (control with pulse only, or with both pulses and static signals).

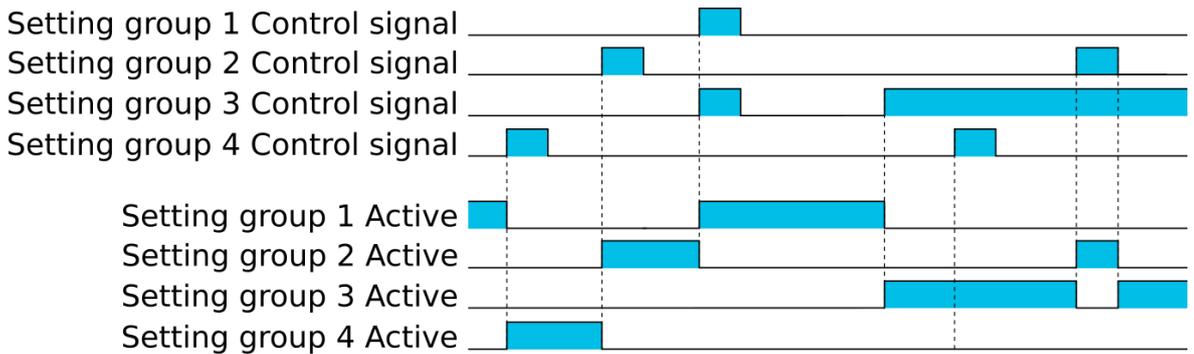

## Settings and signals

The settings of the setting group control function include the active setting group selection, the forced setting group selection, the enabling (or disabling) of the forced change, the selection of the number of active setting groups in the application, as well as the selection of the setting group changed remotely. If the setting group is forced to change, the corresponding setting group must be enabled and the force change must be enabled. Then, the setting group can be set from communications or from HMI to any available group. If the setting group control is applied with static signals right after the "Force SG" parameter is released, the application takes control of the setting group selection.

Table. 5.4.1 - 115. Settings of the setting group selection function.

Name	Range	Step	Default	Description
Active setting group			SG1	Displays which setting group is active.
Force setting group	0: None 1: SG1 2: SG2 3: SG3 4: SG4 5: SG5 6: SG6 7: SG7 8: SG8	-	0: None	The selection of the overriding setting group. After "Force SG change" is enabled, any of the configured setting groups in the relay can be overridden. This control is always based on the pulse operating mode. It also requires that the selected setting group is specifically controlled to ON after "Force SG" is disabled. If there are no other controls, the last set setting group remains active.
Force setting group change	0: Disabled 1: Enabled	-	0: Disabled	The selection of whether the setting group forcing is enabled or disabled. This setting has to be active before the setting group can be changed remotely or from a local HMI. This parameter overrides the local control of the setting groups and it remains on until the user disables it.

Name	Range	Step	Default	Description
Used setting groups	0: SG1 1: SG1...2 2: SG1...3 3: SG1...4 4: SG1...5 5: SG1...6 6: SG1...7 7: SG1...8	-	0: SG1	The selection of the activated setting groups in the application. Newly-enabled setting groups use default parameter values.
Remote setting group change	0: None 1: SG1 2: SG2 3: SG3 4: SG4 5: SG5 6: SG6 7: SG7 8: SG8	-	0: None	This parameter can be controlled through SCADA to change the setting group remotely. Please note that if a higher priority setting group is being controlled by a signal, a lower priority setting group cannot be activated with this parameter.

Table. 5.4.1 - 116. Signals of the setting group selection function.


Name	Range	Step	Default	Description
Setting group 1	0: Not active 1: Active	-	0: Not active	The selection of Setting group 1 ("SG1"). Has the highest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, no other SG requests will be processed.
Setting group 2	0: Not active 1: Active	-	0: Not active	The selection of Setting group 2 ("SG2"). Has the second highest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, no requests with a lower priority than SG1 will be processed.
Setting group 3	0: Not active 1: Active	-	0: Not active	The selection of Setting group 3 ("SG3"). Has the third highest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, no requests with a lower priority than SG1 and SG2 will be processed.
Setting group 4	0: Not active 1: Active	-	0: Not active	The selection of Setting group 4 ("SG4"). Has the fourth highest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, no requests with a lower priority than SG1, SG2 and SG3 will be processed.
Setting group 5	0: Not active 1: Active	-	0: Not active	The selection of Setting group 5 ("SG5"). Has the fourth lowest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, SG6, SG7 and SG8 requests will not be processed.
Setting group 6	0: Not active 1: Active	-	0: Not active	The selection of Setting group 6 ("SG6"). Has the third lowest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, SG7 and SG8 requests will not be processed.
Setting group 7	0: Not active 1: Active	-	0: Not active	The selection of Setting group 7 ("SG7"). Has the second lowest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, only SG8 requests will not be processed.
Setting group 8	0: Not active 1: Active	-	0: Not active	The selection of Setting group 8 ("SG8"). Has the lowest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, all other SG requests will be processed regardless of the signal status of this setting group.

## Example applications for setting group control

This chapter presents some of the most common applications for setting group changing requirements.

A Petersen coil compensated network usually uses directional sensitive earth fault protection. The user needs to control its characteristics between varmetric and wattmetric; the selection is based on whether the Petersen coil is connected when the network is compensated, or whether it is open when the network is unearthed.

Figure. 5.4.1 - 143. Setting group control – one-wire connection from Petersen coil status.

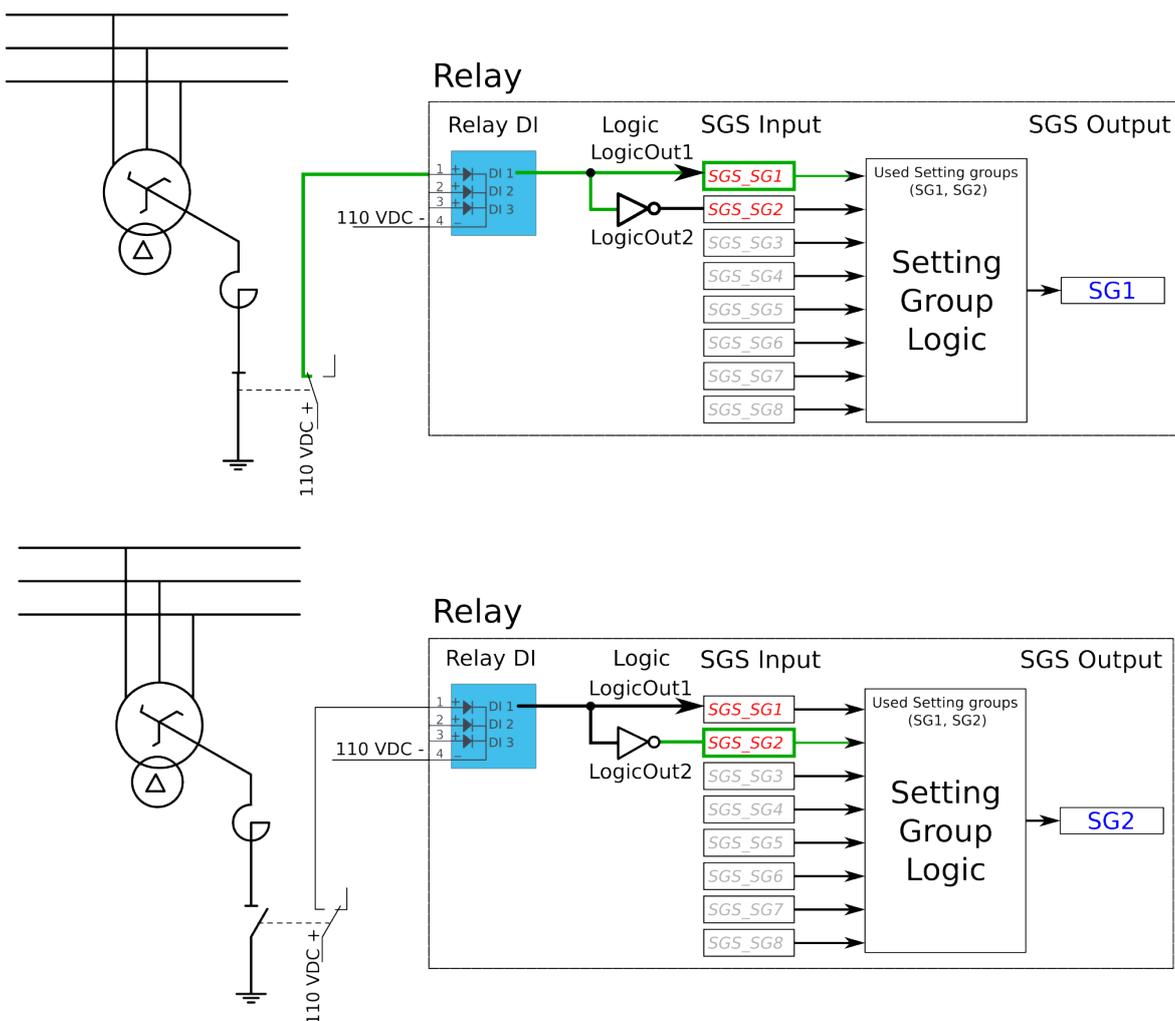

Depending on the application's requirements, the setting group control can be applied either with a one-wire connection or with a two-wire connection by monitoring the state of the Petersen coil connection.

When the connection is done with one wire, the setting group change logic can be applied as shown in the figure above. The status of the Petersen coil controls whether Setting group 1 is active. If the coil is disconnected, Setting group 2 is active. This way, if the wire is broken for some reason, the setting group is always controlled to SG2.

Figure. 5.4.1 - 144. Setting group control – two-wire connection from Petersen coil status.



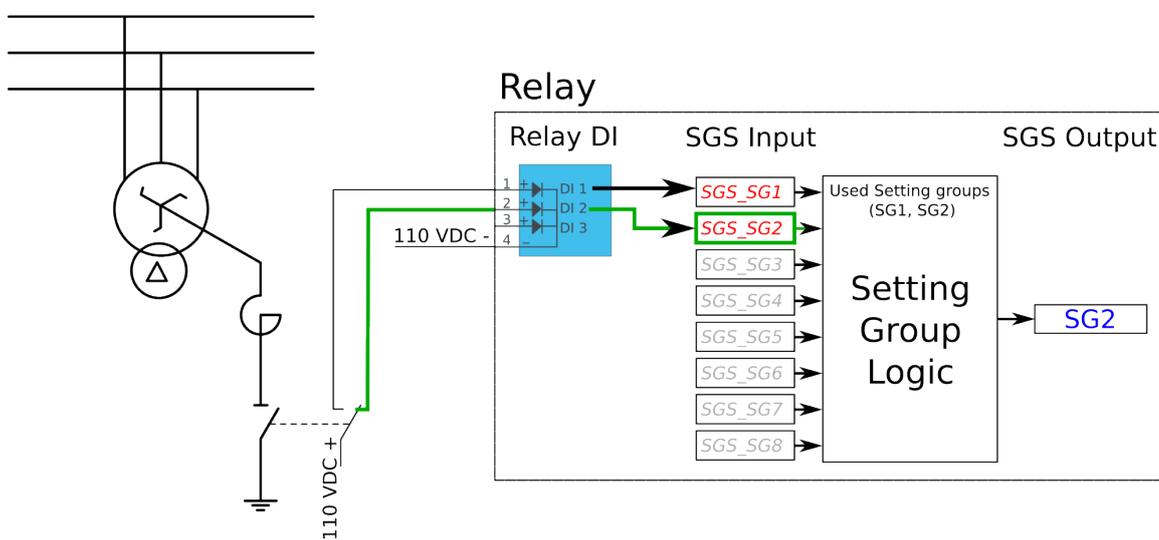



Figure. 5.4.1 - 145. Setting group control – two-wire connection from Petersen coil status with additional logic.

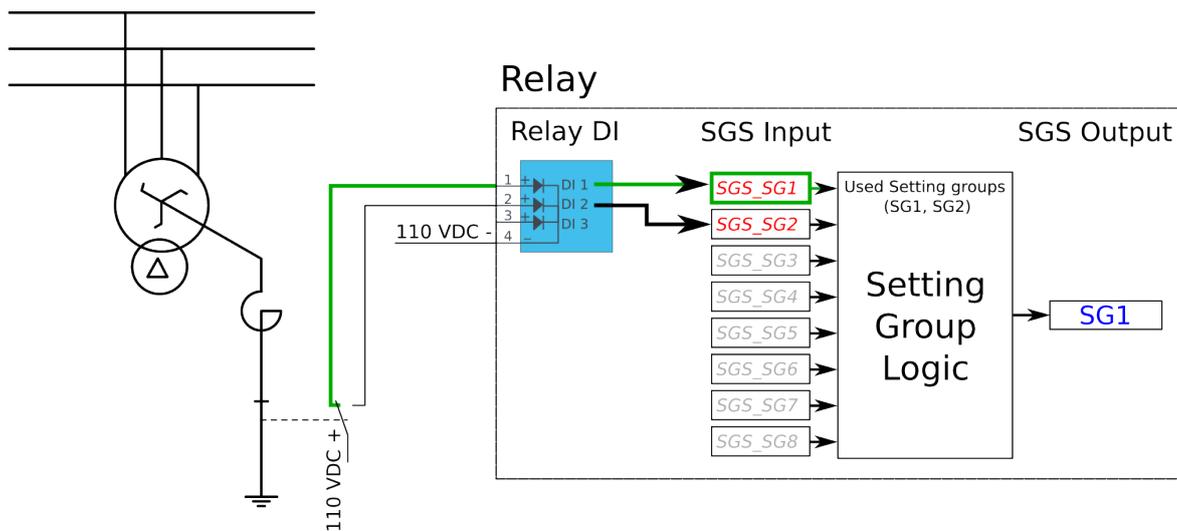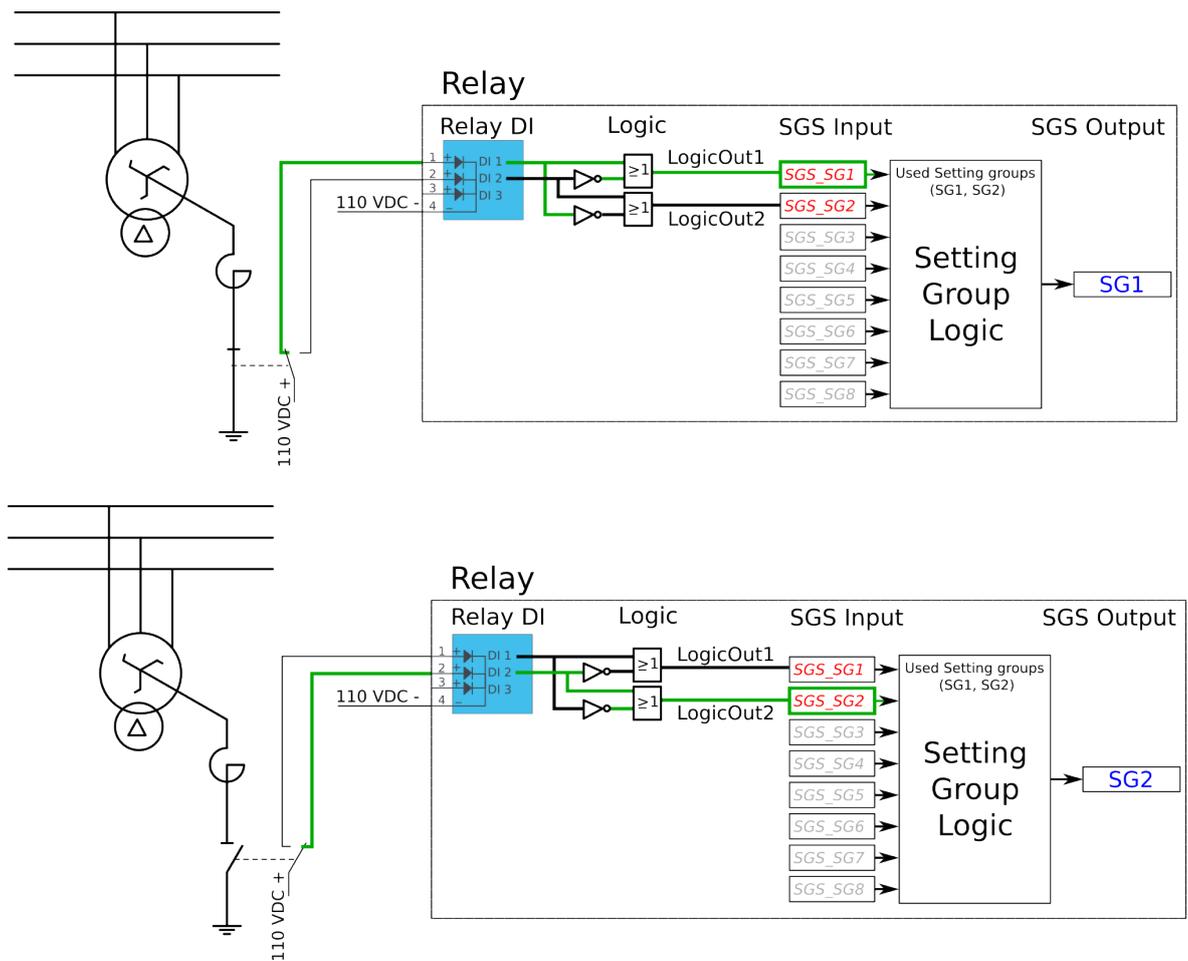

The images above depict a two-wire connection from the Petersen coil: the two images at the top show a direct connection, while the two images on the bottom include additional logic. With a two-wire connection the state of the Petersen coil can be monitored more securely. The additional logic ensures that a single wire loss will not affect the correct setting group selection.

The application-controlled setting group change can also be applied entirely from the relay's internal logics. For example, the setting group change can be based on the cold load pick-up function (see the image below).

Figure. 5.4.1 - 146. Entirely application-controlled setting group change with the cold load pick-up function.

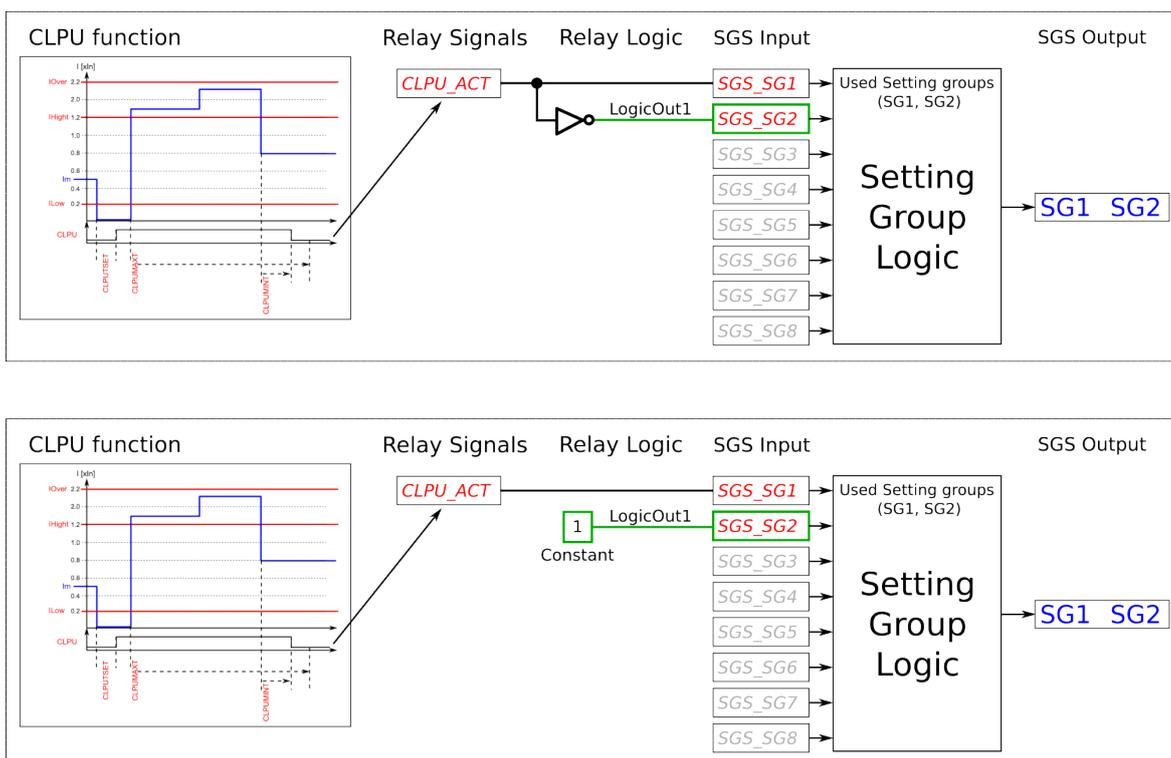

In these examples the cold load pick-up function's output is used for the automatic setting group change. Similarly to this application, any combination of the signals available in the relay's database can be programmed to be used in the setting group selection logic.

As all these examples show, setting group selection with application control has to be built fully before they can be used for setting group control. The setting group does not change back to SG1 unless it is controlled back to SG1 by this application; this explains the inverted signal NOT as well as the use of logics in setting group control. One could also have SG2 be the primary SG, while the ON signal would be controlled by the higher priority SG1; this way the setting group would automatically return to SG2 after the automatic control is over.

## Events

The setting group selection function block (abbreviated "SGS" in event block names) generates events from its controlling status, its applied input signals, enabling and disabling of setting groups, as well as unsuccessful control changes. The function does not have a register.

Table. 5.4.1 - 117. Event codes.

Event number	Event channel	Event block name	Event code	Description
4160	65	SGS	0	SG2 Enabled
4161	65	SGS	1	SG2 Disabled
4162	65	SGS	2	SG3 Enabled
4163	65	SGS	3	SG3 Disabled
4164	65	SGS	4	SG4 Enabled
4165	65	SGS	5	SG4 Disabled
4166	65	SGS	6	SG5 Enabled
4167	65	SGS	7	SG5 Disabled

Event number	Event channel	Event block name	Event code	Description
4168	65	SGS	8	SG6 Enabled
4169	65	SGS	9	SG6 Disabled
4170	65	SGS	10	SG7 Enabled
4171	65	SGS	11	SG7 Disabled
4172	65	SGS	12	SG8 Enabled
4173	65	SGS	13	SG8 Disabled
4174	65	SGS	14	SG1 Request ON
4175	65	SGS	15	SG1 Request OFF
4176	65	SGS	16	SG2 Request ON
4177	65	SGS	17	SG2 Request OFF
4178	65	SGS	18	SG3 Request ON
4179	65	SGS	19	SG3 Request OFF
4180	65	SGS	20	SG4 Request ON
4181	65	SGS	21	SG4 Request OFF
4182	65	SGS	22	SG5 Request ON
4183	65	SGS	23	SG5 Request OFF
4184	65	SGS	24	SG6 Request ON
4185	65	SGS	25	SG6 Request OFF
4186	65	SGS	26	SG7 Request ON
4187	65	SGS	27	SG7 Request OFF
4188	65	SGS	28	SG8 Request ON
4189	65	SGS	29	SG8 Request OFF
4190	65	SGS	30	Remote Change SG Reqeuest ON
4191	65	SGS	31	Remote Change SG Request OFF
4192	65	SGS	32	Local Change SG Request ON
4193	65	SGS	33	Local Change SG Request OFF
4194	65	SGS	34	Force Change SG ON
4195	65	SGS	35	Force Change SG OFF
4196	65	SGS	36	SG Request Fail Not configured SG ON
4197	65	SGS	37	SG Request Fail Not configured SG OFF
4198	65	SGS	38	Force Request Fail Force ON
4199	65	SGS	39	Force Request Fail Force OFF
4200	65	SGS	40	SG Req. Fail Lower priority Request ON
4201	65	SGS	41	SG Req. Fail Lower priority Request OFF
4202	65	SGS	42	SG1 Active ON
4203	65	SGS	43	SG1 Active OFF
4204	65	SGS	44	SG2 Active ON
4205	65	SGS	45	SG2 Active OFF

Event number	Event channel	Event block name	Event code	Description
4206	65	SGS	46	SG3 Active ON
4207	65	SGS	47	SG3 Active OFF
4208	65	SGS	48	SG4 Active ON
4209	65	SGS	49	SG4 Active OFF
4210	65	SGS	50	SG5 Active ON
4211	65	SGS	51	SG5 Active OFF
4212	65	SGS	52	SG6 Active ON
4213	65	SGS	53	SG6 Active OFF
4214	65	SGS	54	SG7 Active ON
4215	65	SGS	55	SG7 Active OFF
4216	65	SGS	56	SG8 Active ON
4217	65	SGS	57	SG8 Active OFF

## 5.4.2 Object control and monitoring

The object control and monitoring function takes care of both for circuit breakers and disconnectors. The monitoring and controlling are based on the statuses of the relay's configured digital inputs and outputs. The number of controllable and monitored objects in each relay depends on the device type and amount of digital inputs. One controllable object requires a minimum of two (2) output contacts. The status monitoring of one monitored object usually requires two (2) digital inputs. Alternatively, object status monitoring can be performed with a single digital input: the input's active state and its zero state (switched to 1 with a NOT gate in the Logic editor).

An object can be controlled manually or automatically. Manual control can be done by local control, or by remote control. Local manual control can be done by relays front panel (HMI) or by external push buttons connected to relays digital inputs. Manual remote control can be done through one of the various communication protocols available (Modbus, IEC101/103/104 etc.). The function supports the modes "Direct control" and "Select before execute" while controlled remotely. Automatic controlling can be done with functions like auto-reclosing function (ANSI 79).

Object control consists of the following:

- control logic
- control monitor
- output handler.

In addition to these main parts, the user can add object-related circuit breaker failure protection (CBFP; 50BF) and object wear monitoring in the object control block. These additional functions are not included in the basic version of the object control block.

The main outputs of the function are the OBJECT OPEN and OBJECT CLOSE control signals. Additionally, the function reports the monitored object's status and applied operations. The setting parameters are static inputs for the function, which can only be changed by the user in the function's setup phase.


The inputs for the function are the following:

- digital input status indications (the OPEN and CLOSE status signals)
- blockings (if applicable)
- the OBJECT READY and SYNCHROCHECK monitor signals (if applicable).
- Withdrawable cart IN and OUT status signals (if applicable).

The function generates general time stamped ON/OFF events to the common event buffer from each of the two (2) output signals as well as several operational event signals. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for OPEN, CLOSE, OPEN FAILED, and CLOSE FAILED events.

The following figure presents a simplified function block diagram of the object control and monitoring function.

Figure. 5.4.2 - 147. Simplified function block diagram of the object control and monitoring function.

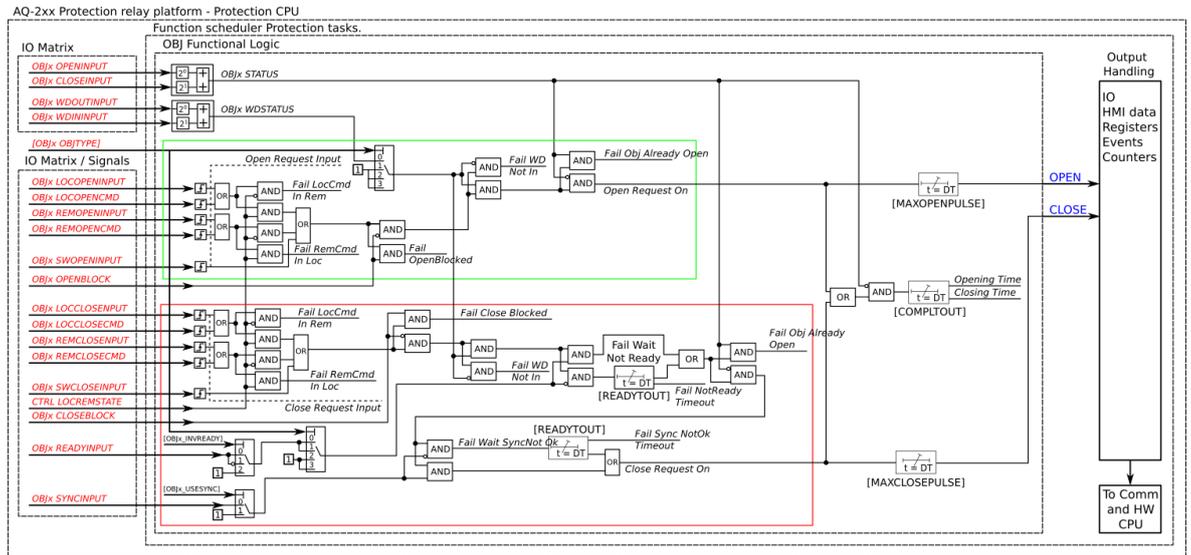

## Settings

The following parameters help the user to define the object. The operation of the function varies based on these settings and the selected object type. The selected object type determines how much control is needed and which setting parameters are required to meet those needs.

Table. 5.4.2 - 118. Object set and status.

Name	Range	Step	Default	Description
Local/Remote status	0: Local 1: Remote	-	1: Remote	Displays the status of the relay's "local/remote" switch. Local controls cannot override the open and close commands while device is in "Remote" status. The remote controls cannot override the open and close commands while device is in "Local" status.
Object name	-	-	Objectx	The user-set name of the object, at maximum 32 characters long.
Object type	0: Withdrawable circuit breaker 1: Circuit breaker 2: Disconnecter (MC) 3: Disconnecter (GND)	-	1: Circuit breaker	The selection of the object type. This selection defines the number of required digital inputs for the monitored object. This affects the symbol displayed in the HMI and the monitoring of the circuit breaker. It also affects whether the withdrawable cart is in/out status is monitored. See the next table ("Object types") for a more detailed look at which functionalities each of the object types have.
Objectx Breaker status	0: Intermediate 1: Open 2: Closed 3: Bad	-	-	Displays the status of breaker. Intermediate is displayed when neither of the status signals (open or close) are active. Bad status is displayed when both status signals (open and close) are active.
Objectx Withdraw status	0: WDIntermediate 1: WDCartOut 2: WDCart In 3: WDBad 4: Not in use	-	-	Displays the status of circuit breaker cart. WDIntermediate is displayed when neither of the status signals (in or out) are active. WDBad status is displayed when both status signals (in and out) are active. If the selected object type is not set to "Withdrawable circuit breaker", this setting displays the "No in use" option.

Name	Range	Step	Default	Description
Additional status information	0: Open Blocked 1: Open Allowed 2: Close Blocked 3: Close Allowed 4: Object Ready 5: Object Not Ready 6: Sync Ok 7: Sync Not Ok	-	-	Displays additional information about the status of the object.
Use Synchrocheck	0: Not in use 1: Synchrocheck in use	-	0: Not in use	Selects whether the "Synchrocheck" condition is in use for the circuit breaker close command. If "In use" is selected the input chosen to "Sync.check status in" has to be active to be able to close circuit breaker.
Use Object ready	0: Ready High 1: Ready Low 2: Not in use	-	2: Not in use	Selects whether the "Object ready" condition is in use for the circuit breaker close command. If in use the signal connected to "Object ready status In" has to be high or low to be able to close the breaker (depending on "Ready High or Low" selection).
Open requests	0...2 <sup>32</sup> -1	1	-	Displays the number of successful "Open" requests.
Close requests	0...2 <sup>32</sup> -1	1	-	Displays the number of successful "Close" requests.
Open requests failed	0...2 <sup>32</sup> -1	1	-	Displays the number of failed "Open" requests.
Close requests failed	0...2 <sup>32</sup> -1	1	-	Displays the number of failed "Close" requests.
Clear statistics	0: - 1: Clear	-	0: -	Clears the request statistics, setting them back to zero (0). Automatically returns to "-" after the clearing is finished.

Table. 5.4.2 - 119. Object types.

Name	Functionalities	Description
Withdrawable circuit breaker	Breaker cart position Circuit breaker position Circuit breaker control Object ready check before closing breaker Synchrochecking before closing breaker Interlocks	The monitor and control configuration of the withdrawable circuit breaker.
Circuit breaker	Position indication Control Object ready check before closing breaker Synchrochecking before closing breaker Interlocks	The monitor and control configuration of the circuit breaker.
Disconnecter (MC)	Position indication Control	The position monitoring and control of the disconnecter.
Disconnecter (GND)	Position indication	The position indication of the earth switch.

Table. 5.4.2 - 120. I/O.

Signal	Range	Description
Objectx Open input ("Objectx Open Status In")	Digital input or other logical signal selected by the user  (SWx)	A link to a physical digital input. The monitored object's OPEN status. "1" refers to the active open state of the monitored object. If IEC 61850 is enabled, GOOSE signals can be used for status indication.
Objectx Close input ("Objectx Close Status In")	Digital input or other logical signal selected by the user  (SWx)	A link to a physical digital input. The monitored object's CLOSE status. "1" refers to the active close state of the monitored object. If IEC 61850 is enabled, GOOSE signals can be used for status indication.
WD Object In ("Withdrw.CartIn.Status In")	Digital input or other logical signal selected by the user  (SWx)	A link to a physical digital input. The monitored withdrawable object's position is IN. "1" means that the withdrawable object cart is in. If IEC 61850 is enabled, GOOSE signals can be used for status indication.
WD Object Out ("Withdrw.CartOut.Status In")	Digital input or other logical signal selected by the user  (SWx)	A link to a physical digital input. The monitored withdrawable object's position is OUT. "1" means that the withdrawable object cart is pulled out. If IEC 61850 is enabled, GOOSE signals can be used for status indication.
Object Ready (Objectx Ready status In")	Digital input or other logical signal selected by the user  (SWx)	A link to a physical digital input. Indicates that status of the monitored object. "1" means that the object is ready and the spring is charged for a close command. If IEC 61850 is enabled, GOOSE signals can be used for status indication.
Syncrocheck permission ("Sync.Check status In")	Digital input or other logical signal selected by the user  (SWx)	A link to a physical digital input or a synchrocheck function. "1" means that the synchrocheck conditions are met and the object can be closed. If IEC 61850 is enabled, GOOSE signals can be used for status indication.
Objectx Open command ("Objectx Open Command")	OUT1...OUTx	The physical "Open" command pulse to the device's output relay.
Objectx Close command ("Objectx Close Command")	OUT1...OUTx	The physical "Close" command pulse to the device's output relay.

Table. 5.4.2 - 121. Operation settings.

Name	Range	Step	Default	Description
Breaker traverse time	0.02...500.00 s	0.02 s	0.2 s	Determines the maximum time between open and close statuses when the breaker switches. If this set time is exceeded and both open and closed status inputs are active, the status "Bad" is activated in the "Objectx Breaker status" setting. If neither of the status inputs are active after this delay, the status "Intermediate" is activated.
Maximum Close command pulse length	0.02...500.00 s	0.02 s	0.2 s	Determines the maximum length for a Close pulse from the output relay to the controlled object. If the object operates faster than this set time, the control pulse is reset and a status change is detected.

Name	Range	Step	Default	Description
Maximum Open command pulse length	0.02...500.00 s	0.02 s	0.2 s	Determines the maximum length for a Open pulse from the output relay to the controlled object. If the object operates faster than this set time, the control pulse is reset and a status change is detected.
Control termination timeout	0.02...500.00 s	0.02 s	10 s	Determines the control pulse termination timeout. If the object has not changed its status in this given time the function will issue an error event and the control is ended. This parameter is common for both open and close commands.
Final trip pulse length	0.00...500.00 s	0.02 s	0.2 s	Determines the length of the final trip pulse length. When the object has executed the final trip, this signal activates. If set to 0 s, the signal is continuous. If auto-recloser function controls the object, "final trip" signal is activated only when there are no automatic reclosings expected after opening the breaker.

Table. 5.4.2 - 122. Control settings (DI and Application).


Signal	Range	Description
Access level for MIMIC control	0: User 1: Operator 2: Configurator 3: Super user	Defines what level of access is required for MIMIC control. The default is the "Configurator" level.
Objectx LOCAL Close control input	Digital input or other logical signal selected by the user	The local Close command from a physical digital input (e.g. a push button).
Objectx LOCAL Open control input	Digital input or other logical signal selected by the user	The local Open command from a physical digital input (e.g. a push button).
Objectx REMOTE Close control input	Digital input or other logical signal selected by the user	The remote Close command from a physical digital input (e.g. RTU).
Objectx REMOTE Open control input	Digital input or other logical signal selected by the user	The remote Open command from a physical digital input (e.g. RTU).
Objectx Application Close	Digital input or other logical signal selected by the user	The Close command from the application. Can be any logical signal.
Objectx Application Open	Digital input or other logical signal selected by the user	The Open command from the application. Can be any logical signal.

## Blocking and interlocking

The interlocking and blocking conditions can be set for each controllable object, with Open and Close set separately. Blocking and interlocking can be based on any of the following: other object statuses, a software function or a digital input.

The image below presents an example of an interlock application, where the closed earthing switch interlocks the circuit breaker close command.

Figure. 5.4.2 - 148. Example of an interlock application.

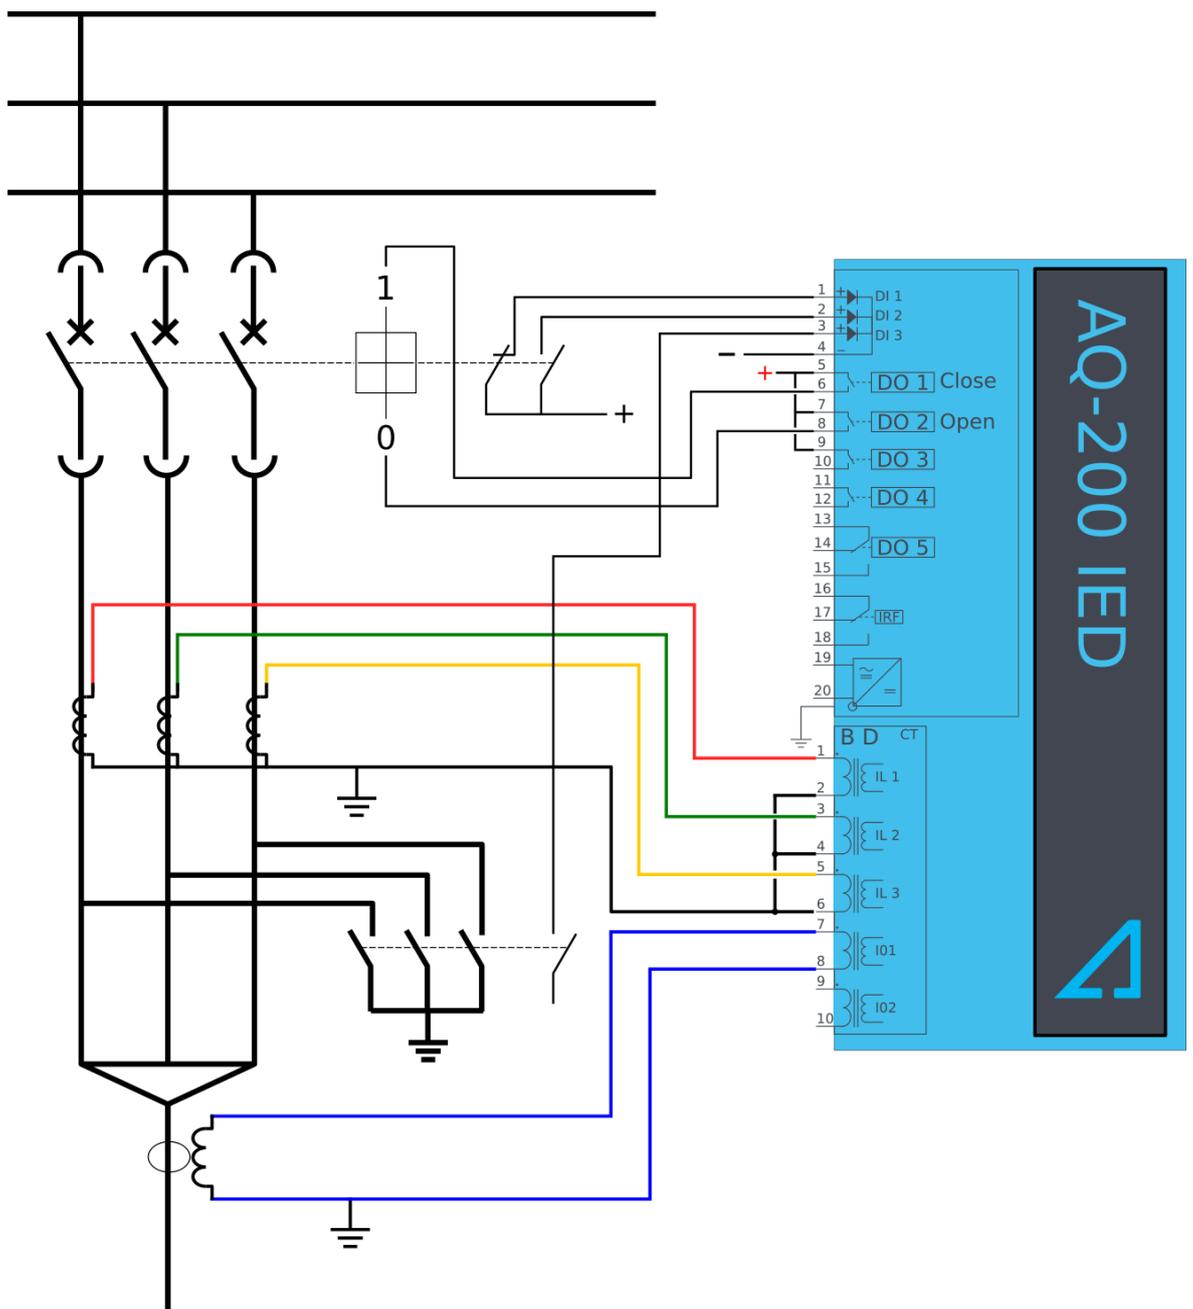

In order for the blocking signal to be received on time, it has to reach the function 5 ms before the control command.

### Events and registers

The object control and monitoring function (abbreviated "OBJ" in event block names) generates events and registers from the status changes in monitored signals as well as control command fails and operations. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The function registers its operation into the last twelve (12) time-stamped registers. The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.4.2 - 123. Event codes of the OBJ function instances 1 – 5.

Event Number	Event channel	Event block name	Event Code	Description
2944	46	OBJ1	0	Object Intermediate
2945	46	OBJ1	1	Object Open
2946	46	OBJ1	2	Object Close
2947	46	OBJ1	3	Object Bad
2948	46	OBJ1	4	WD Intermediate
2949	46	OBJ1	5	WD Out
2950	46	OBJ1	6	WD In
2951	46	OBJ1	7	WD Bad
2952	46	OBJ1	8	Open Request ON
2953	46	OBJ1	9	Open Request OFF
2954	46	OBJ1	10	Open Command ON
2955	46	OBJ1	11	Open Command OFF
2956	46	OBJ1	12	Close Request ON
2957	46	OBJ1	13	Close Request OFF
2958	46	OBJ1	14	Close Command ON
2959	46	OBJ1	15	Close Command OFF
2960	46	OBJ1	16	Open Blocked ON
2961	46	OBJ1	17	Open Blocked OFF
2962	46	OBJ1	18	Close Blocked ON
2963	46	OBJ1	19	Close Blocked OFF
2964	46	OBJ1	20	Object Ready
2965	46	OBJ1	21	Object Not Ready
2966	46	OBJ1	22	Sync Ok
2967	46	OBJ1	23	Sync Not Ok
2968	46	OBJ1	24	Open Command Fail
2969	46	OBJ1	25	Close Command Fail
2970	46	OBJ1	26	Final trip ON
2971	46	OBJ1	27	Final trip OFF
3008	47	OBJ2	0	Object Intermediate
3009	47	OBJ2	1	Object Open
3010	47	OBJ2	2	Object Close
3011	47	OBJ2	3	Object Bad
3012	47	OBJ2	4	WD Intermediate
3013	47	OBJ2	5	WD Out
3014	47	OBJ2	6	WD In
3015	47	OBJ2	7	WD Bad
3016	47	OBJ2	8	Open Request ON

Event Number	Event channel	Event block name	Event Code	Description
3017	47	OBJ2	9	Open Request OFF
3018	47	OBJ2	10	Open Command ON
3019	47	OBJ2	11	Open Command OFF
3020	47	OBJ2	12	Close Request ON
3021	47	OBJ2	13	Close Request OFF
3022	47	OBJ2	14	Close Command ON
3023	47	OBJ2	15	Close Command OFF
3024	47	OBJ2	16	Open Blocked ON
3025	47	OBJ2	17	Open Blocked OFF
3026	47	OBJ2	18	Close Blocked ON
3027	47	OBJ2	19	Close Blocked OFF
3028	47	OBJ2	20	Object Ready
3029	47	OBJ2	21	Object Not Ready
3030	47	OBJ2	22	Sync Ok
3031	47	OBJ2	23	Sync Not Ok
3032	47	OBJ2	24	Open Command Fail
3033	47	OBJ2	25	Close Command Fail
3034	47	OBJ2	26	Final trip ON
3035	47	OBJ2	27	Final trip OFF
3072	48	OBJ3	0	Object Intermediate
3073	48	OBJ3	1	Object Open
3074	48	OBJ3	2	Object Close
3075	48	OBJ3	3	Object Bad
3076	48	OBJ3	4	WD Intermediate
3077	48	OBJ3	5	WD Out
3078	48	OBJ3	6	WD In
3079	48	OBJ3	7	WD Bad
3080	48	OBJ3	8	Open Request ON
3081	48	OBJ3	9	Open Request OFF
3082	48	OBJ3	10	Open Command ON
3083	48	OBJ3	11	Open Command OFF
3084	48	OBJ3	12	Close Request ON
3085	48	OBJ3	13	Close Request OFF
3086	48	OBJ3	14	Close Command ON
3087	48	OBJ3	15	Close Command OFF
3088	48	OBJ3	16	Open Blocked ON
3089	48	OBJ3	17	Open Blocked OFF
3090	48	OBJ3	18	Close Blocked ON

Event Number	Event channel	Event block name	Event Code	Description
3091	48	OBJ3	19	Close Blocked OFF
3092	48	OBJ3	20	Object Ready
3093	48	OBJ3	21	Object Not Ready
3094	48	OBJ3	22	Sync Ok
3095	48	OBJ3	23	Sync Not Ok
3096	48	OBJ3	24	Open Command Fail
3097	48	OBJ3	25	Close Command Fail
3098	48	OBJ3	26	Final trip ON
3099	48	OBJ3	27	Final trip OFF
3136	49	OBJ4	0	Object Intermediate
3137	49	OBJ4	1	Object Open
3138	49	OBJ4	2	Object Close
3139	49	OBJ4	3	Object Bad
3140	49	OBJ4	4	WD Intermediate
3141	49	OBJ4	5	WD Out
3142	49	OBJ4	6	WD In
3143	49	OBJ4	7	WD Bad
3144	49	OBJ4	8	Open Request ON
3145	49	OBJ4	9	Open Request OFF
3146	49	OBJ4	10	Open Command ON
3147	49	OBJ4	11	Open Command OFF
3148	49	OBJ4	12	Close Request ON
3149	49	OBJ4	13	Close Request OFF
3150	49	OBJ4	14	Close Command ON
3151	49	OBJ4	15	Close Command OFF
3152	49	OBJ4	16	Open Blocked ON
3153	49	OBJ4	17	Open Blocked OFF
3154	49	OBJ4	18	Close Blocked ON
3155	49	OBJ4	19	Close Blocked OFF
3156	49	OBJ4	20	Object Ready
3157	49	OBJ4	21	Object Not Ready
3158	49	OBJ4	22	Sync Ok
3159	49	OBJ4	23	Sync Not Ok
3160	49	OBJ4	24	Open Command Fail
3161	49	OBJ4	25	Close Command Fail
3162	49	OBJ4	26	Final trip ON
3163	49	OBJ4	27	Final trip OFF
3200	50	OBJ5	0	Object Intermediate

Event Number	Event channel	Event block name	Event Code	Description
3201	50	OBJ5	1	Object Open
3202	50	OBJ5	2	Object Close
3203	50	OBJ5	3	Object Bad
3204	50	OBJ5	4	WD Intermediate
3205	50	OBJ5	5	WD Out
3206	50	OBJ5	6	WD In
3207	50	OBJ5	7	WD Bad
3208	50	OBJ5	8	Open Request ON
3209	50	OBJ5	9	Open Request OFF
3210	50	OBJ5	10	Open Command ON
3211	50	OBJ5	11	Open Command OFF
3212	50	OBJ5	12	Close Request ON
3213	50	OBJ5	13	Close Request OFF
3214	50	OBJ5	14	Close Command ON
3215	50	OBJ5	15	Close Command OFF
3216	50	OBJ5	16	Open Blocked ON
3217	50	OBJ5	17	Open Blocked OFF
3218	50	OBJ5	18	Close Blocked ON
3219	50	OBJ5	19	Close Blocked OFF
3220	50	OBJ5	20	Object Ready
3221	50	OBJ5	21	Object Not Ready
3222	50	OBJ5	22	Sync Ok
3223	50	OBJ5	23	Sync Not Ok
3224	50	OBJ5	24	Open Command Fail
3225	50	OBJ5	25	Close Command Fail
3226	50	OBJ5	26	Final trip ON
3227	50	OBJ5	27	Final trip OFF

Table. 5.4.2 - 124. Register content.

Name	Description
Date and time	dd.mm.yyyy hh:mm:ss.mss
Event code	2944-9883 Descr.
Recorded Object opening time	Time difference between the object receiving an "Open" command and the object receiving the "Open" status.
Recorded Object closing time	Time difference between the object receiving a "Close" command and object receiving the "Closed" status.
Object status	The status of the object.
WD status	The status of the withdrawable circuit breaker.
Open fail	The cause of an "Open" command's failure.

Name	Description
Close fail	The cause of a "Close" command's failure.
Open command	The source of an "Open" command.
Close command	The source of an "Open" command.
General status	The general status of the function.

### 5.4.3 Indicator object monitoring

The indicator object monitoring function takes care of the status monitoring of disconnectors. The function's sole purpose is indication and does not therefore have any control functionality. To control circuit breakers and/or disconnectors, please use the Object control and monitoring function. The monitoring is based on the statuses of the configured relay's digital inputs. The number of monitored indicators in a relay depends on the device type and available inputs. The status monitoring of one monitored object usually requires two (2) digital inputs. Alternatively, object status monitoring can be performed with a single digital input: the input's active state and its zero state (switched to 1 with a NOT gate in the Logic editor).

The outputs of the function are the monitored indicator statuses (Open, Close, Intermediate and Bad). The setting parameters are static inputs for the function, which can only be changed by the use in the function's setup phase.

The inputs of the function are the binary status indications. The function generates general time stamped ON/OFF events to the common event buffer from each of the following signals: OPEN, CLOSE, BAD and INTERMEDIATE event signals. The time stamp resolution is 1 ms.

### Settings

Function uses available hardware and software digital signal statuses. These input signals are also setting parameters for the function.

Table. 5.4.3 - 125. Indicator status.

Name	Range	Default	Description
Indicator name ("Ind. Name")	-	IndX	The user-set name of the object, at maximum 32 characters long.
IndicatorX Object status ("Ind.X Object Status")	0: Intermediate 1: Open 2: Closed 3: Bad	-	Displays the status of the indicator object. Intermediate status is displayed when neither of the status conditions (open or close) are active. Bad status is displayed when both of the status conditions (open and close) are active.

Table. 5.4.3 - 126. Indicator I/O.

Signal	Range	Description
IndicatorX Open input ("Ind.X Open Status In")	Digital input or other logical signal selected by the user  (SWx)	A link to a physical digital input. The monitored indicator's OPEN status. "1" refers to the active "Open" state of the monitored indicator. If IEC 61850 is enabled, GOOSE signals can be used for status indication.

Signal	Range	Description
IndicatorX Close input ("Ind.X Close Status In")	Digital input or other logical signal selected by the user  (SWx)	A link to a physical digital input. The monitored indicator's CLOSE status. "1" refers to the active "Close" state of the monitored indicator. If IEC 61850 is enabled, GOOSE signals can be used for status indication.

## Events

The indicator object monitoring function (abbreviated "CIN" in event block names) generates events from the status changes in the monitored signals, including the continuous status indications. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

Table. 5.4.3 - 127. Event codes (instances 1 – 5).

Event Number	Event channel	Event block name	Event Code	Description
6656	104	CIN1	0	Intermediate
6657	104	CIN1	1	Open
6658	104	CIN1	2	Close
6659	104	CIN1	3	Bad
6720	105	CIN2	0	Intermediate
6721	105	CIN2	1	Open
6722	105	CIN2	2	Close
6723	105	CIN2	3	Bad
6784	106	CIN3	0	Intermediate
6785	106	CIN3	1	Open
6786	106	CIN3	2	Close
6787	106	CIN3	3	Bad
6848	107	CIN4	0	Intermediate
6849	107	CIN4	1	Open
6850	107	CIN4	2	Close
6851	107	CIN4	3	Bad
6912	108	CIN5	0	Intermediate
6913	108	CIN5	1	Open
6914	108	CIN5	2	Close
6915	108	CIN5	3	Bad

### 5.4.4 Milliampere output control

The milliamp current loop is the prevailing process control signal in many industries. It is an ideal method of transferring process information because a current does not change as it travels from a transmitter to a receiver. It is also much more simple and cost-effective.

The benefits of 4...20 mA loops:

- the dominant standard in many industries

- the simplest option to connect and configure
- uses less wiring and connections than other signals, thus greatly reducing initial setup costs
- good for travelling long distances, as current does not degrade over long connections like voltage does
- less sensitive to background electrical noise
- detects a fault in the system incredibly easily since 4 mA is equal to 0 % output.

## Milliampere (mA) outputs

AQ-200 series supports up to two (2) independent mA option cards. Each card has four (4) mA output channels and one (1) mA input channel. If the device has an mA option card, enable mA outputs at *Control* → *Device IO* → *mA outputs*. The outputs are activated in groups of two: channels 1 and 2 are activated together, as are channels 3 and 4 (see the image below).

Figure. 5.4.4 - 149. Activating mA output channels.



Table. 5.4.4 - 128. Main settings (output channels).

Name		Range	Default	Description
mA option card 1	Enable mA output channels 1 and 2	0: Disabled 1: Enabled	0: Disabled	Enables and disables the outputs of the mA output card 1.
	Enable mA output channels 3 and 4			
mA option card 2	Enable mA output channels 5 and 6	0: Disabled 1: Enabled	0: Disabled	Enables and disables the outputs of the mA output card 2.
	Enable mA output channels 7 and 8			

Table. 5.4.4 - 129. Settings for mA output channels.

Name	Range	Step	Default	Description
Enable mA output channel	0: Disabled 1: Enabled	-	0: Disabled	Enables and disables the selected mA output channel. If the channel is disabled, the channel settings are hidden.
Magnitude selection for mA output channel	0: Currents 1: Voltages 2: Powers 3: Impedance and admittance 4: Other	-	0: Currents	Defines the measurement category that is used for mA output control.
Magnitude of mA output channel	(dependent on the measurement category selection)	-	(dependent on the measurement category selection)	Defines the measurement magnitude used for mA output control. The available measurements depend on the selection of the "Magnitude selection for mA output channel" parameter.
Input value 1	$-10^7 \dots 10^7$	0.001	0	The first input point in the mA output control curve.
Scaled mA output value 1	0.0000...24.0000mA	0.0001mA	0mA	The mA output value when the measured value is equal to or less than Input value 1.

Name	Range	Step	Default	Description
Input value 2	$-10^7 \dots 10^7$	0.001	1	The second input point in the mA output control curve.
Scaled mA output value 2	0.0000...24.0000mA	0.0001mA	0mA	The mA output value when the measured value is equal to or greater than Input value 2.

Figure. 5.4.4 - 150. Example of the effects of mA output channel settings.

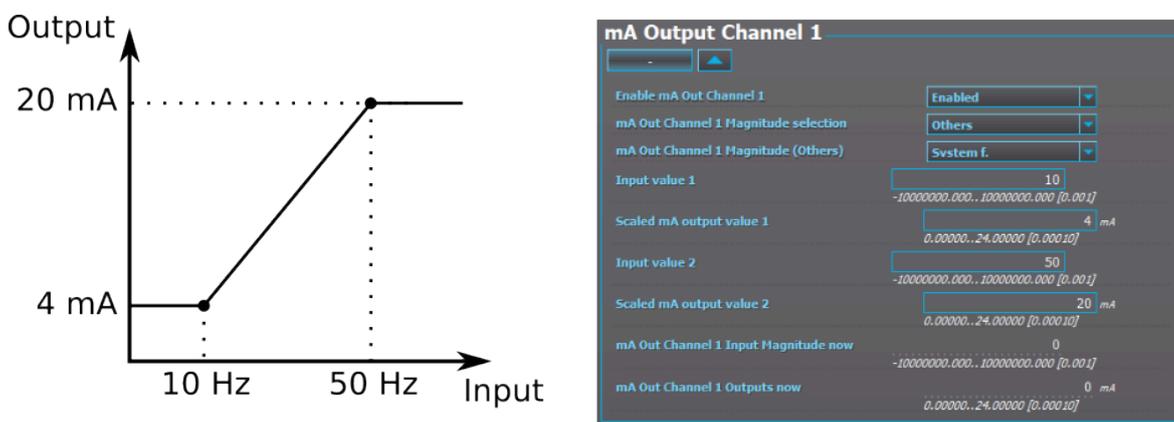


Table. 5.4.4 - 130. Hardware indications.

Name	Range	Step	Description
Hardware in mA output channels 1...4	0: None 1: Slot A 2: Slot B 3: Slot C	-	Indicates the option card slot where the mA output card is located.
Hardware in mA output channels 5...8	4: Slot D 5: Slot E 6: Slot F		

Table. 5.4.4 - 131. Measurement values reported by mA output cards.

Name	Range	Step	Description
mA in Channel 1	0.0000...24.0000mA	0.0001mA	Displays the measured mA value of the selected input channel.
mA in Channel 2			
mA Out Channel Input Magnitude now	$-10^7 \dots 10^7$	0.001	Displays the input value of the selected mA output channel at that moment.
mA Out Channel Outputs now	0.0000...24.0000mA	0.0001mA	Displays the output value of the selected mA output channel at that moment.

### 5.4.5 Programmable control switch

The programmable control switch is a control function that controls its binary output signal. This output signal can be controlled locally from the relay's mimic (displayed as a box in the mimic) or remotely from the RTU. The main purpose of programmable control switches is to block or enable function and to change function properties by changing the setting group. However, this binary signal can also be used for any number of other purposes, just like all other binary signals. Once a programmable control switch has been activated or disabled, it remains in that state until given a new command to switch to the opposite state (see the image below). The switch cannot be controlled by an auxiliary input, such as digital inputs or logic signals; it can only be controlled locally (mimic) or remotely (RTU).



## Settings.

These settings can be accessed at *Control* → *Device I/O* → *Programmable control switch*.

Table. 5.4.5 - 132. Settings.

Name	Range	Default	Description
Switch name	-	Switchx	The user-settable name of the selected switch. The name can be up to 32 characters long.
Access level for Mimic control	0: User 1: Operator 2: Configurator 3: Super user	2: Configurator	Determines which access level is required to be able to control the programmable control switch via the Mimic.

## Events

The programmable control switch function (abbreviated "PCS" in event block names) generates events from status changes. The user can select which event messages are stored in the main event buffer: ON, OFF, or both. The function offers five (5) independent switches.

Table. 5.4.5 - 133. Event codes.

Event number	Event channel	Event block name	Event code	Description
384	6	PCS	0	Switch 1 ON
385	6	PCS	1	Switch 1 OFF
386	6	PCS	2	Switch 2 ON
387	6	PCS	3	Switch 2 OFF
388	6	PCS	4	Switch 3 ON
389	6	PCS	5	Switch 3 OFF
390	6	PCS	6	Switch 4 ON
391	6	PCS	7	Switch 4 OFF
392	6	PCS	8	Switch 5 ON
393	6	PCS	9	Switch 5 OFF

### 5.4.6 Analog input scaling curves

Sometimes when measuring with RTD inputs, milliampere inputs and digital inputs the measurement might be inaccurate because the signal coming from the source is inaccurate. One common example of this is tap changer location indication signal not changing linearly from step to step. If the output difference between the steps are not equal to each other, measuring the incoming signal accurately is not enough. "Analog input scaling curves" menu can be used to take these inaccuracies into account.

Analog input scaling curve settings can be found at *Measurement* → *AI(mA, DI volt) scaling* menu.

Currently following measurements can be scaled with analog input scaling curves:

- RTD inputs and mA inputs in "RTD & mA input" option cards
- mA inputs in "mA output & mA input" option cards
- Digital input voltages

Table. 5.4.6 - 134. Main settings (input channel).

Name	Range	Step	Default	Description
Analog input scaling	0: Disabled 1: Activated	-	0: Disabled	Enables and disables the input.
Scaling curve 1...4	0: Disabled 1: Activated	-	0: Disabled	Enables and disables the scaling curve and the input measurement.
Curve 1...4 input signal select	0: S7 mA Input 1: S8 mA Input 2: S15 mA Input 3: S16 mA Input 4: DI1 Voltage ... 23: DI20 Voltage 24: RTD S1 Resistance ... 39: RTD S16 Resistance 40: mA In 1 (I card 1) 41: mA In 2 (I card 2)	-	0: S7 mA Input	Defines the measurement used by scaling curve.
Curve 1...4 input signal filtering	0: No 1: Yes	-	0: No	Enables calculation of the average of received signal.
Curve 1...4 input signal filter time constant	0.005...3800.000 s	0.005 s	1 s	Time constant for input signal filtering. This parameter is visible when "Curve 1...4 input signal filtering" has been set to "Yes".
Curve 1...4 input signal out of range set	0: No 1: Yes	-	0: No	Enables out of range signals. If input signal is out of minimum and maximum limits, "ASC1...4 input out of range" signal is activated.
Curve1...4 input minimum	-1 000 000.00...1 000 000.00	0.00001	0	Defines the minimum input of the curve. If input is below the set limit, "ASC1...4 input out of range" is activated.
Curve 1...4 input	-1 000 000.00...1 000 000.00	0.00001	-	Displays the input measurement received by the curve.
Curve1...4 input maximum	-1 000 000.00...1 000 000.00	0.00001	0	Defines the maximum input of the curve. If input is above the set limit, "ASC1...4 input out of range" is activated.
Curve1...4 output	-1 000 000.00...1 000 000.00	0.00001	-	Displays the output of the curve.



The input signal filter (see the image below) calculates the average of received signals according to the set time constant. This is why rapid changes and disturbances (such as fast spikes) are smothered.



The Nyquist rate states that the filter time constant must be at least double the period time of the disturbance process signal. For example, the value for the filter time constant is 2 seconds for a 1 second period time of a disturbance oscillation.

$$H(s) = \frac{Wc}{s+Wc} = \frac{1}{1+s/Wc}$$

When the curve signal is out of range, it activates the "ASC1...4 input out of range" signal, which can be used inside logic or with other relay functions. The signal can be assigned directly to an output relay or to an LED in the I/O matrix. The "Out of range" signal is activated, when the measured signal falls below the set input minimum limit, or when it exceeds the input maximum limit. The "Out of range" signal is very useful when e.g. a 4...20 mA input signal is used (see the image below).

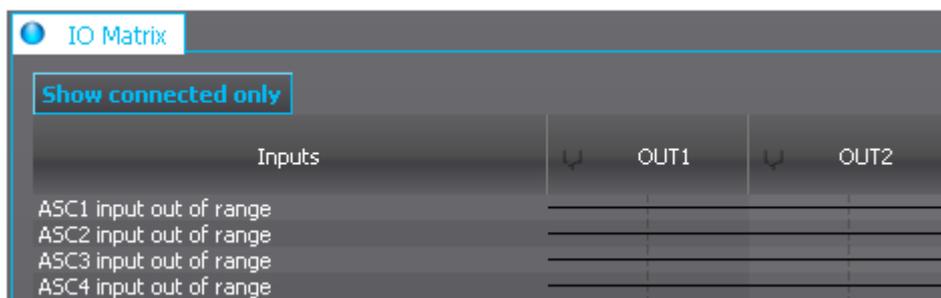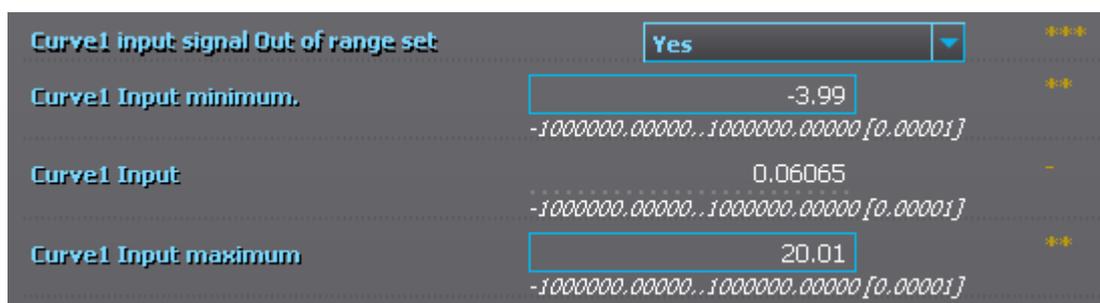

If for some reason the input signal is lost, the value is fixed to the last actual measured cycle value. The value does not go down to the minimum if it has been something else at the time of the signal breaking.

Table. 5.4.6 - 135. Output settings and indications.



Name	Range	Step	Default	Description
Curve 1...4 update cycle	5...10 000ms	5ms	150ms	Defines the length of the input measurement update cycle. If the user wants a fast operation, this setting should be fairly low.
Scaled value handling	0: Floating point 1: Integer out (Floor) 2: Integer (Ceiling) 3: Integer (Nearest)	-	0: Floating point	Rounds the milliampere signal output as selected.
Input value 1	0...4000	0.000 01	0	The measured input value at Curve Point 1.
Scaled output value 1	-10 <sup>7</sup> ...10 <sup>7</sup>	0.000 01	0	Scales the measured milliampere signal at Point 1.
Input value 2	0...4000	0.000 01	1	The measured input value at Curve Point 2.

Name	Range	Step	Default	Description
Scaled output value 1	-10 <sup>7</sup> ...10 <sup>7</sup>	0.00001	0	Scales the measured milliampere signal at Point 2.
Add curvepoint 3...20	0: Not used 1: Used	-	0: Not used	Allows the user to create their own curve with up to twenty (20) curve points, instead of using a linear curve between two points.

### 5.4.7 Logical outputs

Logical outputs are used for sending binary signals out from a logic that has been built in the logic editor. Logical signals can be used for blocking functions, changing setting groups, controlling digital outputs, activating LEDs, etc. The status of logical outputs can also be reported to a SCADA system. The figure below presents a logic output example where a signal from the circuit breaker failure protection function controls the digital output relay number 5 ("OUT5") when the circuit breaker's cart status is "In". The image above is from the logic editor and the image below from AQtivate 200.

Figure. 5.4.7 - 151. Logic output example.

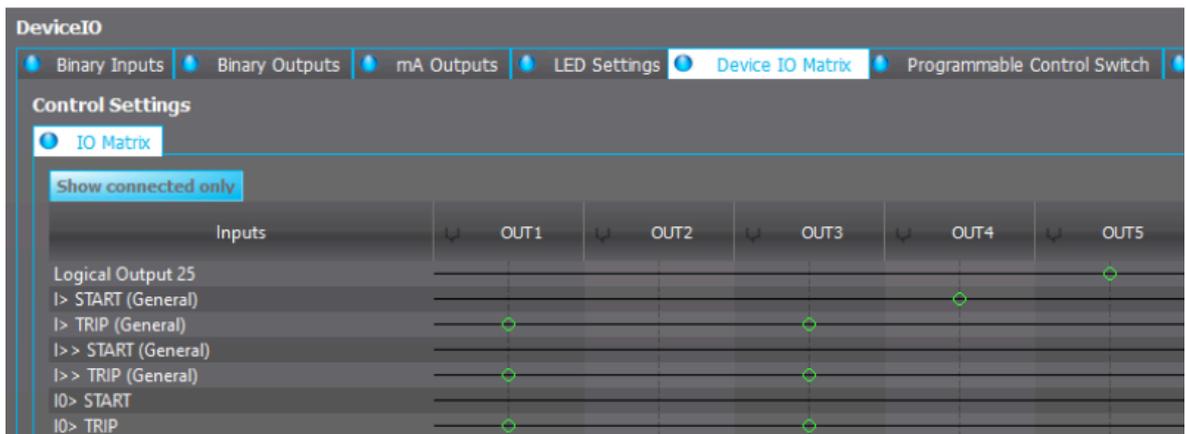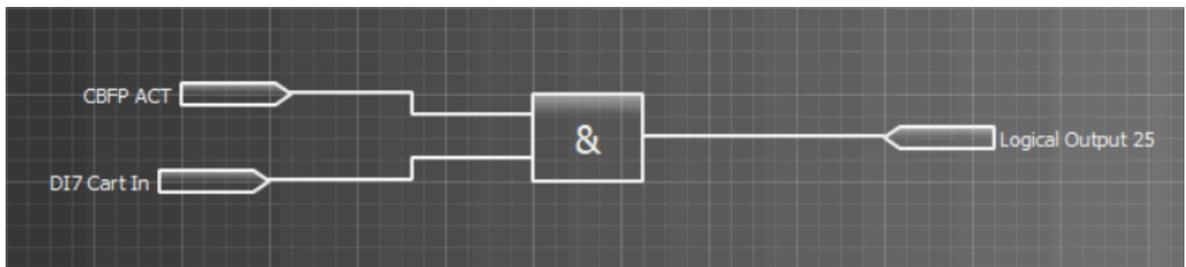


### 5.4.8 Logical inputs

Logical inputs are binary signals that a user can control manually to change the behavior of the AQ-200 unit or to give direct control commands. Logical inputs can be controlled with a virtual switch built in the mimic and from a SCADA system (IEC 61850, Modbus, IEC 101, etc.). Logical inputs are volatile signals: their status will always return to "0" when the AQ-200 device is rebooted.

Logical inputs have two modes available: Hold and Pulse. When a logical input which has been set to "Hold" mode is controlled to "1", the input will switch to status "1" and it stays in that status until it is given a control command to go to status "0" or until the device is rebooted. When a logical input which has been set to "Pulse" mode is controlled to "1", the input will switch to status "1" and return back to "0" after 5 ms.



The figure below presents the operation of a logical input in Hold mode and in Pulse mode.

Figure. 5.4.8 - 152. Operation of logical input in "Hold" and "Pulse" modes.

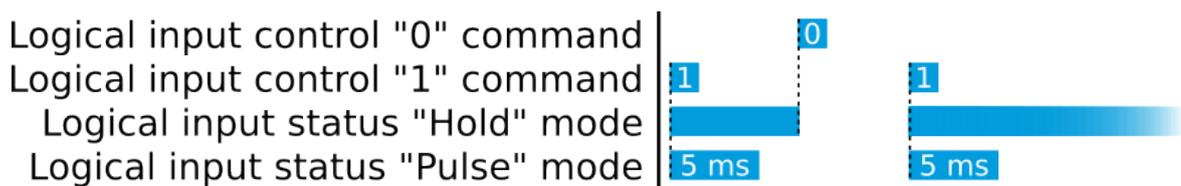

A logical input pulse can also be extended by connecting a DELAY-low gate to a logical output, as has been done in the example figure below.

Figure. 5.4.8 - 153. Extending a logical input pulse.

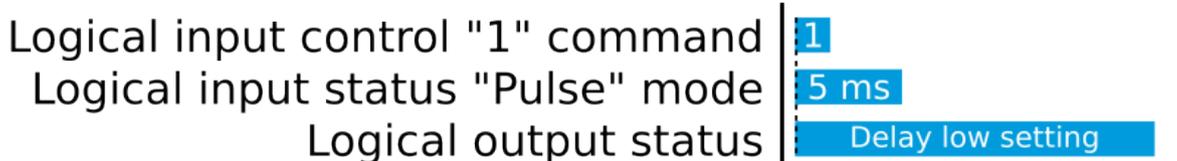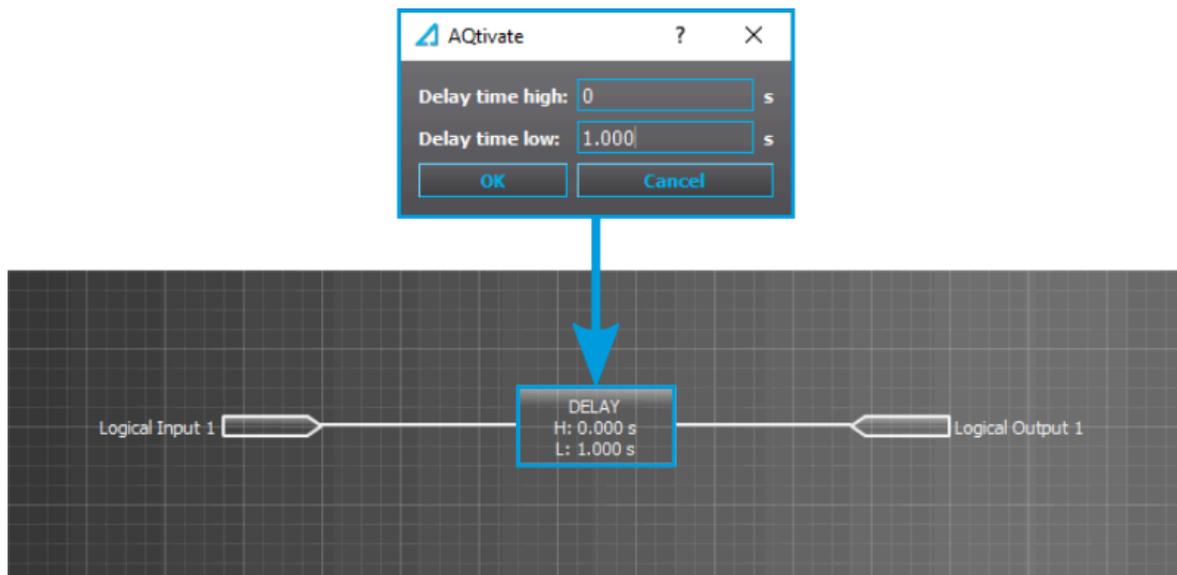


## 5.5 Monitoring functions

### 5.5.1 Current transformer supervision

The current transformer supervision function (abbreviated CTS in this document) is used for monitoring the CTs as well as the wirings between the device and the CT inputs for malfunctions and wire breaks. An open CT circuit can generate dangerously high voltages into the CT secondary side, and cause unintended activations of current balance monitoring functions.

Figure. 5.5.1 - 154. Secondary circuit fault in phase L1 wiring.

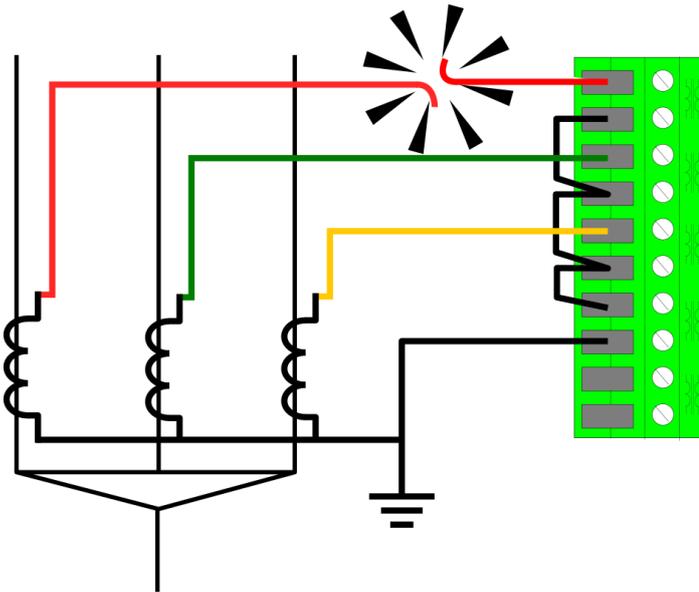

The function constantly monitors the instant values and the key calculated magnitudes of the phase currents. Additionally, the residual current circuit can be monitored if the residual current is measured from a dedicated residual current CT. The user can enable and disable the residual circuit monitoring at will.

The blocking signal and the setting group selection control the operating characteristics of the function during normal operation, i.e. the user or user-defined logic can change function parameters while the function is running.

The outputs of the function are the CTS ALARM and BLOCKED signals. The function uses a total of eight (8) separate setting groups which can be selected from one common source. Also, the operating mode of the function can be changed via setting group selection.

The operational logic consists of the following:

- input magnitude processing
- threshold comparator
- block signal check
- time delay characteristics
- output processing.

The following conditions have to met simultaneously for the function alarm to activate:

- None of the three-phase currents exceeds the  $I_{set\ high\ limit}$  setting.
- At least one of the three-phase currents exceeds the  $I_{set\ low\ limit}$  setting.
- At least one of the three-phase currents are below the  $I_{set\ low\ limit}$  setting.
- The ratio between the calculated minum and maximum of the three-phase currents is below the  $I_{set\ ratio}$  setting.
- The ratio between the negative sequence and the positive sequence exceeds the  $I2/I1\ ratio$  setting.
- The calculated difference ( $I_{L1}+I_{L2}+I_{L3}+I_0$ ) exceeds the  $I_{sum\ difference}$  setting (optional).
- The above-mentioned condition is met until the set time delay for alarm.

The inputs of the function are the following:


- setting parameters

- measured and pre-processed current magnitudes.

The output signals can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the two (2) output signal. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the CTS ALARM and BLOCKED events.

The following figure presents a simplified function block diagram of the current transformer supervision function.

Figure. 5.5.1 - 155. Simplified function block diagram of the CTS function.

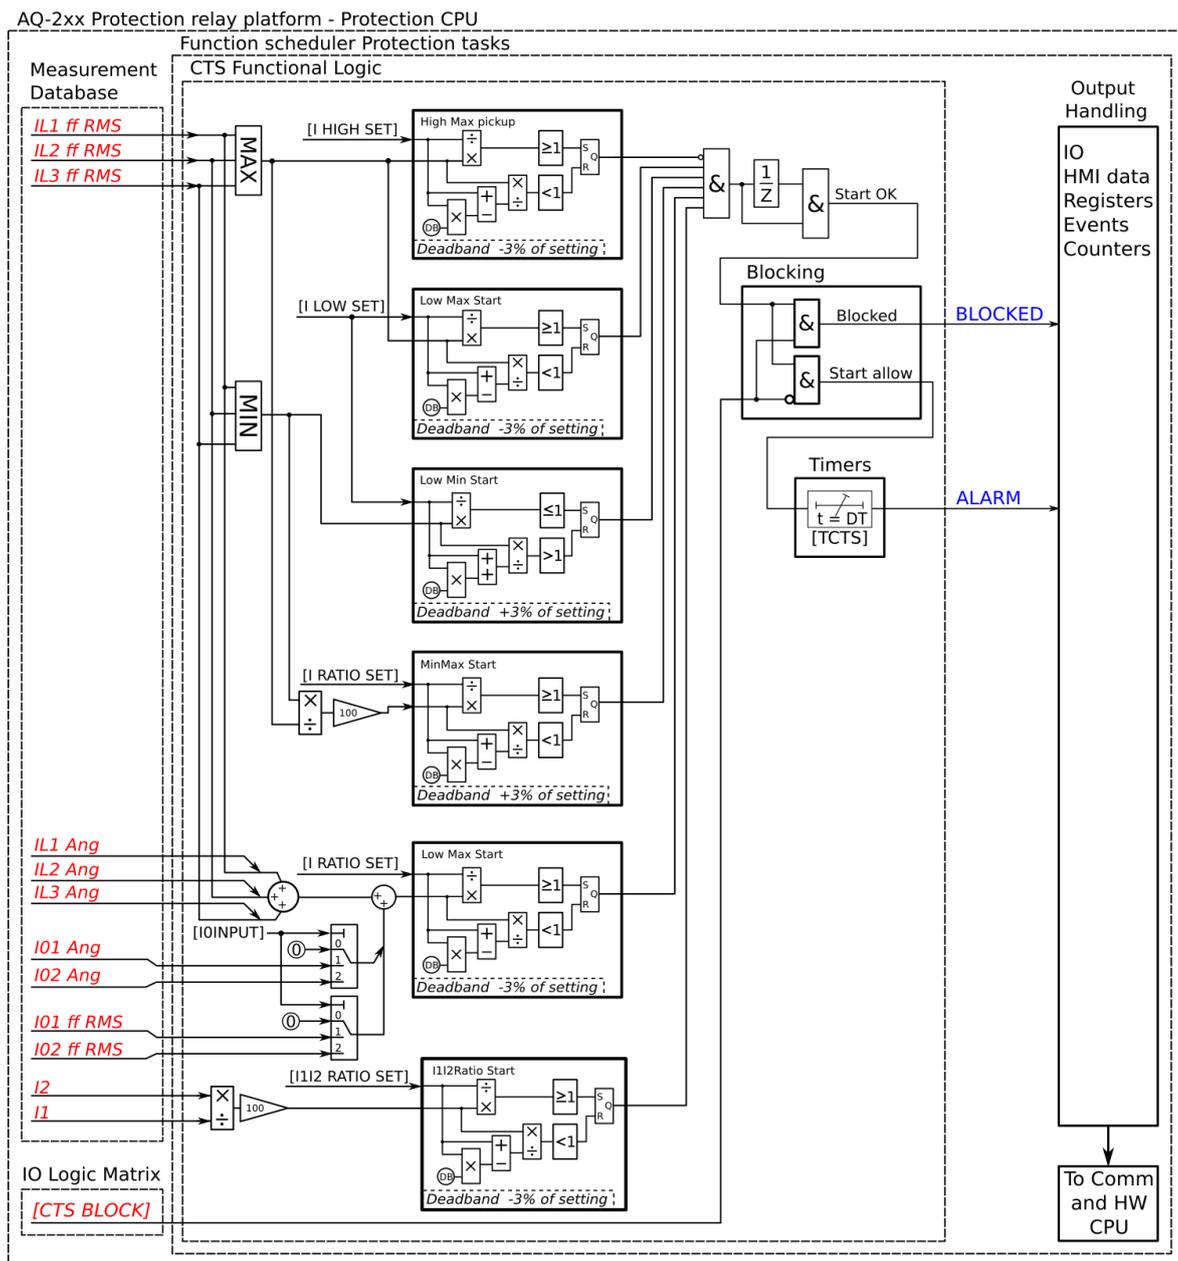

### Measured input

The function block uses analog current measurement values, the RMS magnitude of the current measurement inputs, and the calculated positive and negative sequence currents. The user can select what is used for the residual current measurement: nothing, the I01 RMS measurement, or the I02 RMS measurement.

Table. 5.5.1 - 136. Measured inputs of the CTS function.

Signal	Description	Time base
IL1RMS	RMS measurement of phase L1 (A) current	5ms
IL2RMS	RMS measurement of phase L2 (B) current	5ms
IL3RMS	RMS measurement of phase L3 (C) current	5ms
I01RMS	RMS measurement of residual input I01	5ms
I02RMS	RMS measurement of residual input I02	5ms
I1	Phase current's positive sequence component	5ms
I2	Phase current's negative sequence component	5ms
IL1Ang	Angle of phase L1 (A) current	5ms
IL2 Ang	Angle of phase L2 (B) current	5ms
IL3 Ang	Angle of phase L3 (C) current	5ms
I01 Ang	Angle of residual input I01	5ms
I02 Ang	Angle of residual input I02	5ms

The selection of the AI channel in use is made with a setting parameter. In all possible input channel variations the pre-fault condition is presented with a 20 ms averaged history value from -20 ms from START or TRIP event.

Table. 5.5.1 - 137. Residual current input signal settings

Name	Range	Step	Default	Description
I0 input selection	0: Not in use 1: I01 2: I02	-	0: Not in use	Selects the measurement input for the residual current. If the residual current is measured with a separate CT, the residual current circuit can be monitored with the CTS function as well. However, this does not apply to summing connections (Holmgren, etc.). If the phase current CT is summed with I01 or I02, this selection should be set to "Not in use".
I0 direction	0: Add 1: Subtract	-	0: Add	Defines the polarity of residual current channel connection.
Comp. natural unbalance	0: - 1: Comp	-	0: -	When activated while the line is energized, the currently present calculated residual current is compensated to 0.

## Pick-up

The  $I_{set}$  and  $I0_{set}$  setting parameters control the current-dependent pick-up and activation of the current transformer supervision function. They define the minimum and maximum allowed measured current before action from the function. The function constantly calculates the ratio between the setting values and the measured magnitude ( $I_m$ ) for each of the three phases and for the selected residual current input. The reset ratio of 97 % and 103% are built into the function and is always relative to the  $I_{set}$  value. The setting value is common for all measured amplitudes, and when the  $I_m$  exceeds the  $I_{set}$  value (in single, dual or all currents) it triggers the pick-up operation of the function.

Table. 5.5.1 - 138. Pick-up settings.

Name	Range	Step	Default	Description
$I_{set}$ high limit	0.01...40.00× $I_N$	0.01× $I_N$	1.20× $I_N$	Determines the pick-up threshold for phase current measurement. This setting limit defines the upper limit for the phase current's pick-up element.  If this condition is met, it is considered as fault and the function is not activated.
$I_{set}$ low limit	0.01...40.00× $I_N$	0.01× $I_N$	0.10× $I_N$	Determines the pick-up threshold for phase current measurement. This setting limit defines the lower limit for the phase current's pick-up element.  This condition has to be met for the function to activate.
$I_{set}$ ratio	0.01...100.00%	0.01%	10.00%	Determines the pick-up ratio threshold between the minimum and maximum values of the phase current.  This condition has to be met for the function to activate.
I2/I1 ratio	0.01...100.00%	0.01%	49.00%	Determines the pick-up ratio threshold for the negative and positive sequence currents calculated from the phase currents.  This condition has to be met for the function to activate.  The ratio is 50 % for a full single-phasing fault (i.e. when one of the phases is lost entirely). Setting this at 49 % allows a current of 0.01 × $I_N$ to flow in one phase, while the other two are at nominal current.
$I_{sum}$ difference	0.01...40.00× $I_N$	0.01× $I_N$	0.10× $I_N$	Determines the pick-up ratio threshold for the calculated residual phase current and the measured residual current. If the measurement circuit is healthy, the sum of these two currents should be 0.
Time delay for alarm	0.000...1800.000s	0.005s	0.5s	Determines the delay between the activation of the function and the alarm.

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active. When the activation of the pick-up is based on binary signals, the activation happens immediately after the monitored signal is activated.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and the release time characteristics are processed similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Operating time characteristics

This function supports definite time delay (DT). For detailed information on this delay type please refer to the chapter "General properties of a protection function" and its section "Operating time characteristics for trip and reset".

## Typical cases of current transformer supervision

The following nine examples present some typical cases of the current transformer supervision and their setting effects.

Figure. 5.5.1 - 156. All works properly, no faults.



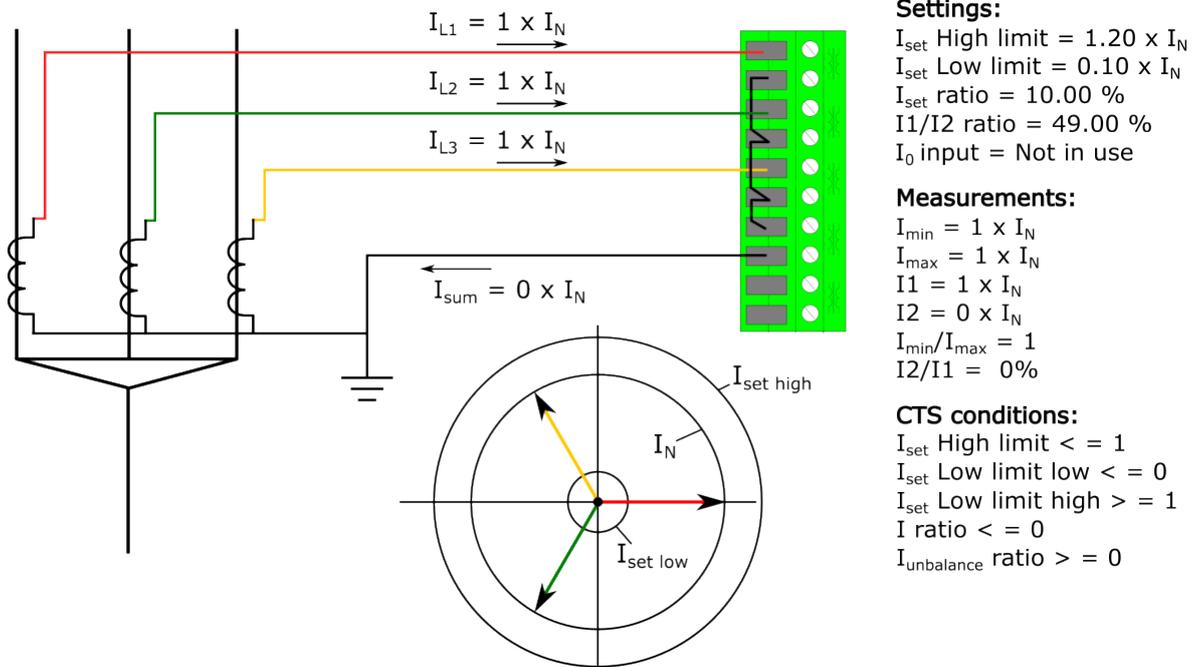


Figure. 5.5.1 - 157. Secondary circuit fault in phase L1 wiring.

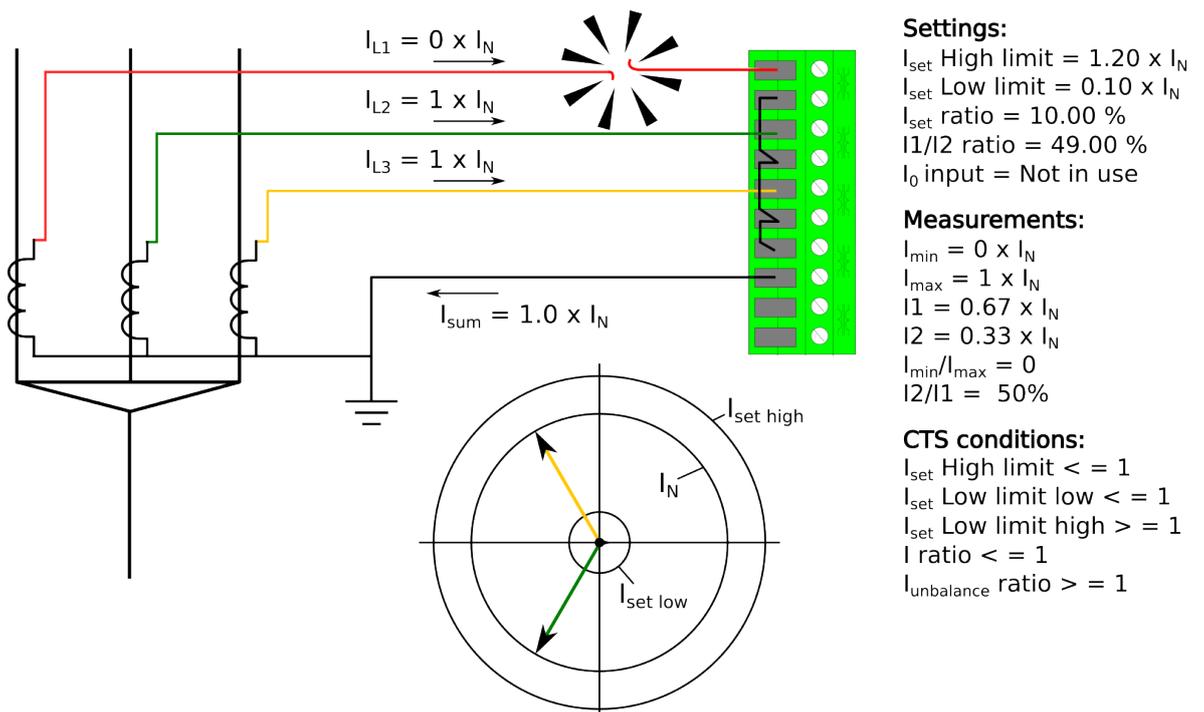


When a fault is detected and all conditions are met, the CTS timer starts counting. If the situation continues until the set time has passed, the function issues an alarm.

Figure. 5.5.1 - 158. Primary circuit fault in phase L1 wiring.

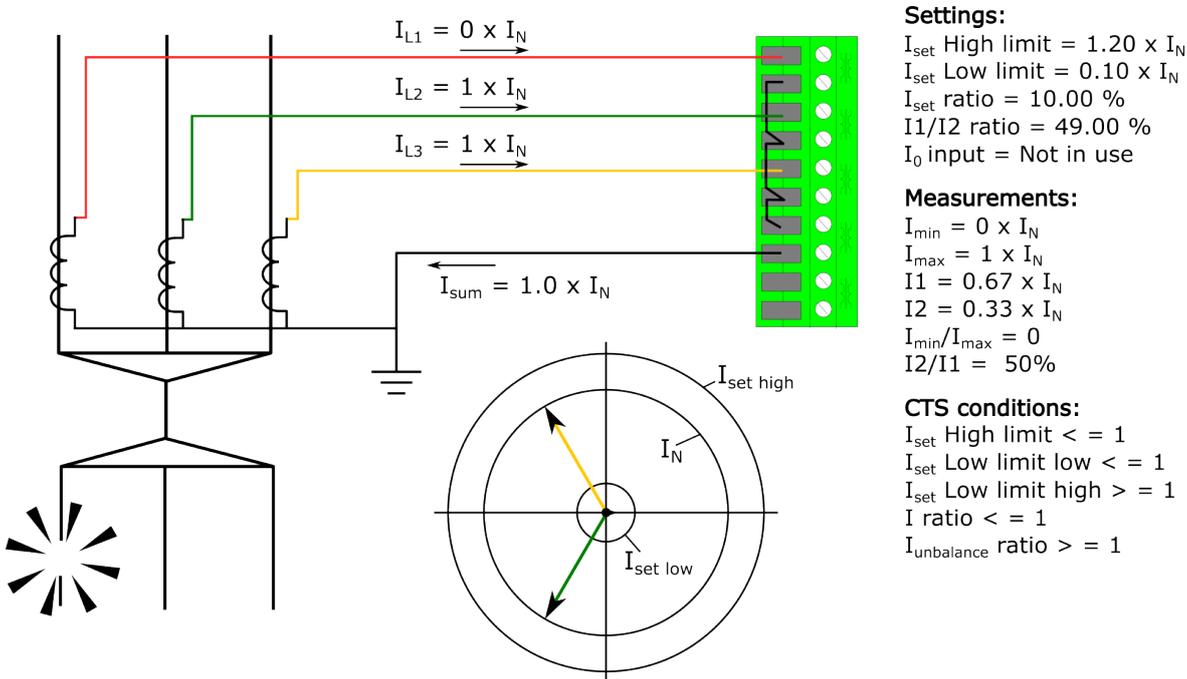


In this example, distinguishing between a primary fault and a secondary fault is impossible. However, the situation meets the function's activation conditions, and if this state (secondary circuit fault) continues until the set time has passed, the function issues an alarm. This means that the function supervises both the primary and the secondary circuit.

Figure. 5.5.1 - 159. No wiring fault but heavy unbalance.

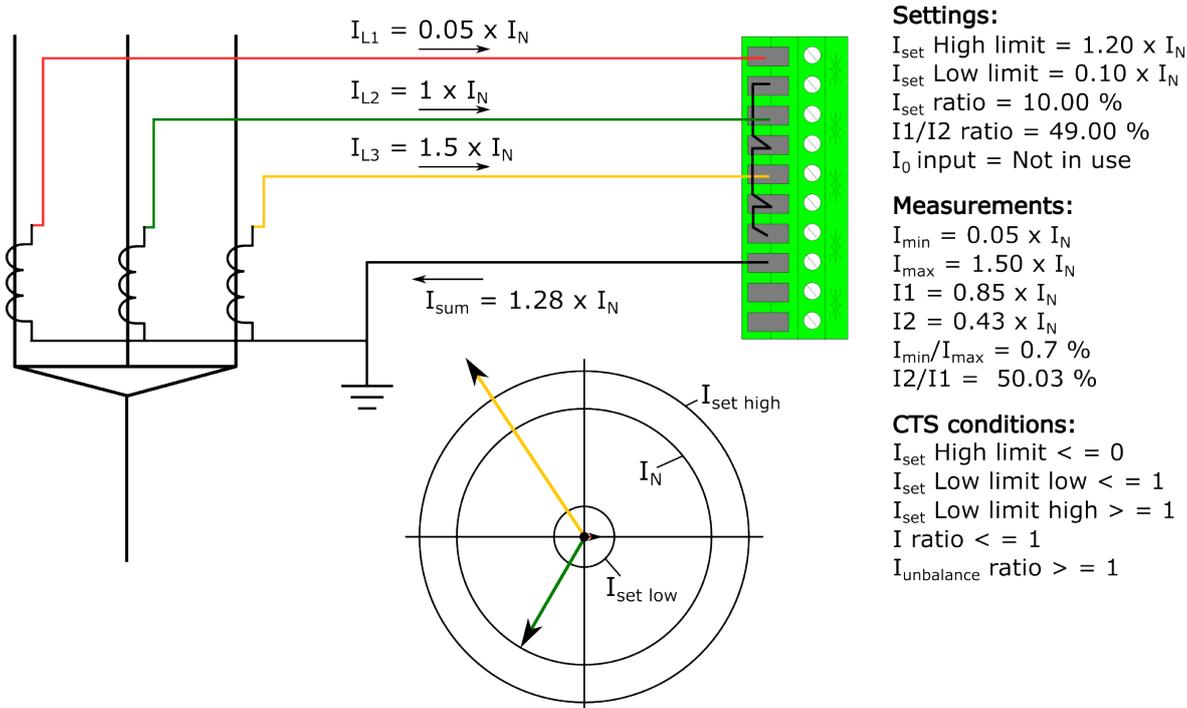

If any of the phases exceed the  $I_{set}$  high limit setting, the operation of the function is not activated. This behavior is applied to short-circuits and earth faults even when the fault current exceeds the  $I_{set}$  high limit setting.


Figure. 5.5.1 - 160. Low current and heavy unbalance.

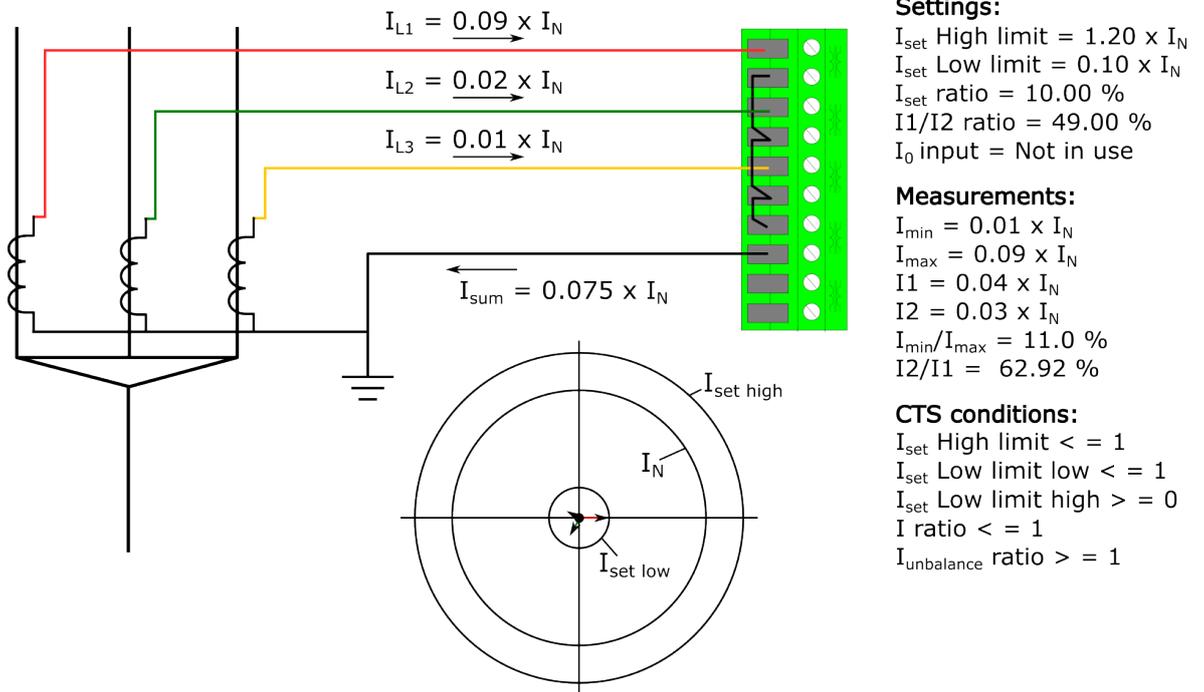

If all of the measured phase magnitudes are below the  $I_{set}$  low limit setting, the function is not activated even when the other conditions (inc. the unbalance condition) are met.


If the  $I_{set}$  high limit and  $I_{set}$  low limit setting parameters are adjusted according to the application's normal behavior, the operation of the function can be set to be very sensitive for broken circuit and conductor faults.

Figure. 5.5.1 - 161. Normal situation, residual current also measured.

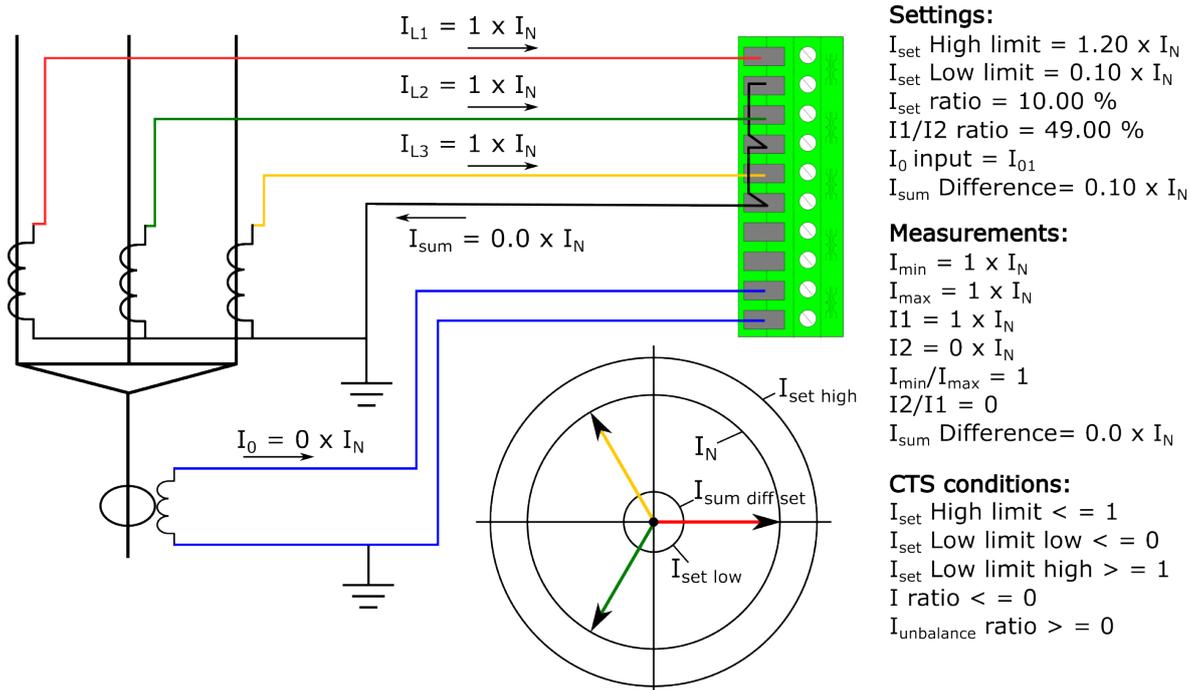


When the residual condition is added with the "I0 input selection", the sum of the current and the residual current are compared against each other to verify the wiring condition.

Figure. 5.5.1 - 162. Broken secondary phase current wiring.

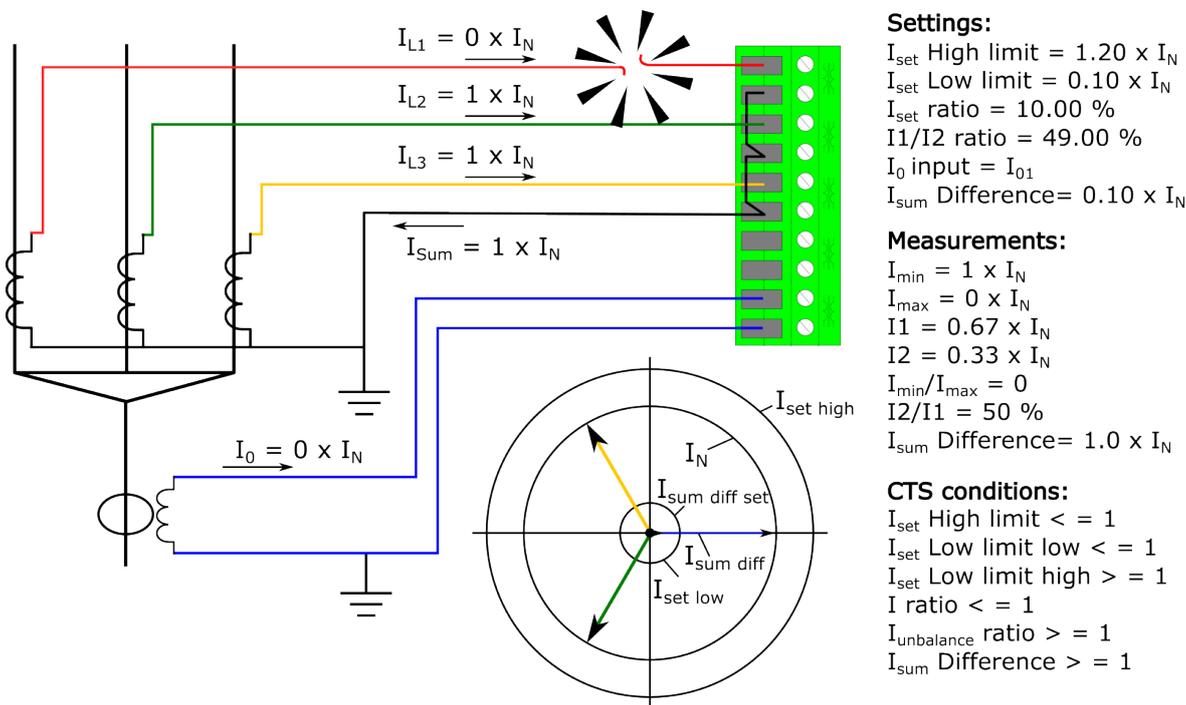


When phase current wire is broken all of the conditions are met in the CTS and alarm shall be issued in case if the situation continues until the set alarming time is met.

Figure. 5.5.1 - 163. Broken primary phase current wiring.

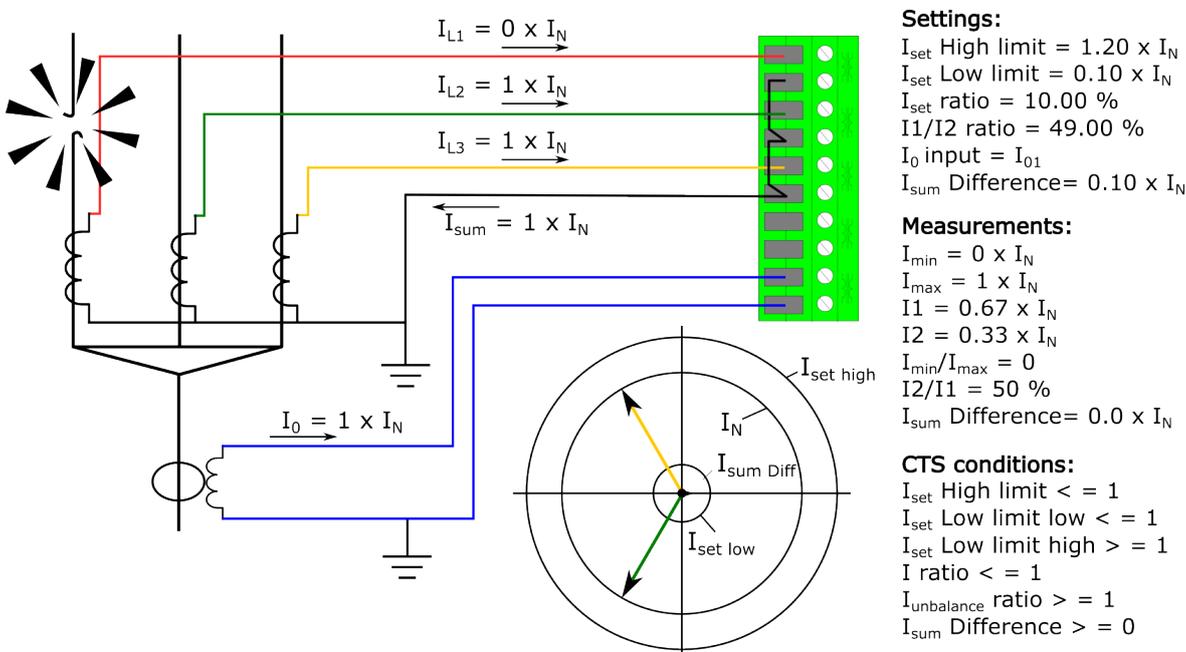

In this example, all other condition are met except the residual difference. That is now  $0 \times I_n$ , which indicates a primary side fault.

Figure. 5.5.1 - 164. Primary side high-impedance earth fault.

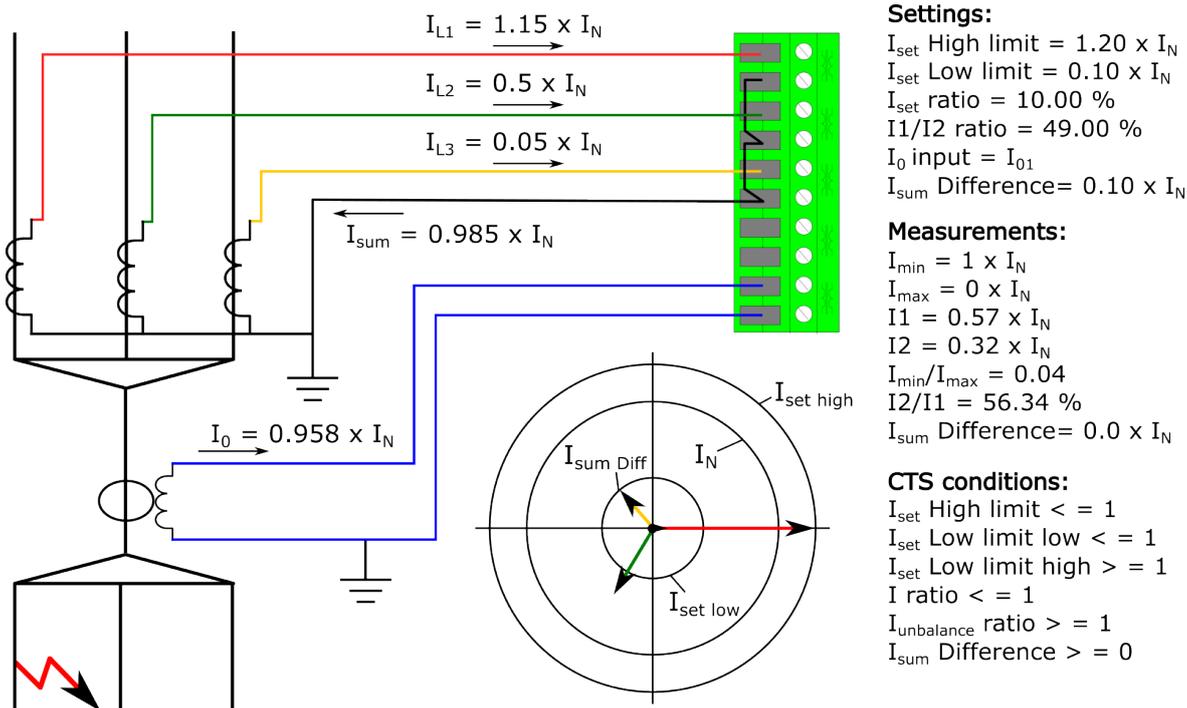

In this example there is a high-impedance earth fault. It does not activate the function, if the measurement conditions are met, while the calculated and measured residual current difference does not reach the limit. The  $I_{sum\ difference}$  setting should be set according to the application in order to reach maximum security and maximum sensitivity for the network earthing.

## Events and registers

The current transformer supervision function (abbreviated "CTS" in event block names) generates events and registers from the status changes in ALARM ACTIVATED and BLOCKED signals. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.5.1 - 139. Event codes.

Event number	Event channel	Event block name	Event code	Description
3328	52	CTS1	0	Alarm ON
3329	52	CTS1	1	Alarm OFF
3330	52	CTS1	2	Block ON
3331	52	CTS1	3	Block OFF

The function registers its operation into the last twelve (12) time-stamped registers; this information is available for all provided instances separately. The register of the function records the ON event process data for ACTIVATED, BLOCKED, etc. The table below presents the structure of the function's register content.


Table. 5.5.1 - 140. Register content.

Date and time	Event code	Trigger currents	Time to CTSact	Ftype	Used SG
dd.mm.yyyy hh:mm:ss.mss	3328-3459 Descr.	The phase currents (L1, L2 & L3), the residual currents (I01 & I02), and the sequence currents (I1 & I2) on trigger time.	Time remaining before the function is active.	The status code of the monitored current.	Setting group 1...8 active.

## 5.5.2 Circuit breaker wear

The circuit breaker wear function is used for monitoring the circuit breaker's lifetime and its maintenance needs caused by interrupting currents and mechanical wear. The function uses the circuit breaker's manufacturer-supplied data for the breaker operating cycles in relation to the interrupted current magnitudes. The function is integrated into the object control function and can be enabled and set under that function's settings. However, the circuit breaker wear function is an independent function and it initializes as an independent instance which has its own events and settings not related to the object it is linked to.

Figure. 5.5.2 - 165. Example of the circuit breaker interrupting life operations.

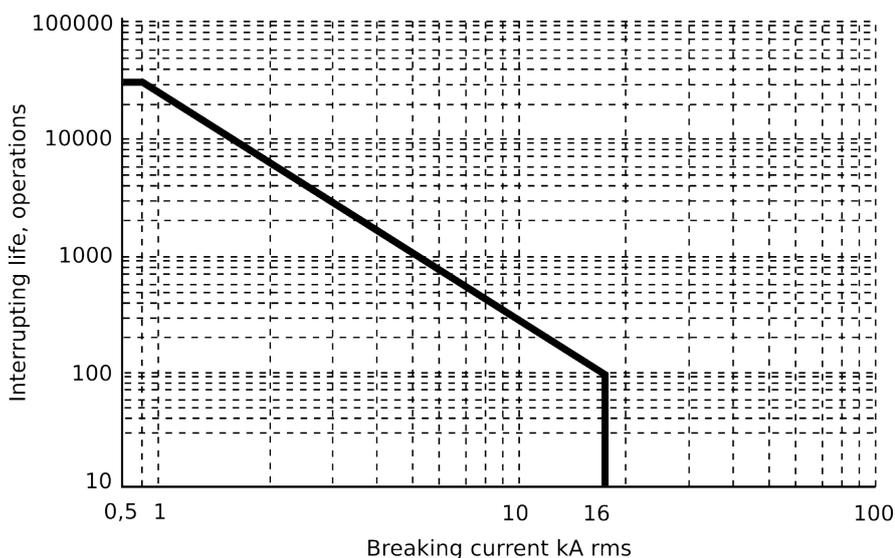

The function is triggered from the circuit breaker's "Open" command output and it monitors the three-phase current values in both the tripping moment and the normal breaker opening moment. The maximum value of interrupting life operations for each phase is calculated from these currents. The value is cumulatively deducted from the starting operations starting value. The user can set up two separate alarm levels, which are activated when the value of interrupting life operations is below the setting limit. The "Trip contact" setting defines the output that triggers the current monitoring at the breaker's "Open" command.

The outputs of the function are the ALARM 1 and ALARM 2 signals.


The inputs for the function are the following:

- setting parameters
- binary output signals
- measured and pre-processed current magnitudes.

The function's output signals can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the two (2) output signal. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the "Open" operations as well as the ALARM 1 and ALARM 2 events. The function can also monitor the operations left for each phase.

The following figure presents a simplified function block diagram of the circuit breaker wear function.

Figure. 5.5.2 - 166. Simplified function block diagram of the circuit breaker wear function.

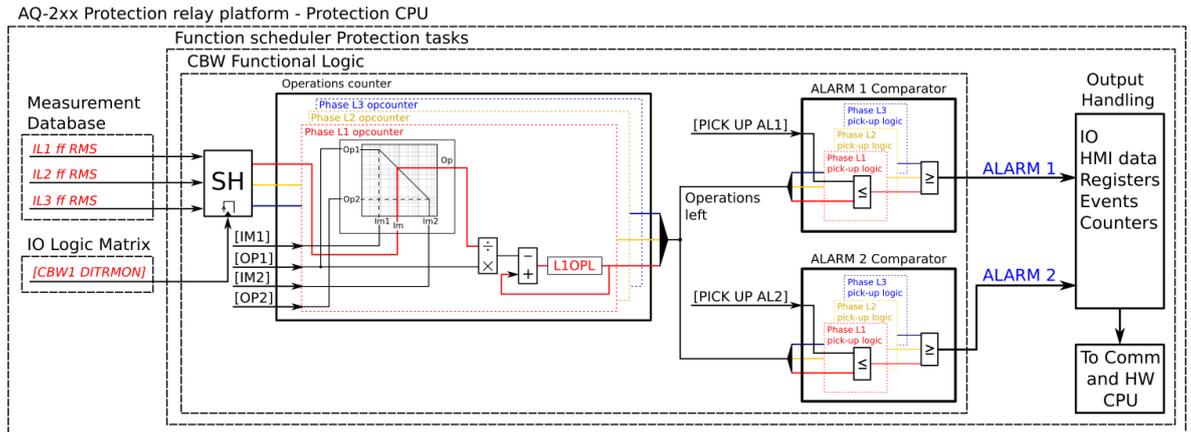

## Measured input

The function block uses analog current measurement values and always uses the RMS magnitude of the current measurement input.

Table. 5.5.2 - 141. Measurement inputs of the circuit breaker wear function.

Signal	Description	Time base
IL1RMS	RMS measurement of phase L1 (A) current	5ms
IL2RMS	RMS measurement of phase L2 (B) current	5ms
IL3RMS	RMS measurement of phase L3 (C) current	5ms

## Circuit breaker characteristics settings

The circuit breaker characteristics are set by two operating points, defined by the nominal breaking current, the maximum allowed breaking current and their respective operation settings. This data is provided by the circuit breaker's manufacturer.

Table. 5.5.2 - 142. Settings for circuit breaker characteristics.

Name	Range	Step	Default	Description
Operations 1	0...200 000	1	50 000	The number of interrupting life operations at the nominal current (Close - Open).
Operations 2	0...200 000	1	100	The number of interrupting life operations at the rated breaking current (Open).
Current 1 (I <sub>nom</sub> )	0...100.00kA	0.01kA	1kA	The rated normal current (RMS).
Current 2 (I <sub>max</sub> )	0...100.00kA	0.01kA	20kA	The rated short-circuit breaking current (RMS).

## Pick-up for alarming

For the alarm stages Alarm 1 and Alarm 2, the user can set the pick-up level for the number of operations left. The pick-up setting is common for all phases and the alarm stage picks up if any of the phases goes below this setting.

Table. 5.5.2 - 143. Pick-up settings.

Name	Range	Step	Default	Description
Alarm 1	0: Disabled 1: Enabled	-	0: Disabled	Enable and disable the Alarm 1 stage.
Alarm 1 Set	0...200 000	1	1 000	Defines the pick-up threshold for remaining operations. When the number of remaining operations is below this setting, the ALARM 1 signal is activated.
Alarm 2	0: Disabled 1: Enabled	-	0: Disabled	Enable and disable the Alarm 2 stage.
Alarm 2 Set	0...200 000	1	100	Defines the pick-up threshold for remaining operations. When the number of remaining operations is below this setting, the ALARM 2 signal is activated.

## Setting example

Let us examine the settings, using a low-duty vacuum circuit breaker (ISM25\_LD\_1/3) manufactured by Tavrida as an example. The image below presents the technical specifications provided by the manufacturer, with the data relevant to our settings highlighted in red:

Rated voltage, kV	24
Rated current, A	800
Rated power frequency test voltage, kV	50
Rated frequency, Hz	50/60
Rated impulse test voltage, kV peak	125
Partial discharge level at 1,1 rated voltage kV, pC	<10
Rated short-circuit breaking current, kA	16
Rated short-circuit making current, kA peak	41.5
Short time withstand current, 4s, kA	16
Mechanical life, CO cycles, not less than	30,000
Interrupting life operations, not less than	
at rated current	30,000
at breaking current	100
at other currents	see Fig.41
Closing time, ms, not more than	35
Opening time, ms, not more than	15
Breaking time, ms, not more than	25
Main contact resistance, $\mu\text{Ohm}$ , not more than	40
Maximum ambient temperature, C°	+55
Minimum ambient temperature, C°	-40
Design class (according to IEC 60932)	1
Electrical endurance class at rated IEEE/IEC duty	E2
Mechanical endurance class at rated IEEE/IEC duty	M2
Capacitive current switching class	C2
"Mechanical vibration and shock withstand capability, IEC 60721, IEC 60068"	Class 4M4
Maximum altitude above sea level, m	3000*
Maximum humidity, non condensing	98 %
Weight, kg - LD_1	35
Weight, kg - LD_6	55

Now, we set the stage as follows:

Parameter	Setting
Current 1	0.80 kA
Operation 1	30 000 operations
Current 2	16.00 kA
Operations 2	100 operations
Enable Alarm 1	1: Enabled
Alarm 1 Set	1000 operations
Enable Alarm 2	1: Enabled
Alarm 2 Set	100 operations

With these settings, Alarm 1 is issued when the cumulative interruption counter for any of the three phases dips below the set 1000 remaining operations ("Alarm 1 Set"). Similarly, when any of the counters dips below 100 remaining operations, Alarm 2 is issued.

## Events and registers

The circuit breaker wear function (abbreviated "CBW" in event block names) generates events and registers from the status changes in Triggered, Alarm 1 and Alarm 2 signals as well as in internal pick-up comparators. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.5.2 - 144. Event codes.

Event number	Event channel	Event block name	Event code	Description
3712	58	CBW1	0	CBWEAR1 Triggered
3713	58	CBW1	1	CBWEAR1 Alarm 1 ON
3714	58	CBW1	2	CBWEAR1 Alarm 1 OFF
3715	58	CBW1	3	CBWEAR1 Alarm 2 ON
3716	58	CBW1	4	CBWEAR1 Alarm 2 OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data. The table below presents the structure of the function's register content.

Table. 5.5.2 - 145. Register content.

Date and time	Event code	Trigger current	All.Op.ITrg	Deduct. Op	Op.Left
dd.mm.yyyy hh:mm:ss.mss	3712-3716 Descr.	Phase currents on trigger time	Allowed operations with trigger current	Deducted operations from the cumulative sum	Operations left

### 5.5.3 Total harmonic distortion (THD)

The total harmonic distortion (THD) function is used for monitoring the content of the current harmonic. The THD is a measurement of the harmonic distortion present, and it is defined as the ratio between the sum of all harmonic components' powers and the power of the fundamental frequency (RMS).

Harmonics can be caused by different sources in electric networks such as electric machine drives, thyristor controls, etc. The function's monitoring of the currents can be used to alarm of the harmonic content rising too high; this can occur when there is an electric quality requirement in the protected unit, or when the harmonics generated by the process need to be monitored.

The function constantly measures the phase and residual current magnitudes as well as the harmonic content of the monitored signals up to the 31<sup>st</sup> harmonic component. When the function is activated, the measurements are also available for the mimic and the measurement views in the HMI carousel. The user can also set the alarming limits for each measured channel if the application so requires.

The monitoring of the measured signals can be selected to be based either on an amplitude ratio or on the above-mentioned power ratio. The difference is in the calculation formula (as shown below):

Figure. 5.5.3 - 167. THD calculation formulas.

$$THD_P = \frac{I_{x2}^2 + I_{x3}^2 + I_{x4}^2 \dots I_{x31}^2}{I_{x1}^2}$$

, where  
 I = measured current,  
 x = measurement input,  
 n = harmonic number

$$THD_A = \sqrt{\frac{I_{x2}^2 + I_{x3}^2 + I_{x4}^2 \dots I_{x31}^2}{I_{x1}^2}}$$

, where  
 I = measured current,  
 x = measurement input,  
 n = harmonic number

While both of these formulas exist, the power ratio ( $THD_P$ ) is recognized by the IEEE, and the amplitude ratio ( $THD_A$ ) is recognized by the IEC.

The blocking signal and the setting group selection control the operating characteristics of the function during normal operation, i.e. the user or user-defined logic can change function parameters while the function is running. This only applies if the alarming is activated.

The outputs of the function are the START and ALARM ACT signals for the phase current ("THDPH") and the residual currents ("THDI01" and "THDI02") as well as BLOCKED signals. The function uses a total of eight (8) separate setting groups which can be selected from one common source.

The operational logic consists of the following:

- input magnitude processing
- threshold comparator
- block signal chec
- time delay characteristics
- output processing.


The inputs of the function are the following:

- setting parameters
- digital inputs and logic signals
- measured and pre-processed current magnitudes

The function outputs can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the seven (7) output signals. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the START, ALARM ACT and BLOCKED events.

The following figure presents a simplified function block diagram of the total harmonic distortion monitor function.

Figure. 5.5.3 - 168. Simplified function block diagram of the total harmonic distortion monitor function.

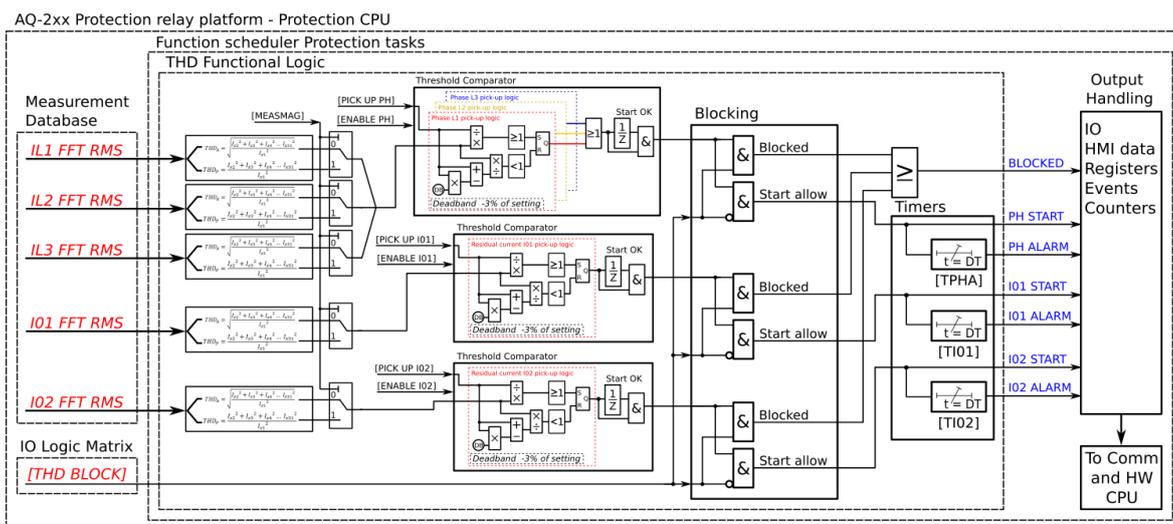

## Measured input

The function block uses analog current measurement values. The function always uses FFT measurement of the whole harmonic specter of 32 components from each measured current channel. From these measurements the function calculates either the amplitude ratio or the power ratio. A -20 ms averaged value of the selected magnitude is used for pre-fault data registering.

Table. 5.5.3 - 146. Measurement inputs of the total harmonic distortion monitor function.

Signal	Description	Time base
IL1FFT	FFT measurement of phase L1 (A) current	5ms
IL2FFT	FFT measurement of phase L2 (B) current	5ms
IL3FFT	FFT measurement of phase L3 (C) current	5ms
I01FFT	FFT measurement of residual I01 current	5ms
I02FFT	FFT measurement of residual I02 current	5ms

The selection of the calculation method is made with a setting parameter (common for all measurement channels).

## General settings

The following general settings define the general behavior of the function. These settings are static i.e. it is not possible to change them by editing the setting group.

Table. 5.5.3 - 147. General settings.

Name	Range	Step	Default	Description
Measurement magnitude	1: Amplitude 2: Power	-	1: Amplitude	Defines which available measured magnitude the function uses.

## Pick-up

The  $Phase_{THD}$ ,  $I01_{THD}$  and  $I02_{THD}$  setting parameters control the the pick-up and activation of the function. They define the maximum allowed measured current before action from the function. Before the function activates alarm signals, their corresponding pick-up elements need to be activated with the setting parameters *Enable phase THD alarm*, *Enable I01 THD alarm* and *Enable I02 THD alarm*. The function constantly calculates the ratio between the setting values and the measured magnitude for each of the three phases. The reset ratio of 97 % is built into the function and is always relative to the setting value. The setting value is common for all measured phases. When the  $I_m$  exceeds the  $I_{set}$  value (in single, dual or all phases), it triggers the pick-up operation of the function.

Table. 5.5.3 - 148. Pick-up settings.

Name	Range	Step	Default	Description
Enable phase THD alarm	0: Enabled 1: Disabled	-	0: Enabled	Enables and disables the THD alarm function from phase currents.
Enable I01 THD alarm	0: Enabled 1: Disabled	-	0: Enabled	Enables and disables the THD alarm function from residual current input I01.
Enable I02 THD alarm	0: Enabled 1: Disabled	-	0: Enabled	Enables and disables the THD alarm function from residual current input I02.
Phase THD pick-up	0.10...100.00%	0.01%	10.00%	The pick-up setting for the THD alarm element from the phase currents. At least one of the phases' measured THD value has to exceed this setting in order for the alarm signal to activate.
I01 THD pick-up	0.10...100.00%	0.01%	10.00%	The pick-up setting for the THD alarm element from the residual current I01. The measured THD value has to exceed this setting in order for the alarm signal to activate.
I02 THD pick-up	0.10...100.00%	0.01%	10.00%	The pick-up setting for the THD alarm element from the residual current I02. The measured THD value has to exceed this setting in order for the alarm signal to activate.

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active.

## Read-only parameters

The relay's *Info* page displays useful, real-time information on the state of the protection function. It is accessed either through the relay's HMI display, or through the setting tool software when it is connected to the relay and its Live Edit mode is active.

Table. 5.5.3 - 149. Information displayed by the function.

Name	Range	Step	Description
THD condition	0: Normal 1: Start 2: Alarm 3: Blocked	-	Displays status of the monitoring function.

## Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and the release time characteristics are processed similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup current values and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

## Operating time characteristics for activation and reset

This function supports definite time delay (DT). The following table presents the setting parameters for the function's time characteristics.

Table. 5.5.3 - 150. Settings for operating time characteristics.

Name	Range	Step	Default	Description
Phase THD alarm delay	0.000...1800.000s	0.005s	10.000s	Defines the delay for the alarm timer from the phase currents' measured THD.
I01 THD alarm delay	0.000...1800.000s	0.005s	10.000s	Defines the delay for the alarm timer from the residual current I01's measured THD.
I02 THD alarm delay	0.000...1800.000s	0.005s	10.000s	Defines the delay for the alarm timer from the residual current I02's measured THD.

## Events and registers

The total harmonic distortion monitor function (abbreviated "THD" in event block names) generates events and registers from the status changes in the alarm function when it is activated. The recorded signals are START and ALARM signals for the monitoring elements as well as common BLOCKED signals. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.5.3 - 151. Event codes.

Event number	Event channel	Event block name	Event code	Description
3520	55	THD1	0	THD Start Phase ON
3521	55	THD1	1	THD Start Phase OFF
3522	55	THD1	2	THD Start I01 ON
3523	55	THD1	3	THD Start I01 OFF
3524	55	THD1	4	THD Start I02 ON
3525	55	THD1	5	THD Start I02 OFF
3526	55	THD1	6	THD Alarm Phase ON
3527	55	THD1	7	THD Alarm Phase OFF
3528	55	THD1	8	THD Alarm I01 ON

Event number	Event channel	Event block name	Event code	Description
3529	55	THD1	9	THD Alarm I01 OFF
3530	55	THD1	10	THD Alarm I02 ON
3531	55	THD1	11	THD Alarm I02 OFF
3532	55	THD1	12	Blocked ON
3533	55	THD1	13	Blocked OFF

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for ACTIVATED, BLOCKED, etc. The table below presents the structure of the function's register content.

Table. 5.5.3 - 152. Register content.

Date and time	Event code	L1h, L2h, L3h pretriggering current	L1h, L2h, L3h Fault current	L1h, L2h, L3h Prefault current	Used SG
dd.mm.yyyy hh:mm:ss.mss	3520-3533 Descr.	Start -200ms THD averages of each phase.	Trip -20 ms THD averages of each phase.	Trip -200 ms averages of each phase.	Setting group 1...8 active.

#### 5.5.4 Disturbance recorder (DR)

The disturbance recorder is a high-capacity (64 MB) and fully digital recorder integrated to the protection relay. The maximum sample rate of the recorder's analog channels is 64 samples per cycle. The recorder also supports 95 digital channels simultaneously with the twenty (20) measured analog channels.

The recorder provides a great tool to analyze the performance of the power system during network disturbance situations. The recorder's output is in general COMTRADE format and it is compatible with most viewers and injection devices. The files are based on the IEEE standard C37.111-1999. Captured recordings can be injected as playback with secondary testing tools that support the COMTRADE file format. Playback of files might help to analyze the fault, or can be simply used for educational purposes.

#### Analog and digital recording channels

Up to 20 analog recording channels and 95 digital channels are supported. The available analog channels vary according to the device type.

Table. 5.5.4 - 153. Analog recording channels.

Signal	Description
IL1	Phase current $I_{L1}$
IL2	Phase current $I_{L2}$
IL3	Phase current $I_{L3}$
I01c	Residual current $I_{01}$ coarse*
I01f	Residual current $I_{01}$ fine*
I02c	Residual current $I_{02}$ coarse*
I02f	Residual current $I_{02}$ fine*
IL1"	Phase current $I_{L1}$ (CT card 2)

Signal	Description
IL2"	Phase current $I_{L2}$ (CT card 2)
IL3"	Phase current $I_{L3}$ (CT card 2)
I01"c	Residual current $I_{01}$ coarse* (CT card 2)
I01"f	Residual current $I_{01}$ fine* (CT card 2)
I02"c	Residual current $I_{02}$ coarse* (CT card 2)
I02"f	Residual current $I_{02}$ fine* (CT card 2)
U1(2)VT1	Line-to-neutral $U_{L1}$ or line-to-line voltage $U_{12}$ (VT card 1)
U2(3)VT1	Line-to-neutral $U_{L2}$ or line-to-line voltage $U_{23}$ (VT card 1)
U3(1)VT1	Line-to-neutral $U_{L3}$ or line-to-line voltage $U_{31}$ (VT card 1)
U0(ss)VT1	Zero sequence voltage $U_0$ or synchrocheck voltage $U_{SS}$ (VT card 1)
F tracked 1	Tracked frequency of reference 1
F tracked 2	Tracked frequency of reference 2
F tracked 3	Tracked frequency of reference 3
ISup	Current measurement module voltage supply supervision (CT card 1)
ISup"	Current measurement module voltage supply supervision (CT card 2)
USup	Voltage measurement module voltage supply supervision (VT card 2)
IL1'"	Phase current $I_{L1}$ (CT card 3)
IL2'"	Phase current $I_{L2}$ (CT card 3)
IL3'"	Phase current $I_{L3}$ (CT card 3)
I01'"c	Residual current $I_{01}$ coarse* (CT card 3)
I01'"f	Residual current $I_{01}$ fine* (CT card 3)
I02'"c	Residual current $I_{02}$ coarse* (CT card 3)
I02'"f	Residual current $I_{02}$ fine* (CT card 3)
ISup_3	Current measurement module voltage supply supervision (CT card 3)
UL1(2)VT2	Line-to-neutral $U_{L1}$ or line-to-line voltage $U_{12}$ (VT card 2)
UL2(3)VT2	Line-to-neutral $U_{L2}$ or line-to-line voltage $U_{23}$ (VT card 2)
UL3(1)VT2	Line-to-neutral $U_{L3}$ or line-to-line voltage $U_{31}$ (VT card 2)
U0(SS)VT2	Zero sequence voltage $U_0$ or synchrocheck voltage $U_{SS}$ (VT card 2)
USup_2	Voltage measurement module voltage supply supervision (VT card 2)

**\*NOTE:** There are two signals for each residual current channel in the disturbance recorder: coarse and fine. A coarse signal is capable of sampling in the full range of the current channel but suffers a loss of accuracy at very low currents. A fine signal is capable of sampling at very low currents and with high accuracy but cuts off at higher currents. Table below lists performance of both channels with fine and coarse gain.

Table. 5.5.4 - 154. Residual current channel performance with coarse or residual gain.

Channel	Coarse gain range	Fine gain range	Fine gain peak
I01	0...150 A	0...10 A	15 A
I02	0...75 A	0...5 A	8 A

Table. 5.5.4 - 155. Digital recording channels – Measurements.

Signal	Description	Signal	Description
<b>Currents</b>			
Pri.Pha.curr.ILx	Primary phase current ILx (IL1, IL2, IL3)	Pha.curr.ILx TRMS Pri	Primary phase current TRMS (IL1, IL2, IL3)
Pha.angle ILx	Phase angle ILx (IL1, IL2, IL3)	Pos./Neg./Zero seq.curr.	Positive/Negative/Zero sequence current
Pha.curr.ILx	Phase current ILx (IL1, IL2, IL3)	Sec.Pos./Neg./Zero seq.curr.	Secondary positive/negative/zero sequence current
Sec.Pha.curr.ILx	Secondary phase current ILx (IL1, IL2, IL3)	Pri.Pos./Neg./Zero seq.curr.	Primary positive/negative/zero sequence current
Pri.Res.curr.I0x	Primary residual current I0x (I01, I02)	Pos./Neg./Zero seq.curr.angle	Positive/Negative/Zero sequence current angle
Res.curr.angle I0x	Residual current angle I0x (I01, I02)	Res.curr.I0x TRMS	Residual current TRMS I0x (I01, I02)
Res.curr.I0x	Residual current I0x (I01, I02)	Res.curr.I0x TRMS Sec	Secondary residual current TRMS I0x (I01, I02)
Sec.Res.curr.I0x	Secondary residual current I0x (I01, I02)	Res.curr.I0x TRMS Pri	Primary residual current TRMS I0x (I01, I02)
Pri.cal.I0	Primary calculated I0	Pha.Lx ampl. THD	Phase Lx amplitude THD (L1, L2, L3)
Sec.calc.I0	Secondary calculated I0	Pha.Lx pow. THD	Phase Lx power THD (L1, L2, L3)
calc.I0	Calculated I0	Res.I0x ampl. THD	Residual I0x amplitude THD (I01, I02)
calc.I0 Pha.angle	Calculated I0 phase angle	Res.I0x pow. THD	Residual I0x power THD (I01, I02)
Pha.curr.ILx TRMS	Phase current TRMS ILx (IL1, IL2, IL3)	P-P curr.ILx	Phase-to-phase current ILx (IL1, IL2, IL3)
Pha.curr.ILx TRMS Sec	Secondary phase current TRMS (IL1, IL2, IL3)	P-P curr.I0x	Phase-to-phase current I0x (I01, I02)
<b>Voltages</b>			
Ux Volt p.u.	Ux voltage in per-unit values (U1, U2, U3, U4)	System volt ULxx mag	Magnitude of the system voltage ULxx (UL12, UL23, UL31)
Ux Volt pri	Primary Ux voltage (U1, U2, U3, U4)	System volt ULxx mag(kV)	Magnitude of the system voltage ULxx in kilovolts (UL12, UL23, UL31)
Ux Volt sec	Secondary Ux voltage (U1, U2, U3, U4)	System volt ULxx ang	Angle of the system voltage ULxx (UL12, UL23, UL31)
Ux Volt TRMS p.u.	Ux voltage TRMS in per-unit values (U1, U2, U3, U4)	System volt ULx mag	Magnitude of the system voltage ULx (U1, U2, U3, U4)
Ux Volt TRMS pri	Primary Ux voltage TRMS (U1, U2, U3, U4)	System volt ULx mag(kV)	Magnitude of the system voltage ULx in kilovolts (U1, U2, U3, U4)
Ux Volt TRMS sec	Secondary Ux voltage TRMS (U1, U2, U3, U4)	System volt ULx ang	Angle of the system voltage ULx (U1, U2, U3, U4)
Pos./Neg./Zero seq.Volt.p.u.	Positive/Negative/Zero sequence voltage in per-unit values	System volt U0 mag	Magnitude of the system voltage U0
Pos./Neg./Zero seq.Volt.pri	Primary positive/negative/zero sequence voltage	System volt U0 mag(kV)	Magnitude of the system voltage U0 in kilovolts
Pos./Neg./Zero seq.Volt.sec	Secondary positive/negative/zero sequence voltage	System volt U0 mag(%)	Magnitude of the system voltage U0 in percentages
Ux Angle	Ux angle (U1, U2, U3, U4)	System volt U0 ang	Angle of the system voltage U0

Signal	Description	Signal	Description
Pos./Neg./Zero Seq volt.Angle	Positive/Negative/Zero sequence voltage angle	Ux Angle difference	Ux angle difference (U1, U2, U3)
<b>Resistive and reactive currents</b>			
ILx Resistive Current p.u.	ILx resistive current in per-unit values (IL1, IL2, IL3)	Pos.seq. Resistive Current Pri.	Primary positive sequence resistive current
ILx Reactive Current p.u.	ILx reactive current in per-unit values (IL1, IL2, IL3)	Pos.seq. Reactive Current Pri.	Primary positive sequence reactive current
Pos.Seq. Resistive Current p.u.	Positive sequence resistive current in per-unit values	I0x Residual Resistive Current Pri.	Primary residual resistive current I0x (I01, I02)
Pos.Seq. Reactive Current p.u.	Positive sequence reactive current in per-unit values	I0x Residual Reactive Current Pri.	Primary residual reactive current I0x (I01, I02)
I0x Residual Resistive Current p.u.	I0x residual resistive current in per-unit values (I01, I02)	ILx Resistive Current Sec.	Secondary resistive current ILx (IL1, IL2, IL3)
I0x Residual Reactive Current p.u.	I0x residual reactive current in per-unit values (I01, I02)	ILx Reactive Current Sec.	Secondary reactive current ILx (IL1, IL2, IL3)
ILx Resistive Current Pri.	Primary resistive current ILx (IL1, IL2, IL3)	I0x Residual Resistive Current Sec.	Secondary residual resistive current I0x (I01, I02)
ILx Reactive Current Pri.	Primary reactive current ILx (IL1, IL2, IL3)	I0x Residual Reactive Current Sec.	Secondary residual reactive current I0x (I01, I02)
<b>Power, GYB, frequency</b>			
Lx PF	Lx power factor (L1, L2, L3)	Curve x Input	Input of Curve x (1, 2, 3, 4)
POW1 3PH Apparent power (S)	Three-phase apparent power	Curve x Output	Output of Curve x (1, 2, 3, 4)
POW1 3PH Apparent power (S MVA)	Three-phase apparent power in megavolt-amperes	Enablebasedfunctions(VT1)	Enable frequency-based functions
POW1 3PH Active power (P)	Three-phase active power	Track.sys.f.	Tracked system frequency
POW1 3PH Active power (P MW)	Three-phase active power in megawatts	Sampl.f. used	Used sample frequency
POW1 3PH Reactive power (Q)	Three-phase reactive power	Tr f CH x	Tracked frequency (channels A, B, C)
POW1 3PH Reactive power (Q MVar)	Three-phase reactive power in megavars	Alg f Fast	Fast frequency algorithm
POW1 3PH Tan(phi)	Three-phase tangent phi	Alg f avg	Average frequency algorithm
POW1 3PH Cos(phi)	Three-phase cosine phi	Frequency based protections blocked	When true ("1"), all frequency-based protections are blocked.
3PH PF	Three-phase power factor	f atm. Protections (when not measurable returns to nominal)	Frequency at the moment. If the system nominal is set to 50 Hz, this will show "50 Hz".
Neutral conductance G (Pri)	Primary neutral conductance	f atm. Display (when not measurable is 0 Hz)	Frequency at the moment. If the frequency is not measurable, this will show "0 Hz".

Signal	Description	Signal	Description
Neutral susceptance B (Pri)	Primary neutral susceptance	f meas qlty	Quality of tracked frequency
Neutral admittance Y (Pri)	Primary neutral admittance	f meas from	Indicates which of the three voltage or current channel frequencies is used by the relay.
Neutral admittance Y (Ang)	Neutral admittance angle	SS1.meas.frqs	Synchrocheck – the measured frequency from voltage channel 1
I01 Resistive component (Pri)	Primary resistive component I01	SS2.meas.frqs	Synchrocheck – the measured frequency from voltage channel 2
I01 Capacitive component (Pri)	Primary capacitive component I01	Enable f based functions	Status of this signal is active when frequency-based protection functions are enabled.

Table. 5.5.4 - 156. Digital recording channels – Binary signals.

Signal	Description	Signal	Description
Dlx	Digital input 1...11	Timer x Output	Output of Timer 1...10
Open/close control buttons	Active if buttons 1 or 0 in the unit's front panel are pressed.	Internal Relay Fault active	If the unit has an internal fault, this signal is active.
Status PushButton x On	Status of Push Button 1...12 is ON	(Protection, control and monitoring event signals)	(see the individual function description for the specific outputs)
Status PushButton x Off	Status of Push Button 1...12 is OFF	Always True/False	"Always false" is always "0". Always true is always "1".
Forced SG in use	Stage forcing in use	OUTx	Output contact statuses
SGx Active	Setting group 1...8 active	GOOSE INx	GOOSE input 1...64
Double Ethernet LinkA down	Double ethernet communication card link A connection is down.	GOOSE INx quality	Quality of GOOSE input 1...64
Double Ethernet LinkB down	Double ethernet communication card link B connection is down.	Logical Input x	Logical input 1...32
MBIO ModA Ch x Invalid	Channel 1...8 of MBIO Mod A is invalid	Logical Output x	Logical output 1...64
MBIO ModB Ch x Invalid	Channel 1...8 of MBIO Mod B is invalid	NTP sync alarm	If NTP time synchronization is lost, this signal will be active.
MBIO ModC Ch x Invalid	Channel 1...8 of MBIO Mod C is invalid	Ph.Rotating Logic control 0=A-B-C, 1=A-C-B	Phase rotating order at the moment. If true ("1") the phase order is reversed.



**NOTE!**

Digital channels are measured every 5 ms.

## Recording settings and triggering

Disturbance recorder can be triggered manually or automatically by using the dedicated triggers. Every signal listed in "Digital recording channels" can be selected to trigger the recorder.

The device has a maximum limit of 100 for the number of recordings. Even when the recordings are very small, their number cannot exceed 100. The number of analog and digital channels together with the sample rate and the time setting affect the recording size. See calculation examples below in the section titled "Estimating the maximum length of total recording time".

Table. 5.5.4 - 157. Recorder control settings.

Name	Range	Step	Default	Description
Recorder enabled	0: Enabled 1: Disabled	-	0: Enabled	Enables and disables the disturbance recorder function.
Recorder status	0: Recorder ready 1: Recording triggered 2: Recording and storing 3: Storing recording 4: Recorder full 5: Wrong config	-	-	Indicates the status of recorder.
Clear record+	0...2 <sup>32</sup> -1	1	-	Clears selected recording. If "1" is inserted, first recording will be cleared from memory. If "10" is inserted, tenth (10th) recording will be cleared from memory.
Manual trigger	0: - 1: Trig	-	0: -	Triggers disturbance recording manually. This parameter will return back to "-" automatically.
Clear all records	0: - 1: Clear	-	0: -	Clears all disturbance recordings.
Clear newest record	0: - 1: Clear	-	0: -	Clears the newest stored disturbance recording.
Clear oldest record	0: - 1: Clear	-	0: -	Clears the oldest stored disturbance recording.
Max. number of recordings	0...100	1	-	Displays the maximum number of recordings that can be stored in the device's memory with settings currently in use. The maximum number of recordings can go up to 100.
Max. length of a recording	0.000...1800.000s	0.001s	-	Displays the maximum length of a single recording.
Max. location of the pre-trigger	0.000...1800.000s	0.001s	-	Displays the highest pre-triggering time that can be set with the settings currently in use.
Recordings in memory	0...100	1	-	Displays how many recordings are stored in the memory.

Table. 5.5.4 - 158. Recorder trigger setting.

Name	Description
Recorder trigger	Selects the trigger input(s). Clicking the "Edit" button brings up a pop-up window, and checking the boxes enable the selected triggers.

Table. 5.5.4 - 159. Recorder settings.

Name	Range	Step	Default	Description
Recording length	0.100...1800.000s	0.01s	1s	Sets the length of a recording.

Name	Range	Step	Default	Description
Recording mode	0: FIFO 1: Keep olds	-	0: FIFO	Selects what happens when the memory is full.  "FIFO" (= first in, first out) replaces the oldest stored recording with the latest one. "Keep olds" does not accept new recordings.
Analog channel samples	0: 64s/c 1: 32s/c 2: 16s/c 3: 8s/c	-	0: 64s/c	Selects the sample rate of the disturbance recorder in samples per cycle. The samples are saved from the measured wave according to this setting.
Digital channel samples	5ms (fixed)	-	5 ms(fixed)	The fixed sample rate of the recorded digital channels.
Pretriggering time	0.2...15.0s	0.1s	0.2s	Sets the recording length before the trigger.
Analog recording CH1...CH20	0...8 freely selectable channels	-	-	Selects the analog channel for recording. Please see the list of all available analog channels in the section titled "Analog and digital recording channels".
Automatically get recordings	0: Disabled 1: Enabled	-	0: Disabled	Enables and disables the automatic transfer of recordings. The recordings are taken from the relay's protection CPU and transferred to the relay's FTP directory in the communication CPU; the FTP client then automatically loads the recordings from the relay and transfers them further to the SCADA system.  Please note that when this setting is enabled, all new disturbance recordings will be pushed to the FTP server of the relay. Up to six (6) recordings can be stored in the FTP at once. Once those six recordings have been retrieved and removed, more recordings will then be pushed to the FTP.  When a recording has been sent to the FTP server of the relay, it is no longer accessible through setting tools <i>Disturbance recorder</i> → <i>Get DR files</i> command.
Recorder digital channels	0...95 freely selectable channels	-	-	Selects the digital channel for recording. Please see the list of all available digital channels in the section titled "Analog and digital recording channels".

**NOTE!**



The disturbance recorder is not ready unless the "Max. length of a recording" parameter is showing some value other than zero. At least one trigger input has to be selected in the "Recorder Trigger" setting to fulfill this term.

### Estimating the maximum length of total recording time

Once the disturbance recorder's settings have been made and loaded to the relay, the device automatically calculates and displays the total length of recordings. However, if the user wishes to confirm this calculation, they can do so with the following formula. Please note that the formula assumes there are no other files in the FTP that share the 64 MB space.

$$\frac{\text{Total sample reserve}}{(f_n * (Ch_{an} + 1) * SR) + (200 \text{ Hz} * Ch_{dig})}$$

Where:

- total sample reserve = the number of samples available in the FTP when no other files are saved; calculated by dividing the total number of available bytes by 4 bytes (=the size of one sample); e.g. 64 306 588 bytes/4 bytes = 16 076 647 samples.
- $f_n$  = the nominal frequency (Hz).

- $Ch_{an}$  = the number of analog channels recorded; "+ 1" stands for the time stamp for each recorded sample.
- $SR$  = the selected sample rate (s/c).
- 200 Hz = the rate at which digital channels are always recorded, i.e. 5 ms.
- $Ch_{dig}$  = the number of digital channels recorded.

For example, let us say the nominal frequency is 50 Hz, the selected sample rate is 64 s/c, nine (9) analog channels and two (2) digital channels record. The calculation is as follows:

$$\frac{16\,076\,647 \text{ samples}}{(50 \text{ Hz} * (9 + 1) * 64) + (200 \text{ Hz} * 2)} \approx 496 \text{ s}$$

Therefore, the maximum recording length in our example is approximately 496 seconds.

## Application example

This chapter presents an application example of how to set the disturbance recorder and analyze its output. The recorder is configured by using the setting tool software or relay HMI, and the results are analyzed with the AQviewer software (is automatically downloaded and installed with AQtivate). Registered users can download the latest tools from the Arcteq website ([arcteq.fi/downloads/](http://arcteq.fi/downloads/)).

In this example, we want the recordings to be made according to the following specifications:

- the recording length is 6.0 s
- the sample rate is 64 s/c (therefore, with a 50 Hz system frequency a sample is taken every 312.5  $\mu$ s)
- the analog channels 1...8 are used
- digital channels are tracked every 5 ms
- the first activation of the overcurrent stage trip ( $I > TRIP$ ) triggers the recorder
- the pre-triggering time is 5 (ie. how long is recorded before the  $I > TRIP$  signal) and the post-triggering time is 1 s

The image below shows how these settings are placed in the setting tool.

Figure. 5.5.4 - 169. Disturbance recorder settings.



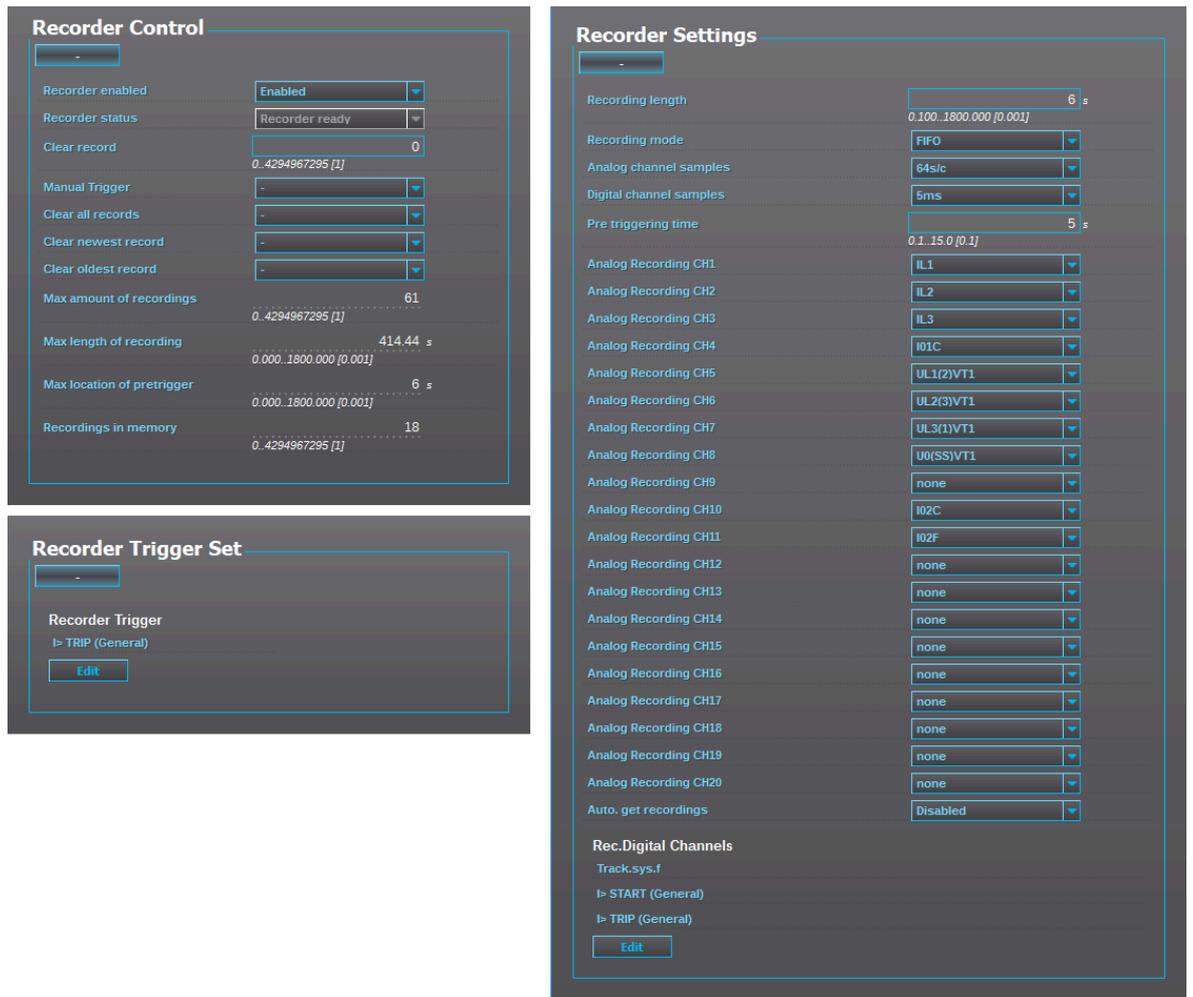


Figure. 5.5.4 - 170. Effects of recording length and pre-triggering time signals. This example is based on the settings shown above.

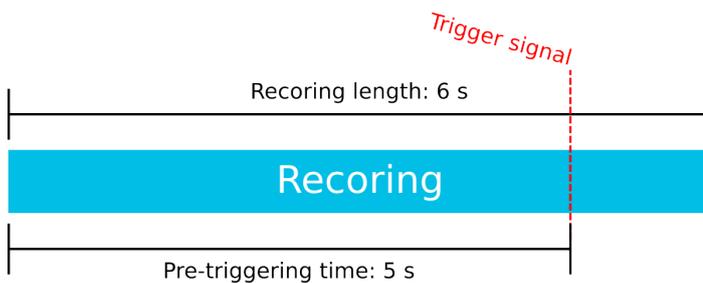

When there is at least one recording in the device's memory, that recording can be analyzed by using the AQviewer software (see the image below). However, the recording must first be made accessible to AQviewer. The user can read it from the device's memory (*Disturbance recorder* → *Get DR-files*). Alternatively, the user can load the recordings individually (*Disturbance recorder* → *DR List*) from a folder in the PC's hard disk drive; the exact location of the folder is described in *Tools* → *Settings* → *DR path*.

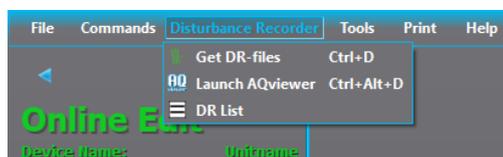

The user can also launch the AQviewer software from the *Disturbance recorder* menu.

## AQviewer

### Opening folders

Disturbance recordings can be opened by clicking on the "Open folder" icon or by going to *File* → *Open* (see the image below). The recordings are packed COMTRADE files; a -zip file includes \*.cfg and \*.dat files. AQviewer can open both original packed .zip files and COMTRADE files directly as they are located in same directory.



### Adding signals to plotters


By default, the default plotter is empty. Choose the measured signals ("Analog channels") on the left to move them to the plotter. In the image below (on the left) the phase currents IL1, IL2 and IL3 are selected; AQViewer color-codes them automatically. If you want to add another plotter, choose the blue "+" icon (in the main toolbar on the top). Please note that the "Add plotter" text appears when you move the cursor on top of the icon. Once clicked, the "Add graph" pop-up window appears (see the image below on the right). In the example the line-to-neutral voltages UL1, UL2 and UL3 are selected and moved to the window on the right. Confirm the selection by clicking the "OK" button.

Figure. 5.5.4 - 171. Adding another plotter



### General use and zooming

1. You can remove plotters individually by using the red "—" icon (numbered "1" in the image below). Please note that the "Remove plotters" text appears when you move the cursor on top of the icon.
2. You can add cursors to measure time by staying on top of any plotter and double-clicking the left mouse button. You can add up to five (5) cursors simultaneously. You can remove cursors by clicking on the icon (numbered "2" in the image below). Please note that the "Remove all cursors" text appears when you move the cursor on top of the icon.
3. You can zoom in manually by placing the cursor on top of a plotter, holding down the left mouse button and moving the cursor to create the area you want to zoom in. You can also zoom in (and out) by using the horizontal and vertical magnifying glass "+" and "—" icons (numbered "3" in the image below). If you want to reset the zooming, click on the middle magnifying glass icon. You can also zoom in and out the amplitude of individual plotters by holding down **Shift** and scrolling the mouse wheel up and down, respectively.
4. You can toggle between primary (P) and secondary (S) signals (numbered "4" in the image below).

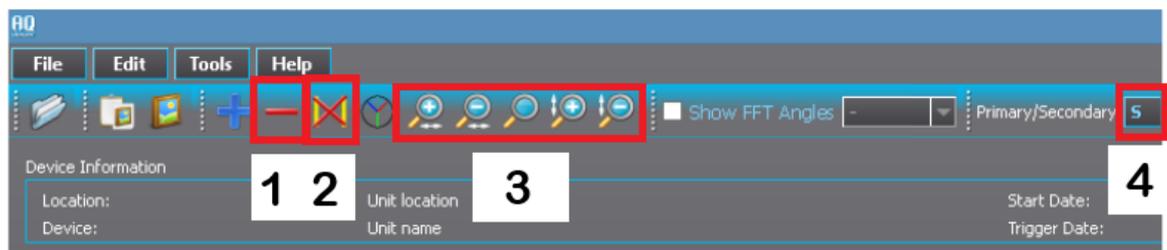


## Events

The disturbance recorder function (abbreviated "DR" in event block names) generates events and registers from the status changes of the function: the recorder generates an event each time it is triggered (manually or by dedicated signals). Events cannot be masked off. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

Table. 5.5.4 - 160. Event codes.

Event number	Event channel	Event block name	Event code	Description
4096	64	DR1	0	Recorder triggered ON
4097	64	DR1	1	Recorder triggered OFF
4098	64	DR1	2	Recorder memory cleared
4099	64	DR1	3	Oldest record cleared
4100	64	DR1	4	Recorder memory full ON
4101	64	DR1	5	Recorder memory full OFF
4102	64	DR1	6	Recording ON
4103	64	DR1	7	Recording OFF
4104	64	DR1	8	Storing recording ON
4105	64	DR1	9	Storing recording OFF
4106	64	DR1	10	Newest record cleared

## 5.5.5 Measurement recorder

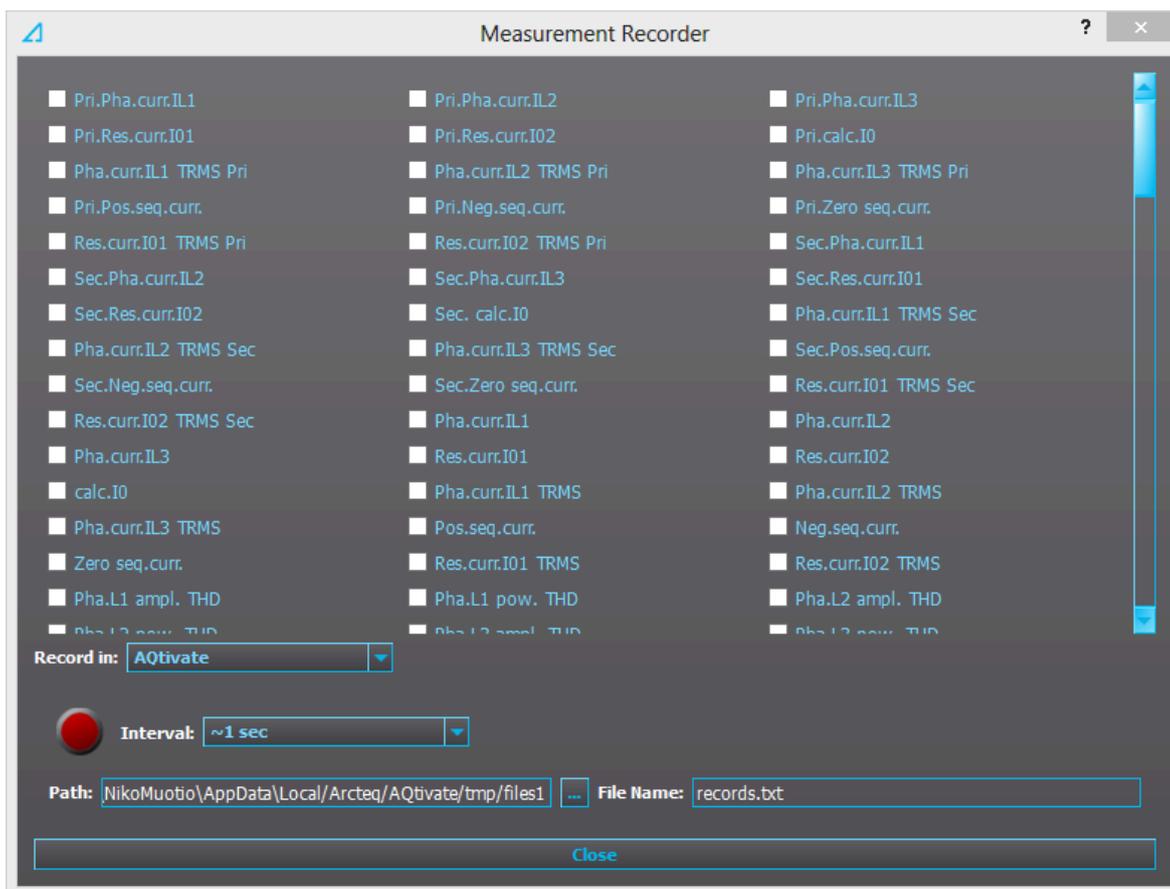

Measurements can be recorded to a file with the measurement recorder. The chosen measurements are recorded at selected intervals. In the "Measurement recorder" window, the measurements the user wants to be recorded can be selected by checking their respective check boxes. In order for the measurement recorder to activate, a connection to a relay must be established via the setting tool software and its Live Edit mode must be enabled (see the AQtivate 200 manual for more information). Navigate to the measurement recorder through *Tools* → *Miscellaneous tools* → *Measurement recorder*. The recording interval can be changed from the "Interval" drop-down menu. From the "Record in" drop-down menu the user can also choose whether the measurements are recorded in the setting tool or in the relay.

If the recording is done in the setting tool, both the setting tool software and its Live Edit mode have to be activated. The user can change the recording file location by editing the "Path" field. File names can also be changed with the "File name" field. Hitting the "Record" button (the big red circle) starts the recorder. Please note that closing the "Measurement recorder" window does not stop the recording; that can only be done by hitting the "Stop" button (the big blue circle).

If the recording is done in the relay, only the recording interval needs to be set before recording can be started. The setting tool estimates the maximum recording time, which depends on the recording interval. When the measurement recorder is running, the measurements can be viewed in graph form with the AQtivate PRO software (see the image below).

Figure. 5.5.5 - 172. Measurement recorder values viewed with AQtivate PRO.



Table. 5.5.5 - 161. Available analog signals.

Current measurements	P-P Curr.I"L3	L1 Imp.React.Ind.E.Mvarh
Pri.Pha.Curr.IL1	P-P Curr.I"01	L1 Imp.React.Ind.E.kvarh
Pri.Pha.Curr.IL2	P-P Curr.I"02	L1 Exp/Imp React.Ind.E.bal.Mvarh
Pri.Pha.Curr.IL3	Pha.angle I"L1	L1 Exp/Imp React.Ind.E.bal.kvarh
Pri.Res.Curr.I01	Pha.angle I"L2	L2 Exp.Active Energy MWh
Pri.Res.Curr.I02	Pha.angle I"L3	L2 Exp.Active Energy kWh
Pri.Calc.I0	Res.Curr.angle I"01	L2 Imp.Active Energy MWh
Pha.Curr.IL1 TRMS Pri	Res.Curr.angle I"02	L2 Imp.Active Energy kWh
Pha.Curr.IL2 TRMS Pri	Calc.I"0.angle	L2 Exp/Imp Act. E balance MWh
Pha.Curr.IL3 TRMS Pri	I" Pos.Seq.Curr.angle	L2 Exp/Imp Act. E balance kWh
Pri.Pos.Seq.Curr.	I" Neg.Seq.Curr.angle	L2 Exp.React.Cap.E.Mvarh
Pri.Neg.Seq.Curr.	I" Zero.Seq.Curr.angle	L2 Exp.React.Cap.E.kvarh
Pri.Zero.Seq.Curr.	<b>Voltage measurements</b>	L2 Imp.React.Cap.E.Mvarh
Res.Curr.I01 TRMS Pri	U1Volt Pri	L2 Imp.React.Cap.E.kvarh
Res.Curr.I02 TRMS Pri	U2Volt Pri	L2 Exp/Imp React.Cap.E.bal.Mvarh
Sec.Pha.Curr.IL1	U3Volt Pri	L2 Exp/Imp React.Cap.E.bal.kvarh
Sec.Pha.Curr.IL2	U4Volt Pri	L2 Exp.React.Ind.E.Mvarh
Sec.Pha.Curr.IL3	U1Volt Pri TRMS	L2 Exp.React.Ind.E.kvarh
Sec.Res.Curr.I01	U2Volt Pri TRMS	L2 Imp.React.Ind.E.Mvarh
Sec.Res.Curr.I02	U3Volt Pri TRMS	L2 Imp.React.Ind.E.kvarh
Sec.Calc.I0	U4Volt Pri TRMS	L2 Exp/Imp React.Ind.E.bal.Mvarh
Pha.Curr.IL1 TRMS Sec	Pos.Seq.Volt.Pri	L2 Exp/Imp React.Ind.E.bal.kvarh

Pha.Curr.IL2 TRMS Sec	Neg.Seq.Volt.Pri	L3 Exp.Active Energy MWh
Pha.Curr.IL3 TRMS Sec	Zero.Seq.Volt.Pri	L3 Exp.Active Energy kWh
Sec.Pos.Seq.Curr.	U1Volt Sec	L3 Imp.Active Energy MWh
Sec.Neg.Seq.Curr.	U2Volt Sec	L3 Imp.Active Energy kWh
Sec.Zero.Seq.Curr.	U3Volt Sec	L3 Exp/Imp Act. E balance MWh
Res.Curr.I01 TRMS Sec	U4Volt Sec	L3 Exp/Imp Act. E balance kWh
Res.Curr.I02 TRMS Sec	U1Volt Sec TRMS	L3 Exp.React.Cap.E.Mvarh
Pha.Curr.IL1	U2Volt Sec TRMS	L3 Exp.React.Cap.E.kvarh
Pha.Curr.IL2	U3Volt Sec TRMS	L3 Imp.React.Cap.E.Mvarh
Pha.Curr.IL3	U4Volt Sec TRMS	L3 Imp.React.Cap.E.kvarh
Res.Curr.I01	Pos.Seq.Volt.Sec	L3 Exp/Imp React.Cap.E.bal.Mvarh
Res.Curr.I02	Neg.Seq.Volt.Sec	L3 Exp/Imp React.Cap.E.bal.kvarh
Calc.I0	Zero.Seq.Volt.Sec	L3 Exp.React.Ind.E.Mvarh
Pha.Curr.IL1 TRMS	U1Volt p.u.	L3 Exp.React.Ind.E.kvarh
Pha.Curr.IL2 TRMS	U2Volt p.u.	L3 Imp.React.Ind.E.Mvarh
Pha.Curr.IL3 TRMS	U3Volt p.u.	L3 Imp.React.Ind.E.kvarh
Pos.Seq.Curr.	U4Volt p.u.	L3 Exp/Imp React.Ind.E.bal.Mvarh
Neg.Seq.Curr.	U1Volt TRMS p.u.	L3 Exp/Imp React.Ind.E.bal.kvarh
Zero.Seq.Curr.	U2Volt TRMS p.u.	Exp.Active Energy MWh
Res.Curr.I01 TRMS	U3Volt p.u.	Exp.Active Energy kWh
Res.Curr.I02 TRMS	U4Volt p.u.	Imp.Active Energy MWh
Pha.L1 ampl. THD	Pos.Seq.Volt. p.u.	Imp.Active Energy kWh
Pha.L2 ampl. THD	Neg.Seq.Volt. p.u.	Exp/Imp Act. E balance MWh
Pha.L3 ampl. THD	Zero.Seq.Volt. p.u.	Exp/Imp Act. E balance kWh
Pha.L1 pow. THD	U1Volt Angle	Exp.React.Cap.E.Mvarh
Pha.L2 pow. THD	U2Volt Angle	Exp.React.Cap.E.kvarh
Pha.L3 pow. THD	U3Volt Angle	Imp.React.Cap.E.Mvarh
Res.I01 ampl. THD	U4Volt Angle	Imp.React.Cap.E.kvarh
Res.I01 pow. THD	Pos.Seq.Volt. Angle	Exp/Imp React.Cap.E.bal.Mvarh
Res.I02 ampl. THD	Neg.Seq.Volt. Angle	Exp/Imp React.Cap.E.bal.kvarh
Res.I02 pow. THD	Zero.Seq.Volt. Angle	Exp.React.Ind.E.Mvarh
P-P Curr.IL1	System Volt UL12 mag	Exp.React.Ind.E.kvarh
P-P Curr.IL2	System Volt UL12 mag (kV)	Imp.React.Ind.E.Mvarh
P-P Curr.IL3	System Volt UL23 mag	Imp.React.Ind.E.kvarh
P-P Curr.I01	System Volt UL23 mag (kV)	Exp/Imp React.Ind.E.bal.Mvarh
P-P Curr.I02	System Volt UL31 mag	Exp/Imp React.Ind.E.bal.kvarh
Pha.angle IL1	System Volt UL31 mag (kV)	<b>Other measurements</b>
Pha.angle IL2	System Volt UL1 mag	TM> Trip expect mode
Pha.angle IL3	System Volt UL1 mag (kV)	TM> Time to 100% T

Res.Curr.angle I01	System Volt UL2 mag	TM> Reference T curr.
Res.Curr.angle I02	System Volt UL2 mag (kV)	TM> Active meas curr.
Calc.I0.angle	System Volt UL3 mag	TM> T est.with act. curr.
Pos.Seq.Curr.angle	System Volt UL3 mag (kV)	TM> T at the moment
Neg.Seq.Curr.angle	System Volt U0 mag	TM> Max.Temp.Rise All.
Zero.Seq.Curr.angle	System Volt U0 mag (kV)	TM> Temp.Rise atm.
Pri.Pha.Curr.I"L1	System Volt U1 mag	TM> Hot Spot estimate
Pri.Pha.Curr.I"L2	System Volt U1 mag (kV)	TM> Hot Spot Max. All
Pri.Pha.Curr.I"L3	System Volt U2 mag	TM> Used k for amb.temp
Pri.Res.Curr.I"01	System Volt U2 mag (kV)	TM> Trip delay remaining
Pri.Res.Curr.I"02	System Volt U3 mag	TM> Alarm 1 time to rel.
Pri.Calc.I"0	System Volt U3 mag (kV)	TM> Alarm 2 time to rel.
Pha.Curr.I"L1 TRMS Pri	System Volt U4 mag	TM> Inhibit time to rel.
Pha.Curr.I"L2 TRMS Pri	System Volt U4 mag (kV)	TM> Trip time to rel.
Pha.Curr.I"L3 TRMS Pri	System Volt UL12 ang	S1 Measurement
I" Pri.Pos.Seq.Curr.	System Volt UL23 ang	S2 Measurement
I" Pri.Neg.Seq.Curr.	System Volt UL31 ang	S3 Measurement
I" Pri.Zero.Seq.Curr.	System Volt UL1 ang	S4 Measurement
Res.Curr.I"01 TRMS Pri	System Volt UL2 ang	S5 Measurement
Res.Curr.I"02 TRMS Pri	System Volt UL3 ang	S6 Measurement
Sec.Pha.Curr.I"L1	System Volt U0 ang	S7 Measurement
Sec.Pha.Curr.I"L2	System Volt U1 ang	S8 Measurement
Sec.Pha.Curr.I"L3	System Volt U2 ang	S9 Measurement
Sec.Res.Curr.I"01	System Volt U3 ang	S10 Measurement
Sec.Res.Curr.I"02	System Volt U4 ang	S11 Measurement
Sec.Calc.I"0	<b>Power measurements</b>	S12 Measurement
Pha.Curr.I"L1 TRMS Sec	L1 Apparent Power (S)	Sys.meas.frqs
Pha.Curr.I"L2 TRMS Sec	L1 Active Power (P)	f atm.
Pha.Curr.I"L3 TRMS Sec	L1 Reactive Power (Q)	f meas from
I" Sec.Pos.Seq.Curr.	L1 Tan(phi)	SS1.meas.frqs
I" Sec.Neg.Seq.Curr.	L1 Cos(phi)	SS1f meas from
I" Sec.Zero.Seq.Curr.	L2 Apparent Power (S)	SS2 meas.frqs
Res.Curr.I"01 TRMS Sec	L2 Active Power (P)	SS2f meas from
Res.Curr.I"02 TRMS Sec	L2 Reactive Power (Q)	L1 Bias current
Pha.Curr.I"L1	L2 Tan(phi)	L1 Diff current
Pha.Curr.I"L2	L2 Cos(phi)	L1 Char current
Pha.Curr.I"L3	L3 Apparent Power (S)	L2 Bias current
Res.Curr.I"01	L3 Active Power (P)	L2 Diff current
Res.Curr.I"02	L3 Reactive Power (Q)	L2 Char current

Calc.I"0	L3 Tan(phi)	L3 Bias current
Pha.Curr.I"L1 TRMS	L3 Cos(phi)	L3 Diff current
Pha.Curr.I"L2 TRMS	3PH Apparent Power (S)	L3 Char current
Pha.Curr.I"L3 TRMS	3PH Active Power (P)	HV I0d> Bias current
I" Pos.Seq.Curr.	3PH Reactive Power (Q)	HV I0d> Diff current
I" Neg.Seq.Curr.	3PH Tan(phi)	HV I0d> Char current
I" Zero.Seq.Curr.	3PH Cos(phi)	LV I0d> Bias current
Res.Curr.I"01 TRMS	<b>Energy measurements</b>	LV I0d> Diff current
Res.Curr.I"02 TRMS	L1 Exp.Active Energy MWh	LV I0d> Char current
Pha.IL"1 ampl. THD	L1 Exp.Active Energy kWh	Curve1 Input
Pha.IL"2 ampl. THD	L1 Imp.Active Energy MWh	Curve1 Output
Pha.IL"3 ampl. THD	L1 Imp.Active Energy kWh	Curve2 Input
Pha.IL"1 pow. THD	L1 Exp/Imp Act. E balance MWh	Curve2 Output
Pha.IL"2 pow. THD	L1 Exp/Imp Act. E balance kWh	Curve3 Input
Pha.IL"3 pow. THD	L1 Exp.React.Cap.E.Mvarh	Curve3 Output
Res.I"01 ampl. THD	L1 Exp.React.Cap.E.kvarh	Curve4 Input
Res.I"01 pow. THD	L1 Imp.React.Cap.E.Mvarh	Curve4 Output
Res.I"02 ampl. THD	L1 Imp.React.Cap.E.kvarh	Control mode
Res.I"02 pow. THD	L1 Exp/Imp React.Cap.E.bal.Mvarh	Motor status
P-P Curr.I"L1	L1 Exp/Imp React.Cap.E.bal.kvarh	Active setting group
P-P Curr.I"L2	L1 Exp.React.Ind.E.Mvarh	
	L1 Exp.React.Ind.E.kvarh	

### 5.5.6 Measurement value recorder

The measurement value recorder function records the value of the selected magnitudes at the time of a pre-defined trigger signal. An typical application is the recording of fault currents or voltages at the time of the breaker trips; it can also be used to record the values from any trigger signal set by the user. The user can select whether the function records per-unit values or primary values. Additionally, the user can set the function to record overcurrent fault types or voltage fault types. The function operates instantly from the trigger signal.

The measurement value recorder function has an integrated fault display which shows the current fault values when the tripped by one of the following functions: I> (non-directional overcurrent), Idir> (directional overcurrent), I0> (non-directional earth fault), I0dir> (directional earth fault), f< (underfrequency), f> (overfrequency), U< (undervoltage), U> (overvoltage), U1/U2 >/< (sequence voltage) or U0> (residual voltage). When any of these functions trip, the fault values and the fault type are displayed in the Mimic view. The view can be enabled by activating the "VREC Trigger on" setting (*Tools* → *Events and logs* → *Set alarm events*). The resetting of the fault values is done by the input selected in the *General* menu.

### Measured input

The function block uses analog current and voltage measurement values. Based on these values, the relay calculates the primary and secondary values of currents, voltages, powers, and impedances as well as other values.

The user can set up to eight (8) magnitudes to be recorded when the function is triggered. An overcurrent fault type, a voltage fault type, and a tripped stage can be recorded and reported straight to SCADA.

**NOTE!**



The available measurement values depend on the relay type. If only current analog measurements are available, the recorder can solely use signals which only use current. The same applies, if only voltage analog measurements are available.

Currents	Description
IL1 (ff), IL2 (ff), IL3 (ff), I01 (ff), I02 (ff)	The fundamental frequency current measurement values (RMS) of phase currents and of residual currents.
IL1TRMS, IL2TRMS, IL3TRMS, I01TRMS, I02TRMS	The TRMS current measurement values of phase currents and of residual currents.
IL1,2,3 & I01/I02 2 <sup>nd</sup> h., 3 <sup>rd</sup> h., 4 <sup>th</sup> h., 5 <sup>th</sup> h., 7 <sup>th</sup> h., 9 <sup>th</sup> h., 11 <sup>th</sup> h., 13 <sup>th</sup> h., 15 <sup>th</sup> h., 17 <sup>th</sup> h., 19 <sup>th</sup> h.	The magnitudes of phase current components: Fundamental, 2 <sup>nd</sup> harmonic, 3 <sup>rd</sup> harmonic, 4 <sup>th</sup> harmonic, 5 <sup>th</sup> harmonic, 7 <sup>th</sup> harmonic, 9 <sup>th</sup> harmonic, 11 <sup>th</sup> harmonic, 13 <sup>th</sup> harmonic, 15 <sup>th</sup> harmonic, 17 <sup>th</sup> harmonic, 19 <sup>th</sup> harmonic current.
I1, I2, I0Z	The positive sequence current, the negative sequence current and the zero sequence current.
I0CalcMag	The residual current calculated from phase currents.
IL1Ang, IL2Ang, IL3Ang, I01Ang, I02Ang, I0CalcAng, I1Ang, I2Ang	The angles of each measured current.
Voltages	Description
UL1Mag, UL2Mag, UL3Mag, UL12Mag, UL23Mag, UL31Mag U0Mag, U0CalcMag	The magnitudes of phase voltages, of phase-to-phase voltages, and of residual voltages.
U1 Pos.seq V mag, U2 Neg.seq V mag	The positive sequence voltage and the negative sequence voltage.
UL1Ang, UL2Ang, UL3Ang, UL12Ang, UL23Ang, UL31Ang U0Ang, U0CalcAng	The angles of phase voltages, of phase-to-phase voltages, and of residual voltages.
U1 Pos.seq V Ang, U2 Neg.seq V Ang	The positive sequence angle and the negative sequence angle.
Powers	Description
S3PH, P3PH, Q3PH	The three-phase apparent, active and reactive powers.
SL1, SL2, SL3, PL1, PL2, PL3, QL1, QL2, QL3	The phase apparent, active and reactive powers.
tanfi3PH, tanfiL1, tanfiL2, tanfiL3	The tan ( $\varphi$ ) of three-phase powers and phase powers.
cosfi3PH, cosfiL1, cosfiL2, cosfiL3	The cos ( $\varphi$ ) of three-phase powers and phase powers.
Impedances and admittances	Description
RL12, RL23, RL31 XL12, XL23, XL31, RL1, RL2, RL3 XL1, XL2, XL3 Z12, Z23, Z31 ZL1, ZL2, ZL3	The phase-to-phase and phase-to-neutral resistances, reactances and impedances.
Z12Ang, Z23Ang, Z31Ang, ZL1Ang, ZL2Ang, ZL3Ang	The phase-to-phase and phase-to-neutral impedance angles.

Currents	Description
Rseq, Xseq, Zseq RseqAng, XseqAng, ZseqAng	The positive sequence resistance, reactance and impedance values and angles.
GL1, GL2, GL3, G0 BL1, BL2, BL3, B0 YL1, YL2, YL3, Y0	The conductances, susceptances and admittances.
YL1angle, YL2angle, YL3angle Y0angle	The admittance angles.
Others	Description
System f.	The tracking frequency in use at that moment.
Ref f1	The reference frequency 1.
Ref f2	The reference frequency 2.
M thermal T	The motor thermal temperature.
F thermal T	The feeder thermal temperature.
T thermal T	The transformer thermal temperature.
RTD meas 1...16	The RTD measurement channels 1...16.
Ext RTD meas 1...8	The external RTD measurement channels 1...8 (ADAM module).

## Reported values

When triggered, the function holds the recorded values of up to eight channels, as set. In addition to this tripped stage, the overcurrent fault type and the voltage fault types are reported to SCADA.

Table. 5.5.6 - 162. Reported values.

Name	Range	Step	Description
Tripped stage	0: - 1: I> Trip 2: I>> Trip 3: I>>> Trip 4: I>>>> Trip 5: IDir> Trip 6: IDir>> Trip 7: IDir>>> Trip 8: IDir>>>> Trip 9: U> Trip 10: U>> Trip 11: U>>> Trip 12: U>>>> Trip 13: U< Trip 14: U<< Trip 15: U<<< Trip 16: U<<<< Trip 17: IO> TRIP 18: IO>> Trip 19: IO>>> Trip 20: IO>>>> Trip 21: IODir> Trip 22: IODir>> Trip 23: IODir>>> Trip 24: IODir>>>> Trip 25: f> Trip 26: f>> Trip 27: f>>> Trip 28: f>>>> Trip 29: f< Trip 30: f<< Trip 31: f<<< Trip 32: f<<<< Trip 33: P> Trip 34: P< Trip 35: Prev> Trip 36: T> Trip 37: I2> Trip 38: I2>> Trip 39: I2>>> Trip 40: I2>>>> Trip 41: U1/2 > Trip 42: U1/2 >> Trip 43: U1/2 >>> Trip 44: U1/2 >>>> Trip 45: U0> Trip 46: U0>> Trip 47: U0>>> Trip 48: U0>>>> Trip	-	The tripped stage.
Overcurrent fault type	0: - 1: A-G 2: B-G 3: A-B 4: C-G 5: A-C 6: B-C 7: A-B-C	-	The overcurrent fault type.

Name	Range	Step	Description
Voltage fault type	0: - 1: A(AB) 2: B(BC) 3: A-B(AB-BC) 4: C(CA) 5: A-C(AB-CA) 6: B-C(BC-CA) 7: A-B-C 8: - 9: Overfrequency 10: Underfrequency 11: Overpower 12: Underpower 13: Reversepower 14: Thermal overload 15: Unbalance 16: Harmonic overcurrent 17: Residual overvoltage	-	The voltage fault type.
Magnitude 1...8	0.000...1800.000 A/V/p.u.	0.001 A/V/p.u.	The recorded value in one of the eight channels.

## Events

The measurement value recorder function (abbreviated "VREC" in event block names) generates events from the function triggers. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

Table. 5.5.6 - 163. Event codes.

Event number	Event channel	Event block name	Event code	Description
9984	156	VREC1	0	Recorder triggered ON
9985	156	VREC1	1	Recorder triggered OFF

## 6 System integration

### 6.1 Communication protocols

#### 6.1.1 NTP

When enabled, the NTP (Network Time Protocol) service can use external time sources to synchronize the device's system time. The NTP client service uses an Ethernet connection to connect to the NTP time server. NTP can be enabled by setting the primary time server and the secondary time server parameters to the address of the system's NTP time source(s).

Table. 6.1.1 - 164. Server settings.

Name	Range	Description
Primary time server address	0.0.0.0...255.255.255.255	Defines the address of the primary NTP server. Setting this parameter at "0.0.0.0" means that the server is not in use.
Secondary time server address	0.0.0.0...255.255.255.255	Defines the address of the secondary (or backup) NTP server. Setting this parameter at "0.0.0.0" means that the server is not in use.

Table. 6.1.1 - 165. Client settings.

Name	Range	Description
IP address	0.0.0.0...255.255.255.255	Defines the address of the NTP client. <b>NOTE:</b> This address must be different than the relay's IP address.
Netmask	0.0.0.0...255.255.255.255	Defines the client's netmask.
Gateway	0.0.0.0...255.255.255.255	Defines the client's gateway.
MAC address	-	Displays the MAC address of the client.
Network status	0: Running 1: IP error 2: NM error 3: GW error	Displays the status or possible errors of the NTP (client) settings.

Table. 6.1.1 - 166. Status.

Name	Range	Description
NTP quality for events	0: No sync 1: Synchronized	Displays the status of the NTP time synchronization at the moment. <b>NOTE:</b> This indication is not valid if another time synchronization method is used (external serial).
NTP-processed message count	0...2 <sup>32</sup> -1	Displays the number of messages processed by the NTP protocol.

#### NOTE!



A unique IP address must be reserved for the NTP client. The relay's IP address cannot be used.

Additionally, the time zone of the relay can be set by connecting to the relay and the selecting the time zone at *Commands* → *Set time zone* (AQtivate).

## 6.1.2 Modbus/TCP and Modbus/RTU

The device supports both Modbus/TCP and Modbus/RTU communication. Modbus/TCP uses the Ethernet connection to communicate with Modbus/TCP clients. Modbus/RTU is a serial protocol that can be selected for the available serial ports.

The following Modbus function types are supported:

- Read multiple holding registers (function code 3)
- Write single holding register (function code 6)
- Write multiple holding registers (function code 16)
- Read/Write multiple registers (function code 23)

The following data can be accessed using both Modbus/TCP and Modbus/RTU:

- Device measurements
- Device I/O
- Commands
- Events
- Time

Once the configuration file has been loaded, the user can access the Modbus map of the relay via the AQtivate software (*Tools* → *Communication* → *Modbusmap*). Please note that holding registers start from 1. Some masters might begin numbering holding register from 0 instead of 1; this will cause an offset of 1 between the relay and the master.

Table. 6.1.2 - 167. Modbus/TCP settings.

Parameter	Range	Description
Enable Modbus/TCP	0: Disabled 1: Enabled	Enables and disables the Modbus/TCP on the Ethernet port.
IP port	0...65 535	Defines the IP port used by Modbus/TCP. The standard port (and the default setting) is 502.
Event read mode	0: Get oldest available 1: Continue previous connection 2: New events only	0: Get oldest event possible (Default and current implementation) 1: Continue with the event idx from previous connection 2: Get only new events from connection time and forward

Table. 6.1.2 - 168. Modbus/RTU settings.

Parameter	Range	Description
Slave address	1...247	Defines the Modbus/RTU slave address for the unit.

Additionally, the user can adjust the measurement update interval with the following parameters (found at *Measurement* → *Measurement update*). These parameters do not affect the operating times of protection functions, only the frequency of measurement reporting to Modbus.

Table. 6.1.2 - 169. Settings for measurement update interval.

Name	Range	Step	Default	Description
Current measurement update interval	500...10 000ms	5ms	2 000ms	Defines the measurement update interval of all current-related measurements.
Voltage measurement update interval	500...10 000ms	5ms	2 000ms	Defines the measurement update interval of all voltage-related measurements.

Name	Range	Step	Default	Description
Power measurement update interval	500...10 000ms	5ms	2 000ms	Defines the measurement update interval of all power-related measurements.
Impedance measurement update interval	500...10 000ms	5ms	2 000ms	Defines the measurement update interval of all impedance-related measurements.

### 6.1.3 Modbus I/O

The Modbus I/O protocol can be selected to communicate on the available serial ports. The Modbus I/O is actually a Modbus/RTU master implementation that is dedicated to communicating with serial Modbus/RTU slaves such as RTD input modules. Up to three (3) Modbus/RTU slaves can be connected to the same bus polled by the Modbus I/O implementation. These are named I/O Module A, I/O Module B and I/O Module C. Each of the modules can be configured using parameters in the following two tables.

Table. 6.1.3 - 170. Module settings.

Name	Range	Description
I/O module X address	0...247	Defines the Modbus unit address for the selected I/O Module (A, B, or C). If this setting is set to "0", the selected module is not in use.
Module x type	0: ADAM-4018+ 1: ADAM-4015	Selects the module type.
Channels in use	Channel 0...Channel 7 (or None)	Selects the number of channels to be used by the module.

Table. 6.1.3 - 171. Channel settings.

Name	Range	Step	Default	Description
T.C. type	0: +/- 20mA 1: 4...20mA 2: Type J 3: Type K 4: Type T 5: Type E 6: Type R 7: Type S	-	1: 4...20mA	Selects the thermocouple or the mA input connected to the I/O module.  Types J, K, T and E are nickel-alloy thermocouples, while Types R and S are platinum/rhodium-alloy thermocouples.
Input value	-101.0...2 000.0	0.1	-	Displays the input value of the selected channel.
Input status	0: Invalid 1: OK	-	-	Displays the input status of the selected channel.

### 6.1.4 IEC 61850

The user can enable the IEC 61850 protocol in device models that support this protocol at *Communication* → *Protocols* → *IEC61850*. AQ-21x frame units support Edition 1 of IEC 61850. AQ-25x frame units support both Edition 1 and 2 of IEC61850. The following services are supported by IEC 61850 in Arcteq devices:

- Up to six data sets (predefined data sets can be edited with the IEC 61850 tool in AQtivate)
- Report Control Blocks (both buffered and unbuffered reporting)
- Control ('Direct operate with normal security', 'Select before operate with normal security', 'Direct with enhanced security' and 'Select before operate with enhanced security' control sequences)
- Disturbance recording file transfer
- GOOSE

- Time synchronization

The device's current IEC 61850 setup can be viewed and edited with the IEC61850 tool (*Tools* → *Communication* → *IEC 61850*). By browsing the 61850 tree one can see the full list of available logical nodes in the Arcteq implementation.

## Settings.

The general setting parameters for the IEC 61850 protocol are visible both in AQtivate and in the local HMI. The settings are described in the table below.

Table. 6.1.4 - 172. General settings.

Name	Range	Step	Default	Description
Enable IEC 61850	0: Disabled 1: Enabled	-	0: Disabled	Enables and disables the IEC 61850 communication protocol.
IP port	0...65 535	1	102	Defines the IP port used by the IEC 61850 protocol. The standard (and default) port is 102.
General deadband	0.1...10.0%	0.1%	2%	Determines the general data reporting deadband settings.
Active energy deadband	0.1...1000.0kWh	0.1kWh	2kWh	Determines the data reporting deadband settings for this measurement.
Reactive energy deadband	0.1...1000.0kVar	0.1kVar	2kVar	Determines the data reporting deadband settings for this measurement.
Active power deadband	0.1...1000.0kW	0.1kW	2kW	Determines the data reporting deadband settings for this measurement.
Reactive power deadband	0.1...1000.0kVar	0.1kVar	2kVar	Determines the data reporting deadband settings for this measurement.
Apparent power deadband	0.1...1000.0kVA	0.1kVA	2kVA	Determines the data reporting deadband settings for this measurement.
Power factor deadband	0.01...0.99	0.01	0.05	Determines the data reporting deadband settings for this measurement.
Frequency deadband	0.01...1.00Hz	0.01Hz	0.1Hz	Determines the data reporting deadband settings for this measurement.
Current deadband	0.01...50.00A	0.01A	5A	Determines the data reporting deadband settings for this measurement.
Residual current deadband	0.01...50.00A	0.01A	0.2A	Determines the data reporting deadband settings for this measurement.
Voltage deadband	0.01...5000.00V	0.01V	200V	Determines the data reporting deadband settings for this measurement.
Residual voltage deadband	0.01...5000.00V	0.01V	200V	Determines the data reporting deadband settings for this measurement.
Angle measurement deadband	0.1...5.0deg	0.1deg	1deg	Determines the data reporting deadband settings for this measurement.
Integration time	0...10 000ms	1ms	0ms	Defines the integration time of the protocol. If this parameter is set to "0 ms", no integration time is in use.
Reconfigure GOOSE	0: - 1: Reconfigure	-	0: -	Reconfigures the GOOSE.
Enable GOOSE subscriber	0: Disabled 1: Enabled	-	0: Disabled	Enabled and disables the GOOSE subscriber.

For more information on the IEC 61850 communication protocol support, please refer to the conformance statement documents ([www.arcteq.fi/downloads/](http://www.arcteq.fi/downloads/) → AQ-200 series → Resources).

## 6.1.5 GOOSE

Arcteq relays support both GOOSE publisher and GOOSE subscriber. GOOSE subscriber is enabled with the "GOOSE subscriber enable" parameter at *Communication* → *Protocols* → *IEC 61850/GOOSE*. The GOOSE inputs are configured using either the local HMI or the AQtivate software.

There are up to 64 GOOSE inputs available for use. Each of the GOOSE inputs also has a corresponding input quality signal which can also be used in internal logic. The quality is good, when the input quality is low (that is, when the quality is marked as "0"). The value of the input quality can increase as a result of a GOOSE time-out or a configuration error, for example. The status and quality of the various logical input signals can be viewed at the *GOOSE IN status* and *GOOSE IN quality* tabs at *Control* → *Device I/O* → *Logical signals*.

### GOOSE input settings

The table below presents the different settings available for all 64 GOOSE inputs.

Table. 6.1.5 - 173. GOOSE input settings.

Name	Range	Step	Default	Description
In use	0: No 1: Yes	-	0: No	Enables and disables the GOOSE input in question.
Application ID ("AppID")	0x0...0x3FFF	0x1	0x0	Defines the application ID that will be matched with the publisher's GOOSE control block.
Configuration revision ("ConfRev")	1...2 <sup>32</sup> -1	1	1	Defines the configuration revision that will be matched with the publisher's GOOSE control block.
Data index ("DataIdx")	0...99	1	-	Defines the data index of the value in the matched published frame. It is the status of the GOOSE input.
NextIdx is quality	0: No 1: Yes	-	0: No	Selects whether or not the next received input is the quality bit of the GOOSE input.
Data type	0: Boolean 1: Integer 2: Unsigned 3: Floating point	-	0: Boolean	Selects the data type of the GOOSE input.

### Setting the publisher

The configuration of the GOOSE publisher is done using the IEC 61850 tool in AQtivate (*Tools* → *Communication* → *IEC 61850*). Refer to *AQtivate-200 Instruction manual* for more information on how to set up GOOSE publisher.

### 6.1.6 IEC 103

IEC 103 is the shortened form of the international standard IEC 60870-5-103. The AQ-200 series units are able to run as a secondary (slave) station. The IEC 103 protocol can be selected for the serial ports that are available in the device. A primary (master) station can then communicate with the Arcteq device and receive information by polling from the slave device. The transfer of disturbance recordings is not supported.

**NOTE:** Once the configuration file has been loaded, the IEC 103 map of the relay can be found in the AQtivate software (*Tools* → *IEC 103 map*).

The following table presents the setting parameters for the IEC 103 protocol.

Name	Range	Step	Default	Description
Slave address	1...254	1	1	Defines the IEC 103 slave address for the unit.
Measurement interval	0...60 000ms	1ms	2000ms	Defines the interval for the measurements update.

## 6.1.7 DNP3

DNP3 is a protocol standard which is controlled by the DNP Users Group ([www.dnp.org](http://www.dnp.org)). The implementation of a DNP3 slave is compliant with the DNP3 subset (level) 2, but it also contains some functionalities of the higher levels. For detailed information please refer to the DNP3 Device Profile document ([www.arcteq.fi/downloads/](http://www.arcteq.fi/downloads/) → AQ-200 series → Resources).

## Settings

The following table describes the DNP3 setting parameters.

Table. 6.1.7 - 174. Settings.

Name	Range	Step	Default	Description
Enable DNP3 TCP	0: Disabled 1: Enabled	-	0: Disabled	Enables and disables the DNP3 TCP communication protocol when the Ethernet port is used for DNP3. If a serial port is used, the DNP3 protocol can be enabled from <i>Communication</i> → <i>DNP3</i> .
IP port	0...65 535	1	20 000	Defines the IP port used by the protocol.
Slave address	1...65 519	1	1	Defines the DNP3 slave address of the unit.
Master address	1...65 534	1	2	Defines the address for the allowed master.
Link layer time-out	0...60 000ms	1ms	0ms	Defines the length of the time-out for the link layer.
Link layer retries	1...20	1	1	Defines the number of retries for the link layer.
Diagnostic - Error counter	0...2 <sup>32</sup> -1	1	-	Counts the total number of errors in received and sent messages.
Diagnostic - Transmitted messages	0...2 <sup>32</sup> -1	1	-	Counts the total number of transmitted messages.
Diagnostic - Received messages	0...2 <sup>32</sup> -1	1	-	Counts the total number of received messages.

## Default variations

Table. 6.1.7 - 175. Default variations.

Name	Range	Default	Description
Group 1 variation (BI)	0: Var 1 1: Var 2	0: Var 1	Selects the variation of the binary signal.
Group 2 variation (BI change)	0: Var 1 1: Var 2	1: Var 2	Selects the variation of the binary signal change.
Group 3 variation (DBI)	0: Var 1 1: Var 2	0: Var 1	Selects the variation of the double point signal.

Name	Range	Default	Description
Group 4 variation (DBI change)	0: Var 1 1: Var 2	1: Var 2	Selects the variation of the double point signal.
Group 20 variation (CNTR)	0: Var 1 1: Var 2 2: Var 5 3: Var 6	0: Var 1	Selects the variation of the control signal.
Group 22 variation (CNTR change)	0: Var 1 1: Var 2 2: Var 5 3: Var 6	2: Var 5	Selects the variation of the control signal change.
Group 30 variation (AI)	0: Var 1 1: Var 2 2: Var 3 3: Var 4 4: Var 5	4: Var 5	Selects the variation of the analog signal.
Group 32 variation (AI change)	0: Var 1 1: Var 2 2: Var 3 3: Var 4 4: Var 5 5: Var 7	4: Var 5	Selects the variation of the analog signal change.

## Setting the analog change deadbands

Table. 6.1.7 - 176. Analog change deadband settings.

Name	Range	Step	Default	Description
General deadband	0.1...10.0%	0.1%	2%	Determines the general data reporting deadband settings.
Active energy deadband	0.1...1000.0kWh	0.1kWh	2kWh	Determines the data reporting deadband settings for this measurement.
Reactive energy deadband	0.1...1000.0kVar	0.1kVar	2kVar	Determines the data reporting deadband settings for this measurement.
Active power deadband	0.1...1000.0kW	0.1kW	2kW	Determines the data reporting deadband settings for this measurement.
Reactive power deadband	0.1...1000.0kVar	0.1kVar	2kVar	Determines the data reporting deadband settings for this measurement.
Apparent power deadband	0.1...1000.0kVA	0.1kVA	2kVA	Determines the data reporting deadband settings for this measurement.
Power factor deadband	0.01...0.99	0.01	0.05	Determines the data reporting deadband settings for this measurement.
Frequency deadband	0.01...1.00Hz	0.01Hz	0.1Hz	Determines the data reporting deadband settings for this measurement.
Current deadband	0.01...50.00A	0.01A	5A	Determines the data reporting deadband settings for this measurement.
Residual current deadband	0.01...50.00A	0.01A	0.2A	Determines the data reporting deadband settings for this measurement.
Voltage deadband	0.01...5000.00V	0.01V	200V	Determines the data reporting deadband settings for this measurement.
Residual voltage deadband	0.01...5000.00V	0.01V	200V	Determines the data reporting deadband settings for this measurement.
Angle measurement deadband	0.1...5.0deg	0.1deg	1deg	Determines the data reporting deadband settings for this measurement.
Integration time	0...10 000ms	1ms	-	Displays the integration time of the protocol.

## 6.1.8 IEC 101/104

The standards IEC 60870-5-101 and IEC 60870-5-104 are closely related. Both are derived from the IEC 60870-5 standard. On the physical layer the IEC 101 protocol uses serial communication whereas the IEC 104 protocol uses Ethernet communication. The IEC 101/104 implementation works as a slave in the unbalanced mode.

For detailed information please refer to the IEC 101/104 interoperability document ([www.arcteq.fi/downloads/](http://www.arcteq.fi/downloads/) → AQ-200 series → Resources → "AQ-200 IEC101 & IEC104 interoperability").

### IEC 101 settings

Table. 6.1.8 - 177. IEC 101 settings.

Name	Range	Step	Default	Description
Common address of ASDU	0...65 534	1	1	Defines the common address of the application service data unit (ASDU) for the IEC 101 communication protocol.
Common address of ASDU size	1...2	1	2	Defines the size of the common address of ASDU.
Link layer address	0...65 534	1	1	Defines the address for the link layer.
Link layer address size	1...2	1	2	Defines the address size of the link layer.
Information object address size	2...3	1	3	Defines the address size of the information object.
Cause of transmission size	1...2	1	2	Defines the cause of transmission size

### IEC 104 settings

Table. 6.1.8 - 178. IEC 104 settings.

Name	Range	Step	Default	Description
IEC 104 enable	0: Disabled 1: Enabled	-	0: Disabled	Enables and disables the IEC 104 communication protocol.
IP port	0...65 535	1	2404	Defines the IP port used by the protocol.
Common address of ASDU	0...65 534	1	1	Defines the common address of the application service data unit (ASDU) for the IEC 104 communication protocol.

### Measurement scaling coefficients

The measurement scaling coefficients are available for the following measurements, in addition to the general measurement scaling coefficient:

- Active energy
- Reactive energy
- Active power
- Reactive power
- Apparent power
- Power factor
- Frequency

- Current
- Residual current
- Voltage
- Residual voltage
- Angle

The range is the same for all of the scaling coefficients. By default, there is no scaling.

- No scaling
- 1/10
- 1/100
- 1/1000
- 1/10 000
- 1/100 000
- 1/1 000 000
- 10
- 100
- 1000
- 10 000
- 100 000
- 1 000 000

## Deadband settings.

Table. 6.1.8 - 179. Analog change deadband settings.

Name	Range	Step	Default	Description
General deadband	0.1...10.0%	0.1%	2%	Determines the general data reporting deadband settings.
Active energy deadband	0.1...1000.0kWh	0.1kWh	2kWh	Determines the data reporting deadband settings for this measurement.
Reactive energy deadband	0.1...1000.0kVar	0.1kVar	2kVar	Determines the data reporting deadband settings for this measurement.
Active power deadband	0.1...1000.0kW	0.1kW	2kW	Determines the data reporting deadband settings for this measurement.
Reactive power deadband	0.1...1000.0kVar	0.1kVar	2kVar	Determines the data reporting deadband settings for this measurement.
Apparent power deadband	0.1...1000.0kVA	0.1kVA	2kVA	Determines the data reporting deadband settings for this measurement.
Power factor deadband	0.01...0.99	0.01	0.05	Determines the data reporting deadband settings for this measurement.
Frequency deadband	0.01...1.00Hz	0.01Hz	0.1Hz	Determines the data reporting deadband settings for this measurement.
Current deadband	0.01...50.00A	0.01A	5A	Determines the data reporting deadband settings for this measurement.
Residual current deadband	0.01...50.00A	0.01A	0.2A	Determines the data reporting deadband settings for this measurement.
Voltage deadband	0.01...5000.00V	0.01V	200V	Determines the data reporting deadband settings for this measurement.
Residual voltage deadband	0.01...5000.00V	0.01V	200V	Determines the data reporting deadband settings for this measurement.
Angle measurement deadband	0.1...5.0deg	0.1deg	1deg	Determines the data reporting deadband settings for this measurement.
Integration time	0...10 000ms	1ms	-	Displays the integration time of the protocol.

## 6.1.9 SPA

The device can act as a SPA slave. SPA can be selected as the communication protocol for the COM B port (RS-485 port in the CPU module). When the device includes a serial RS-232 card connector, the SPA protocol can also be selected as the communication protocol for the COM E and COM F ports. Please refer to the chapter "Construction and installation" in the device manual to see the connections for these modules.

The data transfer rate of SPA is 9600 bps, but it can also be set to 19 200 bps or 38 400 bps. As a slave the device sends data on demand or by sequenced polling. The available data can be measurements, circuit breaker states, function starts, function trips, etc. The full SPA signal map can be found in AQtivate (*Tools* → *SPA map*).

The SPA event addresses can be found at *Tools* → *Events and logs* → *Event list*.

### NOTE!



To access SPA map and event list, an .aqs configuration file should be downloaded from the relay.

## 6.2 Analog fault registers

At *Communication* → *General I/O* → *Analog fault registers* the user can set up to twelve (12) channels to record the measured value when a protection function starts or trips. These values can be read in two ways: locally from this same menu, or through a communication protocol if one is in use.

The following table presents the setting parameters available for the 12 channels.

Table. 6.2 - 180. Fault register settings.

Name	Range	Step	Default	Description
Select record source	0: Not in use 1...12: l>, l>>, l>>>, l>>>> (IL1, IL2, IL3) 13...24: Id>, Id>>, Id>>>, Id>>>> (IL1, IL2, IL3) 25...28: I0>, I0>>, I0>>>, I0>>>> (I0) 29...32: I0d>, I0d>>, I0d>>>, I0d>>>> (I0) 33: FLX	-	0: Not in use	Selects the protection function and its stage to be used as the source for the fault register recording.  The user can choose between non-directional overcurrent, directional overcurrent, non-directional earth fault, directional earth fault, and fault locator functions.
Select record trigger	0: TRIP signal 1: START signal 2: START and TRIP signals	-	0: TRIP signal	Selects what triggers the fault register recording: the selected function's TRIP signal, its START signal, or either one.
Recorded fault value	- 1000 000.00...1 000 000.00	0.01	-	Displays the recorded measurement value at the time of the selected fault register trigger.

## 6.3 Real-time measurements to communication

With the *Real-time signals to communication* menu the user can report to SCADA measurements that are not normally available in the communication protocols mapping. Up to eight (8) magnitudes can be selected. The recorded value can be either a per-unit value or a primary value (set by the user).

## Measurable values

Function block uses analog current and voltage measurement values. The relay uses these values as the basis when it calculates the primary and secondary values of currents, voltages, powers, impedances and other values.

Table. 6.3 - 181. Available measured values.

Signals	Description
<b>Currents</b>	
IL1 (ff), IL2 (ff), IL3 (ff), I01 (ff), I02 (ff)	Fundamental frequency (RMS) current measurement values of phase currents and residual currents.
IL1 (TRMS), IL2 (TRMS), IL3 (TRMS), I01 (TRMS), I02 (TRMS)	TRMS current measurement values of phase currents and residual currents.
IL1, IL2, IL3, I01, I02 & 2 <sup>nd</sup> h., 3 <sup>rd</sup> h., 4 <sup>th</sup> h., 5 <sup>th</sup> h., 7 <sup>th</sup> h., 9 <sup>th</sup> h., 11 <sup>th</sup> h., 13 <sup>th</sup> h., 15 <sup>th</sup> h., 17 <sup>th</sup> h., 19 <sup>th</sup> h.	Magnitudes of the phase current components: 2 <sup>nd</sup> harmonic, 3 <sup>rd</sup> harmonic, 4 <sup>th</sup> harmonic, 5 <sup>th</sup> harmonic, 7 <sup>th</sup> harmonic, 9 <sup>th</sup> harmonic, 11 <sup>th</sup> harmonic, 13 <sup>th</sup> harmonic, 15 <sup>th</sup> harmonic, 17 <sup>th</sup> harmonic, 19 <sup>th</sup> harmonic current.
I1, I2, I0Z	Positive sequence current, negative sequence current and zero sequence current.
I0CalcMag	Residual current calculated from phase currents.
IL1Ang, IL2Ang, IL3Ang, I01Ang, I02Ang, I0CalcAng, I1Ang, I2Ang	Angles of each measured current.
<b>Voltages</b>	
UL1Mag, UL2Mag, UL3Mag, UL12Mag, UL23Mag, UL31Mag, U0Mag, U0CalcMag	Magnitudes of phase voltages, phase-to-phase voltages and residual voltages.
U1 Pos.seq V mag, U2 Neg.seq V mag	Positive and negative sequence voltages.
UL1Ang, UL2Ang, UL3Ang, UL12Ang, UL23Ang, UL31Ang, U0Ang, U0CalcAng	Angles of phase voltages, phase-to-phase voltages and residual voltages.
U1 Pos.seq V Ang, U2 Neg.seq V Ang	Positive and negative sequence angles.
<b>Powers</b>	
S3PH, P3PH, Q3PH	Three-phase apparent, active and reactive power.
SL1, SL2, SL3, PL1, PL2, PL3, QL1, QL2, QL3	Phase apparent, active and reactive powers.
tanfi3PH, tanfiL1, tanfiL2, tanfiL3	Tan ( $\phi$ ) of three-phase powers and phase powers.
cosfi3PH, cosfiL1, cosfiL2, cosfiL3	Cos ( $\phi$ ) of three-phase powers and phase powers.
<b>Impedances and admittances</b>	
RL12, RL23, RL31, XL12, XL23, XL31, RL1, RL2, RL3, XL1, XL2, XL3, Z12, Z23, Z31, ZL1, ZL2, ZL3	Phase-to-phase and phase-to-neutral resistances, reactances and impedances.

Signals	Description
Z12Ang, Z23Ang, Z31Ang, ZL1Ang, ZL2Ang, ZL3Ang	Phase-to-phase and phase-to-neutral impedance angles.
Rseq, Xseq, Zseq RseqAng, XseqAng, ZseqAng	Positive sequence resistance, reactance and impedance values and angles.
GL1, GL2, GL3, G0 BL1, BL2, BL3, B0 YL1, YL2, YL3, Y0	Conductances, susceptances and admittances.
YL1angle, YL2angle, YL3angle, Y0angle	Admittance angles.
Others	
System f.	Used tracking frequency at the moment.
Ref f1	Reference frequency 1.
Ref f2	Reference frequency 2.
M thermal T	Motor thermal temperature.
F thermal T	Feeder thermal temperature.
T thermal T	Transformer thermal temperature.
RTD meas 1...16	RTD measurement channels 1...16.
Ext RTD meas 1...8	External RTD measurement channels 1...8 (ADAM module).

## Settings

Table. 6.3 - 182. Settings.

Name	Range	Step	Default	Description
Measurement value recorder mode	0: Disabled 1: Activated	-	0: Disabled	Activates and disables the real-time signals to communication.
Scale current values to primary	0: No 1: Yes	-	0: No	Selects whether or not values are scaled to primary.
Slot X magnitude selection	0: Currents 1: Voltages 2: Powers 3: Impedance (ZRX) and admittance (YGB) 4: Others	-	0: Currents	Selects the measured magnitude category of the chosen slot.
Slot X magnitude	Described in table above ("Available measured values")	-	-	Selects the magnitude in the previously selected category.
Magnitude X	-10 000 000.000...10 000 000.000	0.001	-	Displays the measured value of the selected magnitude of the selected slot.  The unit depends on the selected magnitude (either amperes, volts, or per-unit values).

## 7 Connections and application examples

### 7.1 Connections of AQ-M210

Figure. 7.1 - 173. AQ-M210 variant without add-on modules.

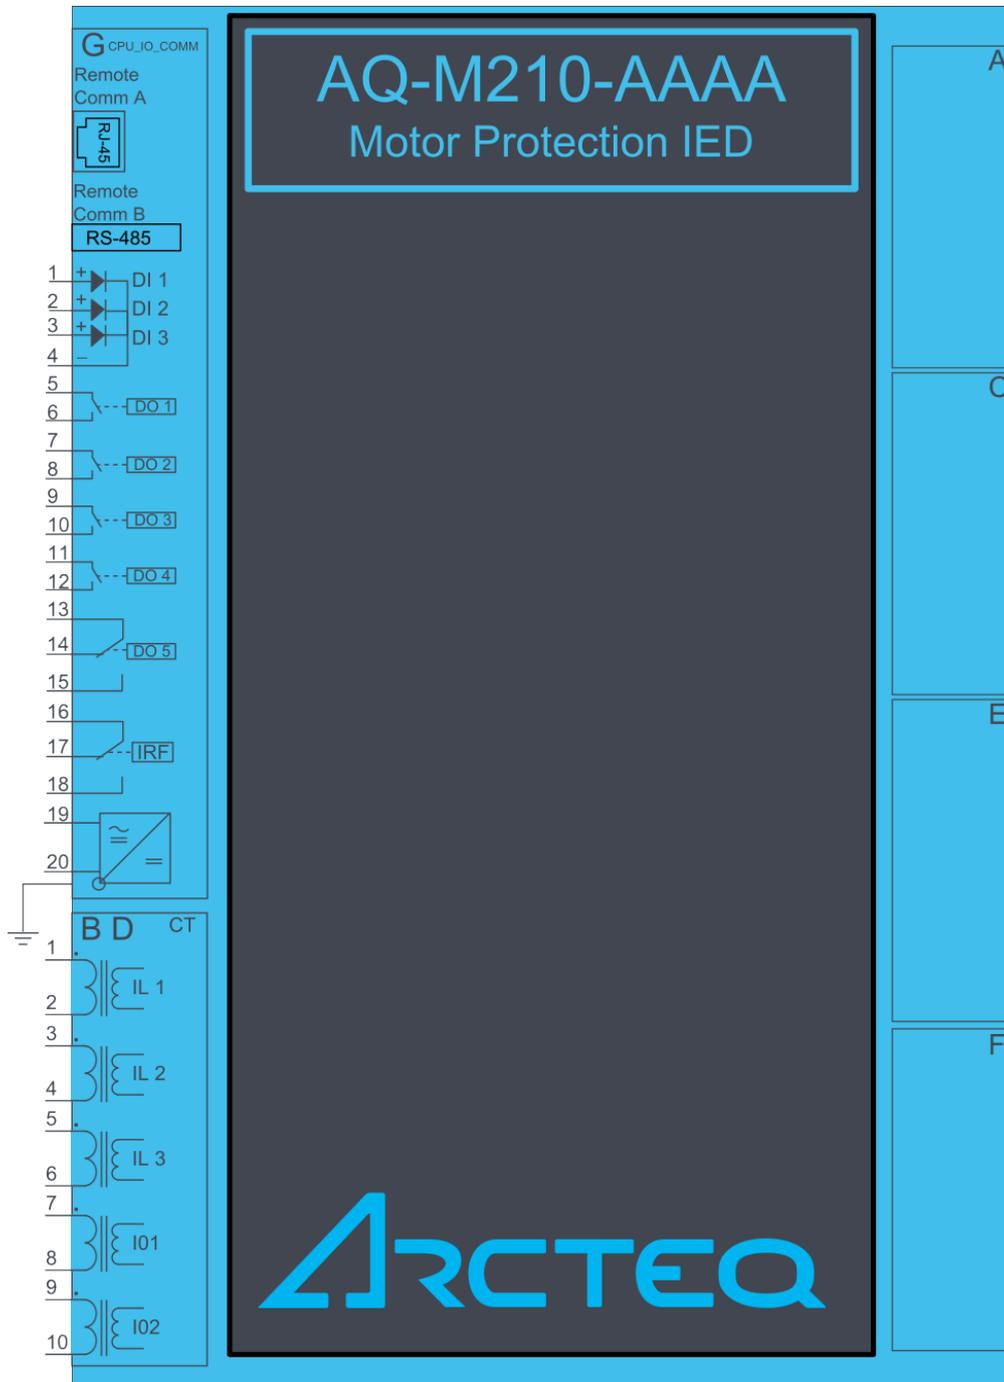


Figure. 7.1 - 174. AQ-M210 variant with digital input and output modules.


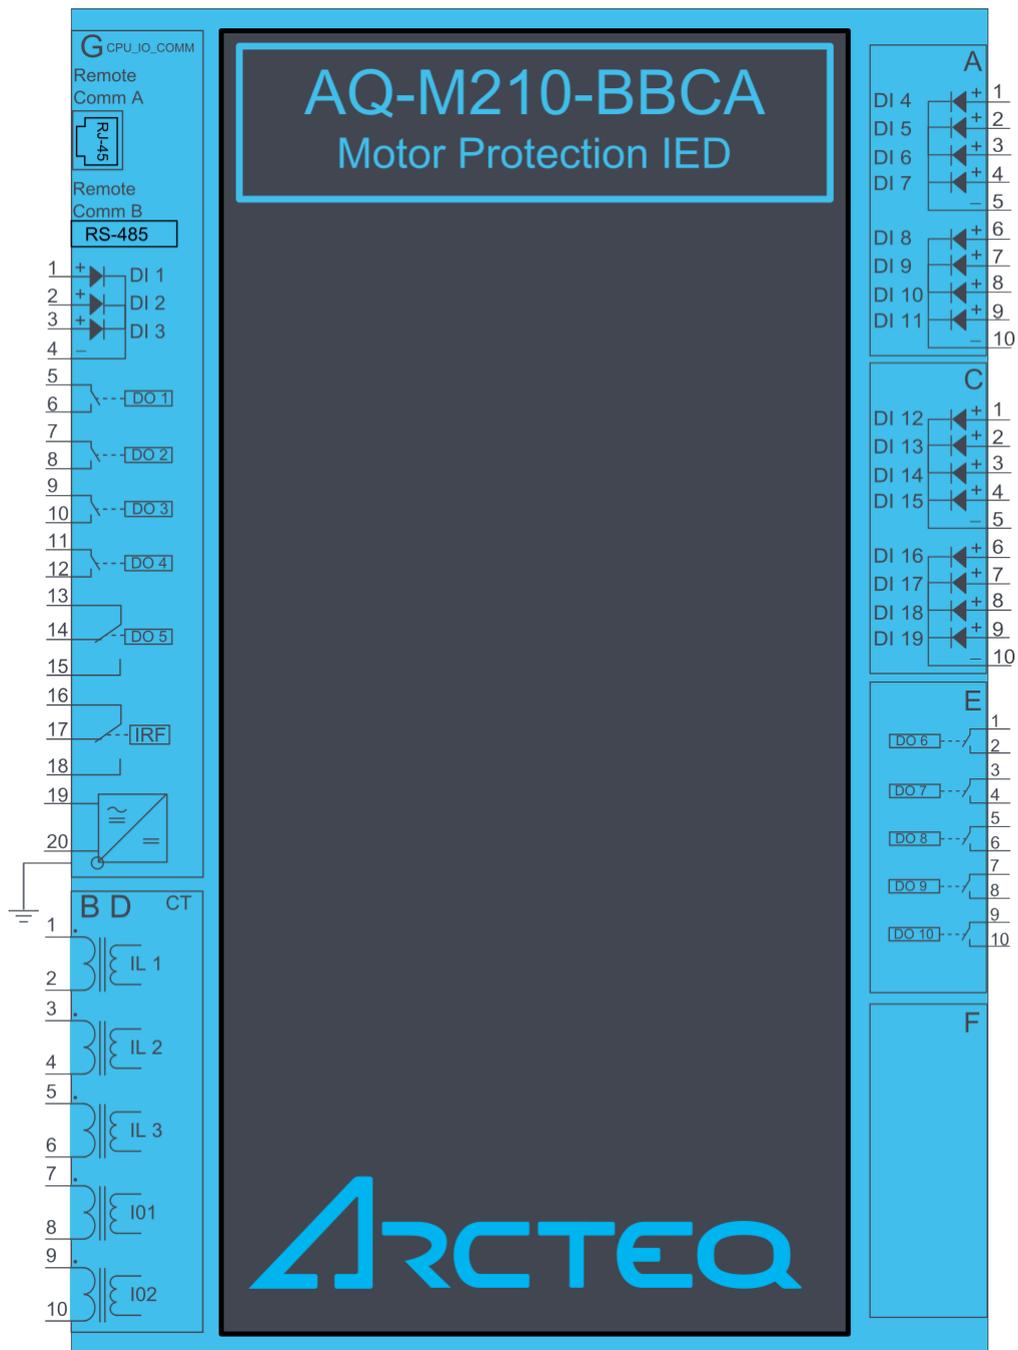


Figure. 7.1 - 175. AQ-M210 application example with function block diagram.

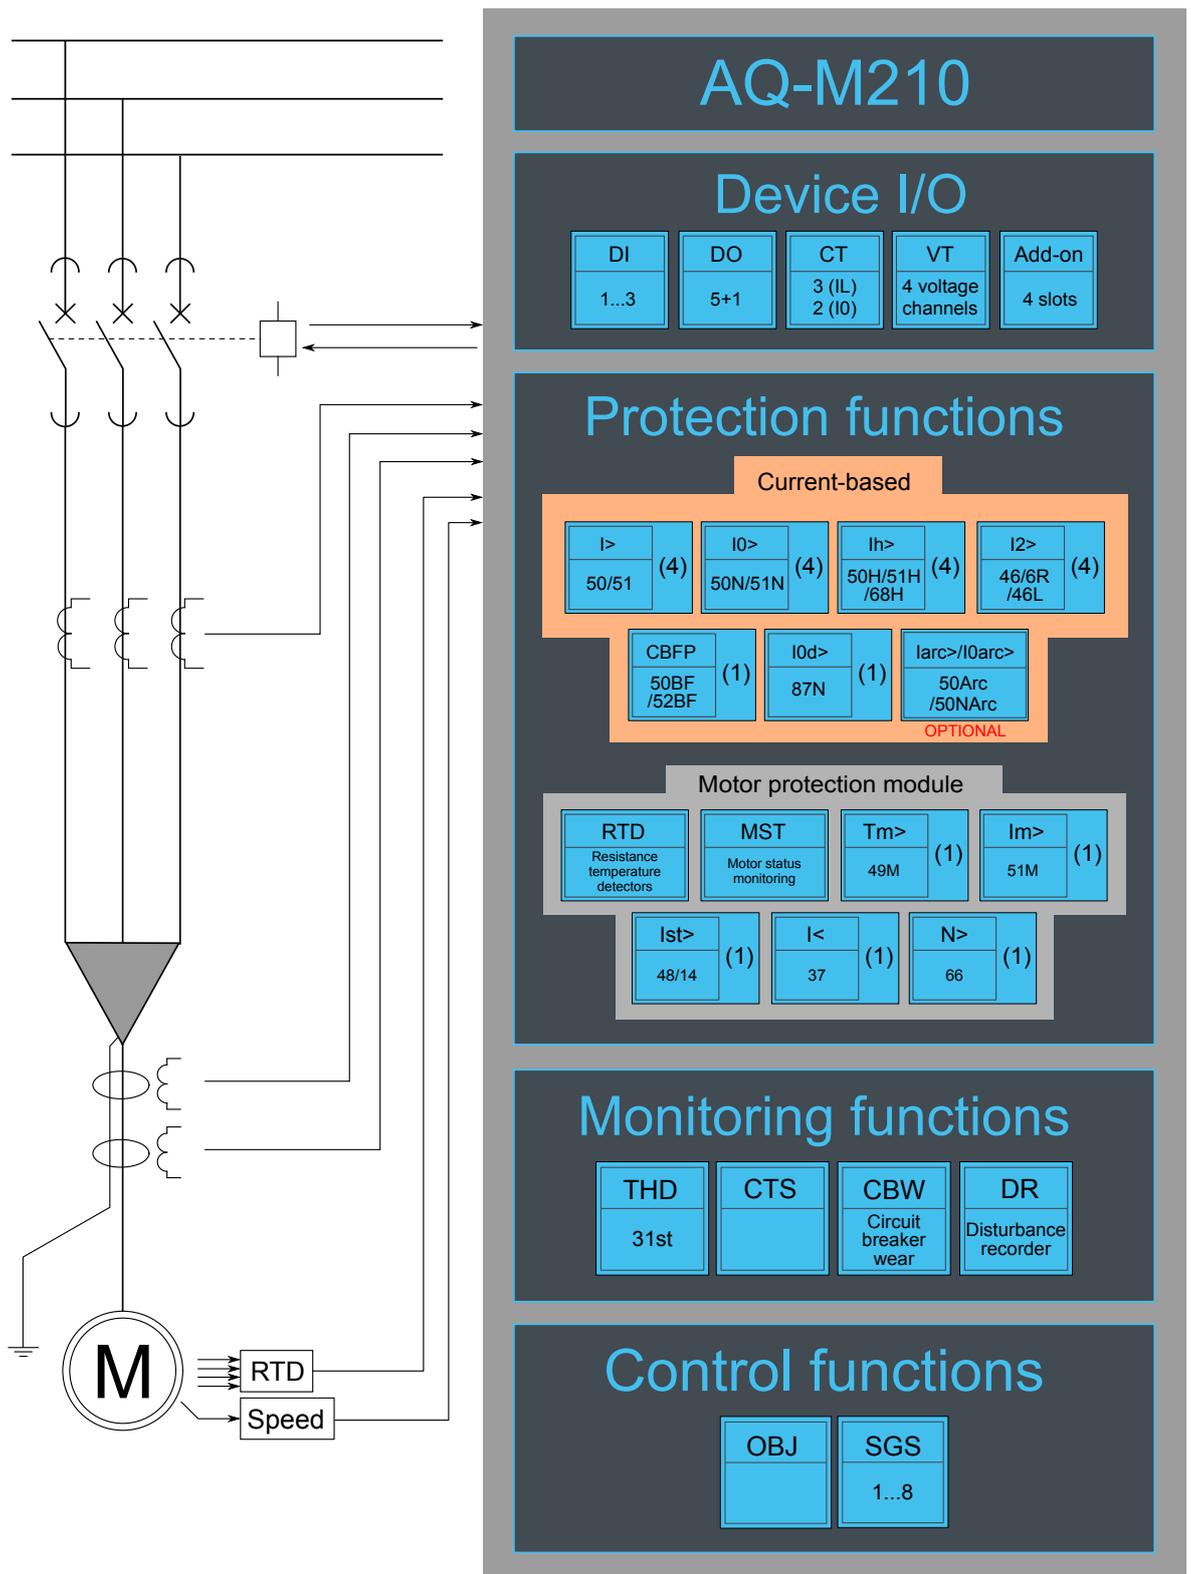


## 7.2 Application example and its connections

This chapter presents an application example for the motor protection IED.

As can be seen in the image below, the example application has connected the three phase currents and the residual current (I01). The digital inputs are connected to indicate the breaker status, while the digital outputs are used for breaker control.


Figure. 7.2 - 176. Application example and its connections.

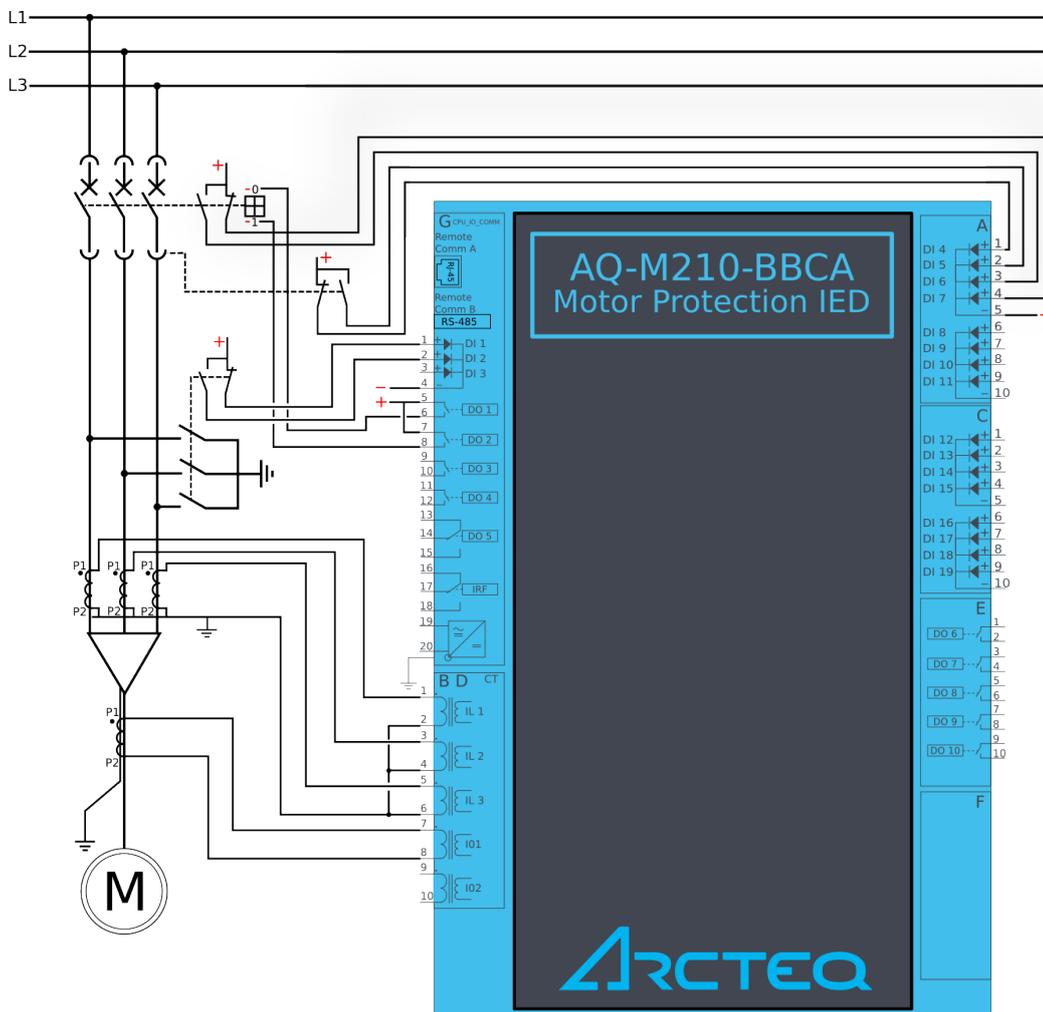

### 7.3 Two-phase, three-wire ARON input connection

This chapter presents the two-phase, three-wire ARON input connection for any AQ-200 series IED with a current transformer. The example is for applications with protection CTs for just two phases. The connection is suitable for both motor and feeder applications.

Figure. 7.3 - 177. ARON connection.

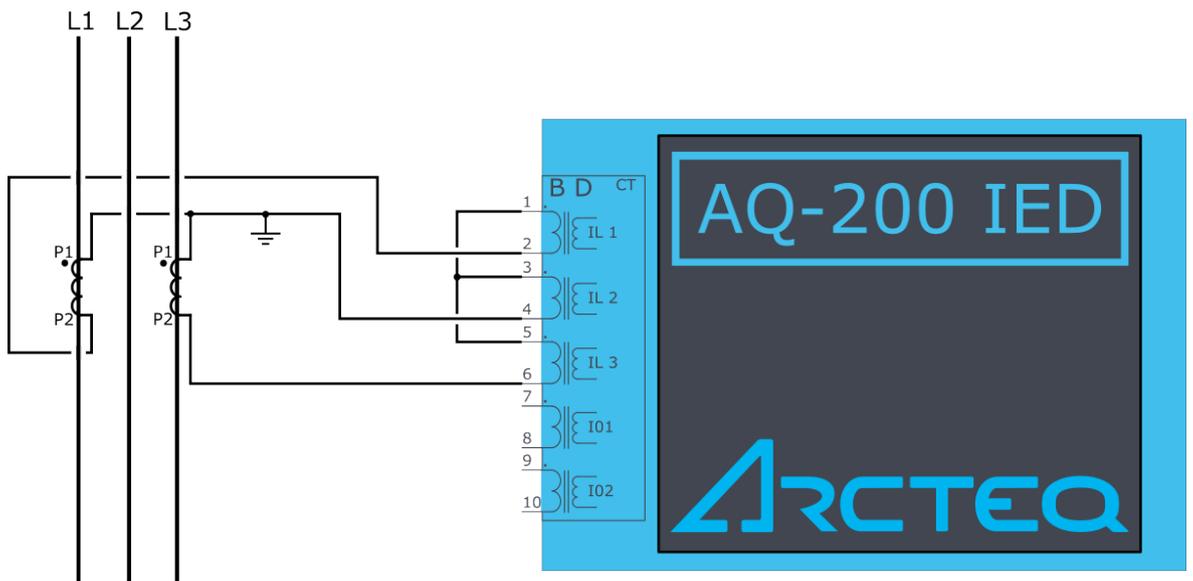

The ARON input connection can measure the load symmetrically despite the fact that one of the CTs is missing from the installation. Normally, Phase 2 does not have a current transformer installed as an external fault is much more likely to appear on Lines 1 or 3.

A fault between Line 2 and the earth cannot be detected when the ARON input connection is used. In order to detect an earth fault in Phase 2, a cable core CT must be used.


## 7.4 Trip circuit supervision (95)

Trip circuit supervision is used to monitor the wiring from auxiliary power supply, through the IED's digital output, and all the way to the open coil of the breaker. It is recommended to supervise the health of the trip circuit when breaker is closed.

### Trip circuit supervision with one digital input and one non-latched trip output

The figure below presents an application scheme for trip circuit supervision with one digital input and a non-latched trip output. With this connection the current keeps flowing to the open coil of the breaker via the breaker's closing auxiliary contacts (52b) even after the circuit breaker is opened. This requires a resistor which reduces the current: this way the coil is not energized and the relay output does not need to cut off the coil's inductive current.

Figure. 7.4 - 178. Trip circuit supervision with one DI and one non-latched trip output.

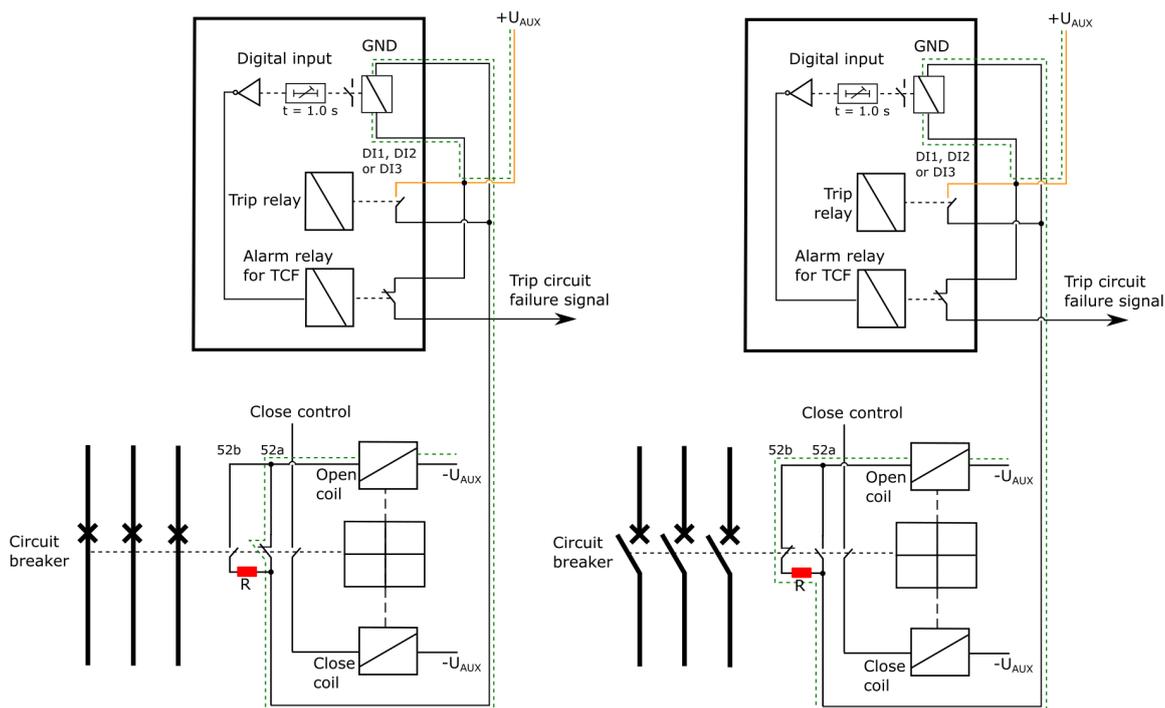

Note that the digital input that monitors the circuit is normally closed, and the same applies to the alarm relay if one is used. For monitoring and especially trip circuit supervision purposes it is recommended to use a normally closed contact to confirm the wiring's condition. An active digital input generates a less than 2 mA current to the circuit, which is usually small enough not to make the breaker's open coil operate.

When the trip relay is controlled and the circuit breaker is opening, the digital input is shorted by the trip contact as long as the breaker opens. Normally, this takes about 100 ms if the relay is non-latched. A one second activation delay should, therefore, be added to the digital input. An activation delay that is slightly longer than the circuit breaker's operations time should be enough. When circuit breaker failure protection (CBFP) is used, adding its operation time to the digital input activation time is useful. The whole digital input activation time is, therefore,  $t_{DI} = t_{CB} + t_{IEDrelease} + t_{CBFP}$ .

The image below presents the necessary settings when using a digital input for trip circuit supervision. The input's polarity must be NC (normally closed) and a one second delay is needed to avoid nuisance alarm while the circuit breaker is controlled open.

Figure. 7.4 - 179. Settings for a digital input used for trip circuit supervision.

Non-latched outputs are seen as hollow circles in the output matrix, whereas latched contacts are painted. See the image below of an output matrix where a non-latched trip contact is used to open the circuit breaker.

Figure. 7.4 - 180. Non-latched trip contact.

Inputs	OUT1	OUT2	OUT3	OUT4	OUT5
I> START (General)					
I> START(A)					
I> START(B)					
I> START(C)					
I> TRIP (General)	○				
I> TRIP(A)					
I> TRIP(B)					
I> TRIP(C)					
I> BLOCKED					


When the auto-reclosing function is used in feeder applications, the trip output contacts must be non-latched. Trip circuit supervision is generally easier and more reliable to build with non-latched outputs.

The open coil remains energized only as long as the circuit breaker is opened and the IED output releases. This takes approximately 100 ms depending on the size and type of the breaker. When the breaker opens, the auxiliary contacts open the inductive circuit; however, the trip contact does not open at the same time. The IED's output relay contact opens in under 50 ms or after a set release delay that takes place after the breaker is opened. This means that the open coil is energized for a while after the breaker has already opened. The coil could even be energized a moment longer if the circuit breaker failure protection has to be used and the incomer performs the trip.

### Trip circuit supervision with one digital input and one connected, non-latched trip output

There is one main difference between non-latched and latched control in trip circuit supervision: when using the latched control, the trip circuit (in an open state) cannot be monitored as the digital input is shorted by the IED's trip output.

Figure. 7.4 - 181. Trip circuit supervision with one DI and one latched output contact.

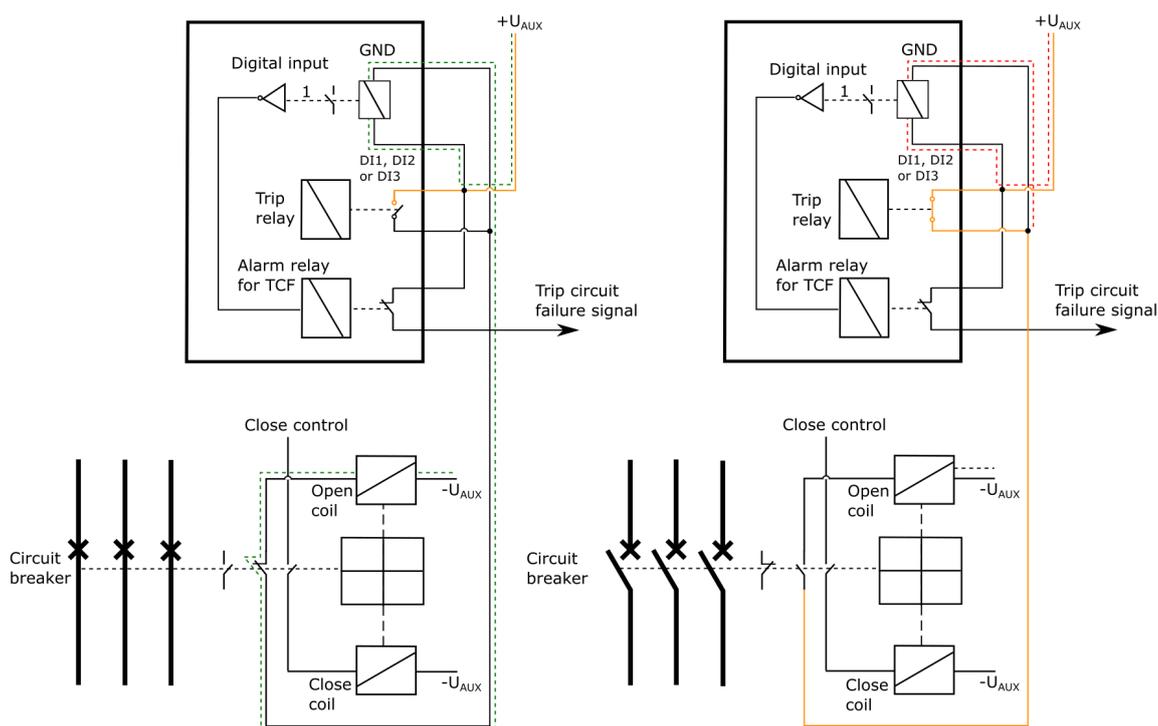


The trip circuit with a latched output contact can be monitored, but only when the circuit breaker's status is "Closed". Whenever the breaker is open, the supervision is blocked by an internal logic scheme. Its disadvantage is that the user does not know whether or not the trip circuit is intact when the breaker is closed again.

The following logic scheme (or similar) blocks the supervision alarm when the circuit breaker is open. The alarm is issued whenever the breaker is closed and whenever the inverted digital input ("TCS") activates. A normally closed digital input activates only when there is something wrong with the trip circuit and the auxiliary power goes off. Logical output can be used in the output matrix or in SCADA as the user wants.

The image below presents a block scheme when a non-latched trip output is not used.

Figure. 7.4 - 182. Example block scheme.

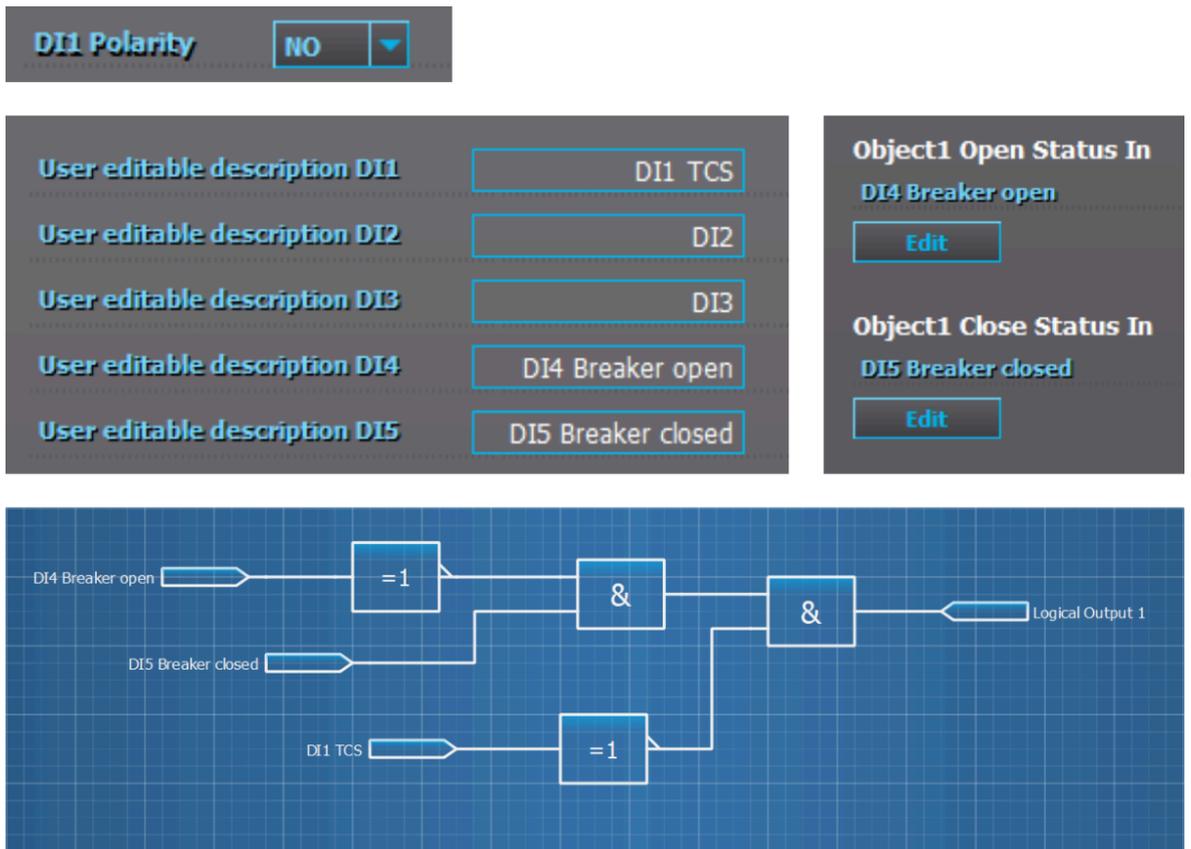


## 8 Construction and installation

### 8.1 Construction

AQ-X210 is a member of the modular and scalable AQ-200 series, and it includes four (4) configurable and modular add-on card slots. As a standard configuration the device includes the CPU module (which consists of the CPU, a number of inputs and outputs, and the power supply) as well as one separate current measurement module.

The images below present the modules of both the non-optional model (AQ-X210-XXXXXXX-AAAA, on the left) and the fully optional model (AQ-X210-XXXXXXX-BBBC, on the right).

Figure. 8.1 - 183. Modular construction of AQ-X210.

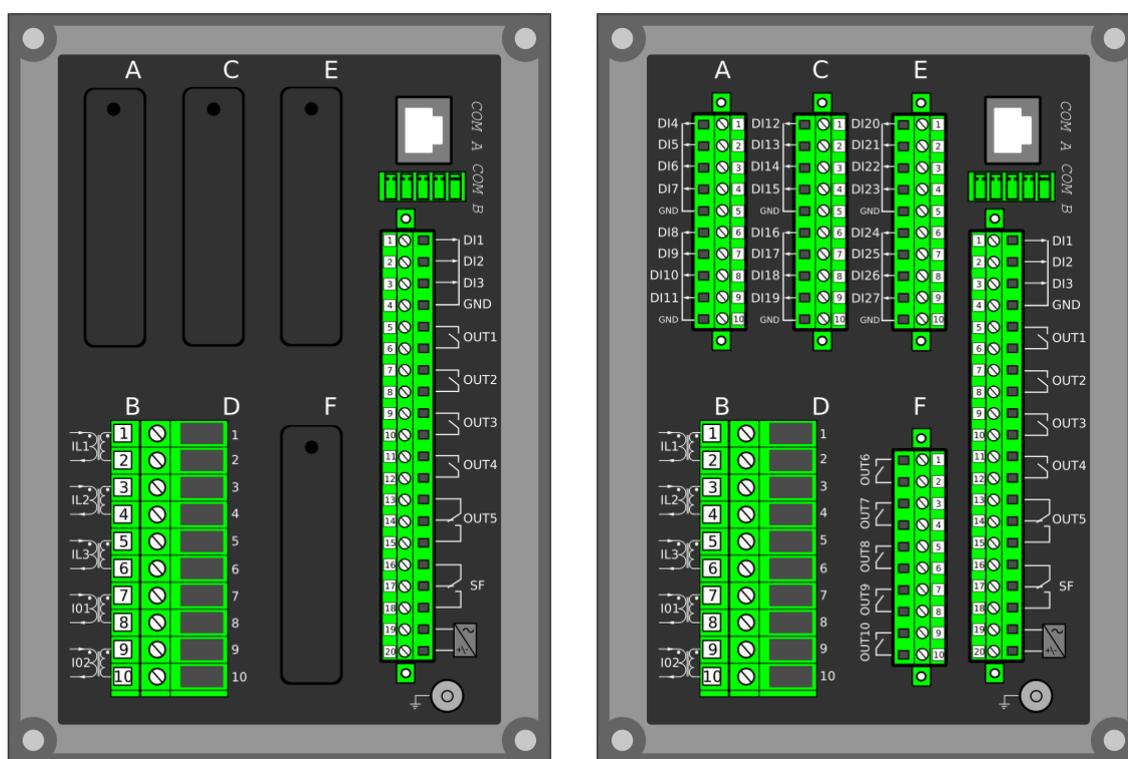


The modular structure of AQ-X210 allows for scalable solutions for different application requirements. In non-standard configurations Slots A, C, E and F accept all available add-on modules, such as digital I/O modules, integrated arc protection or another special module. The only difference between the slots affecting device scalability is that Slots E and F also support communication options.

When an add-on module is inserted into the device, the start-up scan searches for modules according to their type designation code. If the module location or content is not what the device expects, the IED does not take additional modules into account and instead issues a configuration error message. In field upgrades, therefore, the add-on module must be ordered from Arcteq Relays Ltd. or its representative who can then provide the module with its corresponding unlocking code to allow the device to operate correctly once the hardware configuration has been upgraded. This also means that the module's location in the device cannot be changed without updating the device configuration data which, again, requires the unlocking code.

When an I/O module is inserted into the device, the module location affects the naming of the I/O. The I/O scanning order in the start-up sequence is as follows: the CPU module I/O, Slot A, Slot C, Slot E, Slot F. This means that the digital input channels DI1, DI2 and DI3 as well as the digital output channels OUT1, OUT2, OUT3, OUT4 and OUT5 are always located in the CPU module. If additional I/O cards are installed, their location and card type affect the I/O naming.

The figure below presents the start-up hardware scan order of the device as well as the I/O naming principles.

Figure. 8.1 - 184. AQ-X210 hardware scanning and I/O naming principles.

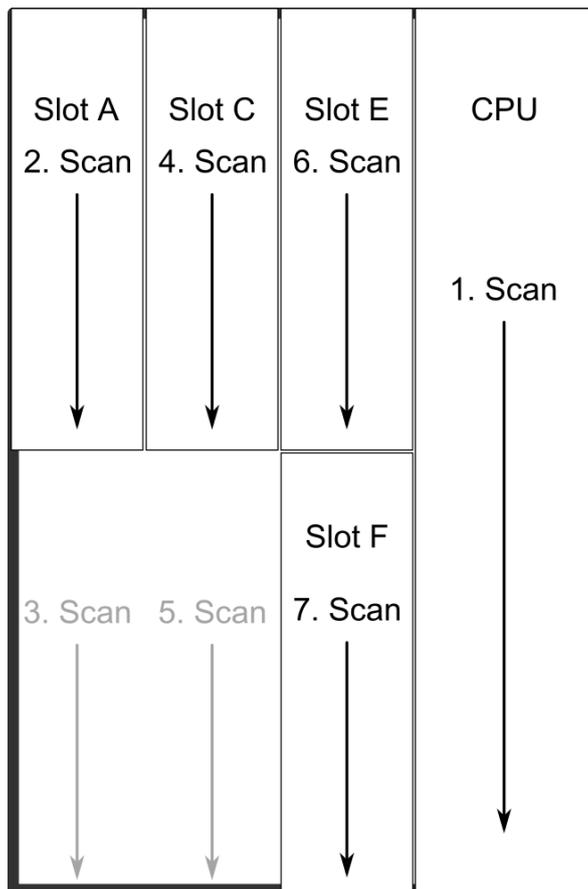

1. Scan  
The start-up system; detects and self-tests the CPU module, voltages, communication and the I/O; finds and assigns "DI1", "DI2", "DI3", "OUT1", "OUT2", "OUT3", "OUT4" and "OUT5".
2. Scan  
Scans Slot A, and moves to the next slot if Slot A is empty. If the scan finds an 8DI module (that is, a module with eight digital inputs), it reserves the designations "DI4", "DI5", "DI6", "DI7", "DI8", "DI9", "DI10" and "DI11" to this slot. If the scan finds a DO5 module (that is, a module with five digital outputs), it reserves the designations "OUT6", "OUT7", "OUT8", "OUT9" and "OUT10" to this slot. The I/O is then added if the type designation code (e.g. AQ-P215-PH0AAAA-BBC) matches with the existing modules in the device. If the code and the modules do not match, the device issues an alarm. An alarm is also issued if the device expects to find a module here but does not find one.
3. Scan  
Scans Slot B, which should always remain empty in AQ-X210 devices. If it is not empty, the device issues an alarm.


4. Scan  
Scans Slot C, and moves to the next slot if Slot C is empty. If the scan finds an 8DI module, it reserves the designations "DI4", "DI5", "DI6", "DI7", "DI8", "DI9", "DI10" and "DI11" to this slot. If Slot A also has an 8DI module (and therefore has already reserved these designations), the device reserves the designations "DI12", "DI13", "DI14", "DI15", "DI16", "DI17", "DI18" and "DI19" to this slot. If the scan finds a 5DO module, it reserves the designations "OUT6", "OUT7", "OUT8", "OUT9" and "OUT10" to this slot. Again, if Slot A also has a 5DO and has therefore already reserved these designations, the device reserves the designations "OUT11", "OUT12", "OUT13", "OUT14" and "OUT15" to this slot.
5. Scan  
Scans Slot D and finds the CTM module and its five channels (fixed for AQ-X210). If the CTM is not found, the device issues an alarm.
6. Scan  
A similar operation to Scan 4 (checks which designations have been reserved by modules in previous slots and numbers the new ones accordingly).
7. Scan  
A similar operation to Scan 4 (checks which designations have been reserved by modules in previous slots and numbers the new ones accordingly).

Thus far this document has only explained the installation of I/O add-on cards to the option module slots. This is because all other module types are treated in a same way. For example, when an additional communication port is installed into the upper port of the communication module, its designation is Communication port 3 or higher, as Communication ports 1 and 2 already exist in the CPU module (which is scanned, and thus designated, first). After a communication port is detected, it is added into the device's communication space and its corresponding settings are enabled.

The fully optioned example case of AQ-X210-XXXXXX-BBBC (the first image pair, on the right) has a total of 27 digital input channels available: three (DI1...DI3) in the CPU module, and the rest in Slots A, C and E in groups of eight. It also has a total of 10 digital output channels available: five (DO1...DO5) in the CPU module, and five (DO6...DO10) in Slot F. These same principles apply to all non-standard configurations in the AQ-X210 IED family.

## 8.2 CPU module

Figure. 8.2 - 185. CPU module.

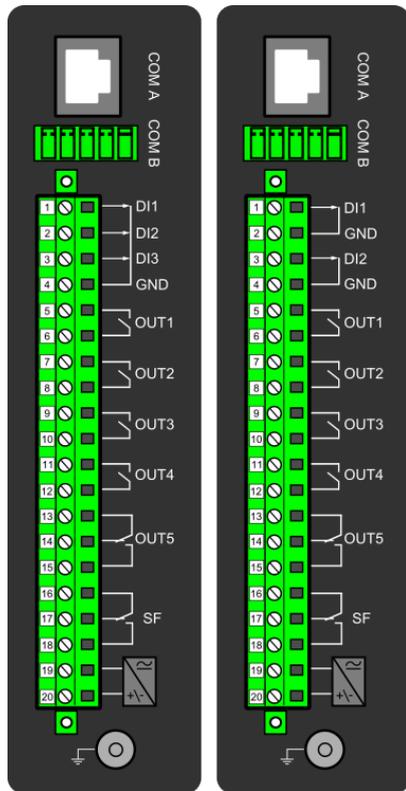

### Module connectors

Table. 8.2 - 183. Module connector descriptions.

Connector	Description	
COM A	Communication port A, or the RJ-45 port. Used for the setting tool connection and for IEC 61850, Modbus/TCP, IEC 104, DNP3 and station bus communications.	
COM B	Communication port B, or the RS-485 port. Used for the SCADA communications for the following protocols: Modbus/RTU, Modbus I/O, SPA, DNP3, IEC 101 and IEC 103. The pins have the following designations: Pin 1 = DATA +, Pin 2 = DATA -, Pin 3 = GND, Pins 4 & 5 = Terminator resistor enabled by shorting.	
	Model with 3 digital inputs	Model with 2 digital inputs
X 1	Digital input 1, nominal threshold voltage 24 V, 110 V or 220 V.	Digital input 1, nominal threshold voltage 24 V, 110 V or 220 V.
X 2	Digital input 2, nominal threshold voltage 24 V, 110 V or 220 V.	GND for digital input 1.
X 3	Digital input 3, nominal threshold voltage 24 V, 110 V or 220 V.	Digital input 2, nominal threshold voltage 24 V, 110 V or 220 V.
X 4	Common GND for digital inputs 1, 2 and 3.	GND for digital input 2.
X 5:6	Output relay 1, with a normally open (NO) contact.	
X 7:8	Output relay 2, with a normally open (NO) contact.	
X 9:10	Output relay 3, with a normally open (NO) contact.	
X 11:12	Output relay 4, with a normally open (NO) contact.	
X 13:14:15	Output relay 5, with a changeover contact.	

Connector	Description
X 16:17:18	System fault's output relay, with a changeover contact. Pins 16 and 17 are closed when the unit has a system fault or is powered OFF. Pins 16 and 18 are closed when the unit is powered ON and there is no system fault.
X 19:20	Power supply IN. Either 85...265 VAC/DC (model A; order code "H") or 18...75 DC (model B; order code "L"). Positive side (+) to Pin 20.
GND	The relay's earthing connector.

By default, the CPU module (combining the CPU, the I/O and the power supply) is included in all AQ-2xx IEDs to provide two standard communication ports and the relay's basic digital I/O. The module can be ordered to include 2 or 3 digital inputs.

The current consumption of the digital inputs is 2 mA when activated, while the range of the operating voltage is 24 V/110 V/220 V depending on the ordered hardware. All digital inputs are scanned in 5 ms program cycles, and their pick-up and release delays as well as their NO/NC selection can be set with software. The digital output controls are also set by the user with software. By default, the digital outputs are controlled in 5 ms program cycles. All output contacts are mechanical. The rated voltage of the NO/NC outputs is 250 VAC/DC.

The auxiliary voltage is defined in the ordering code: the available power supply models available are A (85...265 VAC/DC) and B (18...75 DC). For further details, please refer to the "Auxiliary voltage" chapter in the "Technical data" section of this document.

## Digital input settings

The settings described in the table below can be found at *Control* → *Device I/O* → *Digital input settings* in the relay settings.

Table. 8.2 - 184. Digital input settings.

Name	Range	Step	Default	Description
Dlx Polarity	0: NO (Normally open) 1: NC (Normally closed)	-	0: NO	Selects whether the status of the digital input is 1 or 0 when the input is energized.
Dlx Activation delay	0.000...1800.000 s	0.001 s	0.000 s	Defines the delay for the status change from 0 to 1.
Dlx Drop-off time	0.000...1800.000 s	0.001 s	0.000 s	Defines the delay for the status change from 1 to 0.
Dlx AC mode	0: Disabled 1: Enabled	-	0: Disabled	Selects whether or not a 30-ms deactivation delay is added to account for alternating current.


## Scanning cycle

All digital inputs are scanned in a 5 ms cycle, meaning that the state of an input is updated every 0...5 milliseconds. When an input is used internally in the device (either in setting group change or logic), it takes additional 0...5 milliseconds to operate. Theoretically, therefore, it takes 0...10 milliseconds to change the group when a digital input is used for group control or a similar function. In practice, however, the delay is between 2...8 milliseconds about 95 % of the time. When a digital input is connected directly to a digital output (T1...Tx), it takes an additional 5 ms round. Therefore, when a digital input controls a digital output internally, it takes 0...15 milliseconds in theory and 2...13 milliseconds in practice.

Please note that the mechanical delay of the relay is **not** included in these approximations.

## 8.3 Current measurement module

Figure. 8.3 - 186. Module connections with standard and ring lug terminals.

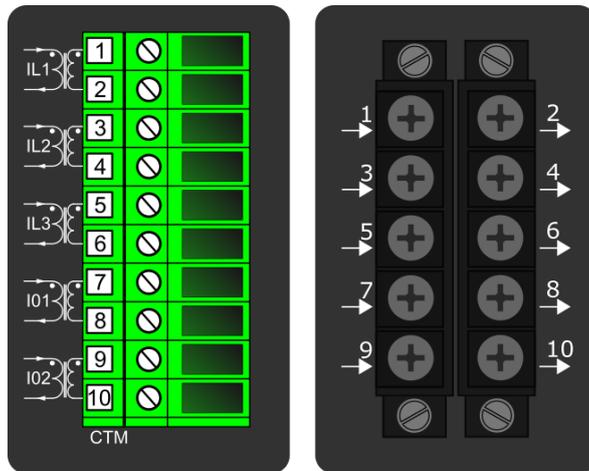

Connector	Description
CTM 1-2	Phase current measurement for phase L1 (A).
CTM 3-4	Phase current measurement for phase L2 (B).
CTM 5-6	Phase current measurement for phase L3 (C).
CTM 7-8	Coarse residual current measurement IO1.
CTM 9-10	Fine residual current measurement IO2.

A basic current measurement module with five channels includes three-phase current measurement inputs as well as coarse and fine residual current inputs. The CT module is available with either standard or ring lug connectors.

The current measurement module is connected to the secondary side of conventional current transformers (CTs). The nominal current for the phase current inputs is 5 A. The input nominal current can be scaled for secondary currents of 1...10 A. The secondary currents are calibrated to nominal currents of 1 A and 5 A, which provide  $\pm 0.5\%$  inaccuracy when the range is  $0.005...4 \times I_n$ .

The measurement ranges are as follows:

- Phase currents 25 mA...250 A (RMS)
- Coarse residual current 5 mA...150 A (RMS)
- Fine residual current 1 mA...75 A (RMS)


The characteristics of phase current inputs are as follows:

- The angle measurement inaccuracy is less than  $\pm 0.2$  degrees with nominal current.
- The frequency measurement range of the phase current inputs is 6...1800 Hz with standard hardware.
- The quantization of the measurement signal is applied with 18-bit AD converters, and the sample rate of the signal is 64 samples/cycle when the system frequency ranges from 6 Hz to 75 Hz.

For further details please refer to the "Current measurement" chapter in the "Technical data" section of this document.

## 8.4 Digital input module (optional)

Figure. 8.4 - 187. Digital input module (DI8) with eight add-on digital inputs.

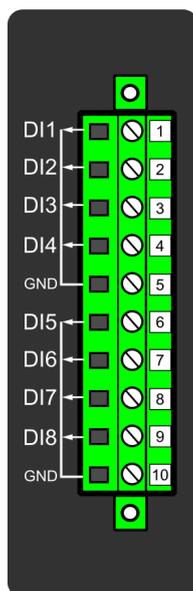

Connector	Description (x = the number of digital inputs in other modules that precede this one in the configuration)
X 1	Dlx + 1
X 2	Dlx + 2
X 3	Dlx + 3
X 4	Dlx + 4
X 5	Common earthing for the first four digital inputs.
X 6	Dlx + 5
X 7	Dlx + 6
X 8	Dlx + 7
X 9	Dlx + 8
X 10	Common earthing for the other four digital inputs.

The DI8 module is an add-on module with eight (8) galvanically isolated digital inputs. This module can be ordered directly to be installed into the device in the factory, or it can be upgraded in the field after the device's original installation when required. The properties of the inputs in this module are the same as those of the inputs in the main processor module. The current consumption of the digital inputs is 2 mA when activated, while the range of the operating voltage is from 0...265 VAC/DC. The activation and release thresholds are set in the software and the resolution is 1 V. All digital inputs are scanned in 5 ms program cycles, and their pick-up and release delays as well as their NO/NC selection can be set with software.

For the naming convention of the digital inputs provided by this module please refer to the chapter titled "Construction and installation".

For technical details please refer to the chapter titled "Digital input module" in the "Technical data" section of this document.

## Setting up the activation and release delays

The settings described in the table below can be found at *Control* → *Device I/O* → *Digital input settings* in the relay settings.


Table. 8.4 - 185. Digital input settings of DI8 module.

Name	Range	Step	Default	Description
Dlx Polarity	0: NO (Normally open) 1: NC (Normally closed)	-	0: NO	Selects whether the status of the digital input is 1 or 0 when the input is energized.
Dlx Activation threshold	16.0...200.0 V	0.1 V	88 V	Defines the activation threshold for the digital input. When "NO" is the selected polarity, the measured voltage exceeding this setting activates the input. When "NC" is the selected polarity, the measured voltage exceeding this setting deactivates the input.
Dlx Release threshold	10.0...200.0 V	0.1 V	60V	Defines the release threshold for the digital input. When "NO" is the selected polarity, the measured voltage below this setting deactivates the input. When "NC" is the selected polarity, the measured voltage below this setting activates the input.
Dlx Activation delay	0.000...1800.000 s	0.001 s	0.000 s	Defines the delay when the status changes from 0 to 1.
Dlx Drop-off time	0.000...1800.000 s	0.001 s	0.000 s	Defines the delay when the status changes from 1 to 0.
Dlx AC Mode	0: Disabled 1: Enabled	-	0: Disabled	Selects whether or not a 30-ms deactivation delay is added to take the alternating current into account. The "Dlx Release threshold" parameter is hidden and forced to 10 % of the set "Dlx Activation threshold" parameter.
Dlx Counter	0...2 <sup>32</sup> -1	1	0	Displays the number of times the digital input has changed its status from 0 to 1.
Dlx Clear counter	0: - 1: Clear	-	0: -	Resets the Dlx counter value to zero.

The user can set the activation threshold individually for each digital input. When the activation and release thresholds have been set properly, they will result in the digital input states to be activated and released reliably. The selection of the normal state between normally open (NO) and normally closed (NC) defines whether or not the digital input is considered activated when the digital input channel is energized.

The diagram below depicts the digital input states when the input channels are energized and de-energized.

Figure. 8.4 - 188. Digital input state when energizing and de-energizing the digital input channels.

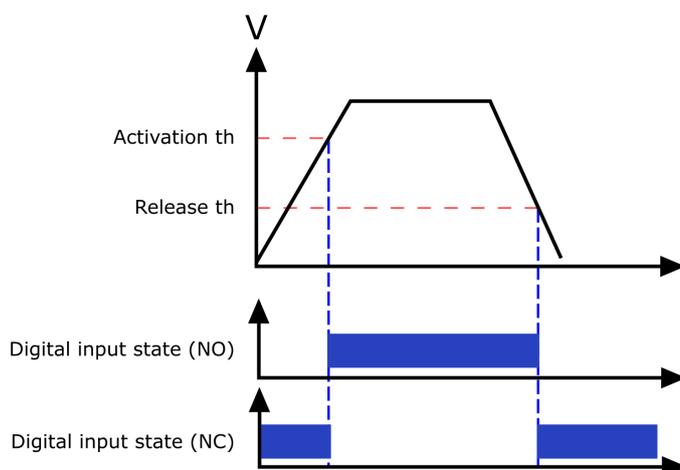

### Digital input voltage measurements


Digital input option card channels measure voltage on each channel. The measured voltage can be seen at *Control* → *Device IO* → *Digital inputs* → *Digital input voltages*.

Table. 8.4 - 186. Digital input channel voltage measurement.

Name	Range	Step	Description
Dlx Voltage now	0.000...275.000 V	0.001 V	Voltage measurement of a digital input channel.

### 8.5 Digital output module (optional)

Figure. 8.5 - 189. Digital output module (DO5) with five add-on digital outputs.

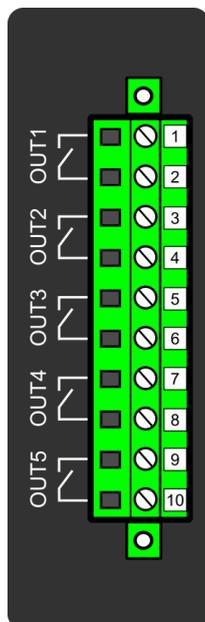

Connector	Description
X 1-2	OUTx + 1 (1 <sup>st</sup> and 2 <sup>nd</sup> pole NO)
X 3-4	OUTx + 2 (1 <sup>st</sup> and 2 <sup>nd</sup> pole NO)

Connector	Description
X 5-6	OUTx + 3 (1 <sup>st</sup> and 2 <sup>nd</sup> pole NO)
X 7-8	OUTx + 4 (1 <sup>st</sup> and 2 <sup>nd</sup> pole NO)
X 9-10	OUTx + 5 (1 <sup>st</sup> and 2 <sup>nd</sup> pole NO)

The DO5 module is an add-on module with five (5) digital outputs. This module can be ordered directly to be installed into the device in the factory, or it can be upgraded in the field after the device's original installation when required. The properties of the outputs in this module are the same as those of the outputs in the main processor module. The user can set the digital output controls with software. All digital outputs are scanned in 5 ms program cycles, and their contacts are mechanical in type. The rated voltage of the NO/NC outputs is 250 VAC/DC.

For the naming convention of the digital inputs provided by this module please refer to the chapter titled "Construction and installation".

For technical details please refer to the chapter titled "Digital output module" in the "Technical data" section of this document.

## 8.6 Arc protection module (optional)

Figure. 8.6 - 190. Arc protection module.

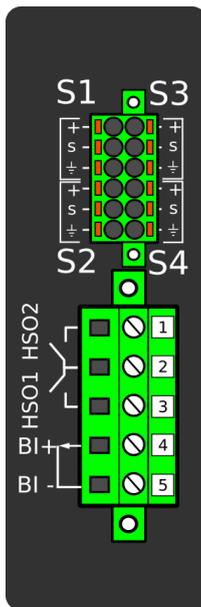


Table. 8.6 - 187. Module connections.

Connector	Description
S1	Light sensor channels 1...4 with positive ("+"), sensor ("S") and earth connectors.
S2	
S3	
S4	
X 1	HSO2 (+, NO)
X 2	Common battery positive terminal (+) for the HSOs.
X 3	HSO1 (+, NO)

Connector	Description
X 4	Binary input 1 (+ pole)
X 5	Binary input 1 (– pole)

The arc protection module is an add-on module with four (4) light sensor channels, two (2) high-speed outputs and one (1) binary input. This module can be ordered directly to be installed into the device in the factory, or it can be upgraded in the field after the device's original installation when required. If even one of the sensor channels is connected incorrectly, the channel does not work. Each channel can have up to three (3) light sensors serially connected to it. The user can choose how many of the channels are in use.

The high-speed outputs (HSO1 and HSO2) operate only with a DC power supply. The battery's positive terminal (+) must be wired according to the drawing. The NO side of the outputs 1 or 2 must be wired through trip coil to the battery's negative terminal (–). The high-speed outputs can withstand voltages up to 250 VDC. The operation time of the high-speed outputs is less than 1 ms. For further information please refer to the chapter titled "Arc protection module" in the "Technical data" section of this manual.

The rated voltage of the binary input is 24 VDC. The threshold picks up at  $\geq 16$  VDC. The binary input can be used for external light information or for similar applications. It can also be used as a part of various ARC schemes. Please note that the binary input's delay is 5...10ms.


**NOTE!**



BI1, HSO1 and HSO2 are not visible in the *Binary inputs* and *Binary outputs* menus (*Control* → *Device I/O*), they can only be programmed in the arc matrix menu (*Protection* → *Arc protection* → *I/O* → *Direct output control* and *HSO control*).

## 8.7 RTD input module (optional)


Figure. 8.7 - 191. RTD input module connectors.

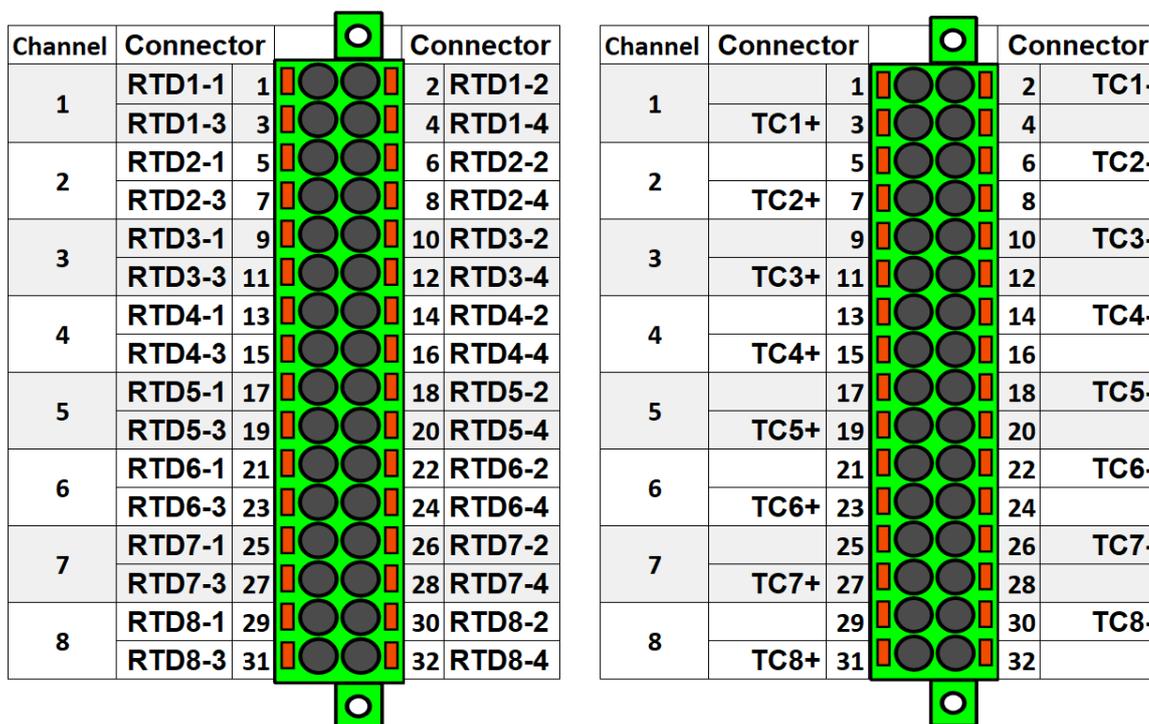

The RTD input module is an add-on module with eight (8) RTD input channels. Each input supports 2-wire, 3-wire and 4-wire RTD sensors as well as thermocouple (TC) sensors. The sensor type can be selected with software for two groups, four channels each. The supported sensor types are as follows:


- Supported RTD sensors: Pt100, Pt1000
- Supported thermocouple sensors: type K (NiCh/NiAl), type J (Fe/constantan), type T (Cu/constantan) and type S (Cu/CuNi compensating).

Figure. 8.7 - 192. Different sensor types and their connections.

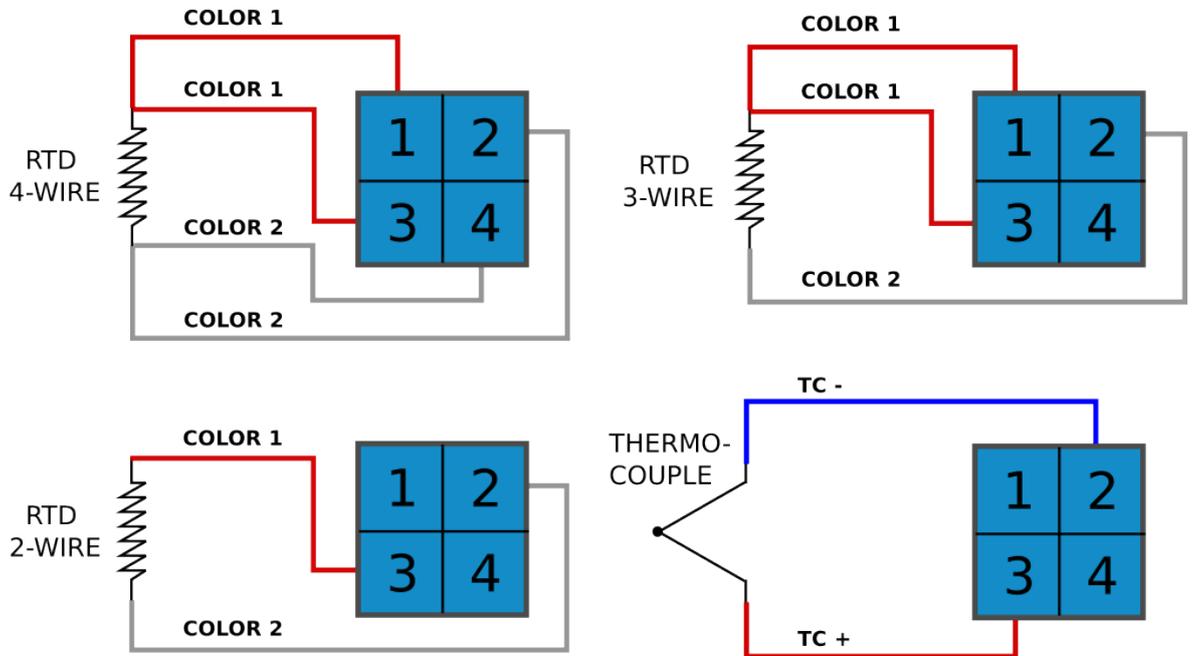

## 8.8 Serial RS-232 communication module (optional)

Figure. 8.8 - 193. Serial RS-232 module connectors.

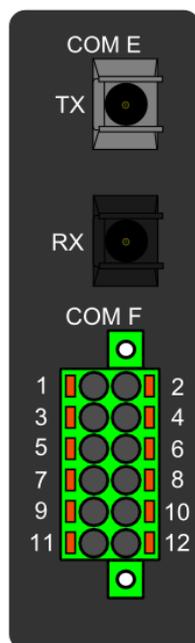


Connector	Name	Description
COM E	Serial fiber (GG/PP/GP/PG)	<ul style="list-style-type: none"> <li>Serial-based communications</li> <li>Wavelength 660 nm</li> <li>Compatible with 50/125 <math>\mu\text{m}</math>, 62.5/125 <math>\mu\text{m}</math>, 100/140 <math>\mu\text{m}</math>, and 200 <math>\mu\text{m}</math> Plastic-Clad Silica (PCS) fiber</li> <li>Compatible with ST connectors</li> </ul>
COM F – Pin 1	+24 V input	Optional external auxiliary voltage for serial fiber
COM F – Pin 2	GND	Optional external auxiliary voltage for serial fiber
COM F – Pin 3	-	-
COM F – Pin 4	-	-
COM F – Pin 5	RS-232 RTS	Serial based communications
COM F – Pin 6	RS-232 GND	Serial based communications
COM F – Pin 7	RS-232 TX	Serial based communications
COM F – Pin 8	RS-232 RX	Serial based communications
COM F – Pin 9	-	-
COM F – Pin 10	+3.3 V output (spare)	Spare power source for external equipment (45 mA)
COM F – Pin 11	-	-
COM F – Pin 12	-	-

The option card includes two serial communication interfaces: COM E is a serial fiber interface with glass/plastic option, COM F is an RS-232 interface.

## 8.9 LC 100 Mbps Ethernet communication module (optional)

Figure. 8.9 - 194. LC 100 Mbps Ethernet module connectors.

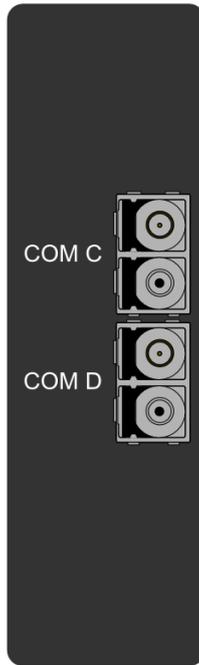


Connector	Description
COM C:	<ul style="list-style-type: none"><li>• Communication port C, LC fiber connector.</li><li>• 62.5/125 <math>\mu\text{m}</math> or 50/125 <math>\mu\text{m}</math> multimode (glass).</li><li>• Wavelength 1300 nm.</li></ul>
COM D:	<ul style="list-style-type: none"><li>• Communication port D, LC fiber connector.</li><li>• 62.5/125 <math>\mu\text{m}</math> or 50/125 <math>\mu\text{m}</math> multimode (glass).</li><li>• Wavelength 1300 nm.</li></ul>

The optional LC 100 Mbps Ethernet card supports both HSR and PRP protocols. The card has two PRP/HSR ports, which are 100 Mbps fiber ports.

## 8.10 Double ST 100 Mbps Ethernet communication module (optional)

Figure. 8.10 - 195. Double ST 100 Mbps Ethernet communication module connectors.

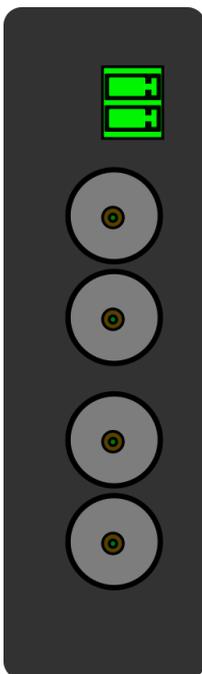

Connector	Description
Two-pin connector	<ul style="list-style-type: none"> <li>IRIG-B input</li> </ul>
ST connectors	<ul style="list-style-type: none"> <li>Duplex ST connectors (IRIG-B input)</li> <li>62.5/125 <math>\mu\text{m}</math> or 50/125 <math>\mu\text{m}</math> multimode fiber</li> <li>Transmitter wavelength: 1260...1360 nm (nominal: 1310 nm)</li> <li>Receiver wavelength: 1100...1600 nm</li> <li>100BASE-FX</li> <li>Up to 2 km</li> </ul>

This option cards supports redundant ring configuration and multidrop configurations. Redundant communication can be implemented by Ethernet switches that support Rapid Spanning Tree Protocol (RSTP). Please note that each ring can only contain AQ-200 series devices, and any third party devices must be connected to a separate ring.

For other redundancy options, please refer to the option card "LC 100 Mbps Ethernet communication module".

The images below present two example configurations: the first displays a ring configuration (note how the third party devices are connected in a separate ring), while the second displays a multidrop configuration.

Figure. 8.10 - 196. Example of a ring configuration.


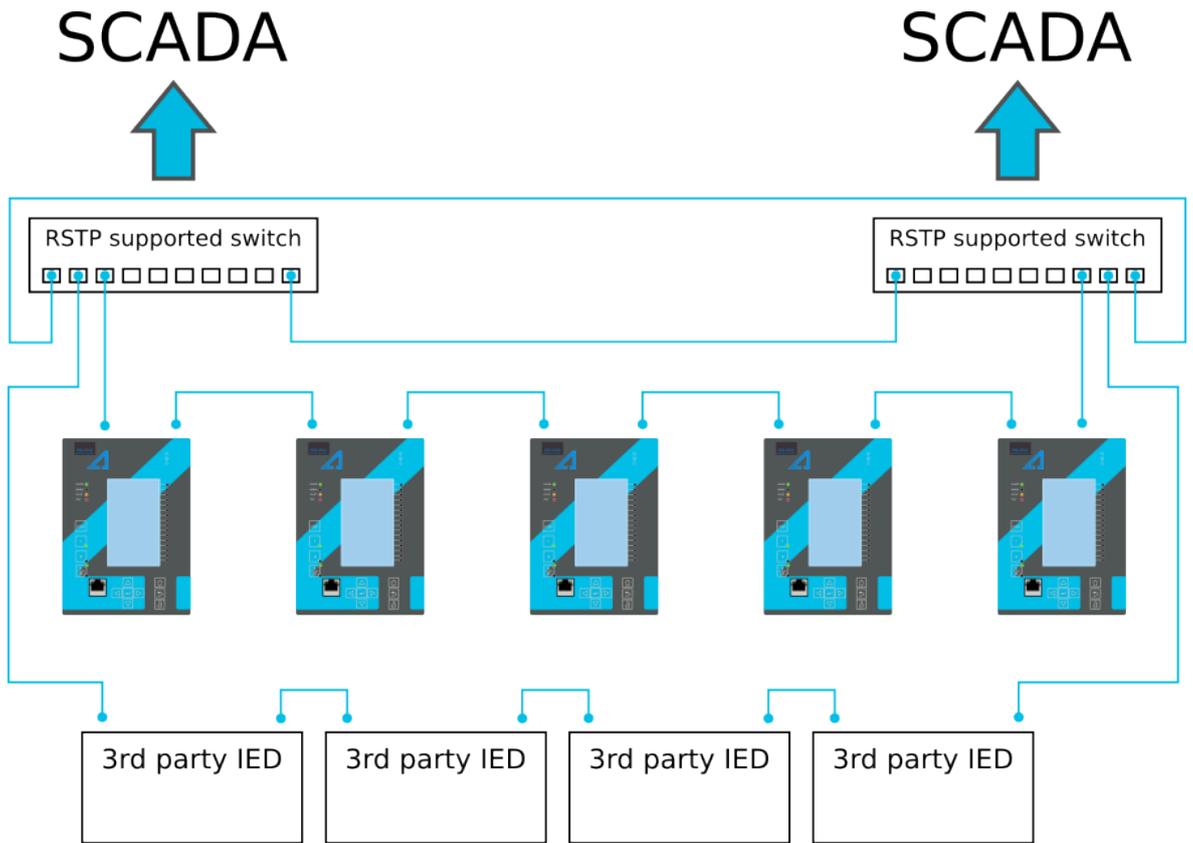


Figure. 8.10 - 197. Example of a multidrop configuration.



## 8.11 Double RJ-45 10/100 Mbps Ethernet communication module (optional)

Figure. 8.11 - 198. Double RJ-45 10/100 Mbps Ethernet communication module.

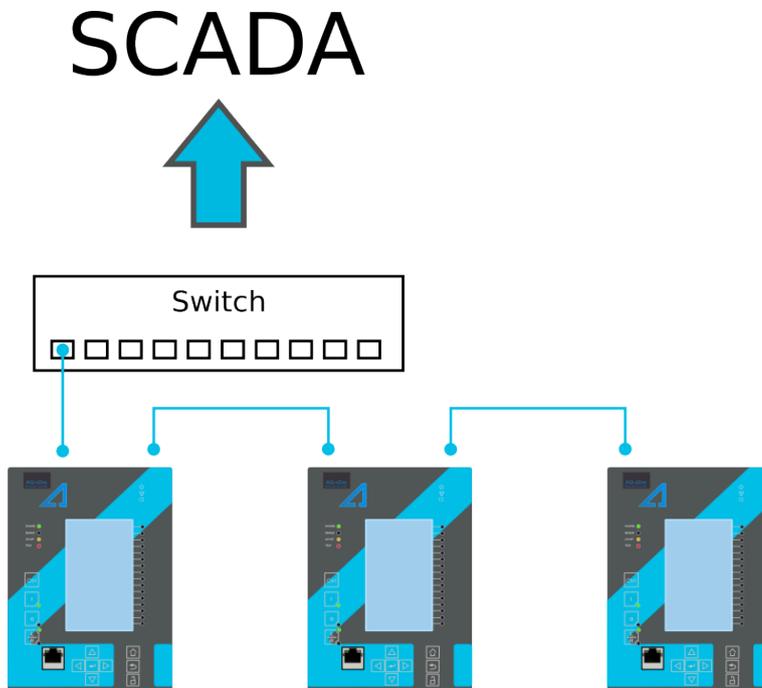

Connector	Description
Two-pin connector	<ul style="list-style-type: none"> <li>• IRIG-B input</li> </ul>
RJ-45 connectors	<ul style="list-style-type: none"> <li>• Two Ethernet ports</li> <li>• RJ-45 connectors</li> <li>• 10BASE-T and 100BASE-TX</li> </ul>

This option card supports multidrop configurations.

For other redundancy options, please refer to the option card "LC 100 Mbps Ethernet communication module".

The images below present two example configurations: the first displays a ring configuration (note how the third party devices are connected in a separate ring), while the second displays a multidrop configuration.

Figure. 8.11 - 199. Example of a ring configuration.



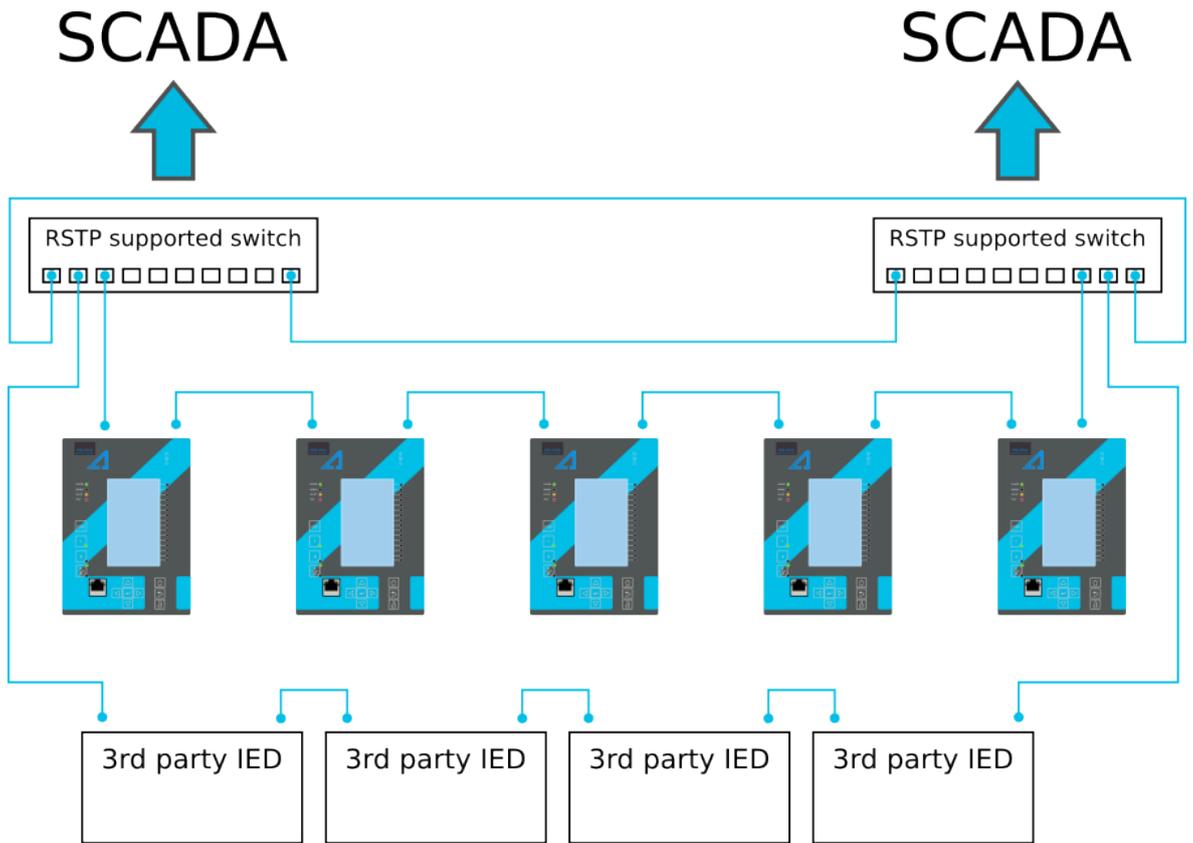


Figure. 8.11 - 200. Example of a multidrop configuration.

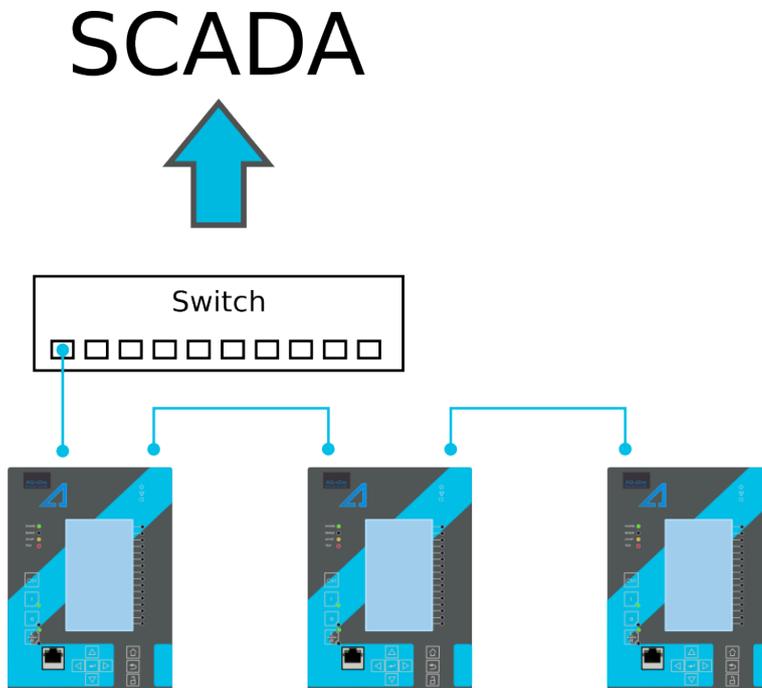

## 8.12 Milliampere (mA) I/O module (optional)

Figure. 8.12 - 201. Milliampere (mA) I/O module connections.

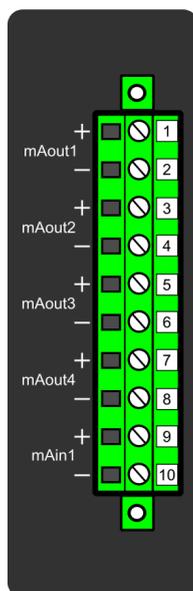

Connector	Description
Pin 1	mA OUT 1 + connector (0...24 mA)
Pin 2	mA OUT 1 – connector (0...24 mA)
Pin 3	mA OUT 2 + connector (0...24 mA)
Pin 4	mA OUT 2 – connector (0...24 mA)
Pin 5	mA OUT 3 + connector (0...24 mA)
Pin 6	mA OUT 3 – connector (0...24 mA)
Pin 7	mA OUT 4 + connector (0...24 mA)
Pin 8	mA OUT 4 – connector (0...24 mA)
Pin 9	mA IN 1 + connector (0...33 mA)
Pin 10	mA IN 1 – connector (0...33 mA)

The milliampere (mA) I/O module is an add-on module with four (4) mA outputs and one (1) mA input. Both the outputs and the input are in two galvanically isolated groups, with one pin for the positive (+) connector and one pin for the negative (–) connector.

This module can be ordered directly to be installed into the device in the factory, or it can be upgraded in the field after the device's original installation when required.

The user sets the mA I/O with the mA outputs control function. This can be done at *Control* → *Device I/O* → *mA outputs* in the relay configuration settings.

## 8.13 Dimensions and installation

The device can be installed either to a standard 19" rack or to a switchgear panel with cutouts. The desired installation type is defined in the order code. When installing to a rack, the device takes a quarter ( $\frac{1}{4}$ ) of the rack's width, meaning that a total of four devices can be installed to the same rack next to one another.

The figures below describe the device dimensions (first figure), the device installation (second), and the panel cutout dimensions and device spacing (third).

Figure. 8.13 - 202. Device dimensions.

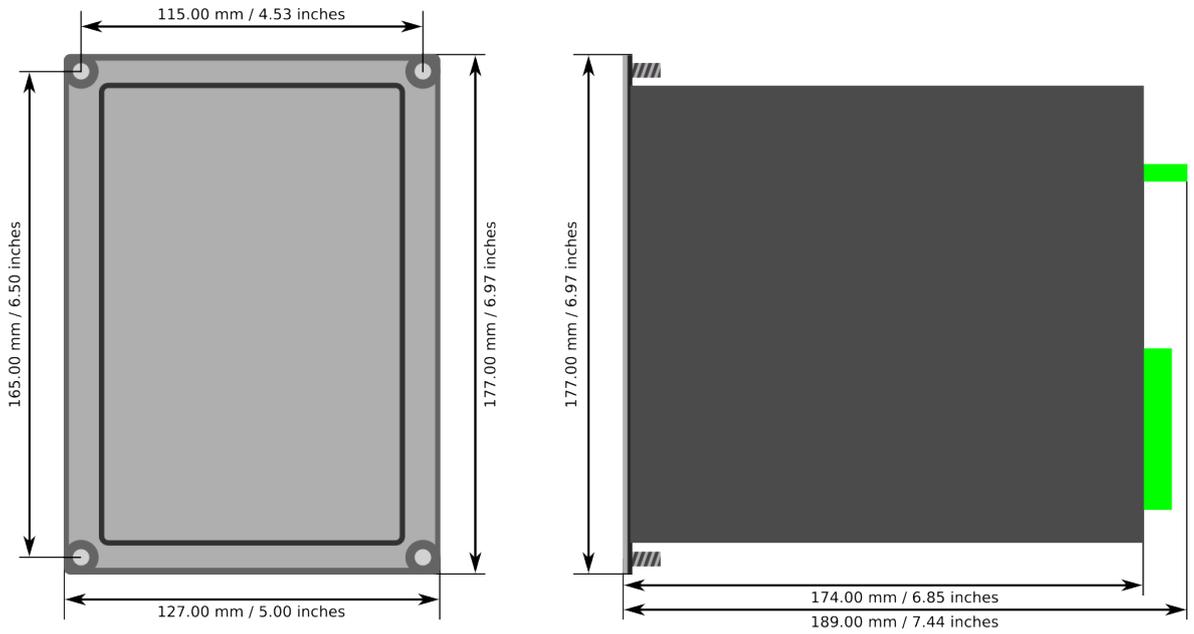


Figure. 8.13 - 203. Device installation.


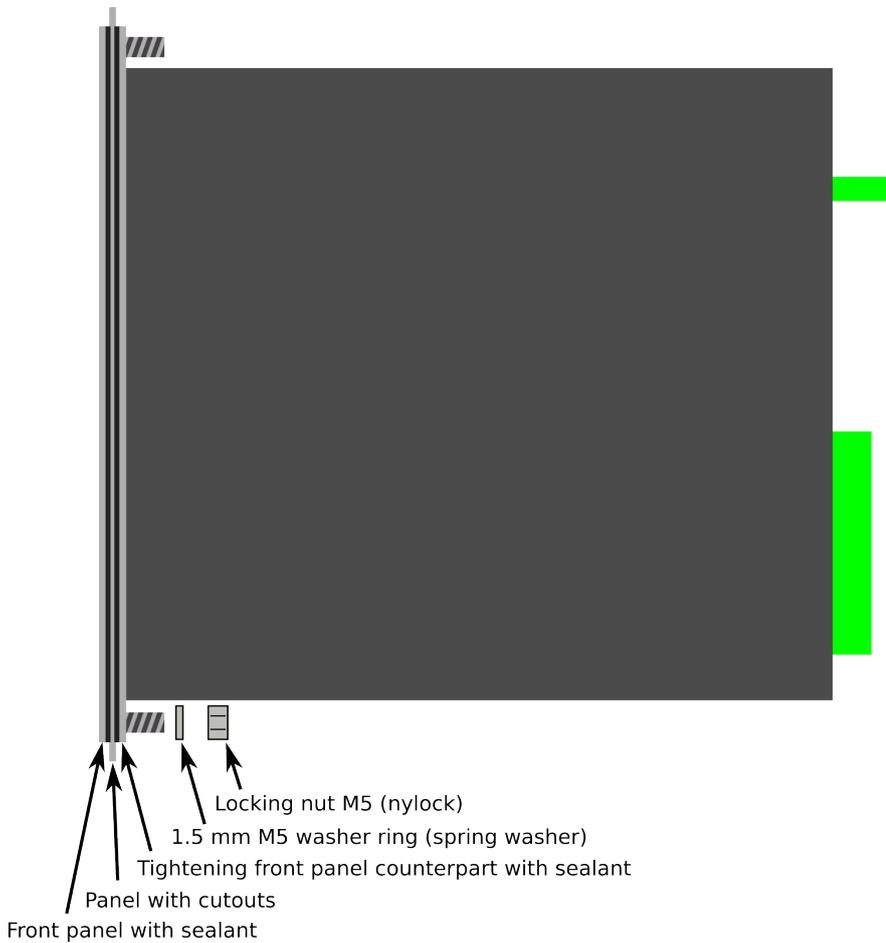


Figure 8.13 - 204. Panel cutout dimensions and device spacing.

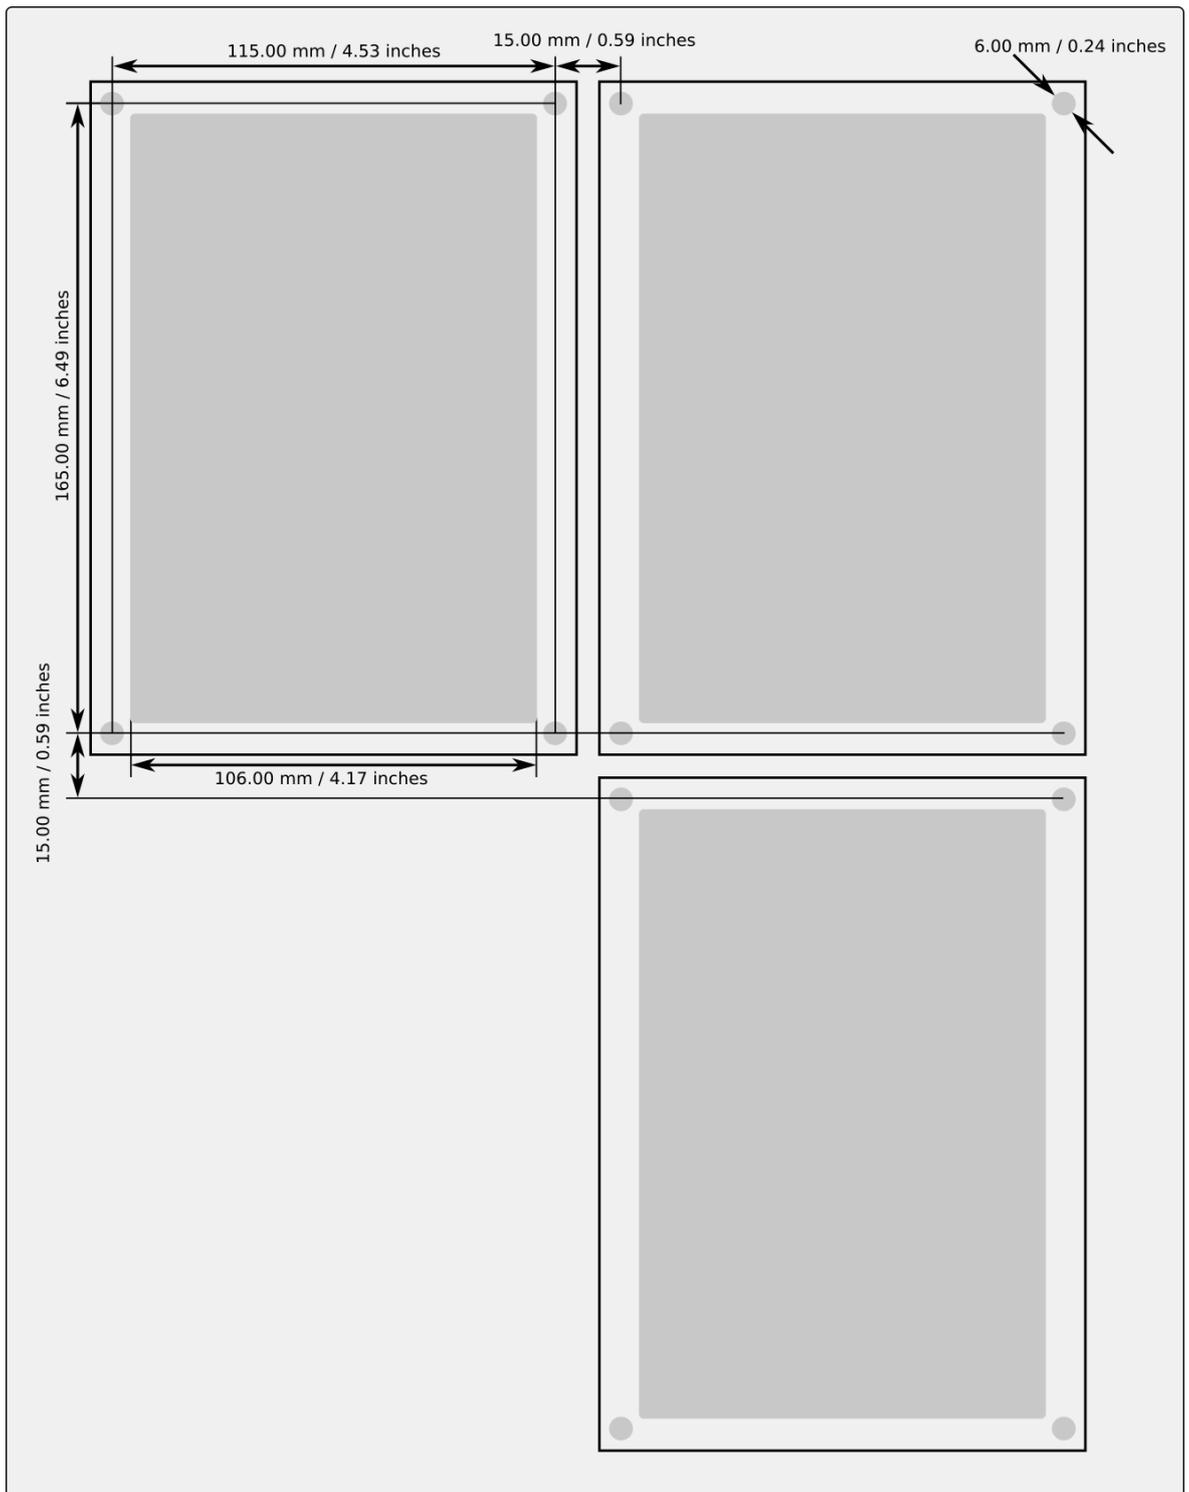

## 9 Technical data

### 9.1 Hardware

#### 9.1.1 Measurements

##### 9.1.1.1 Current measurement

Table. 9.1.1.1 - 188. Technical data for the current measurement module.

Connections	
Measurement channels/CT inputs	Three phase current inputs: IL1 (A), IL2 (B), IL3 (C) Two residual current inputs: Coarse residual current input I01, Fine residual current input I02
Phase current inputs (A, B, C)	
Sample rate	64 samples per cycle in frequency range 6...75Hz
Rated current $I_N$	5 A (configurable 0.2...10 A)
Thermal withstand	30 A (continuous) 100 A (for 10 s) 500 A (for 1 s) 1250 A (for 0.01 s)
Frequency measurement range	From 6...75Hz fundamental, up to the 31 <sup>st</sup> harmonic current
Current measurement range	25 mA...250 A (RMS)
Current measurement inaccuracy	0.005...4.000 × $I_N$ < ±0.5 % or < ±15 mA 4...20 × $I_N$ < ±0.5 % 20...50 × $I_N$ < ±1.0 %
Angle measurement inaccuracy	< ±0.2° ( $I > 0.1$ A) < ±1.0° ( $I \leq 0.1$ A)
Burden (50/60 Hz)	<0.1 VA
Transient overreach	<8 %
Coarse residual current input (I01)	
Rated current $I_N$	1 A (configurable 0.1...10 A)
Thermal withstand	25 A (continuous) 100 A (for 10 s) 500 A (for 1 s) 1250 A (for 0.01 s)
Frequency measurement range	From 6...75 Hz fundamental, up to the 31 <sup>st</sup> harmonic current
Current measurement range	5 mA...150 A (RMS)
Current measurement inaccuracy	0.002...10.000 × $I_N$ < ±0.5 % or < ±3 mA 10...150 × $I_N$ < ±0.5 %

Angle measurement inaccuracy	< $\pm 0.2^\circ$ ( $I > 0.05$ A) < $\pm 1.0^\circ$ ( $I \leq 0.05$ A)
Burden (50/60Hz)	<0.1 VA
Transient overreach	<5 %
Fine residual current input (I02)	
Rated current $I_N$	0.2 A (configurable 0.001...10 A)
Thermal withstand	25 A (continuous) 100 A (for 10 s) 500 A (for 1 s) 1250 A (for 0.01 s)
Frequency measurement range	From 6...75 Hz fundamental, up to the 31 <sup>st</sup> harmonic current
Current measurement range	1 mA...75 A (RMS)
Current measurement inaccuracy	$0.002...25.000 \times I_N < \pm 0.5 \%$ or $< \pm 0.6$ mA $25...375 \times I_N < \pm 1.0 \%$
Angle measurement inaccuracy	< $\pm 0.2^\circ$ ( $I > 0.01$ A) < $\pm 1.0^\circ$ ( $I \leq 0.01$ A)
Burden (50/60Hz)	<0.1 VA
Transient overreach	<5 %
Terminal block connection	
Terminal block	Phoenix Contact FRONT 4-H-6,35
Solid or stranded wire	
Maximum wire diameter	4 mm <sup>2</sup>



**NOTE!**

Current measurement accuracy has been verified with 50/60 Hz.

The amplitude difference is 0.2 % and the angle difference is 0.5 degrees higher at 16.67 Hz and other frequencies.

### 9.1.1.2 Frequency measurement

Table. 9.1.1.2 - 189. Frequency measurement accuracy.

Frequency measurement performance	
Frequency measuring range	6...75 Hz fundamental, up to the 31 <sup>st</sup> harmonic current or voltage
Inaccuracy	10 mHz

## 9.1.2 CPU & Power supply

### 9.1.2.1 Auxiliary voltage

Table. 9.1.2.1 - 190. Power supply model A

Rated values
--------------

Rated auxiliary voltage	85...265 V (AC/DC)
Power consumption	< 7 W < 15 W
Maximum permitted interrupt time	< 60 ms with 110 VDC
DC ripple	< 15 %
Terminal block connection	
Terminal block	Phoenix Contact MSTB 2,5/5-ST-5,08
Solid or stranded wire	2.5 mm <sup>2</sup>
Maximum wire diameter	

Table. 9.1.2.1 - 191. Power supply model B

Rated values	
Rated auxiliary voltage	18...72 VDC
Power consumption	< 7 W < 15 W
Maximum permitted interrupt time	< 90 ms with 24 VDC
DC ripple	< 15 %
Terminal block connection	
Terminal block	Phoenix Contact MSTB 2,5/5-ST-5,08
Solid or stranded wire	2.5 mm <sup>2</sup>
Maximum wire diameter	

### 9.1.2.2 CPU communication ports

Table. 9.1.2.2 - 192. Front panel local communication port.

Port	
Port media	Copper Ethernet RJ-45
Number of ports	1
Port protocols	PC-protocols FTP Telnet
Features	
Data transfer rate	100 MB
System integration	Cannot be used for system protocols, only for local programming

Table. 9.1.2.2 - 193. Rear panel system communication port A.

Port	
Port media	Copper Ethernet RJ-45
Number of ports	1
Features	

Port protocols	IEC 61850 IEC 104 Modbus/TCP DNP3 FTP Telnet
Data transfer rate	100 MB
System integration	Can be used for system protocols and for local programming

Table. 9.1.2.2 - 194. Rear panel system communication port B.

Port	
Port media	Copper RS-485
Number of ports	1
Features	
Port protocols	Modbus/RTU IEC 103 IEC 101 DNP3 SPA
Data transfer rate	65 580 kB/s
System integration	Can be used for system protocols

### 9.1.2.3 CPU digital inputs

Table. 9.1.2.3 - 195. CPU model-isolated digital inputs, with thresholds defined by order code.

Rated values	
Rated auxiliary voltage	265 V (AC/DC)
Nominal voltage	Order code defined: 24, 110, 220 V (AC/DC)
Pick-up threshold Release threshold	Order code defined: 19, 90, 170 V Order code defined: 14, 65, 132 V
Scanning rate	5 ms
Settings	
Pick-up delay	Software settable: 0...1800 s
Polarity	Software settable: Normally On/Normally Off
Current drain	2 mA
Terminal block connection	
Terminal block	Phoenix Contact MSTB 2,5/5-ST-5,08
Solid or stranded wire Maximum wire diameter	2.5 mm <sup>2</sup>

### 9.1.2.4 CPU digital outputs

Table. 9.1.2.4 - 196. Digital outputs (Normally Open)

Rated values	
Rated auxiliary voltage	265 V (AC/DC)
Continuous carry	5 A
Make and carry 0.5 s Make and carry 3 s	30 A 15 A
Breaking capacity, DC (L/R = 40 ms) at 48 VDC at 110 VDC at 220 VDC	1 A 0.4 A 0.2 A
Control rate	5 ms
Settings	
Polarity	Software settable: Normally On/Normally Off
Terminal block connection	
Terminal block	Phoenix Contact MSTB 2,5/5-ST-5,08
Solid or stranded wire Maximum wire diameter	2.5 mm <sup>2</sup>

Table. 9.1.2.4 - 197. Digital outputs (Change-Over)

Rated values	
Rated auxiliary voltage	265 V (AC/DC)
Continuous carry	5 A
Make and carry 0.5 s Make and carry 3 s	30 A 15 A
Breaking capacity, DC (L/R = 40 ms) at 48 VDC at 110 VDC at 220 VDC	1 A 0.4 A 0.2 A
Control rate	5 ms
Settings	
Polarity	Software settable: Normally On/Normally Off
Terminal block connection	
Terminal block	Phoenix Contact MSTB 2,5/5-ST-5,08
Solid or stranded wire Maximum wire diameter	2.5 mm <sup>2</sup>

### 9.1.3 Option cards

#### 9.1.3.1 Digital input module

Table. 9.1.3.1 - 198. Technical data for the digital input module.

Rated values	
Rated auxiliary voltage	5...265 V (AC/DC)
Current drain	2 mA

Scanning rate	5 ms
Activation/release delay	5...11 ms
<b>Settings</b>	
Pick-up threshold	Software settable: 16...200 V, setting step 1 V
Release threshold	Software settable: 10...200 V, setting step 1 V
Pick-up delay	Software settable: 0...1800 s
Drop-off delay	Software settable: 0...1800 s
Polarity	Software settable: Normally On/Normally Off
<b>Terminal block connection</b>	
Terminal block	Phoenix Contact MSTB 2,5/5-ST-5,08
Solid or stranded wire	
Maximum wire diameter	2.5 mm <sup>2</sup>

### 9.1.3.2 Digital output module

Table. 9.1.3.2 - 199. Technical data for the digital output module.

<b>Rated values</b>	
Rated auxiliary voltage	265 V (AC/DC)
Continuous carry	5 A
Make and carry 0.5 s	30 A
Make and carry 3 s	15 A
Breaking capacity, DC (L/R = 40 ms)	
at 48 VDC	1 A
at 110 VDC	0.4 A
at 220 VDC	0.2 A
Control rate	5 ms
<b>Settings</b>	
Polarity	Software settable: Normally On/Normally Off
<b>Terminal block connection</b>	
Terminal block	Phoenix Contact MSTB 2,5/5-ST-5,08
Solid or stranded wire	
Maximum wire diameter	2.5 mm <sup>2</sup>

### 9.1.3.3 Arc protection module

Table. 9.1.3.3 - 200. Technical data for the arc protection module.

<b>Connections</b>	
Input arc point sensor channels	S1, S2, S3, S4 (pressure and light, or light only)
Sensors per channel	3
<b>Performance</b>	
Pick-up light intensity	8, 25 or 50 kLx (the sensor is selectable in the order code)
Inaccuracy: - Point sensor detection radius	180 degrees
Start and instant operating time (light only)	Typically <5 ms (dedicated semiconductor outputs) Typically <10 ms (regular output relays)

Table. 9.1.3.3 - 201. High-Speed Outputs (HSO1...2)

Rated values	
Rated auxiliary voltage	250 VDC
Continuous carry	2 A
Make and carry 0.5 s Make and carry 3 s	15 A 6 A
Breaking capacity, DC (L/R = 40 ms)	1 A/110 W
Control rate	5 ms
Operation delay	<1 ms
Polarity	Normally Off
Contact material	Semiconductor
Terminal block connection	
Terminal block	Phoenix Contact MSTB 2,5/5-ST-5,08
Solid or stranded wire	2.5 mm <sup>2</sup>
Maximum wire diameter	

Table. 9.1.3.3 - 202. Binary input channel

Rated values	
Voltage withstand	265 VDC
Rated auxiliary voltage Pick-up threshold Release threshold	24 VDC ≥16 VDC ≤15 VDC
Scanning rate	5 ms
Polarity	Normally Off
Current drain	3 mA
Terminal block connection	
Terminal block	Phoenix Contact MSTB 2,5/5-ST-5,08
Solid or stranded wire	2.5 mm <sup>2</sup>
Maximum wire diameter	

**NOTE!** Polarity has to be correct.

### 9.1.3.4 Milliampere module (mA out & mA in)

Table. 9.1.3.4 - 203. Technical data for the milliampere module.

Signals	
Output magnitudes	4 × mA output signal (DC)
Input magnitudes	1 × mA input signal (DC)
mA input	
Range (hardware)	0...33 mA
Range (measurement)	0...24 mA
Inaccuracy	±0.1 mA

Update cycle	5...10 000 ms, setting step 5 ms
Response time @ 5 ms cycle	~ 15 ms (13...18 ms)
Update cycle time inaccuracy	Max. +20 ms above the set cycle
mA input scaling range	0...4000 mA
Output scaling range	-1 000 000.0000...1 000 000.0000, setting step 0.0001
<b>mA output</b>	
Inaccuracy @ 0...24 mA	±0.01 mA
Response time @ 5 ms cycle [fixed]	< 5 ms
mA output scaling range	0...24 mA, setting step 0.001 mA
Source signal scaling range	-1 000 000.000...1 000 000.0000, setting step 0.0001

### 9.1.3.5 RTD input module

Table. 9.1.3.5 - 204. Technical data for the RTD input module.

<b>Channels 1-8</b>
2/3/4-wire RTD and thermocouple sensors
Pt100 or Pt1000
Type K, Type J, Type T and Type S
Channels 7 & 8 support mA measurement

### 9.1.3.6 RS-232 & serial fiber communication module

Table. 9.1.3.6 - 205. Technical data for the RS-232 & serial fiber communication module.

<b>Ports</b>
RS-232
Serial fiber (GG/PP/GP/PG)
<b>Serial port wavelength</b>
660 nm
<b>Cable type</b>
1 mm plastic fiber

### 9.1.3.7 Double LC 100 Mbps Ethernet communication module

Table. 9.1.3.7 - 206. Technical data for the double LC 100 Mbps Ethernet communication module.

<b>Protocols</b>	
Protocols	HSR and PRP
<b>Ports</b>	
Quantity of fiber ports	2
Communication port C & D	LC fiber connector Wavelength 1300 nm
Fiber cable	50/125 µm or 62.5/125 µm multimode (glass)

## 9.1.4 Display

Table 9.1.4 - 207. Technical data for the HMI LCD display.

Dimensions and resolution	
Number of dots/resolution	320 x 160
Size	84.78 × 49.90 mm (3.34 × 1.96 in)
Display	
Type of display	LCD
Color	Monochrome

## 9.2 Functions

### 9.2.1 Protection functions

#### 9.2.1.1 Non-directional overcurrent protection ( $I>$ ; 50/51)

Table 9.2.1.1 - 208. Technical data for the non-directional overcurrent function.

Measurement inputs	
Current inputs	Phase current inputs: $I_{L1}$ (A), $I_{L2}$ (B), $I_{L3}$ (C)
Current input magnitudes	RMS phase currents TRMS phase currents Peak-to-peak phase currents
Pick-up	
Pick-up current setting	0.10...50.00 × $I_n$ , setting step 0.01 × $I_n$
Inrush 2nd harmonic blocking	0.10...50.00 % $I_{fund}$ , setting step 0.01 % $I_{fund}$
Inaccuracy: - Current - 2 <sup>nd</sup> harmonic blocking	±0.5 % $I_{set}$ or ±15 mA (0.10...4.0 × $I_{set}$ ) ±1.0 %-unit of the 2 <sup>nd</sup> harmonic setting
Operation time	
Definite time function operating time setting	0.00...1800.00 s, setting step 0.005 s
Inaccuracy: - Definite time: $I_m/I_{set}$ ratio > 3 - Definite time: $I_m/I_{set}$ ratio = 1.05...3	±1.0 % or ±20 ms ±1.0 % or ±30 ms
IDMT setting parameters: - k Time dial setting for IDMT - A IDMT constant - B IDMT constant - C IDMT constant	0.01...25.00, step 0.01 0...250.0000, step 0.0001 0...5.0000, step 0.0001 0...250.0000, step 0.0001
Inaccuracy: - IDMT operating time - IDMT minimum operating time	±1.5 % or ±20 ms ±20 ms
Retardation time (overshoot)	<30 ms
Instant operation time	
Start time and instant operation time (trip): - $I_m/I_{set}$ ratio > 3 - $I_m/I_{set}$ ratio = 1.05...3	<35 ms (typically 25 ms) <50 ms
Reset	
Reset ratio	97 % of the pick-up current setting

Reset time setting Inaccuracy: Reset time	0.010...10.000 s, step 0.005 s ±1.0 % or ±50 ms
Instant reset time and start-up reset	<50 ms

**Note!**

- The release delay does not apply to phase-specific tripping.

### 9.2.1.2 Non-directional earth fault protection ( $I_{0>}$ ; 50N/51N)

Table. 9.2.1.2 - 209. Technical data for the non-directional earth fault function.

Measurement inputs	
Current input (selectable)	Residual current channel $I_{01}$ (Coarse) Residual current channel $I_{02}$ (Fine) Calculated residual current: $I_{L1}$ (A), $I_{L2}$ (B), $I_{L3}$ (C)
Current input magnitudes	RMS residual current ( $I_{01}$ , $I_{02}$ or calculated $I_0$ ) TRMS residual current ( $I_{01}$ or $I_{02}$ ) Peak-to-peak residual current ( $I_{01}$ or $I_{02}$ )
Pick-up	
Used magnitude	Measured residual current $I_{01}$ (1 A) Measured residual current $I_{02}$ (0.2 A) Calculated residual current $I_{0Calc}$ (5 A)
Pick-up current setting	$0.0001...40.00 \times I_n$ , setting step $0.0001 \times I_n$
Inaccuracy: - Starting $I_{01}$ (1 A) - Starting $I_{02}$ (0.2 A) - Starting $I_{0Calc}$ (5 A)	$\pm 0.5 \% I_{0Set}$ or $\pm 3$ mA ( $0.005...10.0 \times I_{Set}$ ) $\pm 1.5 \% I_{0Set}$ or $\pm 1.0$ mA ( $0.005...25.0 \times I_{Set}$ ) $\pm 1.0 \% I_{0Set}$ or $\pm 15$ mA ( $0.005...4.0 \times I_{Set}$ )
Operating time	
Definite time function operating time setting	0.00...1800.00 s, setting step 0.005 s
Inaccuracy: - Definite time: $I_m/I_{Set}$ ratio > 3 - Definite time: $I_m/I_{Set}$ ratio = 1.05...3	$\pm 1.0$ % or $\pm 20$ ms $\pm 1.0$ % or $\pm 30$ ms
IDMT setting parameters: - k Time dial setting for IDMT - A IDMT constant - B IDMT constant - C IDMT constant	0.01...25.00, step 0.01 0...250.0000, step 0.0001 0...5.0000, step 0.0001 0...250.0000, step 0.0001
Inaccuracy: - IDMT operating time - IDMT minimum operating time	$\pm 1.5$ % or $\pm 20$ ms $\pm 20$ ms
Retardation time (overshoot)	<30 ms
Instant operation time	
Start time and instant operation time (trip): - $I_m/I_{Set}$ ratio > 3.5 - $I_m/I_{Set}$ ratio = 1.05...3.5	<50 ms (typically 35 ms) <55 ms
Reset	
Reset ratio	97 % of the pick-up current setting
Reset time setting Inaccuracy: Reset time	0.010...10.000 s, step 0.005 s $\pm 1.0$ % or $\pm 50$ ms
Instant reset time and start-up reset	<50 ms

**Note!**

- The operation and reset time accuracy does not apply when the measured secondary current in I02 is 1...20 mA. The pick-up is tuned to be more sensitive and the operation times vary because of this.

### 9.2.1.3 Negative sequence overcurrent/ phase current reversal/ current unbalance protection (I2>; 46/46R/46L)

Table. 9.2.1.3 - 210. Technical data for the current unbalance function.

Measurement inputs	
Current inputs	Phase current inputs: I <sub>L1</sub> (A), I <sub>L2</sub> (B), I <sub>L3</sub> (C)
Current input calculations	Positive sequence current (I1) Negative sequence current (I2)
Pick-up	
Used magnitude	Negative sequence component I2pu Relative unbalance I2/I1
Pick-up setting	0.01...40.00 × I <sub>n</sub> , setting step 0.01 × I <sub>n</sub> (I2pu) 1.00...200.00 %, setting step 0.01 % (I2/I1)
Minimum phase current (at least one phase above)	0.01...2.00 × I <sub>n</sub> , setting step 0.01 × I <sub>n</sub>
Inaccuracy: - Starting I2pu - Starting I2/I1	±1.0 %-unit or ±100 mA (0.10...4.0 × I <sub>n</sub> ) ±1.0 %-unit or ±100 mA (0.10...4.0 × I <sub>n</sub> )
Operating time	
Definite time function operating time setting	0.00...1800.00 s, setting step 0.005 s
Inaccuracy: - Definite time (I <sub>m</sub> /I <sub>set</sub> ratio > 1.05)	±1.5 % or ±60 ms
IDMT setting parameters: - k Time dial setting for IDMT - A IDMT Constant - B IDMT Constant - C IDMT Constant	0.01...25.00, step 0.01 0...250.0000, step 0.0001 0...5.0000, step 0.0001 0...250.0000, step 0.0001
Inaccuracy: - IDMT operating time - IDMT minimum operating time	±2.0 % or ±30 ms ±20 ms
Retardation time (overshoot)	<5 ms
Instant operation time	
Start time and instant operation time (trip): - I <sub>m</sub> /I <sub>set</sub> ratio > 1.05	<70 ms
Reset	
Reset ratio	97 % of the pick-up setting
Reset time setting Inaccuracy: Reset time	0.010...10.000 s, step 0.005 s ±1.5 % or ±60 ms
Instant reset time and start-up reset	<55 ms

### 9.2.1.4 Harmonic overcurrent protection (I<sub>h</sub>>; 50H/51H/68H)

Table. 9.2.1.4 - 211. Technical data for the harmonic overcurrent function.

Measurement inputs	
--------------------	--

Current inputs	Phase current inputs: I <sub>L1</sub> (A), I <sub>L2</sub> (B), I <sub>L3</sub> (C) Residual current channel I <sub>01</sub> (Coarse) Residual current channel I <sub>02</sub> (Fine)
<b>Pick-up</b>	
Harmonic selection	2 <sup>nd</sup> , 3 <sup>rd</sup> , 4 <sup>th</sup> , 5 <sup>th</sup> , 6 <sup>th</sup> , 7 <sup>th</sup> , 9 <sup>th</sup> , 11 <sup>th</sup> , 13 <sup>th</sup> , 15 <sup>th</sup> , 17 <sup>th</sup> or 19 <sup>th</sup>
Used magnitude	Harmonic per unit ( $\times I_N$ ) Harmonic relative (I <sub>h</sub> /I <sub>L</sub> )
Pick-up setting	0.05...2.00 $\times I_N$ , setting step 0.01 $\times I_N$ ( $\times I_N$ ) 5.00...200.00 %, setting step 0.01 % (I <sub>h</sub> /I <sub>L</sub> )
Inaccuracy: - Starting $\times I_N$ - Starting $\times I_h/I_L$	<0.03 $\times I_N$ (2 <sup>nd</sup> , 3 <sup>rd</sup> , 5 <sup>th</sup> ) <0.03 $\times I_N$ tolerance to I <sub>h</sub> (2 <sup>nd</sup> , 3 <sup>rd</sup> , 5 <sup>th</sup> )
<b>Operation time</b>	
Definite time function operating time setting	0.00...1800.00 s, setting step 0.005 s
Inaccuracy: - Definite time (I <sub>M</sub> /I <sub>SET</sub> ratio >1.05)	$\pm 1.0$ % or $\pm 35$ ms
IDMT setting parameters: k Time dial setting for IDMT A IDMT constant B IDMT constant C IDMT constant	0.01...25.00, step 0.01 0...250.0000, step 0.0001 0...5.0000, step 0.0001 0...250.0000, step 0.0001
Inaccuracy: - IDMT operating time - IDMT minimum operating time	$\pm 1.5$ % or $\pm 20$ ms $\pm 20$ ms
<b>Instant operation time</b>	
Start time and instant operation time (trip): I <sub>M</sub> /I <sub>SET</sub> ratio >1.05	<50 ms
<b>Reset</b>	
Reset ratio	95 % of the pick-up setting
Reset time setting Inaccuracy: Reset time	0.010...10.000 s, step 0.005 s $\pm 1.0$ % or $\pm 35$ ms
Instant reset time and start-up reset	<50 ms

**Note!**

- Harmonics generally: The amplitude of the harmonic content has to be least  $0.02 \times I_N$  when the relative mode (I<sub>h</sub>/I<sub>L</sub>) is used.
- Blocking: To achieve fast activation for blocking purposes with the harmonic overcurrent stage, note that the harmonic stage may be activated by a rapid load change or fault situation. An intentional activation lasts for approximately 20 ms if a harmonic component is not present. The harmonic stage stays active if the harmonic content is above the pick-up limit.
- Tripping: When using the harmonic overcurrent stage for tripping, please ensure that the operation time is set to 20 ms (DT) or longer to avoid nuisance tripping caused by the above-mentioned reasons.

### 9.2.1.5 Circuit breaker failure protection (CBFP; 50BF/52BF)

Table. 9.2.1.5 - 212. Technical data for the circuit breaker failure protection function.

Measurement inputs
--------------------

Current inputs	Phase current inputs: $I_{L1}$ (A), $I_{L2}$ (B), $I_{L3}$ (C) Residual current channel $I_{01}$ (Coarse) Residual current channel $I_{02}$ (Fine)
Current input magnitudes	RMS phase currents RMS residual current ( $I_{01}$ , $I_{02}$ or calculated $I_0$ )
<b>Pick-up</b>	
Monitored signals	Digital input status, digital output status, logical signals
Pick-up current setting: - $I_{L1} \dots I_{L3}$ - $I_{01}$ , $I_{02}$ , $I_{0Calc}$	$0.10 \dots 40.00 \times I_N$ , setting step $0.01 \times I_N$ $0.005 \dots 40.00 \times I_N$ , setting step $0.005 \times I_N$
Inaccuracy: - Starting phase current (5A) - Starting $I_{01}$ (1 A) - Starting $I_{02}$ (0.2 A) - Starting $I_{0Calc}$ (5 A)	$\pm 0.5 \% I_{SET}$ or $\pm 15$ mA ( $0.10 \dots 4.0 \times I_{SET}$ ) $\pm 0.5 \% I_{0SET}$ or $\pm 3$ mA ( $0.005 \dots 10.0 \times I_{SET}$ ) $\pm 1.5 \% I_{0SET}$ or $\pm 1.0$ mA ( $0.005 \dots 25.0 \times I_{SET}$ ) $\pm 1.0 \% I_{0SET}$ or $\pm 15$ mA ( $0.005 \dots 4.0 \times I_{SET}$ )
<b>Operation time</b>	
Definite time function operating time setting	$0.050 \dots 1800.000$ s, setting step $0.005$ s
Inaccuracy: - Current criteria ( $I_M/I_{SET}$ ratio $1.05 \rightarrow$ ) - DO or DI only	$\pm 1.0$ % or $\pm 55$ ms $\pm 15$ ms
<b>Reset</b>	
Reset ratio	97 % of the pick-up current setting
Reset time	<50 ms

### 9.2.1.6 Low-impedance or high-impedance restricted earth fault/ cable end differential protection ( $I_{0d} >$ ; 87N)

Table. 9.2.1.6 - 213. Technical data for the restricted earth fault/cable end differential function.

<b>Measurement inputs</b>	
Current inputs	Phase current inputs: $I_{L1}$ (A), $I_{L2}$ (B), $I_{L3}$ (C) Residual current channel $I_{01}$ (Coarse) Residual current channel $I_{02}$ (Fine)
Current input calculations	Calculated bias and residual differential currents
<b>Pick-up</b>	
Operating modes	Restricted earth fault Cable end differential
Characteristics	Biased differential with 3 settable sections and 2 slopes
Pick-up current sensitivity setting Slope 1 Slope 2 Bias (Turnpoint 1 & 2)	$0.01 \dots 50.00 \% (I_N)$ , setting step $0.01 \%$ $0.00 \dots 150.00 \%$ , setting step $0.01 \%$ $0.00 \dots 250.00 \%$ , setting step $0.01 \%$ $0.01 \dots 50.00 \times I_N$ , setting step $0.01 \times I_N$
Inaccuracy - Starting	$\pm 3\%$ of the set pick-up value $> 0.5 \times I_N$ setting. $\pm 5$ mA $< 0.5 \times I_N$ setting
<b>Operation time</b>	
Instant operation time $1.05 \times I_{SET}$	<30 ms
<b>Reset</b>	
Reset ratio	No hysteresis
Reset time	<40 ms

### 9.2.1.7 Machine thermal overload protection (TM>; 49M)

Table. 9.2.1.7 - 214. Technical data for the machine thermal overload protection function.

Measurement inputs	
Current inputs	Phase current inputs: I <sub>L1</sub> (A), I <sub>L2</sub> (B), I <sub>L3</sub> (C)
Current input magnitudes	TRMS phase currents (up to the 31 <sup>st</sup> harmonic)
Pick-up (Heating)	
NPS bias factor (unbalance effect) Pick-up current setting Thermal alarm and trip level setting range Motor service factor	0.1...10.0, setting step 0.1 0.10...40.00 × I <sub>N</sub> , setting step 0.01 × I <sub>N</sub> 0.0...150.0 %, setting step 0.1 % 0.01...5.00 × I <sub>N</sub> , setting step 0.01 × I <sub>N</sub>
Cold condition: - Long heat T const (cold) - Short heat T const (cold)	0.0...500.0 min, setting step 0.1 min 0.0...500.0 min, setting step 0.1 min
Hot condition: - Long heat T const (hot) - Short heat T const (hot) - Hot condition theta limit (Cold → Hot spot)	0.0...500.0 min, setting step 0.1 min 0.0...500.0 min, setting step 0.1 min 0.00...100.00 %, setting step 0.01 %
Reset (Cooling)	
Reset ratio (pick-up and alarms)	99 %
Stop condition: - Long cool T const (stop) - Short cool T const (stop) - Short cool T in use time	0.0...500.0 min, setting step 0.1 min 0.0...500.0 min, setting step 0.1 min 0.0...3000.0 min, setting step 0.1 min
Run condition: - Long cool T const (stop)	0.0...500.0 min, setting step 0.1 min
Operation time	
Definite time function operating time setting	0.0...3600.0 s, setting step 0.1 s
Inaccuracy: - Pick-up and reset	±1.0 % or ±500 ms
Environmental settings	
Thermal replica temperature estimates	Selectable between °C and °F
Ambient temperature effect k min. and max. range Ambient temperature min. and max. range	Linear or manually set curve 0.01...5.00 × I <sub>N</sub> , setting step 0.01 × I <sub>N</sub> -60...500 deg, setting step 1 deg
Thermal model biasing (ambient): - Set ambient temperature - RTD	-60...500 deg, setting step 1 deg Used measured ambient value

### 9.2.1.8 Motor start/ locked rotor monitoring (Ist>; 48/14)

Table. 9.2.1.8 - 215. Technical data for the motor start/locked rotor monitoring function.

Measurement inputs	
Current inputs	Phase current inputs: I <sub>L1</sub> (A), I <sub>L2</sub> (B), I <sub>L3</sub> (C)
Current input magnitudes	RMS phase currents
Pick-up	
Pick-up current setting	0.10...40.00 × I <sub>N</sub> , setting step 0.10 × I <sub>N</sub>
Inaccuracy: - Current	±0.5 % I <sub>SET</sub> or ±15 mA (0.10...4.0 × I <sub>SET</sub> )

Time settings	
Starting time setting	0.00...1800.00 s, setting step 0.005 s
Operating mode	Definite time or cumulative I2t sum inverse operating time With or without a speed switch input Monitors only starts or both starts and stall
Start time	Max. 5 ms from the detected start-up or locked rotor situation
Inaccuracy: - Starting - Definite time operating time	$\pm 3\%$ of the set pick-up value $> 0.5 \times I_N$ setting. $5 \text{ mA} < 0.5 \times I_N$ setting $\pm 0.5 \%$ or $\pm 10 \text{ ms}$
Operation time	
Definite time function operating time setting	0.00...1800.00 s, setting step 0.005 s
Cumulative I2t sum inverse operation time	0.00...1800.00 s, setting step 0.005 s
Inaccuracy: - Definite time ( $I_M/I_{SET}$ ratio 0.95)	$\pm 1.0 \%$ or $\pm 40 \text{ ms}$
Instant operation time	
Start time and instant operation time (trip): - $I_M/I_{SET}$ ratio 1.05→	<55 ms
Reset	
Reset ratio	97 % of the pick-up current setting
Reset time setting Inaccuracy: Reset time	0.010 ... 150.000 s, step 0.005 s $\pm 1.0 \%$ or $\pm 35 \text{ ms}$
Instant reset time and start-up reset	<55 ms

### 9.2.1.9 Frequent start protection (N>; 66)

Table. 9.2.1.9 - 216. Technical data for the frequent start protection function.

Inputs	
Input magnitudes	Motor start monitor set start signals
Dependent on the motor thermal status	Yes
Settings	
Starts when cold	1...100 starts, step 1 start
Starts when hot	1...100 starts, step 1 start
Output data	
Monitor data	- Used starts - Available starts - Alarms, inhibits, blocks - Inhibit, alarm time on - Time since last start
Operation	
Start time	Max. 5 ms from the detected start-up
Inaccuracy	
Starting	$\pm 3\%$ of the set pick-up value $> 0.5 \times I_N$ setting. $5 \text{ mA} < 0.5 \times I_N$ setting (from the motor start/locked rotor monitoring function)
Definite time operating time	$\pm 0.5 \%$ or $\pm 10 \text{ ms}$ of the counter deduct

### 9.2.1.10 Non-directional undercurrent protection ( $I <$ ; 37)

Table. 9.2.1.10 - 217. Technical data for the undercurrent function.

Measurement inputs	
Current inputs	Phase current inputs: $I_{L1}$ (A), $I_{L2}$ (B), $I_{L3}$ (C)
Current input magnitudes	RMS phase currents
Pick-up	
Pick-up current setting	$0.10 \dots 40.00 \times I_N$ , setting step $0.10 \times I_N$
Inaccuracy: - Current	$\pm 0.5 \% I_{SET}$ or $\pm 15 \text{ mA}$ ( $0.10 \dots 4.0 \times I_{SET}$ )
Operation time	
Definite time function operating time setting	$0.00 \dots 150.00 \text{ s}$ , setting step $0.005 \text{ s}$
Inaccuracy: - Definite time ( $I_M/I_{SET}$ ratio 0.95)	$\pm 1.0 \%$ or $\pm 30 \text{ ms}$
Instant operation time	
Start time and instant operation time (trip): - $I_M/I_{SET}$ ratio $< 0.95$	$< 50 \text{ ms}$
Reset	
Reset ratio	103 % of the pick-up current setting
Reset time setting Inaccuracy: Reset time	$0.010 \dots 150.000 \text{ s}$ , step $0.005 \text{ s}$ $\pm 1.0 \%$ or $\pm 35 \text{ ms}$
Instant reset time and start-up reset	$< 50 \text{ ms}$

### 9.2.1.11 Mechanical jam protection ( $I_m >$ ; 51M)

Table. 9.2.1.11 - 218. Technical data for the mechanical jam function.

Measurement inputs	
Current inputs	Phase current inputs: $I_{L1}$ (A), $I_{L2}$ (B), $I_{L3}$ (C)
Current input magnitudes	RMS phase currents
Pick-up	
Pick-up current setting	$0.10 \dots 40.00 \times I_N$ , setting step $0.10 \times I_N$
Inaccuracy: - Current	$\pm 0.5 \% I_{SET}$ or $\pm 15 \text{ mA}$ ( $0.10 \dots 4.0 \times I_{SET}$ )
Operation time	
Definite time function operating time setting	$0.00 \dots 1800.00 \text{ s}$ , setting step $0.005 \text{ s}$
Inaccuracy: - Definite time ( $I_M/I_{SET}$ ratio 0.95)	$\pm 1.0 \%$ or $\pm 30 \text{ ms}$
Instant operation time	
Start time and instant operation time (trip): - $I_M/I_{SET}$ ratio $1.05 \rightarrow$	$< 50 \text{ ms}$
Reset	
Reset ratio	97 % of the pick-up current setting
Reset time setting Inaccuracy: Reset time	$0.010 \dots 150.000 \text{ s}$ , step $0.005 \text{ s}$ $\pm 1.0 \%$ or $\pm 35 \text{ ms}$

Instant reset time and start-up reset	<50 ms
---------------------------------------	--------

**Note!**

- Mechanical jam protection requires that the motor running condition has been met before tripping is possible.

### 9.2.1.12 Resistance temperature detectors

Table. 9.2.1.12 - 219. Technical data of the resistance temperature detectors.

Inputs	
Resistance input magnitudes	Measured temperatures measured by RTD sensors
Alarm channels	12 individual alarm channels
Settable alarms	24 alarms available (two per each alarm channel)
Pick-up	
Alarm setting range	101.00...2000.00 deg, setting step 0.1 deg (either < or > setting)
Inaccuracy	±3 % of the set pick-up value
Reset ratio	97 % of the pick-up setting
Operation	
Operating time	Typically <500 ms

### 9.2.1.13 Arc fault protection (IArc>/IOArc>; 50Arc/50NArc) (optional)

Table. 9.2.1.13 - 220. Technical data for the arc fault protection function.

Measurement inputs	
Current inputs	Phase current inputs: I <sub>L1</sub> (A), I <sub>L2</sub> (B), I <sub>L3</sub> (C) Residual current channel I <sub>01</sub> (Coarse) Residual current channel I <sub>02</sub> (Fine)
Current input magnitudes	Sample-based phase current measurement Sample-based residual current measurement
Arc point sensor inputs	Channels S1, S2, S3, S4 (pressure and light sensor, or light-only sensor) Up to four (4) sensors per channel
System frequency operating range	6.00...75.00 Hz
Pick-up	
Pick-up current setting (phase current)	0.50...40.00 × I <sub>N</sub> , setting step 0.01 × I <sub>N</sub>
Pick-up current setting (residual current)	0.10...40.00 × I <sub>N</sub> , setting step 0.01 × I <sub>N</sub>
Pick-up light intensity	8, 25 or 50 kLx (the sensor is selected in the order code)
Starting inaccuracy (IArc> and IOArc>)	±3 % of the set pick-up value > 0.5 × I <sub>N</sub> setting. 5 mA < 0.5 × I <sub>N</sub> setting.
Point sensor detection radius	180 degrees
Operation time	
Light only: - Semiconductor outputs HSO1 and HSO2 - Regular relay outputs	Typically 7 ms (3...12 ms) Typically 10 ms (6.5...15 ms)
Light + current criteria (zone 1...4): - Semiconductor outputs HSO1 and HSO2 - Regular relay outputs	Typically 10 ms (6.5...14 ms) Typically 14 ms (10...18 ms)
Arc BI only: - Semiconductor outputs HSO1 and HSO2 - Regular relay outputs	Typically 7 ms (2...12 ms) Typically 10 ms (6.5...15 ms)

Reset	
Reset ratio for current	97 % of the pick-up setting
Reset time	<35 ms

**Note!**

- The maximum length of the arc sensor cable is 200 meters.

## 9.2.2 Control functions

### 9.2.2.1 Setting group selection

Table. 9.2.2.1 - 221. Technical data for the setting group selection function.

Settings and control modes	
Setting groups	8 independent, control-prioritized setting groups
Control scale	Common for all installed functions which support setting groups
Control mode	
Local	Any digital signal available in the device
Remote	Force change overrule of local controls either from the setting tool, HMI or SCADA
Operation time	
Reaction time	<5 ms from receiving the control signal

### 9.2.2.2 Object control and monitoring

Table. 9.2.2.2 - 222. Technical data for the object control and monitoring function.

Signals	
Input signals	Digital inputs Software signals
Output signals	Close command output Open command output
Operation time	
Breaker traverse time setting	0.02...500.00 s, setting step 0.02 s
Max. close/open command pulse length	0.02...500.00 s, setting step 0.02 s
Control termination time out setting	0.02...500.00 s, setting step 0.02 s
Inaccuracy: - Definite time operating time	±0.5 % or ±10 ms
Breaker control operation time	
External object control time	<75 ms
Object control during auto-reclosing	See the technical sheet for the auto-reclosing function.

## 9.2.3 Monitoring functions

### 9.2.3.1 Current transformer supervision

Table. 9.2.3.1 - 223. Technical data for the current transformer supervision function.

Measurement inputs
--------------------

Current inputs	Phase current inputs: I <sub>L1</sub> (A), I <sub>L2</sub> (B), I <sub>L3</sub> (C) Residual current channel I <sub>01</sub> (Coarse) (optional) Residual current channel I <sub>02</sub> (Fine) (optional)
Current input magnitudes	RMS phase currents RMS residual current (I <sub>01</sub> , I <sub>02</sub> ) (optional)
<b>Pick-up</b>	
Pick-up current settings: - I <sub>SET</sub> high limit - I <sub>SET</sub> low limit - I <sub>SUM</sub> difference - I <sub>SET</sub> ratio - I <sub>2</sub> /I <sub>1</sub> ratio	0.10...40.00 × I <sub>N</sub> , setting step 0.01 × I <sub>N</sub> 0.10...40.00 × I <sub>N</sub> , setting step 0.01 × I <sub>N</sub> 0.10...40.00 × I <sub>N</sub> , setting step 0.01 × I <sub>N</sub> 0.01...100.00 %, setting step 0.01 % 0.01...100.00 %, setting step 0.01 %
Inaccuracy: - Starting I <sub>L1</sub> , I <sub>L2</sub> , I <sub>L3</sub> - Starting I <sub>2</sub> /I <sub>1</sub> - Starting I <sub>01</sub> (1 A) - Starting I <sub>02</sub> (0.2 A)	±0.5 % I <sub>SET</sub> or ±15 mA (0.10...4.0 × I <sub>SET</sub> ) ±1.0 % I <sub>2SET</sub> / I <sub>1SET</sub> or ±100 mA (0.10...4.0 × I <sub>N</sub> ) ±0.5 % I <sub>0SET</sub> or ±3 mA (0.005...10.0 × I <sub>SET</sub> ) ±1.5 % I <sub>0SET</sub> or ±1.0 mA (0.005...25.0 × I <sub>SET</sub> )
<b>Time delay for alarm</b>	
Definite time function operating time setting	0.00...1800.00 s, setting step 0.005 s
Inaccuracy_ - Definite time (I <sub>M</sub> /I <sub>SET</sub> ratio > 1.05)	±2.0 % or ±80 ms
Instant operation time (alarm): - I <sub>M</sub> /I <sub>SET</sub> ratio > 1.05	<80 ms (<50 ms in differential protection relays)
<b>Reset</b>	
Reset ratio	97/103 % of the pick-up current setting
Instant reset time and start-up reset	<80 ms (<50 ms in differential protection relays)

### 9.2.3.2 Circuit breaker wear monitoring

Table 9.2.3.2 - 224. Technical data for the circuit breaker wear monitoring function.

<b>Pick-up</b>	
Breaker characteristics settings: - Nominal breaking current - Maximum breaking current - Operations with nominal current - Operations with maximum breaking current	0.00...100.00 kA, setting step 0.001 kA 0.00...100.00 kA, setting step 0.001 kA 0...200 000 operations, setting step 1 operation 0...200 000 operations, setting step 1 operation
Pick-up setting for Alarm 1 and Alarm 2	0...200 000 operations, setting step 1 operation
<b>Inaccuracy</b>	
Inaccuracy for current/operations counter: - Current measurement element - Operation counter	0.1 × I <sub>N</sub> > I < 2 × I <sub>N</sub> ±0.2 % of the measured current, rest 0.5 % ±0.5 % of operations deducted

### 9.2.3.3 Total harmonic distortion

Table 9.2.3.3 - 225. Technical data for the total harmonic distortion function.

<b>Input signals</b>	
Current inputs	Phase current inputs: I <sub>L1</sub> (A), I <sub>L2</sub> (B), I <sub>L3</sub> (C) Residual current channel I <sub>01</sub> (Coarse) Residual current channel I <sub>02</sub> (Fine)
Current input magnitudes	Current measurement channels (FFT result) up to the 31 <sup>st</sup> harmonic component.

Pick-up	
Operating modes	Power THD Amplitude THD
Pick-up setting for all comparators	0.10...200.00 % , setting step 0.01 %
Inaccuracy	$\pm 3$ % of the set pick-up value $> 0.5 \times I_N$ setting; $5 \text{ mA} < 0.5 \times I_N$ setting.
Time delay	
Definite time function operating time setting for all timers	0.00...1800.00 s, setting step 0.005 s
Inaccuracy: - Definite time operating time - Instant operating time, when $I_M/I_{SET}$ ratio $> 3$ - Instant operating time, when $I_M/I_{SET}$ ratio $1.05 < I_M/I_{SET} < 3$	$\pm 0.5$ % or $\pm 10$ ms Typically $< 20$ ms Typically $< 25$ ms
Reset	
Reset time	Typically $< 10$ ms
Reset ratio	97 %

### 9.2.3.4 Disturbance recorder

Table. 9.2.3.4 - 226. Technical data for the disturbance recorder function.

Recorded values	
Recorder analog channels	0...20 channels Freely selectable
Recorder digital channels	0...95 channels Freely selectable analog and binary signals 5 ms sample rate (FFT)
Performance	
Sample rate	8, 16, 32 or 64 samples/cycle
Recording length	0.000...1800.000 s, setting step 0.001 s The maximum length is determined by the chosen signals.
Number of recordings	0...100, 60 MB of shared flash memory reserved The maximum number of recordings according to the chosen signals and operation time setting combined

## 9.3 Tests and environmental

### Electrical environment compatibility

Table. 9.3 - 227. Disturbance tests.

All tests	CE-approved and tested according to EN 60255-26
Emissions	
Conducted emissions: EN 60255-26 Ch. 5.2, CISPR 22	150 kHz...30 MHz
Radiated emissions: EN 60255-26 Ch. 5.1, CISPR 11	30...1 000 MHz
Immunity	

Electrostatic discharge (ESD): EN 60255-26, IEC 61000-4-2	Air discharge 15 kV Contact discharge 8 kV
Electrical fast transients (EFT): EN 60255-26, IEC 61000-4-4	Power supply input 4 kV, 5/50 ns, 5 kHz Other inputs and outputs 4 kV, 5/50 ns, 5 kHz
Surge: EN 60255-26, IEC 61000-4-5	Between wires 2 kV, 1.2/50 $\mu$ s Between wire and earth 4 kV, 1.2/50 $\mu$ s
Radiated RF electromagnetic field: EN 60255-26, IEC 61000-4-3	f = 80....1 000 MHz, 10 V/m
Conducted RF field: EN 60255-26, IEC 61000-4-6	f = 150 kHz....80 MHz, 10 V (RMS)

Table. 9.3 - 228. Voltage tests.

Dielectric voltage test	
EN 60255-27, IEC 60255-5, EN 60255-1	2 kV (AC), 50 Hz, 1 min
Impulse voltage test	
EN 60255-27, IEC 60255-5	5 kV, 1.2/50 $\mu$ s, 0.5 J

## Physical environment compatibility

Table. 9.3 - 229. Mechanical tests.

Vibration test	
EN 60255-1, EN 60255-27, IEC 60255-21-1 Class 1	2...13.2 Hz, $\pm$ 3.5 mm 13.2...100 Hz, $\pm$ 1.0 g
Shock and bump test	
EN 60255-1, EN 60255-27, IEC 60255-21-2 Class 1	20 g, 1 000 bumps/direction.

Table. 9.3 - 230. Environmental tests.

Damp heat (cyclic)	
EN 60255-1, IEC 60068-2-30	Operational: +25...+55 °C, 93...97 % (RH), 12+12h
Dry heat	
EN 60255-1, IEC 60068-2-2	Storage: +70 °C, 16 h Operational: +55 °C, 16 h
Cold test	
EN 60255-1, IEC 60068-2-1	Storage: -40 °C, 16 h Operational: -20 °C, 16 h

Table. 9.3 - 231. Environmental conditions.

IP classes	
Casing protection class	IP54 (front) IP21 (rear)


Temperature ranges	
Ambient service temperature range	-35...+70 °C
Transport and storage temperature range	-40...+70 °C
Other	
Altitude	<2000 m
Overvoltage category	III
Pollution degree	2

## Casing and package

Table. 9.3 - 232. Dimensions and weight.

Without packaging (net)	
Dimensions	Height: 117 mm (4U) Width: 127 mm (¼ rack) Depth: 174 mm (no cards & connectors)
Weight	1.5 kg
With packaging (gross)	
Dimensions	Height: 170 mm Width: 242 mm Depth: 219 mm
Weight	2 kg

## 10 Ordering information

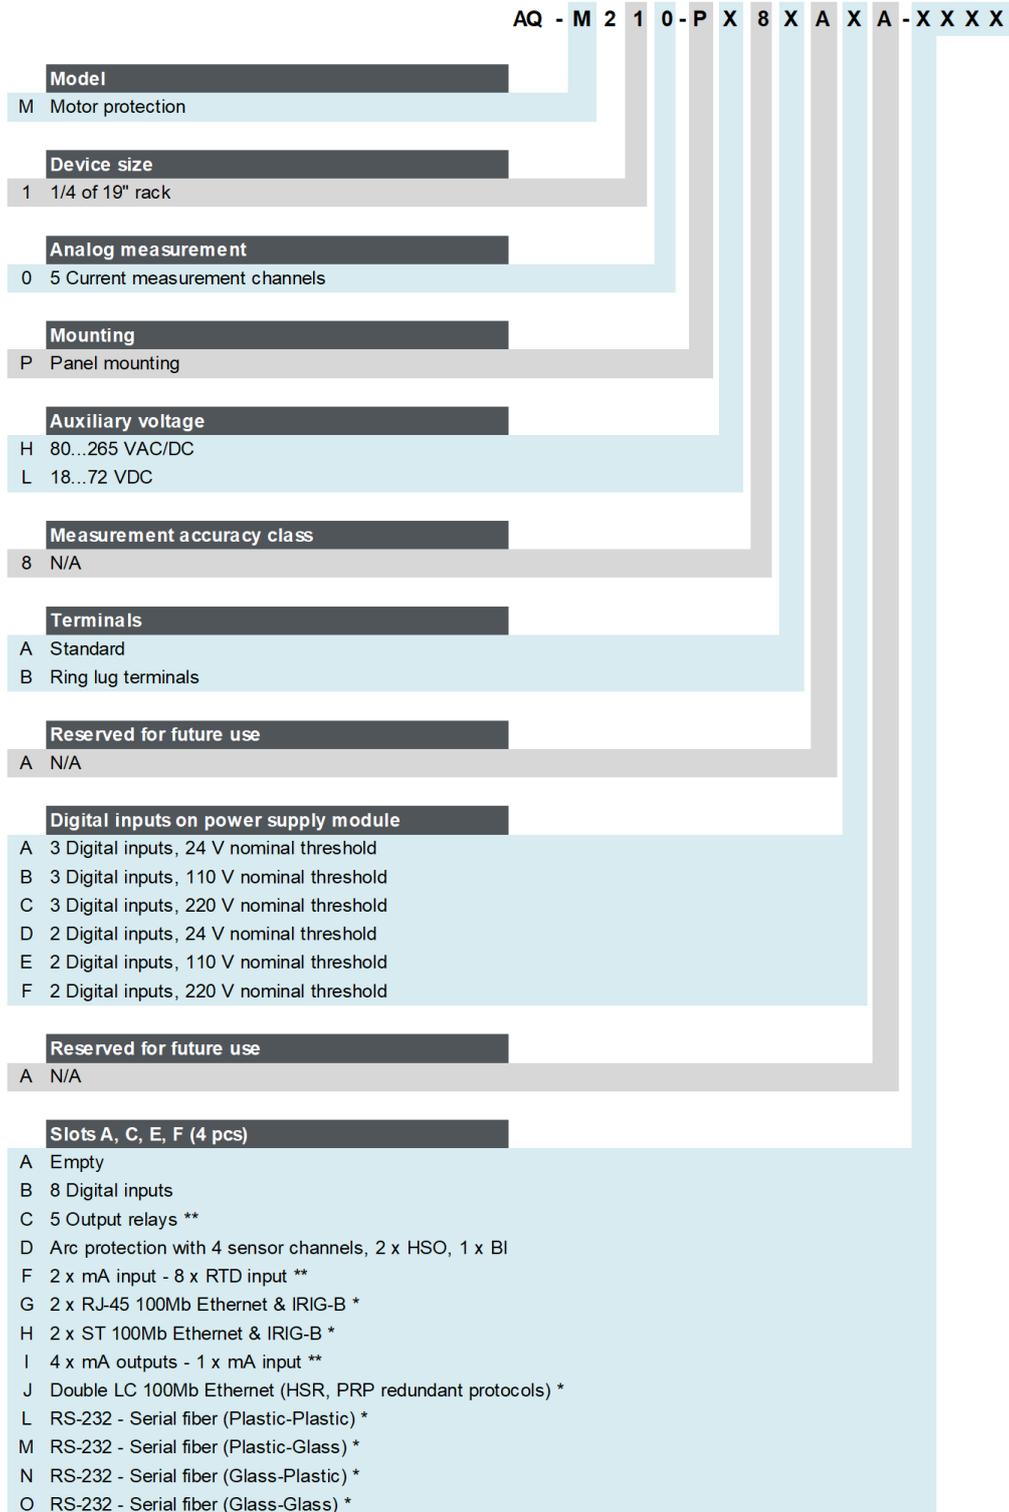

\* One card at most per IED  
 \*\* Two cards at most per IED

### Accessories

Order code	Description	Note	Manufacturer
------------	-------------	------	--------------

ADAM-4015-CE	External 6-channel 2 or 3 wires RTD Input module, pre-configured	Requires an external power module	Advanced Co. Ltd.
ADAM-4018+-BE	External 8-ch Thermocouple mA Input module, pre-configured	Requires an external power module	Advanced Co. Ltd.
AQX033	Raising frame 87 mm		Arcteq Ltd.
AQX070	Raising frame 40 mm		Arcteq Ltd.
AQX069	Combiflex frame		Arcteq Ltd.
AQX097	Wall mounting bracket		Arcteq Ltd.
AQ-01A	Light point sensor unit (8,000 lux threshold)	Max. cable length 200 m	Arcteq Ltd.
AQ-01B	Light point sensor unit (25,000 lux threshold)	Max. cable length 200 m	Arcteq Ltd.
AQ-01C	Light point sensor unit (50,000 lux threshold)	Max. cable length 200 m	Arcteq Ltd.
AQ-02A	Pressure and light point sensor unit (8,000 lux threshold)	Max. cable length 200 m	Arcteq Ltd.
AQ-02B	Pressure and light point sensor unit (25,000 lux threshold)	Max. cable length 200 m	Arcteq Ltd.
AQ-02C	Pressure and light point sensor unit (50,000 lux threshold)	Max. cable length 200 m	Arcteq Ltd.

## 11 Contact and reference information

### Manufacturer

Arcteq Relays Ltd.

### Visiting and postal address

Kvartsikatu 2 A 1

65300 Vaasa, Finland

### Contacts

Phone:	+358 10 3221 370
Fax:	+358 10 3221 389
Website (general):	<a href="http://arcteq.fi">arcteq.fi</a>
Website (technical support):	<a href="http://support.arcteq.fi">support.arcteq.fi</a>
E-mail (sales):	<a href="mailto:sales@arcteq.fi">sales@arcteq.fi</a>