

AQ-S254

Alarm and Indication IED

Instruction manual



Table of contents

| | |
|--|------------|
| 1 Document information | 5 |
| 1.1 Version 2 revision notes | 5 |
| 1.2 Version 1 revision notes | 7 |
| 2 Abbreviations | 8 |
| 3 General | 10 |
| 4 IED user interface | 11 |
| 4.1 Panel structure | 11 |
| 4.1.1 Local panel structure | 11 |
| 4.2 Configuring user levels and their passwords | 12 |
| 5 Functions | 14 |
| 5.1 Functions included in AQ-S254 | 14 |
| 5.2 General menu | 14 |
| 5.3 Alarming function | 16 |
| 5.4 Control functions | 29 |
| 5.4.1 Setting group selection | 29 |
| 5.4.2 Object control and monitoring | 38 |
| 5.4.3 Indicator object monitoring | 46 |
| 5.4.4 Milliampere output control | 49 |
| 5.4.5 Programmable control switch | 51 |
| 5.4.6 Analog input scaling curves | 52 |
| 5.4.7 Logical outputs | 54 |
| 5.4.8 Logical inputs | 55 |
| 5.5 Programmable stage (PGx>/<; 99) | 56 |
| 6 Communication | 67 |
| 6.1 Connections menu | 67 |
| 6.2 Time synchronization | 69 |
| 6.2.1 Internal | 69 |
| 6.2.2 NTP | 69 |
| 6.2.3 PTP | 69 |
| 6.3 Communication protocols | 70 |
| 6.3.1 IEC 61850 | 70 |
| 6.3.2 Modbus/TCP and Modbus/RTU | 72 |
| 6.3.3 GOOSE | 73 |
| 6.3.4 IEC 103 | 75 |
| 6.3.5 IEC 101/104 | 76 |
| 6.3.6 SPA | 78 |
| 6.3.7 DNP3 | 78 |
| 6.3.8 Modbus I/O | 80 |
| 6.4 Analog fault registers | 81 |
| 6.5 Real-time measurements to communication | 81 |
| 6.6 Modbus Gateway | 84 |
| 7 Connections and application examples | 86 |
| 7.1 Connections of AQ-S254 | 86 |
| 8 Construction and installation | 89 |
| 8.1 Construction | 89 |
| 8.2 CPU module | 92 |
| 8.3 Digital input module (optional) | 94 |
| 8.4 Digital output module (optional) | 97 |
| 8.5 RTD input module (optional) | 98 |
| 8.6 Serial RS-232 communication module (optional) | 99 |
| 8.7 LC or RJ45 100 Mbps Ethernet communication module (optional) | 100 |
| 8.8 Double ST 100 Mbps Ethernet communication module (optional) | 101 |
| 8.9 Double RJ45 10/100 Mbps Ethernet communication module (optional) | 103 |
| 8.10 Dimensions and installation | 104 |
| 9 Technical data | 107 |

| | |
|--|-----|
| 9.1 Hardware..... | 107 |
| 9.1.1 CPU & Power supply | 107 |
| 9.1.1.1 Auxiliary voltage..... | 107 |
| 9.1.1.2 CPU communication ports..... | 107 |
| 9.1.1.3 CPU digital inputs | 108 |
| 9.1.1.4 CPU digital outputs..... | 109 |
| 9.1.2 Option cards | 110 |
| 9.1.2.1 Digital input module..... | 110 |
| 9.1.2.2 Digital output module..... | 110 |
| 9.1.2.3 RTD input module..... | 111 |
| 9.1.2.4 RS-232 & serial fiber communication module..... | 111 |
| 9.1.2.5 Double LC 100 Mbps Ethernet communication module | 111 |
| 9.1.2.6 Double ST 100 Mbps Ethernet communication module | 111 |
| 9.1.3 Display | 112 |
| 9.2 Functions..... | 112 |
| 9.2.1 Control functions | 112 |
| 9.2.1.1 Setting group selection | 112 |
| 9.2.1.2 Object control and monitoring..... | 112 |
| 9.2.2 Monitoring functions | 113 |
| 9.3 Tests and environmental | 113 |
| 10 Ordering information | 115 |
| 11 Contact and reference information..... | 116 |

Disclaimer

Please read these instructions carefully before using the equipment or taking any other actions with respect to the equipment. Only trained and qualified persons are allowed to perform installation, operation, service or maintenance of the equipment. Such qualified persons have the responsibility to take all appropriate measures, including e.g. use of authentication, encryption, anti-virus programs, safe switching programs etc. necessary to ensure a safe and secure environment and usability of the equipment. The warranty granted to the equipment remains in force only provided that the instructions contained in this document have been strictly complied with.

Nothing contained in this document shall increase the liability or extend the warranty obligations of the manufacturer Arcteq Relays Ltd. The manufacturer expressly disclaims any and all liability for any damages and/or losses caused due to a failure to comply with the instructions contained herein or caused by persons who do not fulfil the aforementioned requirements. Furthermore, the manufacturer shall not be liable for possible errors in this document.

Please note that you must always comply with applicable local legislation and regulations. The manufacturer gives no warranties that the content of this document is in all respects in line with local laws and regulations and assumes no liability for such possible deviations.

You are advised to notify the manufacturer in case you become aware of any errors in this document or of defects in the equipment.

The manufacturer reserves the right to update or amend this document at any time.

Copyright

Copyright © Arcteq Relays Ltd. 2022. All rights reserved.

1 Document information

1.1 Version 2 revision notes

Table. 1.1 - 1. Version 2 revision notes

| | |
|----------|--|
| Revision | 2.00 |
| Date | 6.6.2019 |
| Changes | <ul style="list-style-type: none"> - New more consistent look. - Improved descriptions generally in many chapters. - Improved readability of a lot of drawings and images. - Updated protection functions included in every IED manual. - Every protection IED type now has connection drawing, application example drawing with function block diagram and application example with wiring. - Added General-menu description. |
| Revision | 2.01 |
| Date | 6.11.2019 |
| Changes | <ul style="list-style-type: none"> - Added description for LED test and button test. - Added display sleep timer description. - Complete rewrite of every chapter. - Improvements to many drawings and formula images. - Order codes revised. - Added double ST 100 Mbps Ethernet communication module and Double RJ45 10/100 Mbps Ethernet communication module descriptions |
| Revision | 2.02 |
| Date | 7.7.2020 |
| Changes | - A number of image descriptions improved. |
| Revision | 2.03 |
| Date | 27.8.2020 |

| | |
|----------|---|
| Changes | <ul style="list-style-type: none"> - Terminology consistency improved (e.g. binary inputs are now always called digital inputs). - Tech data modified to be more informative about what type of measurement inputs are used (phase currents/voltages, residual currents/voltages), what component of that measurement is available (RMS, TRMS, peak-to-peak) and possible calculated measurement values (powers, impedances, angles etc.). - Improvements to many drawings and formula images. - AQ-S254 Functions included list Added: Indicator objects. - Event read mode parameter added to Modbus description. - Added inches to Dimensions and installation chapter. - Added raising frames, wall mounting bracket, combiflex frame to order code. - Added logical input and logical output function descriptions. - Additions to Abbreviations chapter. - Added button test description to Local panel structure chapter. - Added note to Configuring user levels and passwords chapter that AQ-250 frame units generate a time-stamped event from locking and unlocking user levels. - Added note to Configuring user levels and passwords chapter that user level with a password automatically locks itself after 30 minutes of inactivity. - Added more "Tripped stage" indications and fault types to Measurement value recorder function. - Updated: Digital input activation and release threshold setting ranges and added drop-off delay setting. |
| Revision | 2.04 |
| Date | 8.6.2021 |
| Changes | <ul style="list-style-type: none"> - Increased the consistency in terminology - Various image upgrades - Visual update to the order codes |
| Revision | 2.05 |
| Date | 22.6.2021 |
| Changes | <ul style="list-style-type: none"> - Fixed phase current measurement continuous thermal withstand from 30A to 20A. - Fixed lots of timing errors written to registers table. "Prefault" is -200 ms from Start event, "Pretrigger" is -20 ms from trip (or start if fault doesn't progress to trip), "Fault" is start (or trip if fault doesn't progress to trip). - Added event history technical data |
| Revision | 2.06 |
| Date | 21.6.2022 |

| | |
|----------|--|
| Changes | <ul style="list-style-type: none"> - Improved descriptions generally in many chapters. - Improved readability of a lot of drawings and images. - Order codes have been revised. - Added LN mode parameters to all functions (On, Blocked, Test, Test/Blocked, Off). - Added color themes parameter description. - Improved color sleep mode description. - Improved alarm function color behavior description and images. - Added operation time with different measurement values vs setting ratio in instant operation mode to non-directional overcurrent function description. - Added 30 s pretriggering time for disturbance recorder (AQ-250 devices only). - Added new trip detections and fault types to measurement value recorder. - Added user description parameter descriptions for digital inputs, digital outputs, logical inputs, logical outputs and GOOSE inputs. - Added spare part codes and compatibilities to option cards. |
| Revision | 2.07 |
| Date | 7.7.2022 |
| Changes | <ul style="list-style-type: none"> - Fixed logical input amounts. - Added common signals function description. - Added PTP time synchronization description. - Added Modbus Gateway description. - Added alarm view carousel designer setting descriptions. |
| Revision | 2.08 |
| Date | 22.7.2022 |
| Changes | <ul style="list-style-type: none"> - Added stage forcing parameter to function descriptions. - Fixes to "Real time signals to comm" description. - Added "Ethernet port" parameter description to IEC61850, IEC104 and Modbus TCP descriptions. - Removed "Measurement update interval" settings from Modbus description. No longer in use. - Renamed "System integration" chapter to "Communication" and restructured the chapters to be closer to how they are in the menus. |

1.2 Version 1 revision notes

Table. 1.2 - 2. Version 1 revision notes

| | |
|----------|------------------------------------|
| Revision | 1.00 |
| Date | 15.1.2018 |
| Changes | - The first revision for AQ-S254 |
| Revision | 1.01 |
| Date | 18.1.2019 |
| Changes | - Added HMI display technical data |

2 Abbreviations

| | |
|------|---------------------------------------|
| AI | – Analog input |
| AR | – Auto-recloser |
| ASDU | – Application service data unit |
| AVR | – Automatic voltage regulator |
| BCD | – Binary-coded decimal |
| CB | – Circuit breaker |
| CBFP | – Circuit breaker failure protection |
| CLPU | – Cold load pick-up |
| CPU | – Central processing unit |
| CT | – Current transformer |
| CTM | – Current transformer module |
| CTS | – Current transformer supervision |
| DG | – Distributed generation |
| DHCP | – Dynamic Host Configuration Protocol |
| DI | – Digital input |
| DO | – Digital output |
| DOL | – Direct-on-line |
| DR | – Disturbance recorder |
| DT | – Definite time |
| FF | – Fundamental frequency |
| FFT | – Fast Fourier transform |
| FTP | – File Transfer Protocol |
| GI | – General interrogation |
| HMI | – Human-machine interface |
| HR | – Holding register |
| HV | – High voltage |
| HW | – Hardware |
| IDMT | – Inverse definite minimum time |
| IED | – Intelligent electronic device |

IGBT – Insulated-gate bipolar transistor

I/O – Input and output

IRIG-B – Inter-range instruction group, timecode B

LCD – Liquid-crystal display

LED – Light emitting diode

LV – Low voltage

NC – Normally closed

NO – Normally open

NTP – Network Time Protocol

RMS – Root mean square

RSTP – Rapid Spanning Tree Protocol

RTD – Resistance temperature detector

RTU – Remote terminal unit

SCADA – Supervisory control and data acquisition

SG – Setting group

SOTF – Switch-on-to-fault

SW – Software

THD – Total harmonic distortion

TRMS – True root mean square

VT – Voltage transformer

VTM – Voltage transformer module

VTs – Voltage transformer supervision

3 General

The AQ-S254 alarm and indication unit is a member of the AQ-200 product line. The hardware and software are modular: the hardware modules are assembled and configured according to the application's I/O requirements and the software determines the available functions. This manual describes the specific application of the AQ-S254 alarm and indication unit. For other AQ-200 series products please consult their respective device manuals.

AQ-S254 may be applied as a substation alarm sounder, a substation general I/O extension unit or in any other application that requires extended I/O capabilities. The local indications are visualized conveniently through the freely programmable alarm display and event list. There are up to fourteen (14) option card slots available for additional I/O or communication cards for more comprehensive monitoring and control applications. AQ-S254 can be connected to a substation automation system by using various standard communication protocols, including the IEC 61850 substation communication standard.

4 IED user interface


4.1 Panel structure

The user interface section of an AQ-200 series device is divided into two user interface sections: one for the hardware and the other for the software. You can access the software interface either through the front panel or through the AQtivate freeware software suite.

4.1.1 Local panel structure

The front panel of AQ-250 series devices have multiple LEDs, control buttons and a local RJ-45 Ethernet port for configuration. Each unit is also equipped with an RS-485 serial interface and an RJ-45 Ethernet interface on the back of the device. See the image and list below.

Figure. 4.1.1 - 1. Local panel structure.

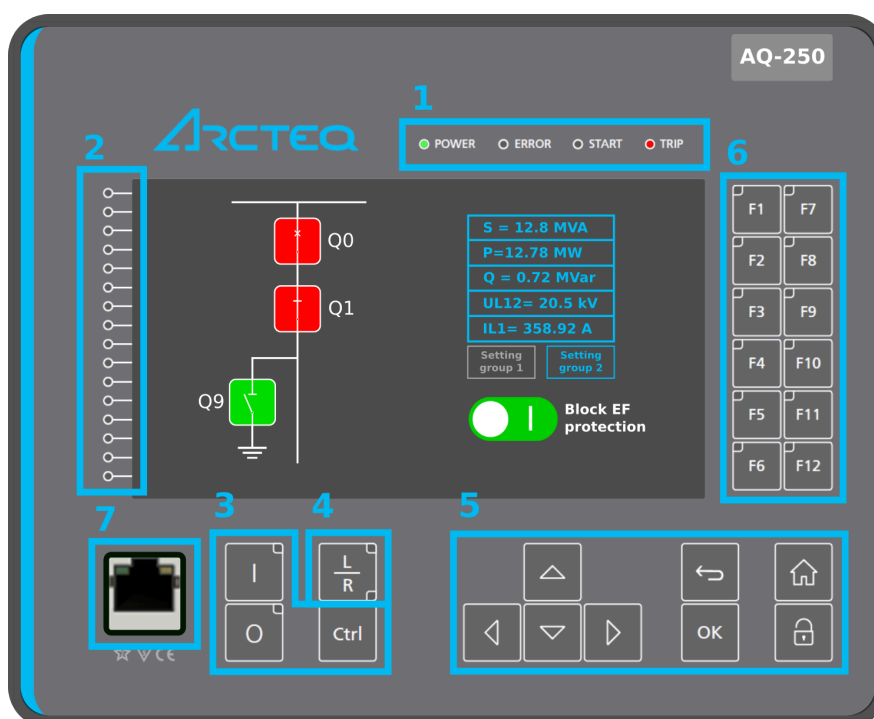

1. Four (4) default LEDs: "Power", "Error", "Start" (configurable) and "Trip" (configurable).
2. Sixteen (16) freely configurable LEDs (red, orange, green) with programmable legend texts.
3. Three (3) object control buttons: Choose the controllable object with the **Ctrl** button and control the breaker or other object with the **I** and the **O** buttons.
4. The **L/R** button switches between the local and the remote control modes.
5. Eight (8) buttons for IED local programming: the four navigation arrows, the **Back** and the **OK** buttons, the **Home** and the password activation buttons).
6. Twelve (12) freely configurable function buttons (F1...F12). Each button has a freely configurable LED (red, orange, green).
7. One (1) RJ-45 Ethernet port for IED configuration.

When the unit is powered on, the green "Power" LED is lit. When the red "Error" LED is lit, the device has an internal (hardware or software) error that affects the operation of the unit. The activation of the yellow "Start" LED and the red "Trip" LED are based on the setting the user has put in place in the software.

The sixteen freely configurable LEDs are located on the left side of the display. Their activation and color (green, orange, red) are based on the settings the user has put in place in the software.

The view in the screen is freely configurable. Virtual switches and buttons can be added which can be used to change the setting groups or control the device's general logic locally or remotely. The status of the object (circuit breaker, disconnecter) can be displayed on the screen. All measured and calculated values regardless of the magnitude category (current, voltage, power, energy, frequency, etc.) can be shown on the screen.

Holding the I (object control) button down for five seconds brings up the button test menu. It displays all the physical buttons on the front panel. Pressing any of the listed buttons marks them as tested. When all buttons are marked as having been tested, the device will return back to the default view.

4.2 Configuring user levels and their passwords

As a factory default, no user level is locked with a password in an IED. In order to activate the different user levels, click the **Lock** button in the device's HMI and set the desired passwords for the different user levels.





NOTE!

Passwords can only be set locally in an HMI.

A number of stars are displayed in the upper right corner of the HMI; these indicate the current user level. The different user levels and their star indicators are as follows (also, see the image below for the HMI view):

- Super user (***)
- Configurator (**)
- Operator (*)
- User (-)

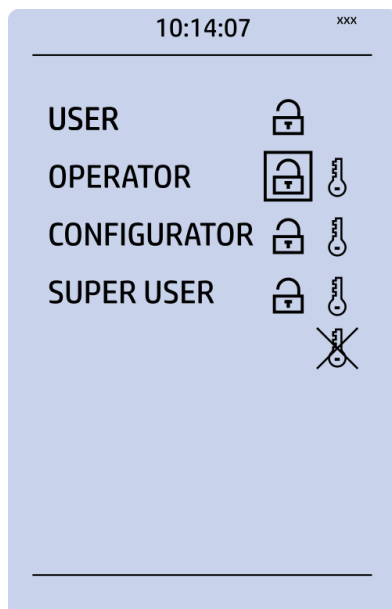

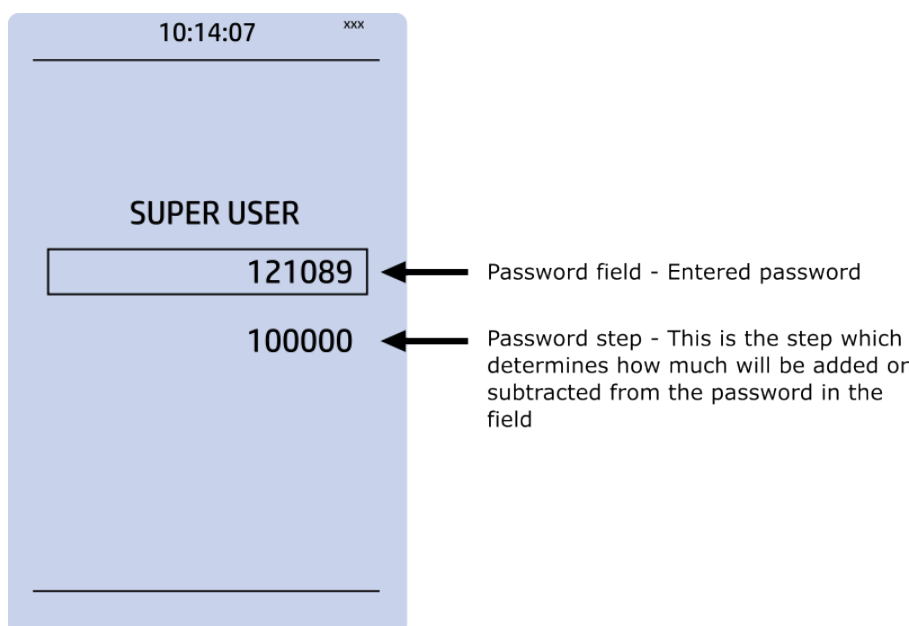

You can set a new password for a user level by selecting the key icon next to the user level's name. After this you can lock the user level by pressing the **Return** key while the lock is selected. If you need to change the password, you can select the key icon again and give a new password. Please note that in order to do this the user level whose password is being changed must be unlocked.

As mentioned above, the access level of the different user levels is indicated by the number of stars. The required access level to change a parameter is indicated with a star (*) symbol if such is required. As a general rule the access levels are divided as follows:

- *User*: Can view any menus and settings but cannot change any settings, nor operate breakers or other equipment.
- *Operator*: Can view any menus and settings but cannot change any settings BUT can operate breakers and other equipment.
- *Configurator*: Can change most settings such as basic protection pick-up levels or time delays, breaker control functions, signal descriptions etc. and can operate breakers and other equipment.
- *Super user*: Can change any setting and can operate breakers and other equipment.

NOTE!



In AQ-250 frame units unlocking and locking a user level generates a time-stamped event to the event log.

NOTE!



Any user level with a password automatically locks itself after half an hour (30 minutes) of inactivity.

5 Functions

5.1 Functions included in AQ-S254

The AQ-S254 alarm and indication IED includes the following functions as well as the number of stages in those functions.

Table. 5.1 - 3. Alarming functions of AQ-S254.

| Name | IEC | ANSI | Description |
|--------------|--------|------|--------------------------------|
| ALARM | - | - | Alarming function (128 alarms) |
| PGS (1...10) | PGx>/< | 99 | Programmable stage |

Table. 5.1 - 4. Control functions of AQ-S254.

| Name | IEC | ANSI | Description |
|------|-----|------|--|
| OBJ | - | - | Object control and monitoring (10 objects available) |
| CIN | - | - | Indicator object monitoring (20 indicators available) |

Table. 5.1 - 5. Transducer functions of AQ-S254.

| Name | IEC | ANSI | Description |
|------|-----|------|----------------------------------|
| RTD | - | - | Resistance temperature detectors |

5.2 General menu

The *General* menu consists of basic settings and indications of the device. Additionally, the all activated functions and their status are displayed in the *Protection*, *Control* and *Monitor* profiles.

Table. 5.2 - 6. Parameters and indications in the *General* menu.

| Name | Range | Default | Description |
|-------------------------------------|--|---------------|--|
| Device name | - | Unitname | The file name uses these fields when loading the .aqs configuration file from the AQ-200 unit. |
| Device location | - | Unitlocation | |
| Enable stage forcing | 0: Disabled 1: Enabled | 0: Disabled | When this parameter is enabled it is possible for the user to force the protection, control and monitoring functions to different statuses like START and TRIP. This is done in the function's <i>Info</i> page with the <i>Force status to</i> parameter. |
| Allow setting of device mode | 0: Prohibited 1: From HMI/setting tool only 2: Allowed | 0: Prohibited | Allows global mode to be modified from setting tool, HMI and IEC61850. |
| Allow setting of individual LN mode | 0: Prohibited 1: From HMI/setting tool only 2: Allowed | 0: Prohibited | Allow local modes to be modified from setting tool, HMI and IEC61850. |

| Name | Range | Default | Description |
|-----------------------------|---|----------------|---|
| System phase rotating order | 0: A-B-C 1: A-C-B | 0: A-B-C | Allows the user to switch the expected order in which the phase measurements are wired to the unit. |
| Language | 0: User defined 1: English 2: Finnish 3: Swedish 4: Spanish 5: French 6: German 7: Russian 8: Ukrainian | 1: English | Changes the language of the parameter descriptions in the HMI. If the language has been set to "Other" in the settings of the AQtivate setting tool, AQtivate follows the value set into this parameter. |
| Clear events | 0: - 1: Clear | 0: - | Clears the event history recorded in the AQ-200 device. |
| Display brightness | 0...8 | 4 | Changes the display brightness. Brightness level 0 turns the display off. |
| Display sleep timeout | 0...3600s | 0s | If no buttons are pressed after a set time, the display changes the brightness to whatever is set on the "Display sleep brightness" parameter. If set to 0 s, this feature is not in use. When the device is in sleep mode pressing any of the buttons on the front panel of the device will wake the display. |
| Display sleep brightness | 0...8 | 0 | Defines the brightness of the display when the set display sleep timeout has elapsed. The brightness level "0" turns the display off. |
| Return to default view | 0...3600s | 0s | If the user navigates to a menu and gives no input after a period of time defined with this parameter, the unit automatically returns to the default view. If set to 0 s, this feature is not in use. |
| LED test | 0: - 1: Activated | 0: - | When activated, all LEDs are lit up. LEDs with multiple possible colors blink each color. |
| Display color theme | 0: Light theme 1: Dark theme | 0: Light theme | Defines the color theme used in the HMI. |
| Reset latches | 0: - 1: Reset | 0: - | Resets the latched signals in the logic and the matrix. When a reset command is given, the parameter automatically returns back to "-". |
| Measurement recorder | 0: Disabled 1: Enabled | 0: Disabled | Enables the measurement recorder tool, further configured in <i>Tools</i> → <i>Misc</i> → <i>Measurement recorder</i> . |
| Clear active alarms | 0: Disabled 1: Enabled | 0: Disabled | Enables the clearing of those alarms that still have an activation signal on. If an alarm is cleared while its activation signal is active, the alarm will go to the "active cleared" status. |
| Reconfigure mimic | 0: - 1: Reconfigure | 0: - | Reloads the mimic to the unit. |

Table. 5.2 - 7. The *General* menu read-only parameters

| Name | Description |
|------------------------|--|
| Serial number | The unique serial number identification of the unit. |
| Firmware version | The firmware software version of the unit. |
| Hardware configuration | The order code identification of the unit. |
| UTC time | The UTC time value which the device's clock uses. |

5.3 Alarming function

Figure. 5.3 - 2. Front panel view



Signal alarming is the main feature of AQ-S254 Alarming IEDs. The alarming unit has 128 alarms the user can set. The user defines each alarm description and activating signal. These settings are done in the *Alarm settings* menu (*Control* → *Device I/O* → *Alarm settings*).

The alarming unit generates events with time stamps into the event history and the alarm statuses are shown on the IED's display. The alarm statuses can also be read in the remote terminal unit (RTU).

Alarm descriptions

The user-edited alarm text is displayed in the *Alarm* view in the HMI when the alarm has been activated. The user can update the descriptions in the settings (*Commands* → *Write to relay* → *Parameters* or *Commands* → *Write changes*).


Table. 5.3 - 8. Alarm user description.

| Name | Range | Default | Description |
|--------------------------------------|----------------------|---------|---|
| User editable description Alarm x | 1...31 characters | Alarm x | Description of the alarm. This description is used in several menu types for easier identification. |

Assigning alarm activation signals

Alarm activation signals are divided into eight tabs in groups of 16. The user can assign a digital input, a logic signal or a GOOSE message into each of the alarms. When any of the alarms have been activated by the assigned signal, the alarm appears in the *Alarms* view in the device's HMI.

Figure. 5.3 - 3. Digital inputs assigned as alarm activating signals.

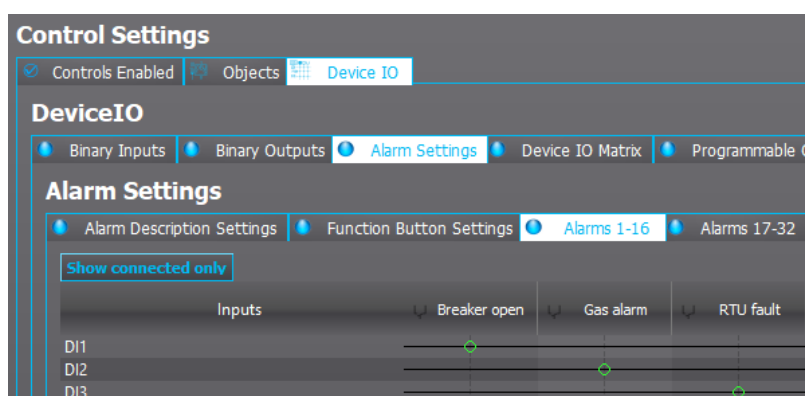


The user can assign signals into alarms by clicking on the matrix. When the matrix is done, it must be sent to the device for the changes to take effect (*Commands* → *Write to relay* → *Logic*).

If the alarm signal's ON state has been checked in the *Event Mask*, an ALARM ON event is recorded with a time stamp into the event history. These alarms are also reported in the communication protocol if one is in use.

Changing the look of the *Alarms* view

Figure. 5.3 - 4. Carousel designer view of the *Alarms* view settings.

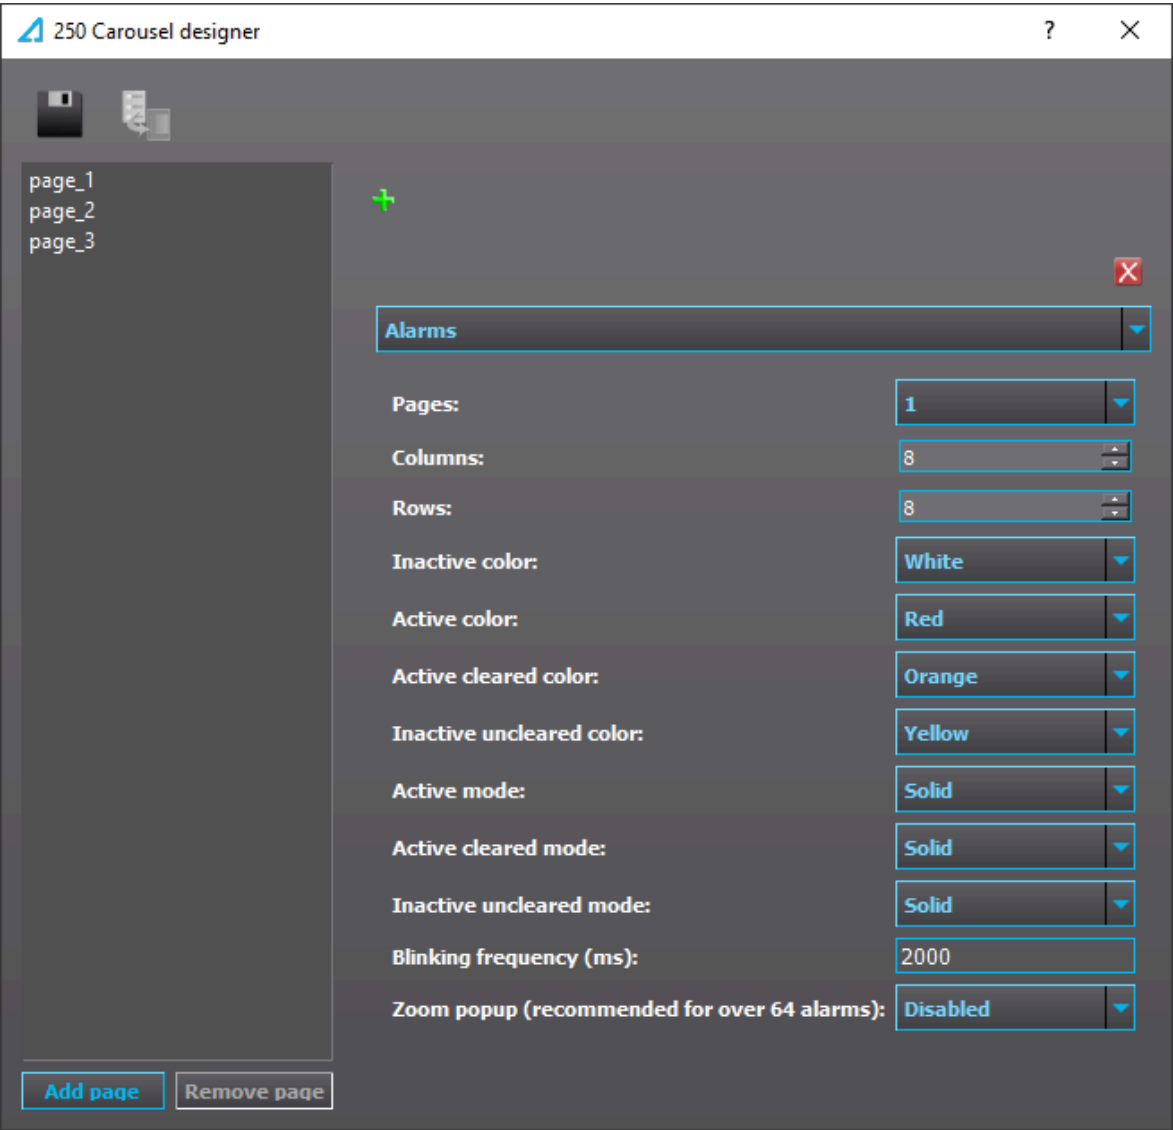

Changing the look of the *Alarms* views is done in Carousel designer. Carousel designer is found in *Tools* → *Carousel designer*.


The column and row settings allow the user to define the size, shape and number of alarms displayed in the *Alarms* view. Any number of alarms between 1 and 128 can be displayed. The color displayed in different states of the alarm can be gray, red, green, yellow, orange, or blue.

Table. 5.3 - 9. Alarm view settings

| Parameter | Description |
|-----------------|---|
| Pages | Number of pages used. Pages can be scrolled with left and right arrow buttons. Each page used as many columns and rows as is defined with following two parameters. |
| Columns | Number of columns used per page. |
| Rows | Number of rows used per page. |
| Inactive color. | Color displayed for an alarm that hasn't been activated. |
| Active color. | Color displayed for an alarm that has a signal currently active. |


| Parameter | Description |
|---|---|
| Active cleared color. | Color displayed for an alarm that has a signal currently active AND it has been acknowledged with "Reset command". If "Reset command" is given the alarm will return to "Inactive color" when the activating signal is reset too. |
| Inactive uncleared color. | Color displayed for an alarm that had a signal active in the past but hasn't been acknowledged with "Reset command" yet. After "Reset command" is given the alarm will return to "Inactive color". |
| Active / Active cleared / Inactive uncleared mode | Selection between solid and blinking modes. If blinking mode is selected the color of alarm will alternate between its color and inactive color. |
| Blinking frequency | Sets how frequently blinking states switch colors. |
| Zoom pop-up | When enabled pressing up arrow button will zoom alarm boxes. Zoomed alarm can then be selected with up, down, left and right arrow buttons. Press back-button to exit zoomed view. |

Figure. 5.3 - 5. Alarm color behaviour with active alarm clearing enabled and disabled.

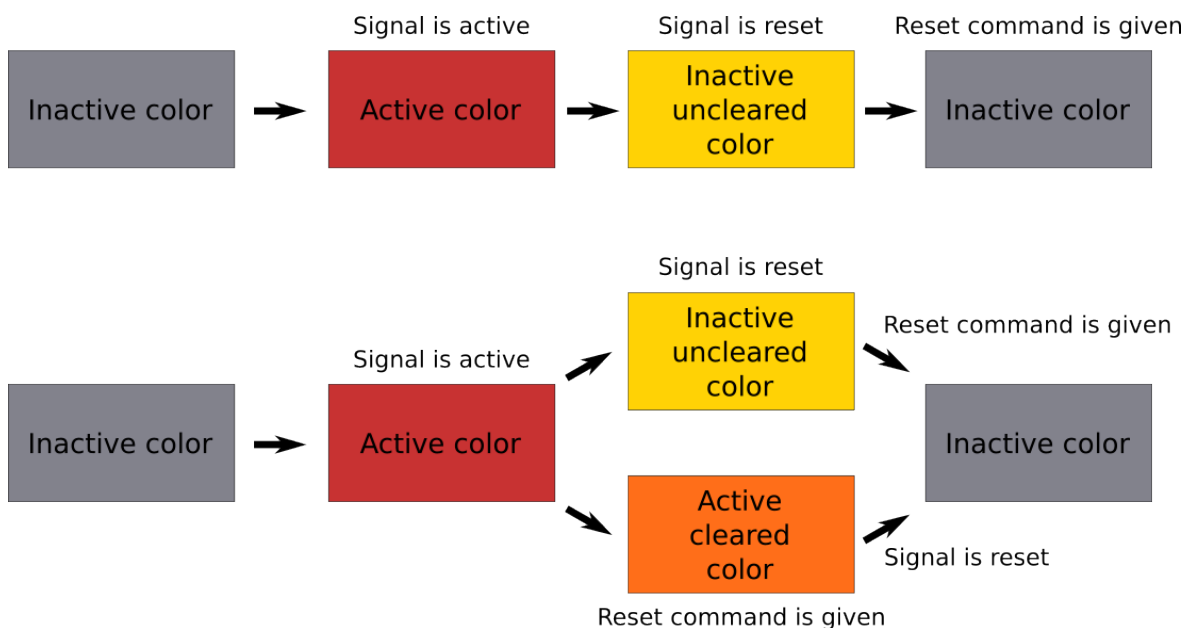

By default active alarms cannot be cleared. This can be changed by setting *Clear active alarms* to *Enabled* at *General* → *Device info* menu. When enabled the alarms otherwise change color just the same way as with default settings but it is also possible to clear an alarm while the activation signal is still active. If alarm is cleared when signal is active, color will change to what has been set to *Active cleared color* in Carousel designer (orange by default).

Figure. 5.3 - 6. Comparison between clear active alarms disabled and enabled.

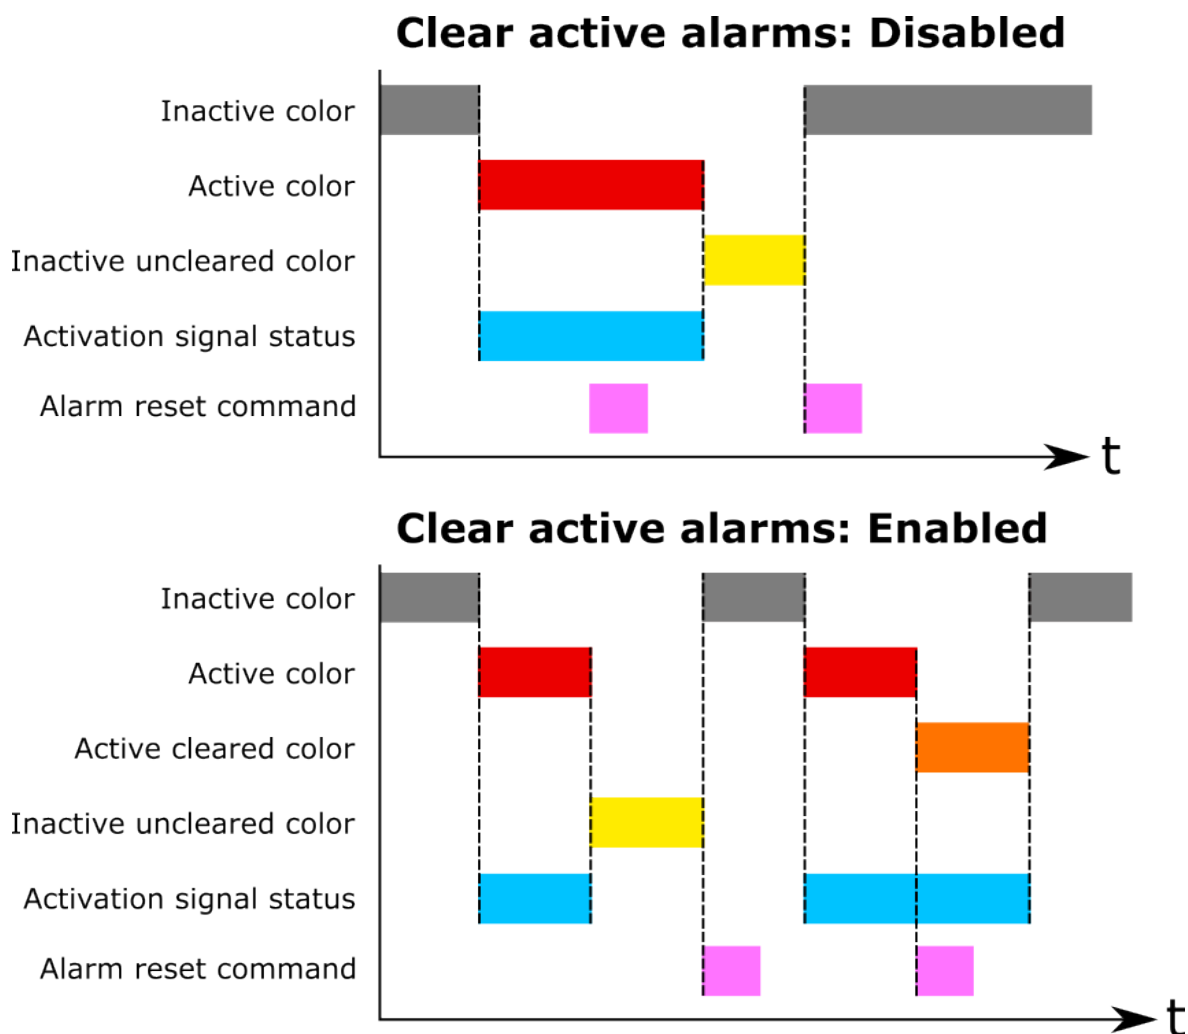

Alarm zooming


If *Zoom popup* parameter is enabled in *Carousel designer* menu it is possible to enlarge alarms by pressing the up-arrow button. Once in zoomed mode direction arrows up, down, left and right can be used for choosing the alarm. Use Back-button to exit zoomed mode.

Figure. 5.3 - 7. Alarm 1 is zoomed

| | | | | | | | |
|---------------------------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
| Alarm 1 20/06/2022 12:32:05.842 | Alarm 2 | Alarm 3 | Alarm 4 | Alarm 5 | Alarm 6 | Alarm 7 | Alarm 8 |
| Alarm 9 | Alarm 10 | Alarm 11 | Alarm 12 | Alarm 13 | Alarm 14 | Alarm 15 | Alarm 16 |
| Alarm 17 | Alarm 18 | Alarm 19 | Alarm 20 | Alarm 21 | Alarm 22 | Alarm 23 | Alarm 24 |
| Alarm 25 | Alarm 26 | Alarm 27 | Alarm 28 | Alarm 29 | Alarm 30 | Alarm 31 | Alarm 32 |
| Alarm 33 | Alarm 34 | Alarm 35 | Alarm 36 | Alarm 37 | Alarm 38 | Alarm 39 | Alarm 40 |
| Alarm 41 | Alarm 42 | Alarm 43 | Alarm 44 | Alarm 45 | Alarm 46 | Alarm 47 | Alarm 48 |
| Alarm 49 | Alarm 50 | Alarm 51 | Alarm 52 | Alarm 53 | Alarm 54 | Alarm 55 | Alarm 56 |
| Alarm 57 | Alarm 58 | Alarm 59 | Alarm 60 | Alarm 61 | Alarm 62 | Alarm 63 | Alarm 64 |
| Alarm 65 | Alarm 66 | Alarm 67 | Alarm 68 | Alarm 69 | Alarm 70 | Alarm 71 | Alarm 72 |
| Alarm 73 | Alarm 74 | Alarm 75 | Alarm 76 | Alarm 77 | Alarm 78 | Alarm 79 | Alarm 80 |
| Alarm 81 | Alarm 82 | Alarm 83 | Alarm 84 | Alarm 85 | Alarm 86 | Alarm 87 | Alarm 88 |
| Alarm 89 | Alarm 90 | Alarm 91 | Alarm 92 | Alarm 93 | Alarm 94 | Alarm 95 | Alarm 96 |
| Alarm 97 | Alarm 98 | Alarm 99 | Alarm 100 | Alarm 101 | Alarm 102 | Alarm 103 | Alarm 104 |
| Alarm 105 | Alarm 106 | Alarm 107 | Alarm 108 | Alarm 109 | Alarm 110 | Alarm 111 | Alarm 112 |
| Alarm 113 | Alarm 114 | Alarm 115 | Alarm 116 | Alarm 117 | Alarm 118 | Alarm 119 | Alarm 120 |
| Alarm 121 | Alarm 122 | Alarm 123 | Alarm 124 | Alarm 125 | Alarm 126 | Alarm 127 | Alarm 128 |


Clearing activated alarms

Figure. 5.3 - 8. Setting up the button for clearing alarms.

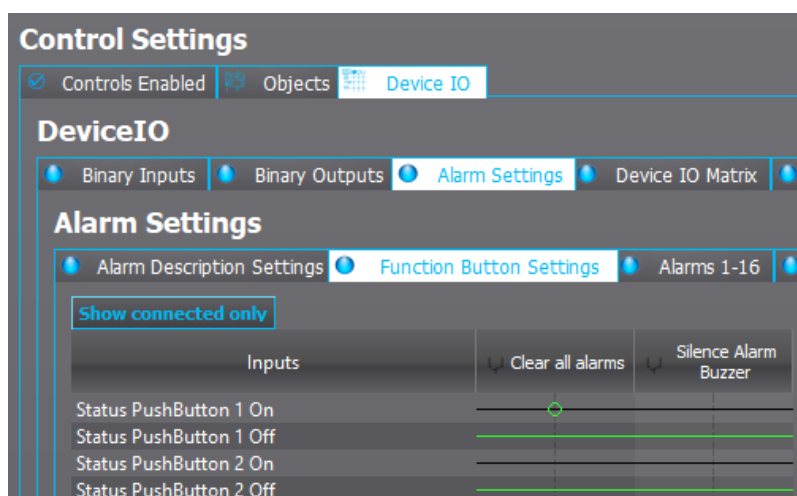

The button used for clearing alarms is defined in *Control* → *Device I/O* → *Alarm settings* → *Function Button Settings*. Please notice that the function button mode should be set to PRESS RELEASE mode in *Control* → *Device I/O* → *User-button settings*.

Alarms can be also cleared by using the CLEAR ALL ALARMS signal in the logic editor. In the example below, a physical push button activates Digital Input 1 which is connected to CLEAR ALL ALARMS.

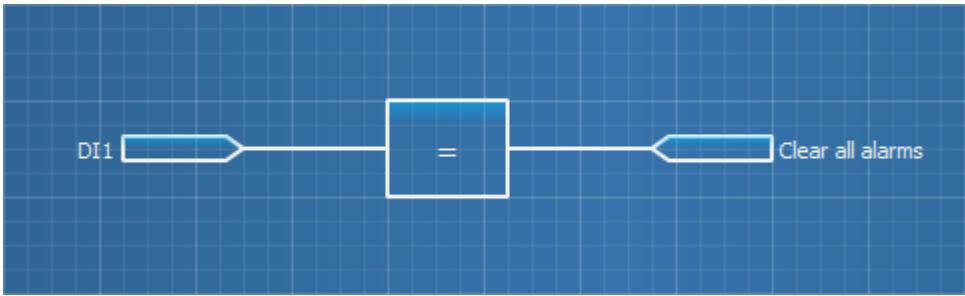

After doing this in the logic editor, click *Save* and then update logic (*Commands* → *Write to relay* → *Logic*).


Buzzer activation and deactivation

AQ-S214 and AQ-S254 Alarming IEDs do not have an integrated buzzer. However, if an alarming buzzer is needed it is possible to connect an external buzzer. It is activated by one of the output relays of the IED. The user can set up the buzzer control by connecting the ALARM BUZZER signal to an output (*Control* → *Device I/O* → *Device IO Matrix*). Whenever an alarm is activated the ALARM BUZZER signal will also activate and the output contact can be controlled.

The user can silence the alarm buzzer by pressing the **Back** button located in the IED panel, or by connecting a digital input or some other binary signal in the logic to SILENCE ALARM BUZZER.

Clearing latched alarms

Figure. 5.3 - 9. Latched signals as dots.

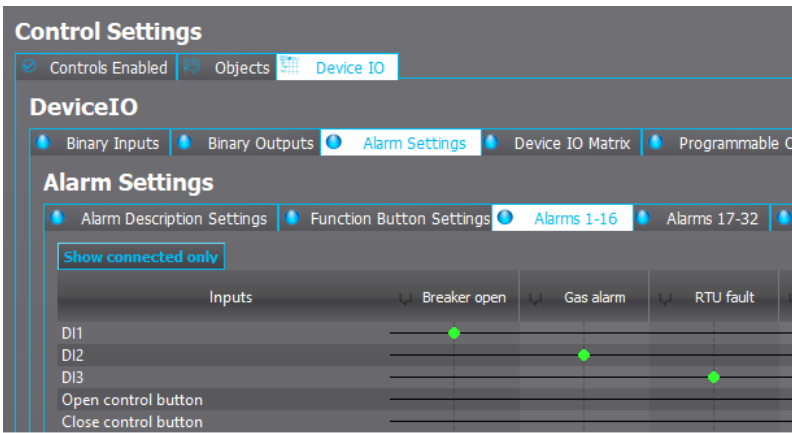

Latched signals are represented by filled markers in the matrix.

If a latched signals is connected to an alarm, the alarm unit requires the user to push the **Back** button in the unit's front panel before the latched signal can be cleared. Using latched signals is generally not advised in order to keep alarm clearing simple.

Events

The alarm function generates events from the status changes in the monitored signals. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

Table. 5.3 - 10. Event messages.

| Event block name | Event name |
|------------------|------------|
| ALARM1 | Alarm 1 ON |

| Event block name | Event name |
|------------------|--------------|
| ALARM1 | Alarm 1 OFF |
| ALARM1 | Alarm 2 ON |
| ALARM1 | Alarm 2 OFF |
| ALARM1 | Alarm 3 ON |
| ALARM1 | Alarm 3 OFF |
| ALARM1 | Alarm 4 ON |
| ALARM1 | Alarm 4 OFF |
| ALARM1 | Alarm 5 ON |
| ALARM1 | Alarm 5 OFF |
| ALARM1 | Alarm 6 ON |
| ALARM1 | Alarm 6 OFF |
| ALARM1 | Alarm 7 ON |
| ALARM1 | Alarm 7 OFF |
| ALARM1 | Alarm 8 ON |
| ALARM1 | Alarm 8 OFF |
| ALARM1 | Alarm 9 ON |
| ALARM1 | Alarm 9 OFF |
| ALARM1 | Alarm 10 ON |
| ALARM1 | Alarm 10 OFF |
| ALARM1 | Alarm 11 ON |
| ALARM1 | Alarm 11 OFF |
| ALARM1 | Alarm 12 ON |
| ALARM1 | Alarm 12 OFF |
| ALARM1 | Alarm 13 ON |
| ALARM1 | Alarm 13 OFF |
| ALARM1 | Alarm 14 ON |
| ALARM1 | Alarm 14 OFF |
| ALARM1 | Alarm 15 ON |
| ALARM1 | Alarm 15 OFF |
| ALARM1 | Alarm 16 ON |
| ALARM1 | Alarm 16 OFF |
| ALARM1 | Alarm 17 ON |
| ALARM1 | Alarm 17 OFF |
| ALARM1 | Alarm 18 ON |
| ALARM1 | Alarm 18 OFF |
| ALARM1 | Alarm 19 ON |
| ALARM1 | Alarm 19 OFF |
| ALARM1 | Alarm 20 ON |

| Event block name | Event name |
|------------------|--------------|
| ALARM1 | Alarm 20 OFF |
| ALARM1 | Alarm 21 ON |
| ALARM1 | Alarm 21 OFF |
| ALARM1 | Alarm 22 ON |
| ALARM1 | Alarm 22 OFF |
| ALARM1 | Alarm 23 ON |
| ALARM1 | Alarm 23 OFF |
| ALARM1 | Alarm 24 ON |
| ALARM1 | Alarm 24 OFF |
| ALARM1 | Alarm 25 ON |
| ALARM1 | Alarm 25 OFF |
| ALARM1 | Alarm 26 ON |
| ALARM1 | Alarm 26 OFF |
| ALARM1 | Alarm 27 ON |
| ALARM1 | Alarm 27 OFF |
| ALARM1 | Alarm 28 ON |
| ALARM1 | Alarm 28 OFF |
| ALARM1 | Alarm 29 ON |
| ALARM1 | Alarm 29 OFF |
| ALARM1 | Alarm 30 ON |
| ALARM1 | Alarm 30 OFF |
| ALARM1 | Alarm 31 ON |
| ALARM1 | Alarm 31 OFF |
| ALARM1 | Alarm 32 ON |
| ALARM1 | Alarm 32 OFF |
| ALARM2 | Alarm 33 ON |
| ALARM2 | Alarm 33 OFF |
| ALARM2 | Alarm 34 ON |
| ALARM2 | Alarm 34 OFF |
| ALARM2 | Alarm 35 ON |
| ALARM2 | Alarm 35 OFF |
| ALARM2 | Alarm 36 ON |
| ALARM2 | Alarm 36 OFF |
| ALARM2 | Alarm 37 ON |
| ALARM2 | Alarm 37 OFF |
| ALARM2 | Alarm 38 ON |
| ALARM2 | Alarm 38 OFF |
| ALARM2 | Alarm 39 ON |

| Event block name | Event name |
|------------------|--------------|
| ALARM2 | Alarm 39 OFF |
| ALARM2 | Alarm 40 ON |
| ALARM2 | Alarm 40 OFF |
| ALARM2 | Alarm 41 ON |
| ALARM2 | Alarm 41 OFF |
| ALARM2 | Alarm 42 ON |
| ALARM2 | Alarm 42 OFF |
| ALARM2 | Alarm 43 ON |
| ALARM2 | Alarm 43 OFF |
| ALARM2 | Alarm 44 ON |
| ALARM2 | Alarm 44 OFF |
| ALARM2 | Alarm 45 ON |
| ALARM2 | Alarm 45 OFF |
| ALARM2 | Alarm 46 ON |
| ALARM2 | Alarm 46 OFF |
| ALARM2 | Alarm 47 ON |
| ALARM2 | Alarm 47 OFF |
| ALARM2 | Alarm 48 ON |
| ALARM2 | Alarm 48 OFF |
| ALARM2 | Alarm 49 ON |
| ALARM2 | Alarm 49 OFF |
| ALARM2 | Alarm 50 ON |
| ALARM2 | Alarm 50 OFF |
| ALARM2 | Alarm 51 ON |
| ALARM2 | Alarm 51 OFF |
| ALARM2 | Alarm 52 ON |
| ALARM2 | Alarm 52 OFF |
| ALARM2 | Alarm 53 ON |
| ALARM2 | Alarm 53 OFF |
| ALARM2 | Alarm 54 ON |
| ALARM2 | Alarm 54 OFF |
| ALARM2 | Alarm 55 ON |
| ALARM2 | Alarm 55 OFF |
| ALARM2 | Alarm 56 ON |
| ALARM2 | Alarm 56 OFF |
| ALARM2 | Alarm 57 ON |
| ALARM2 | Alarm 57 OFF |
| ALARM2 | Alarm 58 ON |

| Event block name | Event name |
|------------------|--------------|
| ALARM2 | Alarm 58 OFF |
| ALARM2 | Alarm 59 ON |
| ALARM2 | Alarm 59 OFF |
| ALARM2 | Alarm 60 ON |
| ALARM2 | Alarm 60 OFF |
| ALARM2 | Alarm 61 ON |
| ALARM2 | Alarm 61 OFF |
| ALARM2 | Alarm 62 ON |
| ALARM2 | Alarm 62 OFF |
| ALARM2 | Alarm 63 ON |
| ALARM2 | Alarm 63 OFF |
| ALARM2 | Alarm 64 ON |
| ALARM2 | Alarm 64 OFF |
| ALARM3 | Alarm 65 ON |
| ALARM3 | Alarm 65 OFF |
| ALARM3 | Alarm 66 ON |
| ALARM3 | Alarm 66 OFF |
| ALARM3 | Alarm 67 ON |
| ALARM3 | Alarm 67 OFF |
| ALARM3 | Alarm 68 ON |
| ALARM3 | Alarm 68 OFF |
| ALARM3 | Alarm 69 ON |
| ALARM3 | Alarm 69 OFF |
| ALARM3 | Alarm 70 ON |
| ALARM3 | Alarm 70 OFF |
| ALARM3 | Alarm 71 ON |
| ALARM3 | Alarm 71 OFF |
| ALARM3 | Alarm 72 ON |
| ALARM3 | Alarm 72 OFF |
| ALARM3 | Alarm 73 ON |
| ALARM3 | Alarm 73 OFF |
| ALARM3 | Alarm 74 ON |
| ALARM3 | Alarm 74 OFF |
| ALARM3 | Alarm 75 ON |
| ALARM3 | Alarm 75 OFF |
| ALARM3 | Alarm 76 ON |
| ALARM3 | Alarm 76 OFF |
| ALARM3 | Alarm 77 ON |

| Event block name | Event name |
|------------------|--------------|
| ALARM3 | Alarm 77 OFF |
| ALARM3 | Alarm 78 ON |
| ALARM3 | Alarm 78 OFF |
| ALARM3 | Alarm 79 ON |
| ALARM3 | Alarm 79 OFF |
| ALARM3 | Alarm 80 ON |
| ALARM3 | Alarm 80 OFF |
| ALARM3 | Alarm 81 ON |
| ALARM3 | Alarm 81 OFF |
| ALARM3 | Alarm 82 ON |
| ALARM3 | Alarm 82 OFF |
| ALARM3 | Alarm 83 ON |
| ALARM3 | Alarm 83 OFF |
| ALARM3 | Alarm 84 ON |
| ALARM3 | Alarm 84 OFF |
| ALARM3 | Alarm 85 ON |
| ALARM3 | Alarm 85 OFF |
| ALARM3 | Alarm 86 ON |
| ALARM3 | Alarm 86 OFF |
| ALARM3 | Alarm 87 ON |
| ALARM3 | Alarm 87 OFF |
| ALARM3 | Alarm 88 ON |
| ALARM3 | Alarm 88 OFF |
| ALARM3 | Alarm 89 ON |
| ALARM3 | Alarm 89 OFF |
| ALARM3 | Alarm 90 ON |
| ALARM3 | Alarm 90 OFF |
| ALARM3 | Alarm 91 ON |
| ALARM3 | Alarm 91 OFF |
| ALARM3 | Alarm 92 ON |
| ALARM3 | Alarm 92 OFF |
| ALARM3 | Alarm 93 ON |
| ALARM3 | Alarm 93 OFF |
| ALARM3 | Alarm 94 ON |
| ALARM3 | Alarm 94 OFF |
| ALARM3 | Alarm 95 ON |
| ALARM3 | Alarm 95 OFF |
| ALARM3 | Alarm 96 ON |

| Event block name | Event name |
|------------------|---------------|
| ALARM3 | Alarm 96 OFF |
| ALARM4 | Alarm 97 ON |
| ALARM4 | Alarm 97 OFF |
| ALARM4 | Alarm 98 ON |
| ALARM4 | Alarm 98 OFF |
| ALARM4 | Alarm 99 ON |
| ALARM4 | Alarm 99 OFF |
| ALARM4 | Alarm 100 ON |
| ALARM4 | Alarm 100 OFF |
| ALARM4 | Alarm 101 ON |
| ALARM4 | Alarm 101 OFF |
| ALARM4 | Alarm 102 ON |
| ALARM4 | Alarm 102 OFF |
| ALARM4 | Alarm 103 ON |
| ALARM4 | Alarm 103 OFF |
| ALARM4 | Alarm 104 ON |
| ALARM4 | Alarm 104 OFF |
| ALARM4 | Alarm 105 ON |
| ALARM4 | Alarm 105 OFF |
| ALARM4 | Alarm 106 ON |
| ALARM4 | Alarm 106 OFF |
| ALARM4 | Alarm 107 ON |
| ALARM4 | Alarm 107 OFF |
| ALARM4 | Alarm 108 ON |
| ALARM4 | Alarm 108 OFF |
| ALARM4 | Alarm 109 ON |
| ALARM4 | Alarm 109 OFF |
| ALARM4 | Alarm 110 ON |
| ALARM4 | Alarm 110 OFF |
| ALARM4 | Alarm 111 ON |
| ALARM4 | Alarm 111 OFF |
| ALARM4 | Alarm 112 ON |
| ALARM4 | Alarm 112 OFF |
| ALARM4 | Alarm 113 ON |
| ALARM4 | Alarm 113 OFF |
| ALARM4 | Alarm 114 ON |
| ALARM4 | Alarm 114 OFF |
| ALARM4 | Alarm 115 ON |

| Event block name | Event name |
|------------------|---------------|
| ALARM4 | Alarm 115 OFF |
| ALARM4 | Alarm 116 ON |
| ALARM4 | Alarm 116 OFF |
| ALARM4 | Alarm 117 ON |
| ALARM4 | Alarm 117 OFF |
| ALARM4 | Alarm 118 ON |
| ALARM4 | Alarm 118 OFF |
| ALARM4 | Alarm 119 ON |
| ALARM4 | Alarm 119 OFF |
| ALARM4 | Alarm 120 ON |
| ALARM4 | Alarm 120 OFF |
| ALARM4 | Alarm 121 ON |
| ALARM4 | Alarm 121 OFF |
| ALARM4 | Alarm 122 ON |
| ALARM4 | Alarm 122 OFF |
| ALARM4 | Alarm 123 ON |
| ALARM4 | Alarm 123 OFF |
| ALARM4 | Alarm 124 ON |
| ALARM4 | Alarm 124 OFF |
| ALARM4 | Alarm 125 ON |
| ALARM4 | Alarm 125 OFF |
| ALARM4 | Alarm 126 ON |
| ALARM4 | Alarm 126 OFF |
| ALARM4 | Alarm 127 ON |
| ALARM4 | Alarm 127 OFF |
| ALARM4 | Alarm 128 ON |
| ALARM4 | Alarm 128 OFF |


5.4 Control functions

5.4.1 Setting group selection

All relay types support up to eight (8) separate setting groups. The Setting group selection function block controls the availability and selection of the setting groups. By default, only Setting group 1 (SG1) is active and therefore the selection logic is idle. When more than one setting group is enabled, the setting group selector logic takes control of the setting group activations based on the logic and conditions the user has programmed.

The following figure presents a simplified function block diagram of the setting group selection function.

Figure. 5.4.1 - 10. Simplified function block diagram of the setting group selection function.

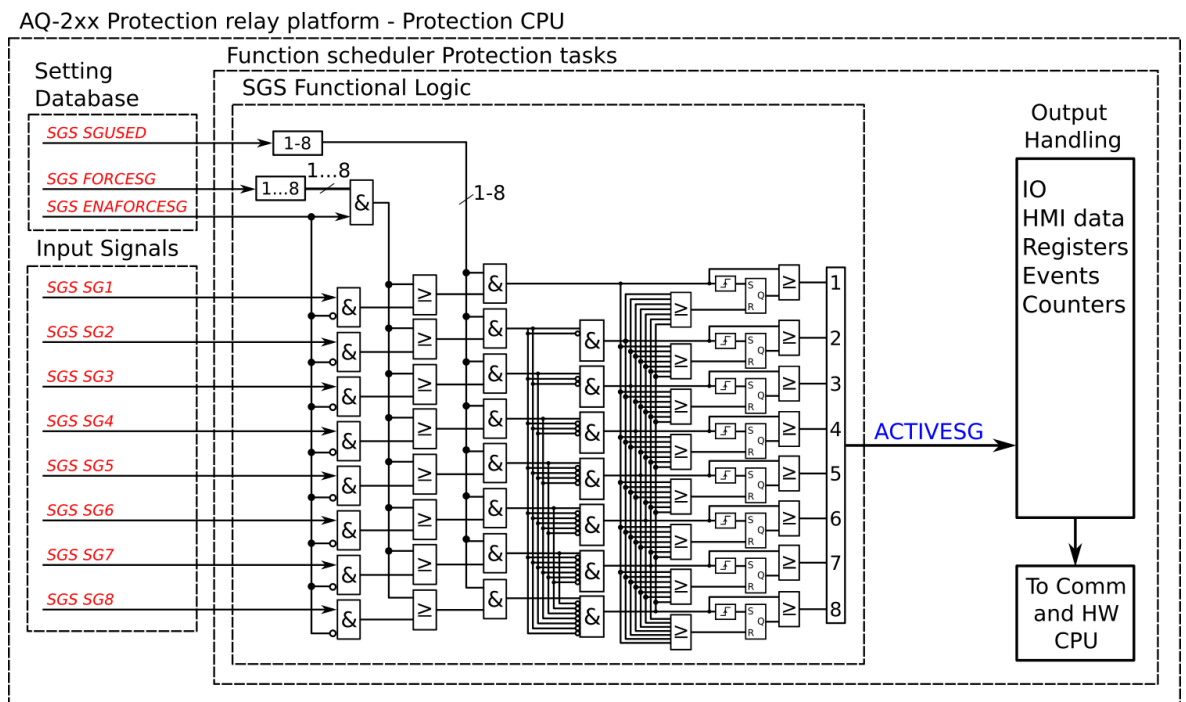


Setting group selection can be applied to each of the setting groups individually by activating one of the various internal logic inputs and connected digital inputs. The user can also force any of the setting groups on when the "Force SG change" setting is enabled by giving the wanted quantity of setting groups as a number in the communication bus or in the local HMI, or by selecting the wanted setting group from *Control* → *Setting groups*. When the forcing parameter is enabled, the automatic control of the local device is overridden and the full control of the setting groups is given to the user until the "Force SG change" is disabled again.

Setting groups can be controlled either by pulses or by signal levels. The setting group controller block gives setting groups priority values for situations when more than one setting group is controlled at the same time: the request from a higher-priority setting group is taken into use.

Setting groups follow a hierarchy in which setting group 1 has the highest priority, setting group 2 has second highest priority etc. If a static activation signal is given for two setting groups, the setting group with higher priority will be active. If setting groups are controlled by pulses, the setting group activated by pulse will stay active until another setting groups receives and activation signal.

Figure. 5.4.1 - 11. Example sequences of group changing (control with pulse only, or with both pulses and static signals).

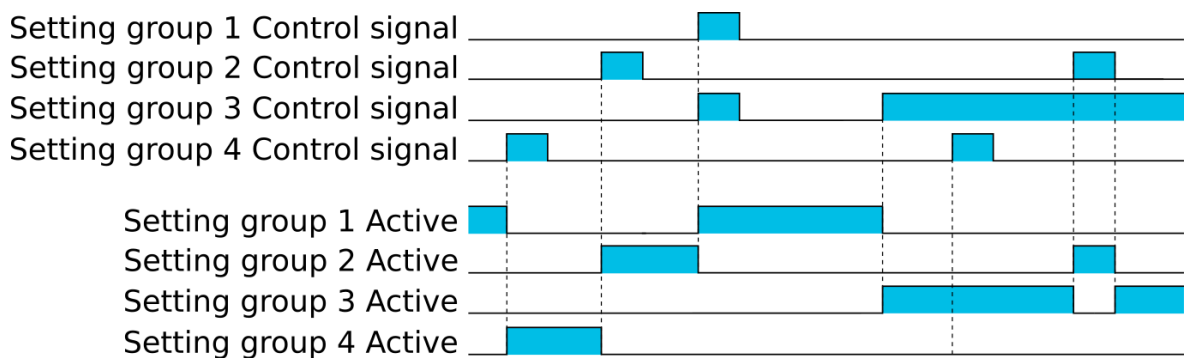

Settings and signals

The settings of the setting group control function include the active setting group selection, the forced setting group selection, the enabling (or disabling) of the forced change, the selection of the number of active setting groups in the application, as well as the selection of the setting group changed remotely. If the setting group is forced to change, the corresponding setting group must be enabled and the force change must be enabled. Then, the setting group can be set from communications or from HMI to any available group. If the setting group control is applied with static signals right after the "Force SG" parameter is released, the application takes control of the setting group selection.

Table. 5.4.1 - 11. Settings of the setting group selection function.

| Name | Range | Step | Default | Description |
|-----------------------------|--|------|-------------|--|
| Active setting group | | | SG1 | Displays which setting group is active. |
| Force setting group | 0: None 1: SG1 2: SG2 3: SG3 4: SG4 5: SG5 6: SG6 7: SG7 8: SG8 | - | 0: None | The selection of the overriding setting group. After "Force SG change" is enabled, any of the configured setting groups in the relay can be overridden. This control is always based on the pulse operating mode. It also requires that the selected setting group is specifically controlled to ON after "Force SG" is disabled. If there are no other controls, the last set setting group remains active. |
| Force setting group change | 0: Disabled 1: Enabled | - | 0: Disabled | The selection of whether the setting group forcing is enabled or disabled. This setting has to be active before the setting group can be changed remotely or from a local HMI. This parameter overrides the local control of the setting groups and it remains on until the user disables it. |
| Used setting groups | 0: SG1 1: SG1...2 2: SG1...3 3: SG1...4 4: SG1...5 5: SG1...6 6: SG1...7 7: SG1...8 | - | 0: SG1 | The selection of the activated setting groups in the application. Newly-enabled setting groups use default parameter values. |
| Remote setting group change | 0: None 1: SG1 2: SG2 3: SG3 4: SG4 5: SG5 6: SG6 7: SG7 8: SG8 | - | 0: None | This parameter can be controlled through SCADA to change the setting group remotely. Please note that if a higher priority setting group is being controlled by a signal, a lower priority setting group cannot be activated with this parameter. |

Table. 5.4.1 - 12. Signals of the setting group selection function.

| Name | Range | Step | Default | Description |
|-----------------|----------------------------|------|---------------|--|
| Setting group 1 | 0: Not active 1: Active | - | 0: Not active | The selection of Setting group 1 ("SG1"). Has the highest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, no other SG requests will be processed. |


| Name | Range | Step | Default | Description |
|-----------------|----------------------------|------|---------------|--|
| Setting group 2 | 0: Not active 1: Active | - | 0: Not active | The selection of Setting group 2 ("SG2"). Has the second highest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, no requests with a lower priority than SG1 will be processed. |
| Setting group 3 | 0: Not active 1: Active | - | 0: Not active | The selection of Setting group 3 ("SG3"). Has the third highest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, no requests with a lower priority than SG1 and SG2 will be processed. |
| Setting group 4 | 0: Not active 1: Active | - | 0: Not active | The selection of Setting group 4 ("SG4"). Has the fourth highest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, no requests with a lower priority than SG1, SG2 and SG3 will be processed. |
| Setting group 5 | 0: Not active 1: Active | - | 0: Not active | The selection of Setting group 5 ("SG5"). Has the fourth lowest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, SG6, SG7 and SG8 requests will not be processed. |
| Setting group 6 | 0: Not active 1: Active | - | 0: Not active | The selection of Setting group 6 ("SG6"). Has the third lowest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, SG7 and SG8 requests will not be processed. |
| Setting group 7 | 0: Not active 1: Active | - | 0: Not active | The selection of Setting group 7 ("SG7"). Has the second lowest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, only SG8 requests will not be processed. |
| Setting group 8 | 0: Not active 1: Active | - | 0: Not active | The selection of Setting group 8 ("SG8"). Has the lowest priority input in setting group control. Can be controlled with pulses or static signals. If static signal control is applied, all other SG requests will be processed regardless of the signal status of this setting group. |

Example applications for setting group control

This chapter presents some of the most common applications for setting group changing requirements.

A Petersen coil compensated network usually uses directional sensitive earth fault protection. The user needs to control its characteristics between varmetric and wattmetric; the selection is based on whether the Petersen coil is connected when the network is compensated, or whether it is open when the network is unearthed.

Figure. 5.4.1 - 12. Setting group control – one-wire connection from Petersen coil status.

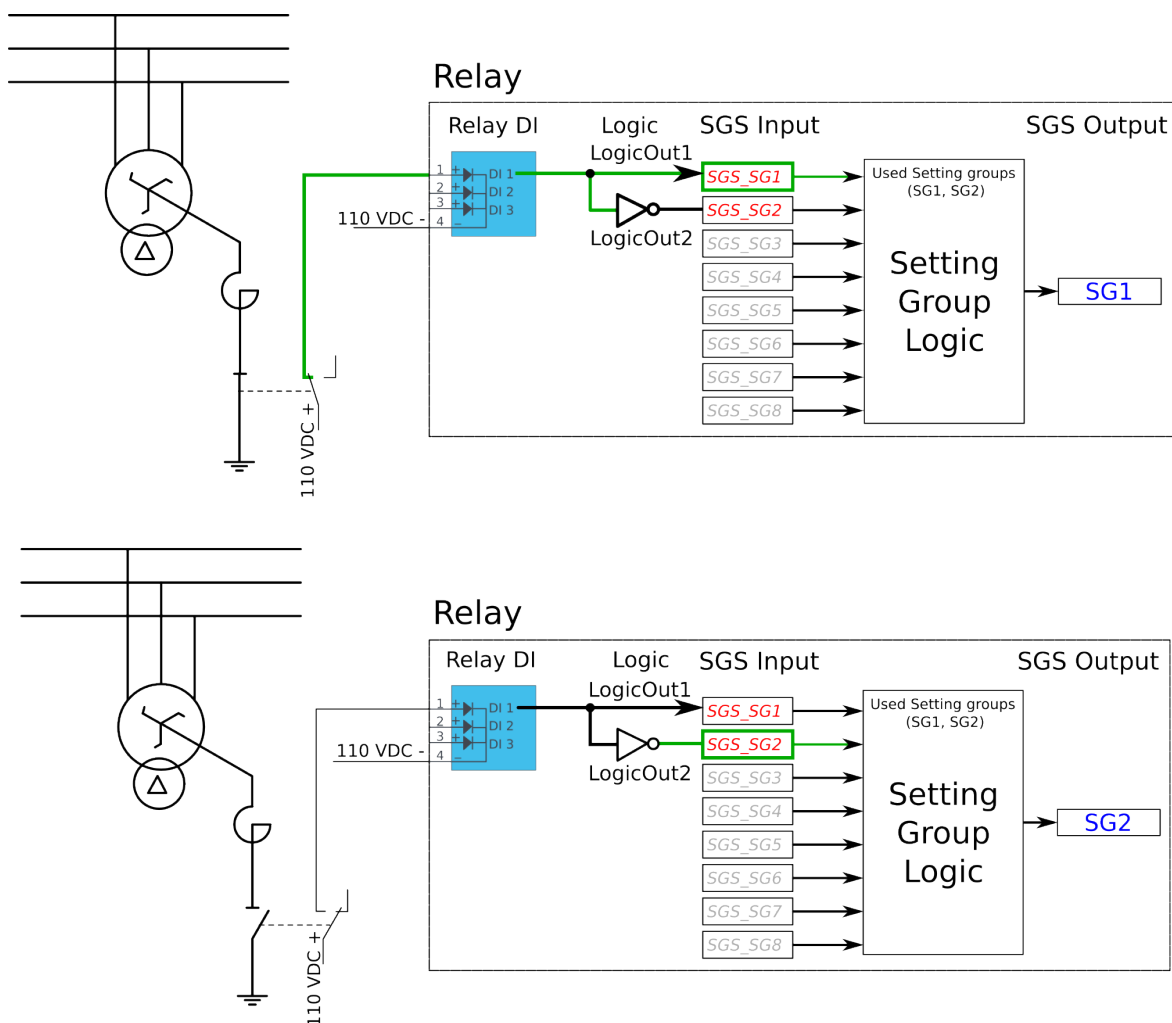

Depending on the application's requirements, the setting group control can be applied either with a one-wire connection or with a two-wire connection by monitoring the state of the Petersen coil connection.

When the connection is done with one wire, the setting group change logic can be applied as shown in the figure above. The status of the Petersen coil controls whether Setting group 1 is active. If the coil is disconnected, Setting group 2 is active. This way, if the wire is broken for some reason, the setting group is always controlled to SG2.

Figure. 5.4.1 - 13. Setting group control – two-wire connection from Petersen coil status.


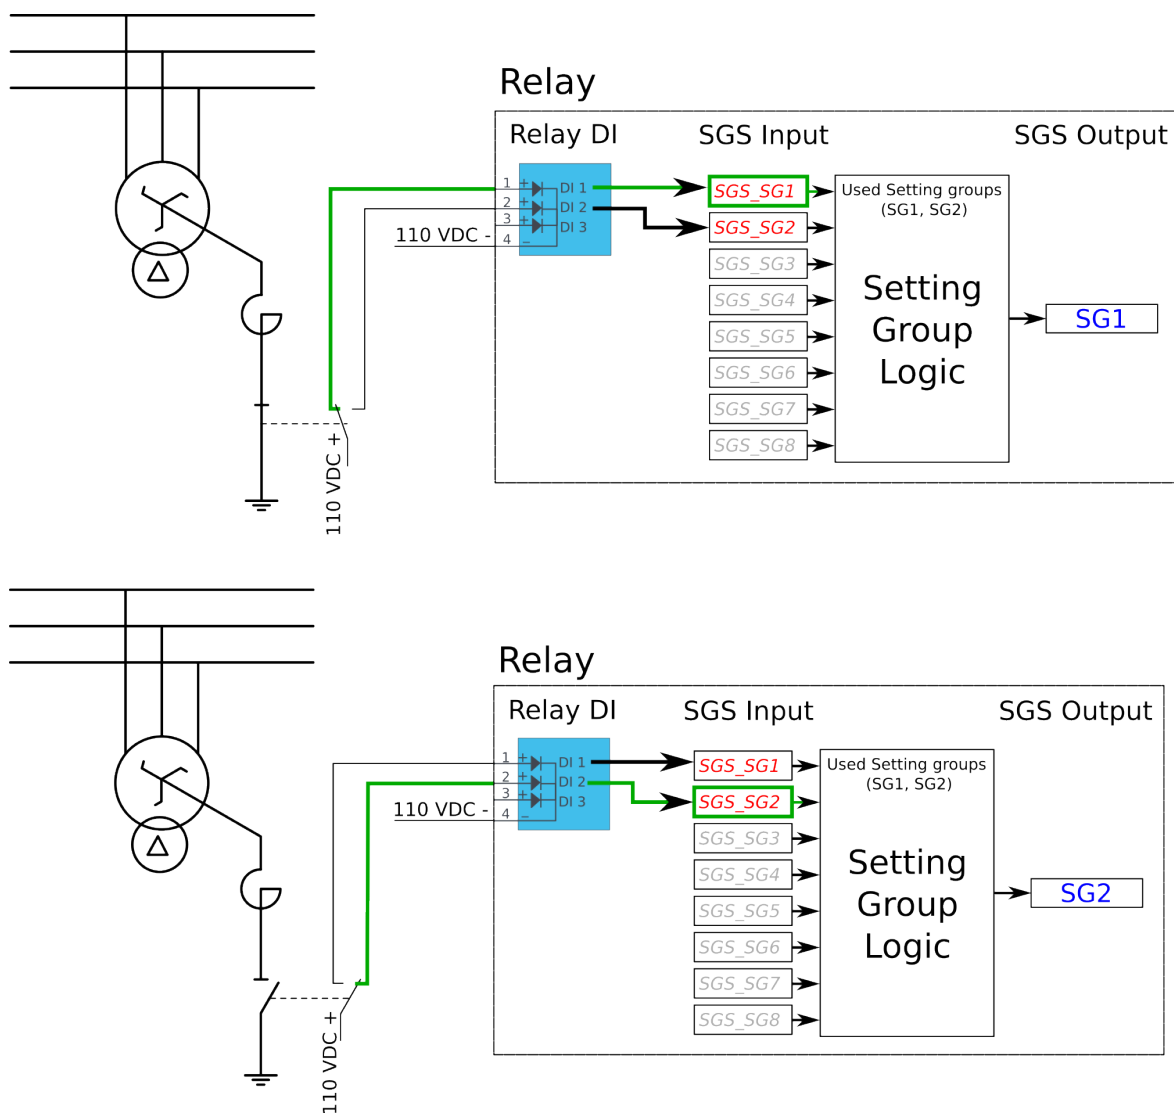



Figure. 5.4.1 - 14. Setting group control – two-wire connection from Petersen coil status with additional logic.

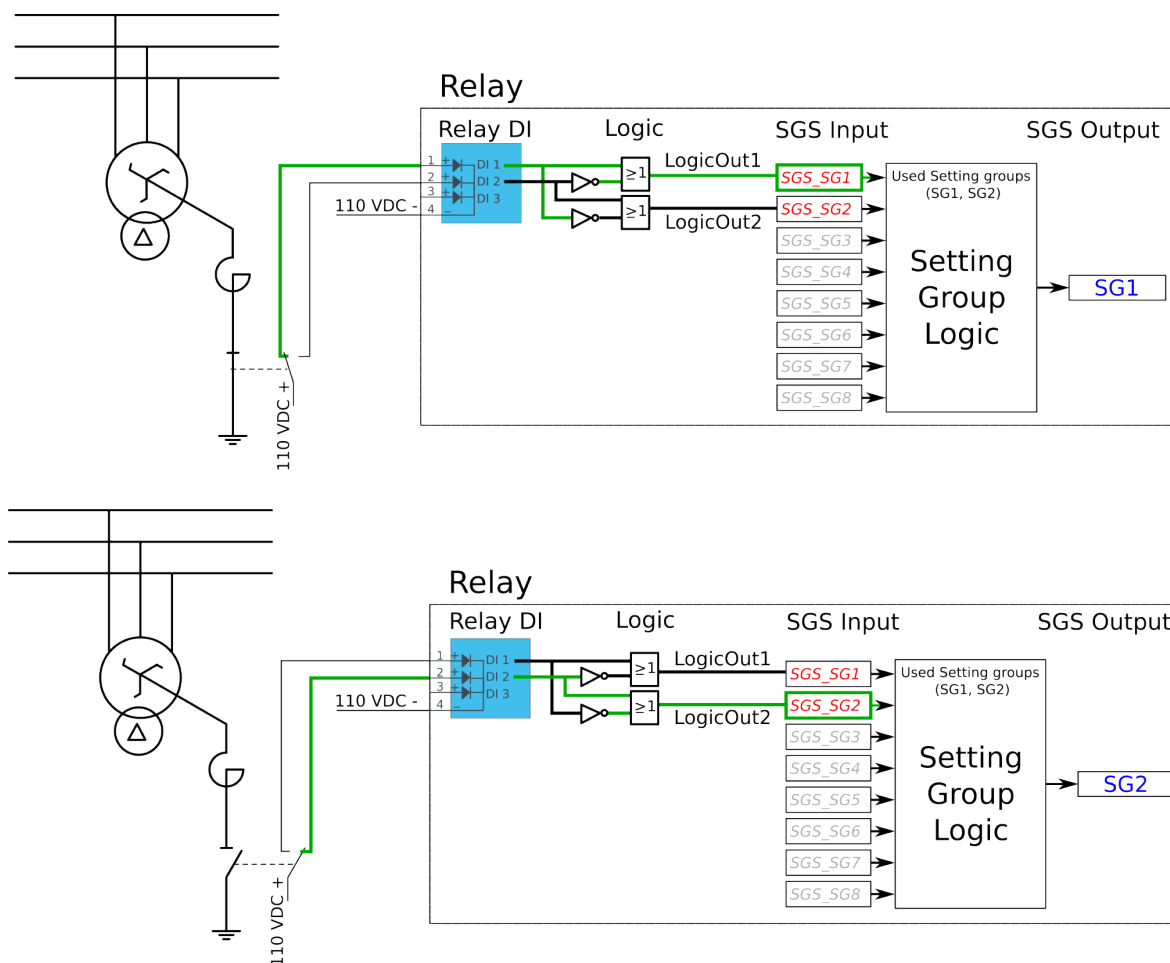

The images above depict a two-wire connection from the Petersen coil: the two images at the top show a direct connection, while the two images on the bottom include additional logic. With a two-wire connection the state of the Petersen coil can be monitored more securely. The additional logic ensures that a single wire loss will not affect the correct setting group selection.

The application-controlled setting group change can also be applied entirely from the relay's internal logics. For example, the setting group change can be based on the cold load pick-up function (see the image below).

Figure. 5.4.1 - 15. Entirely application-controlled setting group change with the cold load pick-up function.

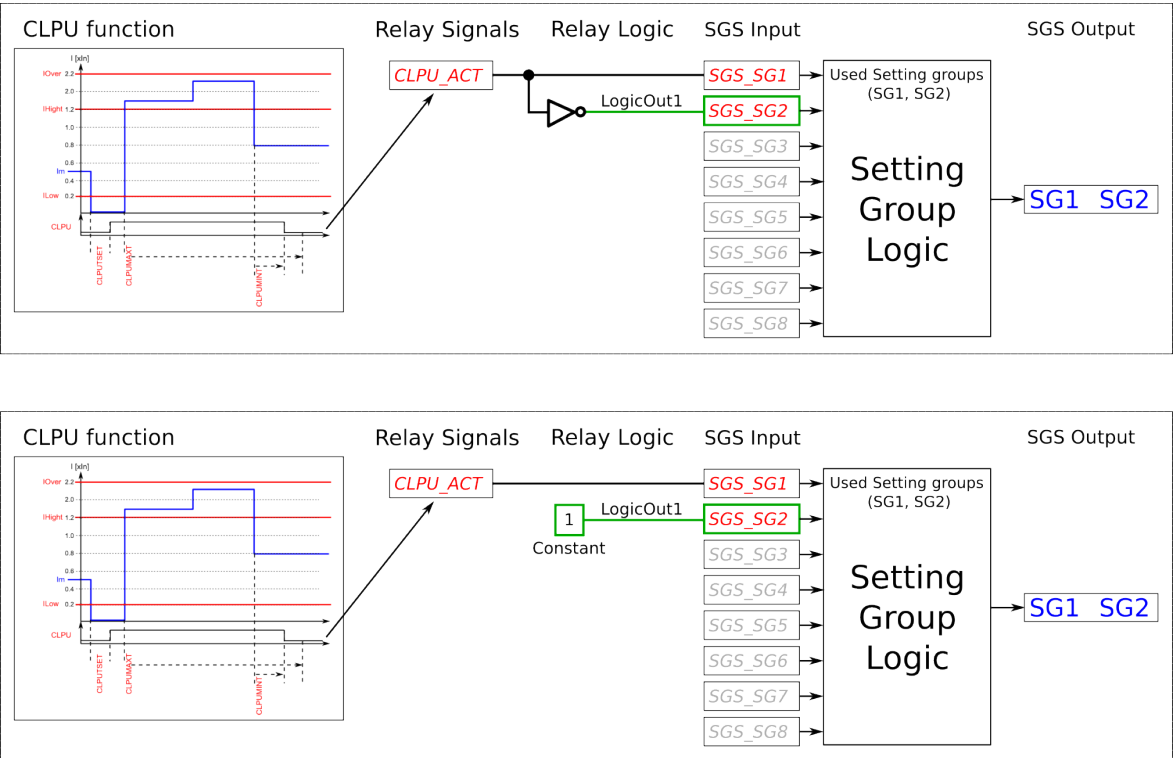

In these examples the cold load pick-up function's output is used for the automatic setting group change. Similarly to this application, any combination of the signals available in the relay's database can be programmed to be used in the setting group selection logic.

As all these examples show, setting group selection with application control has to be built fully before they can be used for setting group control. The setting group does not change back to SG1 unless it is controlled back to SG1 by this application; this explains the inverted signal NOT as well as the use of logics in setting group control. One could also have SG2 be the primary SG, while the ON signal would be controlled by the higher priority SG1; this way the setting group would automatically return to SG2 after the automatic control is over.

Events

The setting group selection function block (abbreviated "SGS" in event block names) generates events from its controlling status, its applied input signals, enabling and disabling of setting groups, as well as unsuccessful control changes. The function does not have a register.

Table. 5.4.1 - 13. Event messages.

| Event block name | Event names |
|------------------|--------------|
| SGS | SG2 Enabled |
| SGS | SG2 Disabled |
| SGS | SG3 Enabled |
| SGS | SG3 Disabled |
| SGS | SG4 Enabled |
| SGS | SG4 Disabled |
| SGS | SG5 Enabled |
| SGS | SG5 Disabled |

| Event block name | Event names |
|------------------|---|
| SGS | SG6 Enabled |
| SGS | SG6 Disabled |
| SGS | SG7 Enabled |
| SGS | SG7 Disabled |
| SGS | SG8 Enabled |
| SGS | SG8 Disabled |
| SGS | SG1 Request ON |
| SGS | SG1 Request OFF |
| SGS | SG2 Request ON |
| SGS | SG2 Request OFF |
| SGS | SG3 Request ON |
| SGS | SG3 Request OFF |
| SGS | SG4 Request ON |
| SGS | SG4 Request OFF |
| SGS | SG5 Request ON |
| SGS | SG5 Request OFF |
| SGS | SG6 Request ON |
| SGS | SG6 Request OFF |
| SGS | SG7 Request ON |
| SGS | SG7 Request OFF |
| SGS | SG8 Request ON |
| SGS | SG8 Request OFF |
| SGS | Remote Change SG Request ON |
| SGS | Remote Change SG Request OFF |
| SGS | Local Change SG Request ON |
| SGS | Local Change SG Request OFF |
| SGS | Force Change SG ON |
| SGS | Force Change SG OFF |
| SGS | SG Request Fail Not configured SG ON |
| SGS | SG Request Fail Not configured SG OFF |
| SGS | Force Request Fail Force ON |
| SGS | Force Request Fail Force OFF |
| SGS | SG Req. Fail Lower priority Request ON |
| SGS | SG Req. Fail Lower priority Request OFF |
| SGS | SG1 Active ON |
| SGS | SG1 Active OFF |
| SGS | SG2 Active ON |
| SGS | SG2 Active OFF |

| Event block name | Event names |
|------------------|----------------|
| SGS | SG3 Active ON |
| SGS | SG3 Active OFF |
| SGS | SG4 Active ON |
| SGS | SG4 Active OFF |
| SGS | SG5 Active ON |
| SGS | SG5 Active OFF |
| SGS | SG6 Active ON |
| SGS | SG6 Active OFF |
| SGS | SG7 Active ON |
| SGS | SG7 Active OFF |
| SGS | SG8 Active ON |
| SGS | SG8 Active OFF |

5.4.2 Object control and monitoring

The object control and monitoring function takes care of both for circuit breakers and disconnectors. The monitoring and controlling are based on the statuses of the relay's configured digital inputs and outputs. The number of controllable and monitored objects in each relay depends on the device type and amount of digital inputs. One controllable object requires a minimum of two (2) output contacts. The status monitoring of one monitored object usually requires two (2) digital inputs. Alternatively, object status monitoring can be performed with a single digital input: the input's active state and its zero state (switched to 1 with a NOT gate in the Logic editor).

An object can be controlled manually or automatically. Manual control can be done by local control, or by remote control. Local manual control can be done by relays front panel (HMI) or by external push buttons connected to relays digital inputs. Manual remote control can be done through one of the various communication protocols available (Modbus, IEC101/103/104 etc.). The function supports the modes "Direct control" and "Select before execute" while controlled remotely. Automatic controlling can be done with functions like auto-reclosing function (ANSI 79).

Object control consists of the following:

- control logic
- control monitor
- output handler.


The main outputs of the function are the OBJECT OPEN and OBJECT CLOSE control signals. Additionally, the function reports the monitored object's status and applied operations. The setting parameters are static inputs for the function, which can only be changed by the user in the function's setup phase.

The inputs for the function are the following:

- digital input status indications (the OPEN and CLOSE status signals)
- blockings (if applicable)
- the OBJECT READY and SYNCHROCHECK monitor signals (if applicable).
- Withdrawable cart IN and OUT status signals (if applicable).

The following figure presents a simplified function block diagram of the object control and monitoring function.

Figure. 5.4.2 - 16. Simplified function block diagram of the object control and monitoring function.

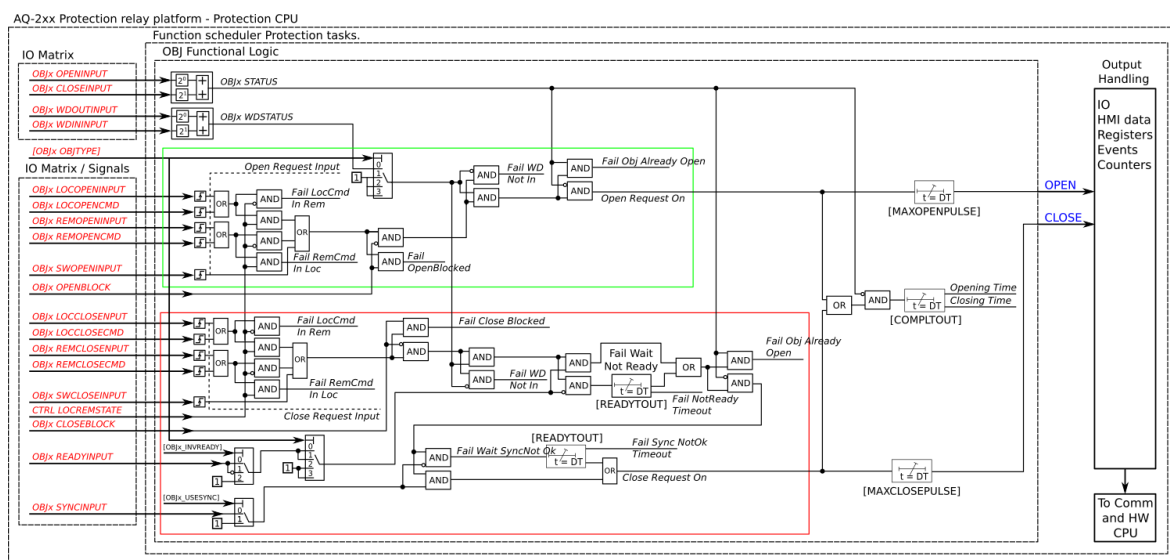

The following parameters help the user to define the object. The operation of the function varies based on these settings and the selected object type. The selected object type determines how much control is needed and which setting parameters are required to meet those needs.

Table. 5.4.2 - 14. Object settings and status parameters.

| Name | Range | Default | Description |
|---------------------|-----------------------|--------------|---|
| Local/Remote status | 0: Local 1: Remote | 1: Remote | Displays the status of the relay's "local/remote" switch. Local controls cannot override the open and close commands while device is in "Remote" status. The remote controls cannot override the open and close commands while device is in "Local" status. |

| Name | Range | Default | Description |
|-------------------------------|--|--------------------|--|
| Object status force to | 0: Normal 1: Openreq On 2: Closereq On 3: Opensignal On 4: Closesignal On 5: WaitNoRdy On 6: WaitNoSnc On 7: NotrdyFail On 8: NosyncFail On 9: Opentout On 10: Clotout On 11: OpenreqUSR On 12: CloreqUSR On | 0: Normal | Force the status of the function. Visible only when <i>Enable stage forcing</i> parameter is enabled in <i>General</i> menu. |
| OBJ LN mode | 1: On 2: Blocked 3: Test 4: Test/Blocked 5: Off | 1: On | Set mode of OBJ block. This parameter is visible only when <i>Allow setting of individual LN mode</i> is enabled in <i>General</i> menu. |
| OBJ LN behaviour | 1: On 2: Blocked 3: Test 4: Test/Blocked 5: Off | - | Displays the mode of OBJ block. This parameter is visible only when <i>Allow setting of individual LN mode</i> is enabled in <i>General</i> menu. |
| Object name | - | Objectx | The user-set name of the object, at maximum 32 characters long. |
| Object type | 0: Withdrawable circuit breaker 1: Circuit breaker 2: Disconnecter (MC) 3: Disconnecter (GND) | 1: Circuit breaker | The selection of the object type. This selection defines the number of required digital inputs for the monitored object. This affects the symbol displayed in the HMI and the monitoring of the circuit breaker. It also affects whether the withdrawable cart is in/out status is monitored. See the next table ("Object types") for a more detailed look at which functionalities each of the object types have. |
| Objectx Breaker status | 0: Intermediate 1: Open 2: Closed 3: Bad | - | Displays the status of breaker. Intermediate is displayed when neither of the status signals (open or close) are active. Bad status is displayed when both status signals (open and close) are active. |
| Objectx Withdraw status | 0: WDIntermediate 1: WDCartOut 2: WDCart In 3: WDBad 4: Not in use | - | Displays the status of circuit breaker cart. WDIntermediate is displayed when neither of the status signals (in or out) are active. WDBad status is displayed when both status signals (in and out) are active. If the selected object type is not set to "Withdrawable circuit breaker", this setting displays the "No in use" option. |
| Additional status information | 0: Open Blocked 1: Open Allowed 2: Close Blocked 3: Close Allowed 4: Object Ready 5: Object Not Ready 6: Sync Ok 7: Sync Not Ok | - | Displays additional information about the status of the object. |

| Name | Range | Default | Description |
|-----------------------|--|---------------|---|
| Use Synchrocheck | 0: Not in use 1: Synchrocheck in use | 0: Not in use | Selects whether the "Synchrocheck" condition is in use for the circuit breaker close command. If "In use" is selected the input chosen to "Sync.check status in" has to be active to be able to close circuit breaker. Synchrocheck status can be either an internal signal generated by synchrocheck function or digital input activation with an external synchrocheck device. |
| Use Object ready | 0: Ready High 1: Ready Low 2: Not in use | 2: Not in use | Selects whether the "Object ready" condition is in use for the circuit breaker close command. If in use the signal connected to "Object ready status In" has to be high or low to be able to close the breaker (depending on "Ready High or Low" selection). |
| Open requests | 0...2 ³² -1 | - | Displays the number of successful "Open" requests. |
| Close requests | 0...2 ³² -1 | - | Displays the number of successful "Close" requests. |
| Open requests failed | 0...2 ³² -1 | - | Displays the number of failed "Open" requests. |
| Close requests failed | 0...2 ³² -1 | - | Displays the number of failed "Close" requests. |
| Clear statistics | 0: - 1: Clear | 0: - | Clears the request statistics, setting them back to zero (0). Automatically returns to "-" after the clearing is finished. |

Table. 5.4.2 - 15. Object types.

| Name | Functionalities | Description |
|------------------------------|---|--|
| Withdrawable circuit breaker | Breaker cart position Circuit breaker position Circuit breaker control Object ready check before closing breaker Synchrochecking before closing breaker Interlocks | The monitor and control configuration of the withdrawable circuit breaker. |
| Circuit breaker | Position indication Control Object ready check before closing breaker Synchrochecking before closing breaker Interlocks | The monitor and control configuration of the circuit breaker. |
| Disconnecter (MC) | Position indication Control | The position monitoring and control of the disconnector. |
| Disconnecter (GND) | Position indication | The position indication of the earth switch. |

Table. 5.4.2 - 16. I/O.

| Signal | Range | Description |
|---|---|--|
| Objectx Open input ("Objectx Open Status In") | Digital input or other logical signal selected by the user (SWx) | A link to a physical digital input. The monitored object's OPEN status. "1" refers to the active open state of the monitored object. If IEC 61850 is enabled, GOOSE signals can be used for status indication. |
| Objectx Close input ("Objectx Close Status In") | | A link to a physical digital input. The monitored object's CLOSE status. "1" refers to the active close state of the monitored object. If IEC 61850 is enabled, GOOSE signals can be used for status indication. |

| Signal | Range | Description |
|--|-------------|--|
| WD Object In ("Withdrw.CartIn.Status In") | | A link to a physical digital input. The monitored withdrawable object's position is IN. "1" means that the withdrawable object cart is in. If IEC 61850 is enabled, GOOSE signals can be used for status indication. |
| WD Object Out ("Withdrw.CartOut.Status In") | | A link to a physical digital input. The monitored withdrawable object's position is OUT. "1" means that the withdrawable object cart is pulled out. If IEC 61850 is enabled, GOOSE signals can be used for status indication. |
| Object Ready (Objectx Ready status In") | | A link to a physical digital input. Indicates that status of the monitored object. "1" means that the object is ready and the spring is charged for a close command. If IEC 61850 is enabled, GOOSE signals can be used for status indication. |
| Syncrocheck permission ("Sync.Check status In") | | A link to a physical digital input or a synchrocheck function. "1" means that the synchrocheck conditions are met and the object can be closed. If IEC 61850 is enabled, GOOSE signals can be used for status indication. |
| Objectx Open command ("Objectx Open Command") | OUT1...OUTx | The physical "Open" command pulse to the device's output relay. |
| Objectx Close command ("Objectx Close Command") | | The physical "Close" command pulse to the device's output relay. |

Table. 5.4.2 - 17. Operation settings.

| Name | Range | Step | Default | Description |
|------------------------------------|-----------------|--------|---------|--|
| Breaker traverse time | 0.02...500.00 s | 0.02 s | 0.2 s | Determines the maximum time between open and close statuses when the breaker switches. If this set time is exceeded and both open and closed status inputs are active, the status "Bad" is activated in the "Objectx Breaker status" setting. If neither of the status inputs are active after this delay, the status "Intermediate" is activated. |
| Maximum Close command pulse length | 0.02...500.00 s | 0.02 s | 0.2 s | Determines the maximum length for a Close pulse from the output relay to the controlled object. If the object operates faster than this set time, the control pulse is reset and a status change is detected. |
| Maximum Open command pulse length | 0.02...500.00 s | 0.02 s | 0.2 s | Determines the maximum length for a Open pulse from the output relay to the controlled object. If the object operates faster than this set time, the control pulse is reset and a status change is detected. |
| Control termination timeout | 0.02...500.00 s | 0.02 s | 10 s | Determines the control pulse termination timeout. If the object has not changed its status in this given time the function will issue error event and the control is ended. This parameter is common for both open and close commands. |
| Final trip pulse length | 0.00...500.00 s | 0.02 s | 0.2 s | Determines the length of the final trip pulse length. When the object has executed the final trip, this signal activates. If set to 0 s, the signal is continuous. If auto-recloser function controls the object, "final trip" signal is activated only when there are no automatic reclosings expected after opening the breaker. |

Table. 5.4.2 - 18. Control settings (DI and Application).

| Signal | Range | Description |
|-----------------------------------|--|--|
| Access level for MIMIC control | 0: User 1: Operator 2: Configurator 3: Super user | Defines what level of access is required for MIMIC control. The default is the "Configurator" level. |
| Objectx LOCAL Close control input | Digital input or other logical signal selected by the user | The local Close command from a physical digital input (e.g. a push button). |


| Signal | Range | Description |
|--|-------|--|
| Objectx LOCAL Open control input | | The local Open command from a physical digital input (e.g. a push button). |
| Objectx REMOTE Close control input | | The remote Close command from a physical digital input (e.g. RTU). |
| Objectx REMOTE Open control input | | The remote Open command from a physical digital input (e.g. RTU). |
| Objectx Application Close | | The Close command from the application. Can be any logical signal. |
| Objectx Application Open | | The Close command from the application. Can be any logical signal. |

Blocking and interlocking

The interlocking and blocking conditions can be set for each controllable object, with Open and Close set separately. Blocking and interlocking can be based on any of the following: other object statuses, a software function or a digital input.

The image below presents an example of an interlock application, where the closed earthing switch interlocks the circuit breaker close command.

Figure. 5.4.2 - 17. Example of an interlock application.

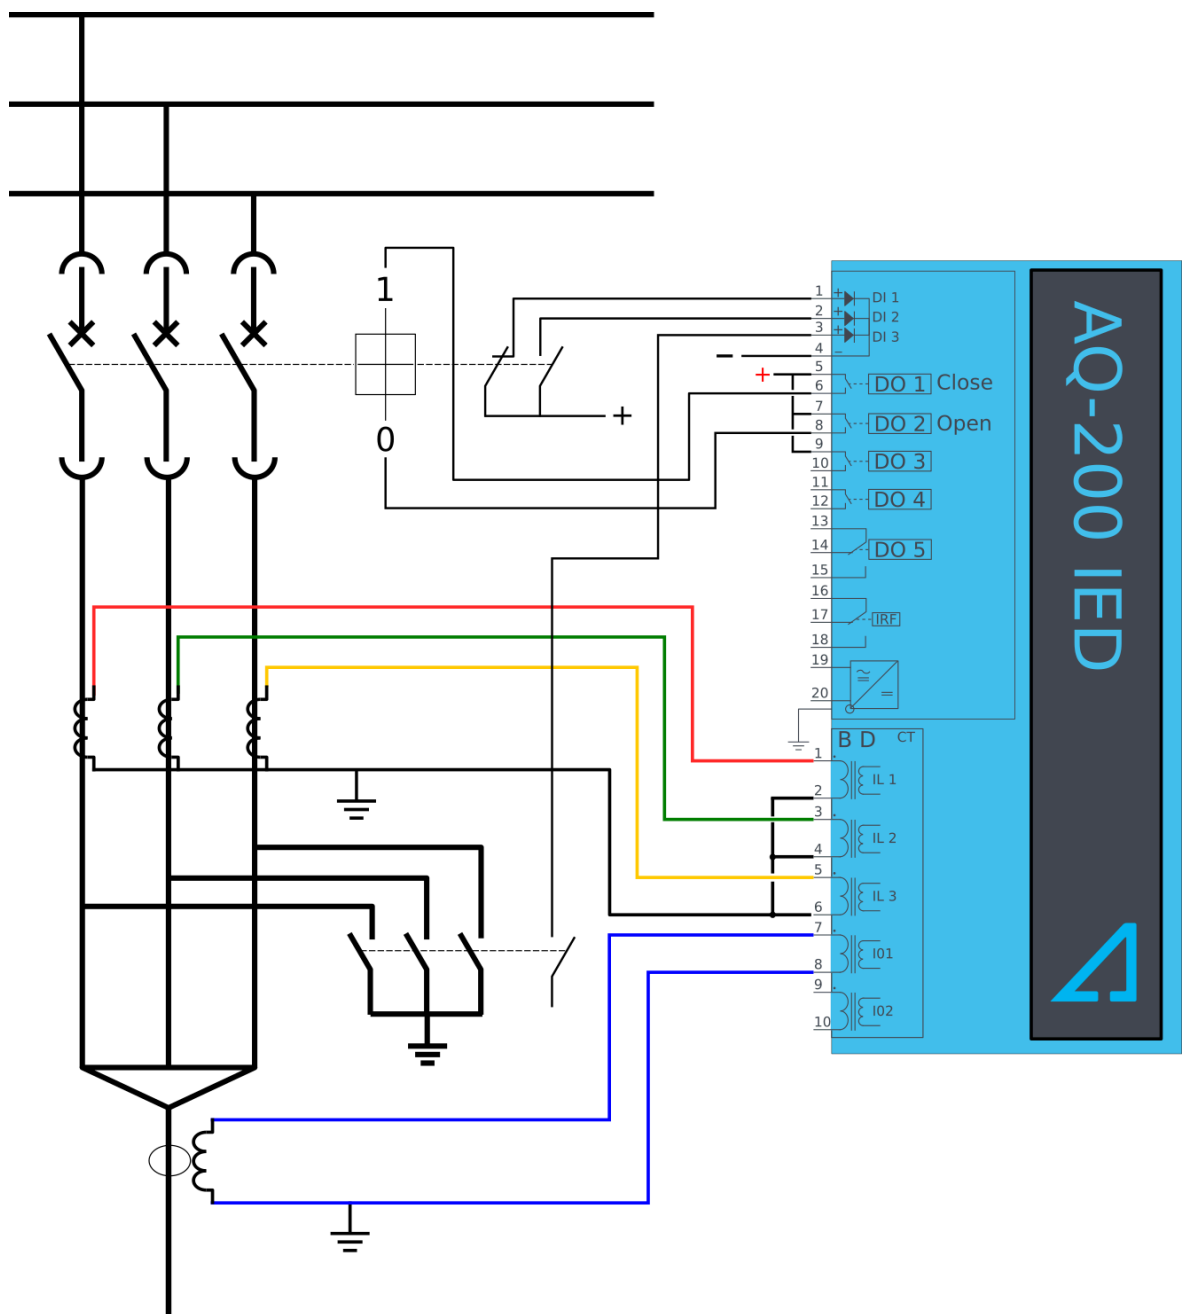

In order for the blocking signal to be received on time, it has to reach the function 5 ms before the control command.

Events and registers

The object control and monitoring function (abbreviated "OBJ" in event block names) generates events and registers from the status changes in monitored signals as well as control command fails and operations. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The function registers its operation into the last twelve (12) time-stamped registers. The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.4.2 - 19. Event messages of the OBJ function instances 1 – 10.

| Event block name | Description |
|------------------|------------------------------------|
| OBJ1...OBJ10 | Object Intermediate |
| OBJ1...OBJ10 | Object Open |
| OBJ1...OBJ10 | Object Close |
| OBJ1...OBJ10 | Object Bad |
| OBJ1...OBJ10 | WD Intermediate |
| OBJ1...OBJ10 | WD Out |
| OBJ1...OBJ10 | WD in |
| OBJ1...OBJ10 | WD Bad |
| OBJ1...OBJ10 | Open Request On |
| OBJ1...OBJ10 | Open Request Off |
| OBJ1...OBJ10 | Open Command On |
| OBJ1...OBJ10 | Open Command Off |
| OBJ1...OBJ10 | Close Request On |
| OBJ1...OBJ10 | Close Request Off |
| OBJ1...OBJ10 | Close Command On |
| OBJ1...OBJ10 | Close Command Off |
| OBJ1...OBJ10 | Open Blocked On |
| OBJ1...OBJ10 | Open Blocked Off |
| OBJ1...OBJ10 | Close Blocked On |
| OBJ1...OBJ10 | Close Blocked Off |
| OBJ1...OBJ10 | Object Ready |
| OBJ1...OBJ10 | Object Not Ready |
| OBJ1...OBJ10 | Sync Ok |
| OBJ1...OBJ10 | Sync Not Ok |
| OBJ1...OBJ10 | Open Command Fail |
| OBJ1...OBJ10 | Close Command Fail |
| OBJ1...OBJ10 | Final trip On |
| OBJ1...OBJ10 | Final trip Off |
| OBJ1...OBJ10 | Contact Abrasion Alarm On |
| OBJ1...OBJ10 | Contact Abrasion Alarm Off |
| OBJ1...OBJ10 | Switch Operating Time Exceeded On |
| OBJ1...OBJ10 | Switch Operating Time Exceeded Off |
| OBJ1...OBJ10 | XCBR Loc On |
| OBJ1...OBJ10 | XCBR Loc Off |
| OBJ1...OBJ10 | XSWI Loc On |
| OBJ1...OBJ10 | XSWI LOC Off |

Table. 5.4.2 - 20. Register content.

| Name | Description |
|------------------------------|--|
| Date and time | dd.mm.yyyy hh:mm:ss.mss |
| Event | Event name |
| Recorded Object opening time | Time difference between the object receiving an "Open" command and the object receiving the "Open" status. |
| Recorded Object closing time | Time difference between the object receiving a "Close" command and object receiving the "Closed" status. |
| Object status | The status of the object. |
| WD status | The status of the withdrawable circuit breaker. |
| Open fail | The cause of an "Open" command's failure. |
| Close fail | The cause of a "Close" command's failure. |
| Open command | The source of an "Open" command. |
| Close command | The source of an "Open" command. |
| General status | The general status of the function. |

5.4.3 Indicator object monitoring

The indicator object monitoring function takes care of the status monitoring of disconnectors. The function's sole purpose is indication and does not therefore have any control functionality. To control circuit breakers and/or disconnectors, please use the Object control and monitoring function. The monitoring is based on the statuses of the configured relay's digital inputs. The number of monitored indicators in a relay depends on the device type and available inputs. The status monitoring of one monitored object usually requires two (2) digital inputs. Alternatively, object status monitoring can be performed with a single digital input: the input's active state and its zero state (switched to 1 with a NOT gate in the Logic editor).

The outputs of the function are the monitored indicator statuses (Open, Close, Intermediate and Bad). The setting parameters are static inputs for the function, which can only be changed by the use in the function's setup phase.

The inputs of the function are the binary status indications. The function generates general time stamped ON/OFF events to the common event buffer from each of the following signals: OPEN, CLOSE, BAD and INTERMEDIATE event signals. The time stamp resolution is 1 ms.

Settings

Function uses available hardware and software digital signal statuses. These input signals are also setting parameters for the function.

Table. 5.4.3 - 21. Indicator status.

| Name | Range | Default | Description |
|--|---|---------|---|
| Indicator name ("Ind. Name") | - | IndX | The user-set name of the object, at maximum 32 characters long. |
| IndicatorX Object status ("Ind.X Object Status") | 0: Intermediate 1: Open 2: Closed 3: Bad | - | Displays the status of the indicator object. Intermediate status is displayed when neither of the status conditions (open or close) are active. Bad status is displayed when both of the status conditions (open and close) are active. |

Table. 5.4.3 - 22. Indicator I/O.

| Signal | Range | Description |
|--|---|--|
| IndicatorX Open input ("Ind.X Open Status In") | Digital input or other logical signal selected by the user (SWx) | A link to a physical digital input. The monitored indicator's OPEN status. "1" refers to the active "Open" state of the monitored indicator. If IEC 61850 is enabled, GOOSE signals can be used for status indication. |
| IndicatorX Close input ("Ind.X Close Status In") | Digital input or other logical signal selected by the user (SWx) | A link to a physical digital input. The monitored indicator's CLOSE status. "1" refers to the active "Close" state of the monitored indicator. If IEC 61850 is enabled, GOOSE signals can be used for status indication. |

Events

The indicator object monitoring function (abbreviated "CIN" in event block names) generates events from the status changes in the monitored signals, including the continuous status indications. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

Table. 5.4.3 - 23. Event messages (instances 1-20).

| Event block name | Event names |
|------------------|--------------|
| CIN1 | Intermediate |
| CIN1 | Open |
| CIN1 | Close |
| CIN1 | Bad |
| CIN2 | Intermediate |
| CIN2 | Open |
| CIN2 | Close |
| CIN2 | Bad |
| CIN3 | Intermediate |
| CIN3 | Open |
| CIN3 | Close |
| CIN3 | Bad |
| CIN4 | Intermediate |
| CIN4 | Open |
| CIN4 | Close |
| CIN4 | Bad |
| CIN5 | Intermediate |
| CIN5 | Open |
| CIN5 | Close |
| CIN5 | Bad |
| CIN6 | Intermediate |
| CIN6 | Open |

| Event block name | Event names |
|------------------|--------------|
| CIN6 | Close |
| CIN6 | Bad |
| CIN7 | Intermediate |
| CIN7 | Open |
| CIN7 | Close |
| CIN7 | Bad |
| CIN8 | Intermediate |
| CIN8 | Open |
| CIN8 | Close |
| CIN8 | Bad |
| CIN9 | Intermediate |
| CIN9 | Open |
| CIN9 | Close |
| CIN9 | Bad |
| CIN10 | Intermediate |
| CIN10 | Open |
| CIN10 | Close |
| CIN10 | Bad |
| CIN11 | Intermediate |
| CIN11 | Open |
| CIN11 | Close |
| CIN11 | Bad |
| CIN12 | Intermediate |
| CIN12 | Open |
| CIN12 | Close |
| CIN12 | Bad |
| CIN13 | Intermediate |
| CIN13 | Open |
| CIN13 | Close |
| CIN13 | Bad |
| CIN14 | Intermediate |
| CIN14 | Open |
| CIN14 | Close |
| CIN14 | Bad |
| CIN15 | Intermediate |
| CIN15 | Open |
| CIN15 | Close |
| CIN15 | Bad |

| Event block name | Event names |
|------------------|--------------|
| CIN16 | Intermediate |
| CIN16 | Open |
| CIN16 | Close |
| CIN16 | Bad |
| CIN17 | Intermediate |
| CIN17 | Open |
| CIN17 | Close |
| CIN17 | Bad |
| CIN18 | Intermediate |
| CIN18 | Open |
| CIN18 | Close |
| CIN18 | Bad |
| CIN19 | Intermediate |
| CIN19 | Open |
| CIN19 | Close |
| CIN19 | Bad |
| CIN20 | Intermediate |
| CIN20 | Open |
| CIN20 | Close |
| CIN20 | Bad |

5.4.4 Milliampere output control

The milliamp current loop is the prevailing process control signal in many industries. It is an ideal method of transferring process information because a current does not change as it travels from a transmitter to a receiver. It is also much more simple and cost-effective.

The benefits of 4...20 mA loops:

- the dominant standard in many industries
- the simplest option to connect and configure
- uses less wiring and connections than other signals, thus greatly reducing initial setup costs
- good for travelling long distances, as current does not degrade over long connections like voltage does
- less sensitive to background electrical noise
- detects a fault in the system incredibly easily since 4 mA is equal to 0 % output.

Milliampere (mA) outputs

AQ-200 series supports up to two (2) independent mA option cards. Each card has four (4) mA output channels and one (1) mA input channel. If the device has an mA option card, enable mA outputs at *Control* → *Device IO* → *mA outputs*. The outputs are activated in groups of two: channels 1 and 2 are activated together, as are channels 3 and 4.


Table. 5.4.4 - 24. Main settings (output channels).

| Name | | Range | Default | Description |
|------------------|-----------------------------------|---------------------------|-------------|---|
| mA option card 1 | Enable mA output channels 1 and 2 | 0: Disabled 1: Enabled | 0: Disabled | Enables and disables the outputs of the mA output card 1. |
| | Enable mA output channels 3 and 4 | | | |
| mA option card 2 | Enable mA output channels 5 and 6 | 0: Disabled 1: Enabled | 0: Disabled | Enables and disables the outputs of the mA output card 2. |
| | Enable mA output channels 7 and 8 | | | |

Table. 5.4.4 - 25. Settings for mA output channels.

| Name | Range | Step | Default | Description |
|---|--|----------|---|--|
| Enable mA output channel | 0: Disabled 1: Enabled | - | 0: Disabled | Enables and disables the selected mA output channel. If the channel is disabled, the channel settings are hidden. |
| Magnitude selection for mA output channel | 0: Currents 1: Voltages 2: Powers 3: Impedance and admittance 4: Other | - | 0: Currents | Defines the measurement category that is used for mA output control. |
| Magnitude of mA output channel | (dependent on the measurement category selection) | - | (dependent on the measurement category selection) | Defines the measurement magnitude used for mA output control. The available measurements depend on the selection of the "Magnitude selection for mA output channel" parameter. |
| Input value 1 | $-10^7 \dots 10^7$ | 0.001 | 0 | The first input point in the mA output control curve. |
| Scaled mA output value 1 | 0.0000...24.0000mA | 0.0001mA | 0mA | The mA output value when the measured value is equal to or less than Input value 1. |
| Input value 2 | $-10^7 \dots 10^7$ | 0.001 | 1 | The second input point in the mA output control curve. |
| Scaled mA output value 2 | 0.0000...24.0000mA | 0.0001mA | 0mA | The mA output value when the measured value is equal to or greater than Input value 2. |

Figure. 5.4.4 - 18. Example of the effects of mA output channel settings.

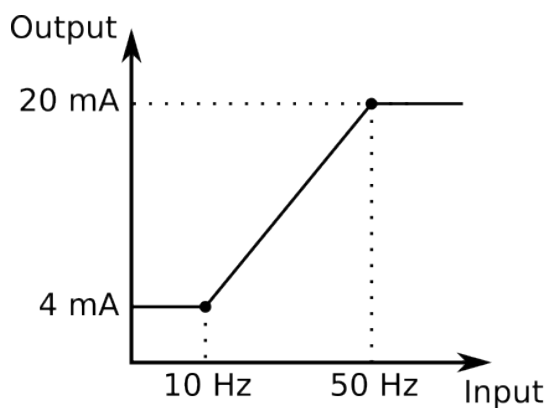

mA Output Channel 1

Enable mA Out Channel 1: ☐ Enabled

mA Out Channel 1 Magnitude selection:

mA Out Channel 1 Magnitude (Others):

Input value 1: -10000000.000...10000000.000 [0.001]

Scaled mA output value 1: mA 0.00000...24.00000 [0.00010]

Input value 2: -10000000.000...10000000.000 [0.001]

Scaled mA output value 2: mA 0.00000...24.00000 [0.00010]

mA Out Channel 1 Input Magnitude now: -10000000.000...10000000.000 [0.001]

mA Out Channel 1 Outputs now: mA 0.00000...24.00000 [0.00010]

Table. 5.4.4 - 26. Hardware indications.


| Name | Range | Step | Description |
|--------------------------------------|--|------|---|
| Hardware in mA output channels 1...4 | 0: None 1: Slot A 2: Slot B 3: Slot C 4: Slot D 5: Slot E 6: Slot F 7: Slot G 8: Slot H 9: Slot I 10: Slot J 11: Slot K 12: Slot L 13: Slot M 14: Slot N 15: Too many cards installed | - | Indicates the option card slot where the mA output card is located. |
| Hardware in mA output channels 5...8 | | | |

Table. 5.4.4 - 27. Measurement values reported by mA output cards.

| Name | Range | Step | Description |
|------------------------------------|--------------------|----------|---|
| mA in Channel 1 | 0.0000...24.0000mA | 0.0001mA | Displays the measured mA value of the selected input channel. |
| mA in Channel 2 | | | |
| mA Out Channel Input Magnitude now | $-10^7 \dots 10^7$ | 0.001 | Displays the input value of the selected mA output channel at that moment. |
| mA Out Channel Outputs now | 0.0000...24.0000mA | 0.0001mA | Displays the output value of the selected mA output channel at that moment. |

5.4.5 Programmable control switch

The programmable control switch is a control function that controls its binary output signal. This output signal can be controlled locally from the relay's mimic (displayed as a box in the mimic) or remotely from the RTU. The main purpose of programmable control switches is to block or enable function and to change function properties by changing the setting group. However, this binary signal can also be used for any number of other purposes, just like all other binary signals. Once a programmable control switch has been activated or disabled, it remains in that state until given a new command to switch to the opposite state (see the image below). The switch cannot be controlled by an auxiliary input, such as digital inputs or logic signals; it can only be controlled locally (mimic) or remotely (RTU).

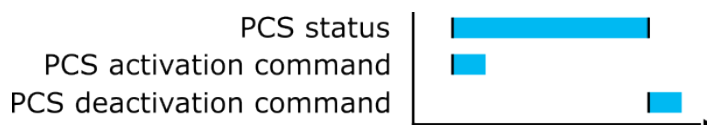

Settings.

These settings can be accessed at *Control* → *Device I/O* → *Programmable control switch*.

Table. 5.4.5 - 28. Settings.

| Name | Range | Default | Description |
|-------------|-------|---------|--|
| Switch name | - | Switchx | The user-settable name of the selected switch. The name can be up to 32 characters long. |

| Name | Range | Default | Description |
|--------------------------------|--|-----------------|--|
| Access level for Mimic control | 0: User 1: Operator 2: Configurator 3: Super user | 2: Configurator | Determines which access level is required to be able to control the programmable control switch via the Mimic. |

Events

The programmable control switch function (abbreviated "PCS" in event block names) generates events from status changes. The user can select which event messages are stored in the main event buffer: ON, OFF, or both. The function offers five (5) independent switches.

Table. 5.4.5 - 29. Event messages.

| Event block name | Event names |
|------------------|--------------|
| PCS | Switch 1 ON |
| PCS | Switch 1 OFF |
| PCS | Switch 2 ON |
| PCS | Switch 2 OFF |
| PCS | Switch 3 ON |
| PCS | Switch 3 OFF |
| PCS | Switch 4 ON |
| PCS | Switch 4 OFF |
| PCS | Switch 5 ON |
| PCS | Switch 5 OFF |

5.4.6 Analog input scaling curves

Sometimes when measuring with RTD inputs, milliampere inputs and digital inputs the measurement might be inaccurate because the signal coming from the source is inaccurate. One common example of this is tap changer location indication signal not changing linearly from step to step. If the output difference between the steps are not equal to each other, measuring the incoming signal accurately is not enough. "Analog input scaling curves" menu can be used to take these inaccuracies into account.

Analog input scaling curve settings can be found at *Measurement* → *AI(mA, DI volt) scaling* menu.

Currently following measurements can be scaled with analog input scaling curves:

- RTD inputs and mA inputs in "RTD & mA input" option cards
- mA inputs in "mA output & mA input" option cards
- Digital input voltages

Table. 5.4.6 - 30. Main settings (input channel).

| Name | Range | Step | Default | Description |
|----------------------|-----------------------------|------|-------------|---|
| Analog input scaling | 0: Disabled 1: Activated | - | 0: Disabled | Enables and disables the input. |
| Scaling curve 1...4 | 0: Disabled 1: Activated | - | 0: Disabled | Enables and disables the scaling curve and the input measurement. |

| Name | Range | Step | Default | Description |
|---|---|---------|----------------|---|
| Curve 1...4 input signal select | 0: S7 mA Input 1: S8 mA Input 2: S15 mA Input 3: S16 mA Input 4: DI1 Voltage ... 23: DI20 Voltage 24: RTD S1 Resistance ... 39: RTD S16 Resistance 40: mA In 1 (I card 1) 41: mA In 2 (I card 2) | - | 0: S7 mA Input | Defines the measurement used by scaling curve. |
| Curve 1...4 input signal filtering | 0: No 1: Yes | - | 0: No | Enables calculation of the average of received signal. |
| Curve 1...4 input signal filter time constant | 0.005...3800.000 s | 0.005 s | 1 s | Time constant for input signal filtering. This parameter is visible when "Curve 1...4 input signal filtering" has been set to "Yes". |
| Curve 1...4 input signal out of range set | 0: No 1: Yes | - | 0: No | Enables out of range signals. If input signal is out of minimum and maximum limits, "ASC1...4 input out of range" signal is activated. |
| Curve1...4 input minimum | -1 000 000.00...1 000 000.00 | 0.00001 | 0 | Defines the minimum input of the curve. If input is below the set limit, "ASC1...4 input out of range" is activated. |
| Curve 1...4 input | -1 000 000.00...1 000 000.00 | 0.00001 | - | Displays the input measurement received by the curve. |
| Curve1...4 input maximum | -1 000 000.00...1 000 000.00 | 0.00001 | 0 | Defines the maximum input of the curve. If input is above the set limit, "ASC1...4 input out of range" is activated. |
| Curve1...4 output | -1 000 000.00...1 000 000.00 | 0.00001 | - | Displays the output of the curve. |

The input signal filtering parameter calculates the average of received signals according to the set time constant. This is why rapid changes and disturbances (such as fast spikes) are smothered. The Nyquist rate states that the filter time constant must be at least double the period time of the disturbance process signal. For example, the value for the filter time constant is 2 seconds for a 1 second period time of a disturbance oscillation.

$$H(s) = \frac{Wc}{s+Wc} = \frac{1}{1+s/Wc}$$

When the curve signal is out of range, it activates the "ASC1...4 input out of range" signal, which can be used inside logic or with other relay functions. The signal can be assigned directly to an output relay or to an LED in the I/O matrix. The "Out of range" signal is activated, when the measured signal falls below the set input minimum limit, or when it exceeds the input maximum limit.

If for some reason the input signal is lost, the value is fixed to the last actual measured cycle value. The value does not go down to the minimum if it has been something else at the time of the signal breaking.


Table. 5.4.6 - 31. Output settings and indications.

| Name | Range | Step | Default | Description |
|--------------------------|---|----------|-------------------|--|
| Curve 1...4 update cycle | 5...10 000ms | 5ms | 150ms | Defines the length of the input measurement update cycle. If the user wants a fast operation, this setting should be fairly low. |
| Scaled value handling | 0: Floating point 1: Integer out (Floor) 2: Integer (Ceiling) 3: Integer (Nearest) | - | 0: Floating point | Rounds the milliamper signal output as selected. |
| Input value 1 | 0...4000 | 0.000 01 | 0 | The measured input value at Curve Point 1. |
| Scaled output value 1 | -10 ⁷ ...10 ⁷ | 0.000 01 | 0 | Scales the measured milliamper signal at Point 1. |
| Input value 2 | 0...4000 | 0.000 01 | 1 | The measured input value at Curve Point 2. |
| Scaled output value 1 | -10 ⁷ ...10 ⁷ | 0.000 01 | 0 | Scales the measured milliamper signal at Point 2. |
| Add curvepoint 3...20 | 0: Not used 1: Used | - | 0: Not used | Allows the user to create their own curve with up to twenty (20) curve points, instead of using a linear curve between two points. |

5.4.7 Logical outputs

Logical outputs are used for sending binary signals out from a logic that has been built in the logic editor. Logical signals can be used for blocking functions, changing setting groups, controlling digital outputs, activating LEDs, etc. The status of logical outputs can also be reported to a SCADA system. 64 logical outputs are available. The figure below presents a logic output example where a signal from the circuit breaker failure protection function controls the digital output relay number 5 ("OUT5") when the circuit breaker's cart status is "In".

Figure. 5.4.7 - 19. Logic output example. Logical output is connected to an output relay in matrix.

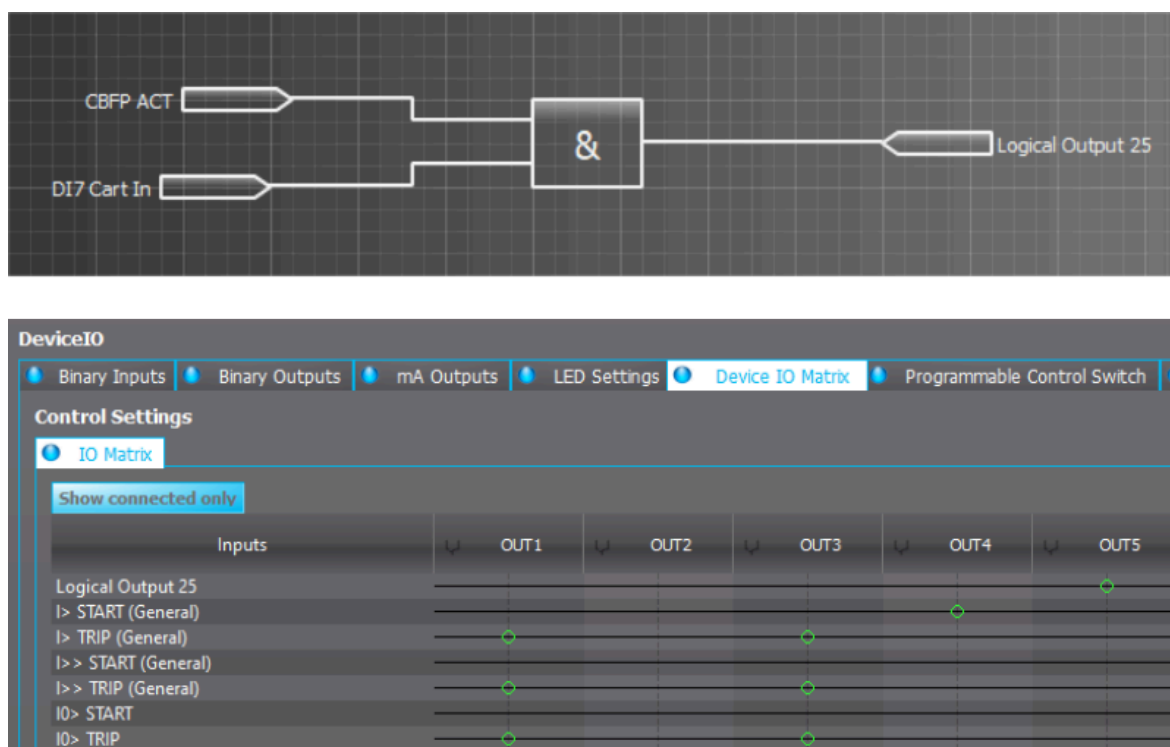

Logical output descriptions

Logical outputs can be given a description. The user defined description are displayed in most of the menus (logic editor, matrix, block settings etc.).

Table. 5.4.7 - 32. Logical output user description.

| Name | Range | Default | Description |
|-------------------------------|-------------------|------------------|--|
| User editable description LOx | 1...31 characters | Logical output x | Description of the logical output. This description is used in several menu types for easier identification. |


5.4.8 Logical inputs

Logical inputs are binary signals that a user can control manually to change the behavior of the AQ-200 unit or to give direct control commands. Logical inputs can be controlled with a virtual switch built in the mimic and from a SCADA system (IEC 61850, Modbus, IEC 101, etc.). Logical inputs are volatile signals: their status will always return to "0" when the AQ-200 device is rebooted. 32 logical inputs are available.

Logical inputs have two modes available: Hold and Pulse. When a logical input which has been set to "Hold" mode is controlled to "1", the input will switch to status "1" and it stays in that status until it is given a control command to go to status "0" or until the device is rebooted. When a logical input which has been set to "Pulse" mode is controlled to "1", the input will switch to status "1" and return back to "0" after 5 ms.



The figure below presents the operation of a logical input in Hold mode and in Pulse mode.

Figure. 5.4.8 - 20. Operation of logical input in "Hold" and "Pulse" modes.

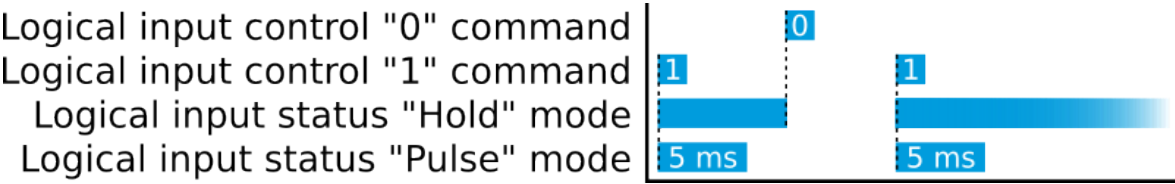

A logical input pulse can also be extended by connecting a DELAY-low gate to a logical output, as has been done in the example figure below.

Figure. 5.4.8 - 21. Extending a logical input pulse.

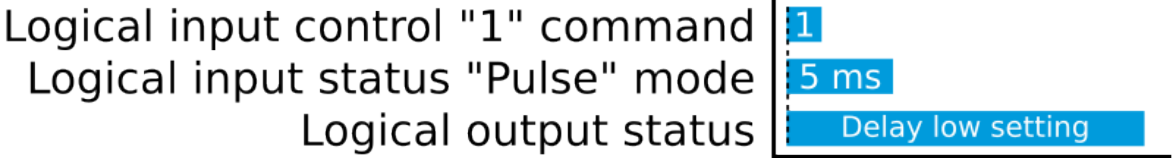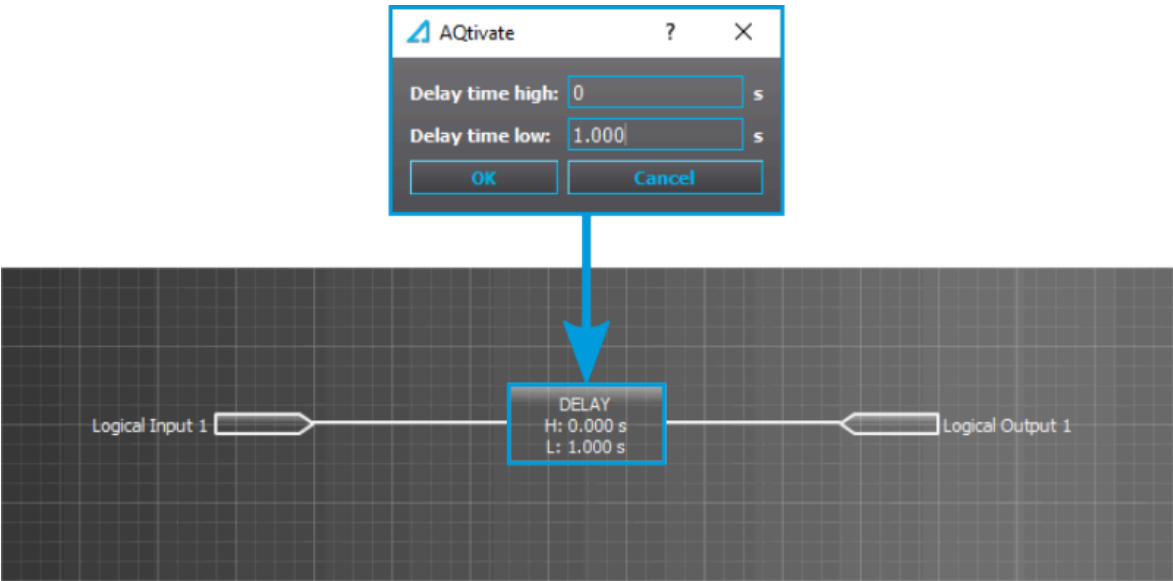

Logical input descriptions

Logical inputs can be given a description. The user defined description are displayed in most of the menus (logic editor, matrix, block settings etc.).

Table. 5.4.8 - 33. Logical input user description.

| Name | Range | Default | Description |
|-------------------------------|-------------------|-----------------|---|
| User editable description LLx | 1...31 characters | Logical input x | Description of the logical input. This description is used in several menu types for easier identification. |

5.5 Programmable stage (PGx>/<; 99)

The programmable stage is a stage that the user can program to create more advanced applications, either as an individual stage or together with programmable logic. The relay has ten programmable stages, and each can be set to follow one to three analog measurements. The programmable stages have three available pick up terms options: overX, underX and rate-of-change of the selected signal. Each stage includes a definite time delay to trip after a pick-up has been triggered.

The programmable stage cycle time is 5 ms. The pick-up delay depends on which analog signal is used as well as its refresh rate (typically under a cycle in a 50 Hz system).

The number of programmable stages to be used is set in the *INFO* tab. When this function has been set as "Activated", the number of programmable stages can be set anywhere between one (1) and ten (10) depending on how many the application needs. In the image below, the number of programmable stages have been set to two which makes PS1 and PS2 to appear. Inactive stages are hidden until they are activated.

Please note that setting the number of available stages does not activate those stages, as they also need to be enabled individually with the *PSx >/< Enabled* parameter. When enabled an active stage shows its current state (condition), the expected operating time and the time remaining to trip under the activation parameters. If a stage is not active the *PSx>/< condition* parameter will merely display "Disabled".

The function's outputs are START, TRIP and BLOCKED signals. The programmable stage function uses a total of eight (8) separate setting groups which can be selected from one common source.

The function can operate on instant or time-delayed mode. Definite time (DT) delay can be selected in the In time-delayed mode.

The inputs for the function are the following:

- operating mode selections
- setting parameters
- digital inputs and logic signals
- measured and pre-processed magnitudes.

The function's outputs are START, TRIP and BLOCKED signals which can be used for direct I/O controlling and user logic programming. The function generates general time-stamped ON/OFF events to the common event buffer from each of the three (3) output signals. In the instant operating mode the function outputs START and TRIP events simultaneously with an equivalent time stamp. The time stamp resolution is 1 ms. The function also provides a resettable cumulative counter for the START, TRIP and BLOCKED events.

General settings

The following general settings define the general behavior of the function. These settings are static i.e. it is not possible to change them by editing the setting group.

Table. 5.5 - 34. General settings of the function.

| Name | Range | Description |
|--------------------------|---|--|
| PSx >/< LN mode | 1: On 2: Blocked 3: Test 4: Test/Blocked 5: Off | Set mode of PGS block. This parameter is visible only when <i>Allow setting of individual LN mode</i> is enabled in <i>General</i> menu. |
| PSx >/< LN behaviour | 1: On 2: Blocked 3: Test 4: Test/Blocked 5: Off | Displays the mode of PGS block. This parameter is visible only when <i>Allow setting of individual LN mode</i> is enabled in <i>General</i> menu. |
| PSx >/< Available stages | 1...10 | Defines the available amount of stages. |
| PSx >/< Enabled | 0: Disabled 1: Enabled | Enables the stage. |

| Name | Range | Description |
|--|---|---|
| PSx >/< Force status to | 0: Normal 1: Start 2: Trip 3: Blocked | Force the status of the function. Visible only when <i>Enable stage forcing</i> parameter is enabled in <i>General</i> menu. |
| PSx >/< Measurement setting | 0: One magnitude comp 1: Two magnitude comp 2: Three magnitude comp | Defines how many measurement magnitudes are used by the stage. |
| PSx >/< Magnitude handling ("Two magnitude comp" selected) | 0: Mag1 x Mag2 | Multiplies Signal 1 by Signal 2. The comparison uses the product of this calculation. |
| | 1: Mag1 / Mag2 | Divides Signal 1 by Signal 2. The comparison uses the product of this calculation. |
| | 2: Max (Mag1, Mag2) | The bigger value of the chosen signals is used in the comparison. |
| | 3: Min (Mag1, Mag2) | The smaller value of the chosen signals is used in the comparison. |
| | 4: Mag1 OR Mag2 | Either of the chosen signals has to fulfill the pick-up condition. Both signals have their own pick-up setting. |
| | 5: Mag1 AND Mag2 | Both of the chosen signals have to fulfill the pick-up condition. Both signals have their own pick-up setting. |
| | 6: Mag1 – Mag2 | Subtracts Signal 2 from Signal 1. The comparison uses the product of this calculation. |
| PSx >/< Magnitude handling ("Three magnitude comp" selected) | 0: Mag1 x Mag2 x Mag3 | Multiplies Signals 1, 2 and 3. The comparison uses the product of this calculation. |
| | 1: Max (Mag1, Mag2, Mag3); | The biggest value of the chosen signals is used in the comparison. |
| | 2: Min (Mag1, Mag2, Mag3) | The smallest value of the chosen signals is used in the comparison. |
| | 3: Mag1 OR Mag2 OR Mag3 | Any of the signals fulfills the pick-up condition. Each signal has their own pick-up setting. |
| | 4: Mag1 AND Mag2 AND Mag3 | All of the signals need to fulfill the pick-up condition. Each signal has their own pick-up setting. |
| | 5: (Mag1 OR Mag2) AND Mag3 | Signals 1 OR 2 AND 3 need to fulfill the pick-up condition. Each signal has their own pick-up setting. |
| PSx Magnitude selection | 0: Currents 1: Voltages 2: Powers 3: Impedances and admittances 4: Others | Defines the measurement type used by the stage |
| PSx MagnitudeX | See table below. | Defines the measurement used by the stage. Available parameters depend on selected measurement type. |
| PSx MagnitudeX multiplier | -5 000 000...5 000 000 | Multiplies the selected measurement. 1 by default (no multiplication). See section "Magnitude multiplier" for more information. |

Analog values

The numerous analog signals have been divided into categories to help the user find the desired value.

Table. 5.5 - 35. Phase and residual current measurements (IL1, IL2, IL3, Io1 and Io2)

| Name | Description |
|-------------------------|---|
| ILx ff (p.u.) | Fundamental frequency RMS value (in p.u.) |
| ILx 2 nd h. | ILx 2 nd harmonic value (in p.u.) |
| ILx 3 rd h. | ILx 3 rd harmonic value (in p.u.) |
| ILx 4 th h. | ILx 4 th harmonic value (in p.u.) |
| ILx 5 th h. | ILx 5 th harmonic value (in p.u.) |
| ILx 7 th h. | ILx 7 th harmonic value (in p.u.) |
| ILx 9 th h. | ILx 9 th harmonic value (in p.u.) |
| ILx 11 th h. | ILx 11 th harmonic value (in p.u.) |
| ILx 13 th h. | ILx 13 th harmonic value (in p.u.) |
| ILx 15 th h. | ILx 15 th harmonic value (in p.u.) |
| ILx 17 th h. | ILx 17 th harmonic value (in p.u.) |
| ILx 19 th h. | ILx 19 th harmonic value (in p.u.) |
| ILx TRMS | ILx TRMS value (in p.u.) |
| ILx Ang | ILx Angle (degrees) |

Table. 5.5 - 36. Other current measurements

| Name | Description |
|------------|---|
| IOZ Mag | Zero sequence current value (in p.u.) |
| IOCALC Mag | Calculated IO value (in p.u.) |
| I1 Mag | Positive sequence current value (in p.u.) |
| I2 Mag | Negative sequence current value (in p.u.) |
| IOCALC Ang | Angle of calculated residual current (degrees) |
| I1 Ang | Angle of positive sequence current (degrees) |
| I2 Ang | Angle of negative sequence current (degrees) |
| IO1ResP | IO1 primary current of a current-resistive component |
| IO1CapP | IO1 primary current of a current-capacitive component |
| IO1ResS | IO1 secondary current of a current-resistive component |
| IO1CapS | IO1 secondary current of a current-capacitive component |
| IO2ResP | IO2 primary current of a current-resistive component |
| IO2CapP | IO2 primary current of a current-capacitive component |
| IO2ResS | IO2 secondary current of a current-resistive component |
| IO2CapS | IO2 secondary current of a current-capacitive component |

Table. 5.5 - 37. Voltage measurements

| Name | Description |
|---------|------------------------|
| UL12Mag | UL12 Primary voltage V |

| Name | Description |
|------------------|---|
| UL23Mag | UL23 Primary voltage V |
| UL31Mag | UL31 Primary voltage V |
| UL1Mag | UL1 Primary voltage V |
| UL2Mag | UL2 Primary voltage V |
| UL3Mag | UL3 Primary voltage V |
| UL12Ang | UL12 angle (degrees) |
| UL23Ang | UL23 angle (degrees) |
| UL31Ang | UL31 angle (degrees) |
| UL1Ang | UL1 angle (degrees) |
| UL2Ang | UL2 angle (degrees) |
| UL3Ang | UL3 angle (degrees) |
| U0Ang | UL0 angle (degrees) |
| U0CalcMag | Calculated residual voltage |
| U1 pos.seq.V Mag | Positive sequence voltage |
| U2 neg.seq.V Mag | Negative sequence voltage |
| U0CalcAng | Calculated residual voltage angle (degrees) |
| U1 pos.seq.V Ang | Positive sequence voltage angle (degrees) |
| U2 neg.seq.V Ang | Negative sequence voltage angle (degrees) |

Table. 5.5 - 38. Power measurements

| Name | Description |
|----------|---|
| S3PH | Three-phase apparent power S (kVA) |
| P3PH | Three-phase active power P (kW) |
| Q3PH | Three-phase reactive power Q (kvar) |
| tanfi3PH | Three-phase active power direction |
| cosfi3PH | Three-phase reactive power direction |
| SLx | Phase apparent power L1 / L2 / L3 S (kVA) |
| PLx | Phase active power L1 / L2 / L3 P (kW) |
| QLx | Phase reactive power L1 / L2 / L3 Q (kVar) |
| tanfiLx | Phase active power direction L1 / L2 / L3 |
| cosfiLx | Phase reactive power direction L1 / L2 / L3 |

Table. 5.5 - 39. Phase-to-phase and phase-to-neutral impedances, resistances and reactances

| Name | Description |
|--------|---|
| RLxPri | Resistance R L12, L23, L31, L1, L2, L3 primary (Ω) |
| XLxPri | Reactance X L12, L23, L31, L1, L2, L3 primary (Ω) |
| ZLxPri | Impedance Z L12, L23, L31, L1, L2, L3 primary (Ω) |
| RLxSec | Resistance R L12, L23, L31, L1, L2, L3 secondary (Ω) |
| XLxSec | Reactance X L12, L23, L31, L1, L2, L3 secondary (Ω) |

| Name | Description |
|----------|--|
| ZLxSec | Impedance Z L12, L23, L31, L1, L2, L3 secondary (Ω) |
| ZLxAngle | Impedance Z L12, L23, L31, L1, L2, L3 angle |

Table. 5.5 - 40. Other impedances, resistances and reactances

| Name | Description |
|-----------|--|
| RSeqPri | Positive Resistance R primary (Ω) |
| XSeqPri | Positive Reactance X primary (Ω) |
| RSeqSec | Positive Resistance R secondary (Ω) |
| XSeqSec | Positive Reactance X secondary (Ω) |
| ZSeqPri | Positive Impedance Z primary (Ω) |
| ZSeqSec | Positive Impedance Z secondary (Ω) |
| ZSeqAngle | Positive Impedance Z angle |

Table. 5.5 - 41. Conductances, susceptances and admittances (L1, L2, L3)

| Name | Description |
|-----------|---|
| GLxPri | Conductance G L1, L2, L3 primary (mS) |
| BLxPri | Susceptance B L1, L2, L3 primary (mS) |
| YLxPriMag | Admittance Y L1, L2, L3 primary (mS) |
| GLxSec | Conductance G L1, L2, L3 secondary (mS) |
| BLxSec | Susceptance B L1, L2, L3 secondary (mS) |
| YLxSecMag | Admittance Y L1, L2, L3 secondary (mS) |
| YLxAngle | Admittance Y L1, L2, L3 angle (degrees) |

Table. 5.5 - 42. Other conductances, susceptances and admittances

| Name | Description |
|---------|-------------------------------|
| G0Pri | Conductance G0 primary (mS) |
| B0Pri | Susceptance B0 primary (mS) |
| G0Sec | Conductance G0 secondary (mS) |
| B0Sec | Susceptance B0 secondary (mS) |
| Y0Pri | Admittance Y0 primary (mS) |
| Y0Sec | Admittance Y0 secondary (mS) |
| Y0Angle | Admittance Y0 angle |

Table. 5.5 - 43. Other measurements

| Name | Description |
|-------------|---------------------------|
| System f. | System frequency |
| Ref f1 | Reference frequency 1 |
| Ref f2 | Reference frequency 2 |
| M Thermal T | Motor thermal temperature |

| Name | Description |
|--------------------|--|
| F Thermal T | Feeder thermal temperature |
| T Thermal T | Transformer thermal temperature |
| RTD meas 1...16 | RTD measurement channels 1...16 |
| Ext RTD meas 1...8 | External RTD measurement channels 1...8 (ADAM) |
| mA input 7,8,15,16 | mA input channels 7, 8, 15, 16 |
| ASC 1...4 | Analog scaled curves 1...4 |

Magnitude multiplier

Programmable stages can be set to follow one, two or three analog measurements with the *PSx >/< Measurement setting* parameter. The user must choose a measurement signal value to be compared to the set value, and possibly also set a scaling for the signal. The image below is an example of scaling: a primary neutral voltage has been scaled to a percentage value for easier handling when setting up the comparator.

The scaling factor was calculated by taking the inverse value of a 20 kV system:

$$k = \frac{1}{20\,000\text{ V} / \sqrt{3}} = 0.008\,66$$

When this multiplier is in use, the full earth fault neutral voltage is 11 547 V primary which is then multiplied with the above-calculated scaling factor, inverting the final result to 100%. This way a pre-processed signal is easier to set, although it is also possible to just use the scaling factor of 1.0 and set the desired pick-up limit as the primary voltage. Similarly, any chosen measurement value can be scaled to the desired form.

Read-only parameters

The relay's *Info* page displays useful, real-time information on the state of the protection function. It is accessed either through the relay's HMI display, or through the setting tool software when it is connected to the relay and its Live Edit mode is active.

Table. 5.5 - 44. Information displayed by the function.

| Name | Range | Description |
|---|---|--|
| PSx >/< LN behaviour | 1: On 2: Blocked 3: Test 4: Test/Blocked 5: Off | Displays the mode of PGS block. This parameter is visible only when <i>Allow setting of individual LN mode</i> is enabled in <i>General</i> menu. |
| Condition | 0: Normal 1: Start 2: Trip 3: Blocked | Displays status of the function. |
| Expected operating time | -1800.000...1800.000s | Displays the expected operating time when a fault occurs. |
| Time remaining to trip | 0.000...1800.000s | When the function has detected a fault and counts down time towards a trip, this displays how much time is left before tripping occurs. |
| PSx Scaled magnitude X | -5 000 000...5 000 000 | Displays measurement value after multiplying it the value set to <i>PSx Magnitude multiplier</i> . |
| PSx >/< MeasMag1/ MagSet1 at the moment | -5 000 000...5 000 000 | The ratio between measured magnitude and the pick-up setting. |

| Name | Range | Description |
|--|------------------------|---|
| PSx >/< MeasMag2/ MagSet2 at the moment | -5 000 000...5 000 000 | The ratio between measured magnitude and the pick-up setting. |
| PSx >/< MeasMag3/ MagSet3 at the moment | -5 000 000...5 000 000 | The ratio between measured magnitude and the pick-up setting. |
| PSx >/< CalcMeasMag/ MagSet at the moment | -5 000 000...5 000 000 | The ratio between calculated magnitude and the pick-up setting. |

Pick-up

The *Pick-up setting Mag* setting parameter controls the pick-up of the PGx>/< function. This defines the maximum or minimum allowed measured magnitude before action from the function. The function constantly calculates the ratio between the set and the measured magnitudes. The user can set the reset hysteresis in the function (by default 3 %). It is always relative to the *Pick-up setting Mag* value.

Table. 5.5 - 45. Pick-up settings.

| Name | Range | Step | Default | Description |
|--------------------------------------|--|---------|---------|---|
| PS# Pick-up term Mag# | 0: Over > 1: Over (abs) > 2: Under < 3: Under (abs) < 4: Delta set (%) +/- > 5: Delta abs (%) > 6: Delta +/- measval 7: Delta abs measval | - | 0: Over | Comparator mode for the magnitude. See "Comparator modes" section below for more information. |
| PS# Pick-up setting Mag#/calc >/< | -5 000 000.0000...5 000 000.0000 | 0.0001 | 0.01 | Pick-up magnitude |
| PS# Setting hysteresis Mag# | 0.0000...50.0000% | 0.0001% | 3% | Setting hysteresis |
| Definite operating time delay | 0.000...1800.000s | 0.005s | 0.04s | Delay setting |
| Release time delays | 0.000...1800.000s | 0.005s | 0.06s | Pick-up release delay |

The pick-up activation of the function is not directly equal to the START signal generation of the function. The START signal is allowed if the blocking condition is not active.

Comparator modes

When setting the comparators, the user must first choose a comparator mode.

Table. 5.5 - 46. Comparator modes

| Mode | Description |
|-----------------|---|
| 0: Over > | Greater than. If the measured signal is greater than the set pick-up level, the comparison condition is fulfilled. |
| 1: Over (abs) > | Greater than (absolute). If the absolute value of the measured signal is greater than the set pick-up level, the comparison condition is fulfilled. |
| 2: Under < | Less than. If the measured signal is less than the set pick-up level, the comparison condition is fulfilled. The user can also set a blocking limit: the comparison is not active when the measured value is less than the set blocking limit. |

| Mode | Description |
|------------------------|--|
| 3: Under (abs) < | Less than (absolute). If the absolute value of the measured signal is less than the set pick-up level, the comparison condition is fulfilled. The user can also set a blocking limit: the comparison is not active when the measured value is less than the set blocking limit. |
| 4: Delta set (%) +/- > | Relative change over time. If the measured signal changes more than the set relative pick-up value in 20 ms, the comparison condition is fulfilled. The condition is dependent on direction. |
| 5: Delta abs (%) > | Relative change over time (absolute). If the measured signal changes more than the set relative pick-up value in 20 ms in either direction, the comparison condition is fulfilled. The condition is not dependent on direction. |
| 6: Delta +/- measval | Change over time. If the measured signal changes more than the set pick-up value in 20 ms, the comparison condition is fulfilled. The condition is dependent on direction. |
| 7: Delta abs measval | Change over time (absolute). If the measured signal changes more than the set pick-up value in 20 ms in either direction, the comparison condition is fulfilled. The condition is not dependent on direction. |

The pick-up level is set individually for each comparison. When setting up the pick-up level, the user needs to take into account the modes in use as well as the desired action. The pick-up limit can be set either as positive or as negative. Each pick-up level has a separate hysteresis setting which is 3 % by default.

The user can set the operating and releasing time delays for each stage.

Function blocking

The block signal is checked in the beginning of each program cycle. The blocking signal is received from the blocking matrix in the function's dedicated input. If the blocking signal is not activated when the pick-up element activates, a START signal is generated and the function proceeds to the time characteristics calculation.

If the blocking signal is active when the pick-up element activates, a BLOCKED signal is generated and the function does not process the situation further. If the START function has been activated before the blocking signal, it resets and the release time characteristics are processed similarly to when the pick-up signal is reset.

The blocking of the function causes an HMI display event and a time-stamped blocking event with information of the startup values of the selected signal and its fault type to be issued.

The blocking signal can also be tested in the commissioning phase by a software switch signal when the relay's testing mode "Enable stage forcing" is activated (*General* → *Device*).

The variables the user can set are binary signals from the system. The blocking signal needs to reach the device minimum of 5 ms before the set operating delay has passed in order for the blocking to activate in time.

Events and registers

The programmable stage function (abbreviated "PGS" in event block names) generates events and registers from the status changes in START, TRIP, and BLOCKED. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

The events triggered by the function are recorded with a time stamp and with process data values.

Table. 5.5 - 47. Event messages.

| Event block name | Event names |
|------------------|------------------|
| PGS1 | PS1 >/< Start ON |

| Event block name | Event names |
|------------------|-------------------|
| PGS1 | PS1 >/< Start OFF |
| PGS1 | PS1 >/< Trip ON |
| PGS1 | PS1 >/< Trip OFF |
| PGS1 | PS1 >/< Block ON |
| PGS1 | PS1 >/< Block OFF |
| PGS1 | PS2 >/< Start ON |
| PGS1 | PS2 >/< Start OFF |
| PGS1 | PS2 >/< Trip ON |
| PGS1 | PS2 >/< Trip OFF |
| PGS1 | PS2 >/< Block ON |
| PGS1 | PS2 >/< Block OFF |
| PGS1 | PS3 >/< Start ON |
| PGS1 | PS3 >/< Start OFF |
| PGS1 | PS3 >/< Trip ON |
| PGS1 | PS3 >/< Trip OFF |
| PGS1 | PS3 >/< Block ON |
| PGS1 | PS3 >/< Block OFF |
| PGS1 | PS4 >/< Start ON |
| PGS1 | PS4 >/< Start OFF |
| PGS1 | PS4 >/< Trip ON |
| PGS1 | PS4 >/< Trip OFF |
| PGS1 | PS4 >/< Block ON |
| PGS1 | PS4 >/< Block OFF |
| PGS1 | PS5 >/< Start ON |
| PGS1 | PS5 >/< Start OFF |
| PGS1 | PS5 >/< Trip ON |
| PGS1 | PS5 >/< Trip OFF |
| PGS1 | PS5 >/< Block ON |
| PGS1 | PS5 >/< Block OFF |
| PGS1 | reserved |
| PGS1 | reserved |
| PGS1 | PS6 >/< Start ON |
| PGS1 | PS6 >/< Start OFF |
| PGS1 | PS6 >/< Trip ON |
| PGS1 | PS6 >/< Trip OFF |
| PGS1 | PS6 >/< Block ON |
| PGS1 | PS6 >/< Block OFF |
| PGS1 | PS7 >/< Start ON |

| Event block name | Event names |
|------------------|--------------------|
| PGS1 | PS7 >/< Start OFF |
| PGS1 | PS7 >/< Trip ON |
| PGS1 | PS7 >/< Trip OFF |
| PGS1 | PS7 >/< Block ON |
| PGS1 | PS7 >/< Block OFF |
| PGS1 | PS8 >/< Start ON |
| PGS1 | PS8 >/< Start OFF |
| PGS1 | PS8 >/< Trip ON |
| PGS1 | PS8 >/< Trip OFF |
| PGS1 | PS8 >/< Block ON |
| PGS1 | PS8 >/< Block OFF |
| PGS1 | PS9 >/< Start ON |
| PGS1 | PS9 >/< Start OFF |
| PGS1 | PS9 >/< Trip ON |
| PGS1 | PS9 >/< Trip OFF |
| PGS1 | PS9 >/< Block ON |
| PGS1 | PS9 >/< Block OFF |
| PGS1 | PS10 >/< Start ON |
| PGS1 | PS10 >/< Start OFF |
| PGS1 | PS10 >/< Trip ON |
| PGS1 | PS10 >/< Trip OFF |
| PGS1 | PS10 >/< Block ON |
| PGS1 | PS10 >/< Block OFF |

The function registers its operation into the last twelve (12) time-stamped registers. The register of the function records the ON event process data for START, TRIP or BLOCKED. The table below presents the structure of the function's register content.

Table. 5.5 - 48. Register content.

| Date and time | Event | >/< Mag# | Mag#/Set# | Trip time remaining | Used SG |
|----------------------------|------------|--------------------------------------|--|---------------------|----------------------------|
| dd.mm.yyyy hh:mm:ss.mss | Event name | The numerical value of the magnitude | Ratio between the measured magnitude and the pick-up setting | 0 ms...1800s | Setting group 1...8 active |

6 Communication

6.1 Connections menu

"Connections" menu is found under "Communication" menu. It contains all basic settings of ethernet port and RS-485 serial port included with every AQ-200 device as well as settings of communication option cards.

Table. 6.1 - 49. Settings of back panel ethernet port.

| Name | Range | Description |
|-------------|---------------------------------------|--|
| IP address | 0.0.0.0...255.255.255.255 | Set IP address of the ethernet port in the back of the AQ-200 series device. |
| Netmask | 0.0.0.0...255.255.255.255 | Set netmask of the ethernet port in the back of the AQ-200 series device. |
| Gateway | 0.0.0.0...255.255.255.255 | Set gateway of the ethernet port in the back of the AQ-200 series device. |
| MAC-Address | 00-00-00-00-00-00...FF-FF-FF-FF-FF-FF | Indication of MAC address of the AQ-200 series device. |

Virtual Ethernet enables the device to be connected to multiple different networks simultaneously via one physical Ethernet connection. Virtual Ethernet has its own separate IP address and network configurations. All Ethernet-based protocol servers listen for client connections on the IP addresses of both the physical Ethernet and the Virtual Ethernet.

Table. 6.1 - 50. Virtual Ethernet settings.

| Name | Description |
|-----------------------------------|---|
| Enable virtual adapter (No / Yes) | Enable virtual adapter. Off by default. |
| IP address | Set IP address of the virtual adapter. |
| Netmask | Set netmask of the virtual adapter. |
| Gateway | Set gateway of the virtual adapter. |

AQ-200 series devices are always equipped with an RS-485 serial port. In the software it is identified as "Serial COM1" port.

Table. 6.1 - 51. Serial COM1 settings.

| Name | Range | Description |
|----------|--|---------------------------------|
| Bitrate | 0: 9600bps 1: 19200bps 2: 38400bps | Bitrate used by RS-485 port. |
| Databits | 7...8 | Databits used by RS-485 port. |
| Parity | 0: None 1: Even 2: Odd | Paritybits used by RS-485 port. |
| Stopbits | 1...2 | Stopbits used by RS-485 port. |

| Name | Range | Description |
|----------|---|---|
| Protocol | 0: None 1: ModbusRTU 2: ModbusIO 3: IEC103 4: SPA 5: DNP3 6: IEC101 | Communication protocol used by RS-485 port. |

AQ-200 series supports communication option card type that has serial fiber ports (Serial COM2) and RS-232 port (Serial COM3).

Table. 6.1 - 52. Serial COM2 settings.

| Name | Range | Description |
|------------|---|---|
| Bitrate | 0: 9600bps 1: 19200bps 2: 38400bps | Bitrate used by serial fiber channels. |
| Databits | 7...8 | Databits used by serial fiber channels. |
| Parity | 0: None 1: Even 2: Odd | Paritybits used by serial fiber channels. |
| Stopbits | 1...2 | Stopbits used by serial fiber channels. |
| Protocol | 0: None 1: ModbusRTU 2: ModbusIO 3: IEC103 4: SPA 5: DNP3 6: IEC101 | Communication protocol used by serial fiber channels. |
| Echo | 0: Off 1: On | Enable or disable echo. |
| Idle Light | 0: Off 1: On | Idle light behaviour. |

Table. 6.1 - 53. Serial COM3 settings.

| Name | Range | Description |
|----------|---|---|
| Bitrate | 0: 9600bps 1: 19200bps 2: 38400bps | Bitrate used by RS-232 port. |
| Databits | 7...8 | Databits used by RS-232 port. |
| Parity | 0: None 1: Even 2: Odd | Paritybits used by RS-232 port. |
| Stopbits | 1...2 | Stopbits used by RS-232 port. |
| Protocol | 0: None 1: ModbusRTU 2: ModbusIO 3: IEC103 4: SPA 5: DNP3 6: IEC101 | Communication protocol used by RS-232 port. |

6.2 Time synchronization

Time synchronization source can be selected with "Time synchronization" parameter at *Communication* → *Synchronization* → *General*.

Table. 6.2 - 54. General time synchronization source settings.

| Name | Range | Description |
|-----------------------------|---|---|
| Time synchronization source | 0: Internal 1: External NTP 2: External serial 3: IRIG-B 4: PTP | Selection of time synchronization source. |

6.2.1 Internal

If no external time synchronization source is available the mode should be set to "internal". This means that the AQ-200 device clock runs completely on its own. Time can be set to the device with AQtivate setting tool with *Commands* → *Sync Time* command or in the clock view from the HMI. When using *Sync time* command AQtivate sets the time to device the connected computer is currently using. Please note that the clock doesn't run when the device is powered off.

6.2.2 NTP

When enabled, the NTP (Network Time Protocol) service can use external time sources to synchronize the device's system time. The NTP client service uses an Ethernet connection to connect to the NTP time server. NTP can be enabled by setting the primary time server and the secondary time server parameters to the address of the system's NTP time source(s).

Table. 6.2.2 - 55. Server settings.

| Name | Range | Description |
|-------------------------------|---------------------------|---|
| Primary time server address | 0.0.0.0...255.255.255.255 | Defines the address of the primary NTP server. Setting this parameter at "0.0.0.0" means that the server is not in use. |
| Secondary time server address | 0.0.0.0...255.255.255.255 | Defines the address of the secondary (or backup) NTP server. Setting this parameter at "0.0.0.0" means that the server is not in use. |

Table. 6.2.2 - 56. Status.

| Name | Range | Description |
|-----------------------------|-------------------------------|---|
| NTP quality for events | 0: No sync 1: Synchronized | Displays the status of the NTP time synchronization at the moment. NOTE: This indication is not valid if another time synchronization method is used (external serial). |
| NTP-processed message count | 0...4294967295 | Displays the number of messages processed by the NTP protocol. |

Additionally, the time zone of the relay can be set by connecting to the relay and the selecting the time zone at *Commands* → *Set time zone* in AQtivate setting tool.

6.2.3 PTP

PTP, Precision Time Protocol, is a higher accuracy synchronization protocol for Ethernet networks. Accuracy of microsecond level can be achieved.

In a PTP network the devices can have different roles. There is a Grandmaster clock that is the clock source, normally connected to GPS. Most devices take the role of an Ordinary clock which receive synchronization from the Grandmaster clock. In the PTP network there can also be Boundary and Transparent clock roles, these are most often PTP enabled switches that can redistribute time or compensate for their delays.

BMCA, Best Master Clock Algorithm, is an algorithm that PTP devices use to determine the best clock source. This is utilized in network segments where there are 2 Grandmaster clocks or in situations where there are no Grandmaster available. In these situations the devices make a selection which device will act as the clock source. In these cases without GPS synchronized clock source, the accuracy between the devices is still high.

Settings

Select PTP as the time synchronization source from *Communication* → *Synchronization* → *General* menu.

The following settings are available in *Communication* → *Synchronization* → *PTP* menu.

Table. 6.2.3 - 57. PTP time synchronization settings.

| Name | Range | Description |
|---------------|--|---|
| Role | 0: Auto (Default) 1: Master 2: Slave | In Auto mode, the device can take both the role of a clock source and clock consumer. In Master mode the device is forced to consider itself to be a clock source. In Slave mode the device is forced to be a clock consumer. |
| Mechanism | 0: P2P (Default) 1: E2E | Delay measurement mechanism used. Peer-to-peer can utilize the PTP enabled switches as transparent or boundary clocks while End-to-end must be used if non-PTP enabled switches are found in the network. |
| Domain number | 0...255 | PTP devices can be set to belong to a grouping called domain. Devices in same domain is primarily being synchronized together. |

Status indications

The following status indications are available in *Communication* → *Synchronization* → *PTP* menu.

Table. 6.2.3 - 58. PTP status indications

| Name | Description |
|-----------------|---|
| State | State of the PTP application (Master, Slave, Listening). |
| Best master | Identification of best master in network. Id consist of MAC address plus id number. |
| Last receive | Time when last synchronization frame was received. |
| Message sent | Diagnostic message counter. |
| Message receive | Diagnostic message counter. |
| PTP timesource | Diagnostic number describing the current time source. |

6.3 Communication protocols

6.3.1 IEC 61850

The user can enable the IEC 61850 protocol in device models that support this protocol at *Communication* → *Protocols* → *IEC61850*. AQ-21x frame units support Edition 1 of IEC 61850. AQ-25x frame units support both Edition 1 and 2 of IEC 61850. The following services are supported by IEC 61850 in Arcteq devices:

- Up to six data sets (predefined data sets can be edited with the IEC 61850 tool in AQtivate)
- Report Control Blocks (both buffered and unbuffered reporting)
- Control ('Direct operate with normal security', 'Select before operate with normal security', 'Direct with enhanced security' and 'Select before operate with enhanced security' control sequences)
- Disturbance recording file transfer
- GOOSE
- Time synchronization

The device's current IEC 61850 setup can be viewed and edited with the IEC61850 tool (*Tools* → *Communication* → *IEC 61850*).

Settings.

The general setting parameters for the IEC 61850 protocol are visible both in AQtivate and in the local HMI. The settings are described in the table below.

Table. 6.3.1 - 59. General settings.

| Name | Range | Step | Default | Description |
|--|---|----------|-------------------|---|
| Enable IEC 61850 | 0: Disabled 1: Enabled | - | 0: Disabled | Enables and disables the IEC 61850 communication protocol. |
| Reconfigure IEC 61850 | 0: - 1: Reconfigure | - | 0: - | Reconfigures IEC 61850 settings. |
| IP port | 0...65 535 | 1 | 102 | Defines the IP port used by the IEC 61850 protocol. The standard (and default) port is 102. |
| IEC61850 edition | 0: Ed1 0: Ed2 | - | - | Displays the IEC61850 edition used by the device. Edition can be chosen by loading a new CID file at <i>Tools</i> → <i>Communication</i> → <i>IEC 61850</i> with <i>Open</i> button. |
| Control Authority switch | 0: Remote Control 1: Station Level Control | - | 0: Remote Control | The device can be set to allow object control via IEC 61850 only from clients that are of category Station level control. This would mean that other Remote control clients would not be allowed to control. In Remote control mode all IEC 61850 clients of both remote and station level category are allowed to control objects. |
| Ethernet port | 0: All 1: COM A 2: Double ethernet card | - | 0: All | Determines which ports use IEC61850. Visible if double ethernet option card is found in the device. |
| Configure GOOSE Subscriber from CID file allowed | 0: Disabled 1: Allowed | - | 0: Disabled | In edition 2 of IEC 61850 GOOSE subscriber configuration is a part of the CID file. Determines if it is possible to import published GOOSE settings of another device with a CID file and set them to GOOSE input at <i>Tools</i> → <i>Communication</i> → <i>IEC 61850</i> → <i>GOOSE subscriptions</i> . |
| General deadband | 0.1...10.0 % | 0.1 % | 2 % | Determines the general data reporting deadband settings. |
| Active energy deadband | 0.1...1000.0 kWh | 0.1 kWh | 2 kWh | Determines the data reporting deadband settings for this measurement. |
| Reactive energy deadband | 0.1...1000.0 kVar | 0.1 kVar | 2 kVar | Determines the data reporting deadband settings for this measurement. |
| Active power deadband | 0.1...1000.0 kW | 0.1 kW | 2 kW | Determines the data reporting deadband settings for this measurement. |
| Reactive power deadband | 0.1...1000.0 kVar | 0.1 kVar | 2 kVar | Determines the data reporting deadband settings for this measurement. |

| Name | Range | Step | Default | Description |
|----------------------------|---|---------|---------|---|
| Apparent power deadband | 0.1...1000.0 kVA | 0.1 kVA | 2 kVA | Determines the data reporting deadband settings for this measurement. |
| Power factor deadband | 0.01...0.99 | 0.01 | 0.05 | Determines the data reporting deadband settings for this measurement. |
| Frequency deadband | 0.01...1.00 Hz | 0.01 Hz | 0.1 Hz | Determines the data reporting deadband settings for this measurement. |
| Current deadband | 0.01...50.00 A | 0.01 A | 5 A | Determines the data reporting deadband settings for this measurement. |
| Residual current deadband | 0.01...50.00 A | 0.01 A | 0.2 A | Determines the data reporting deadband settings for this measurement. |
| Voltage deadband | 0.01...5000.00 V | 0.01 V | 200 V | Determines the data reporting deadband settings for this measurement. |
| Residual voltage deadband | 0.01...5000.00 V | 0.01 V | 200 V | Determines the data reporting deadband settings for this measurement. |
| Angle measurement deadband | 0.1...5.0 deg | 0.1 deg | 1 deg | Determines the data reporting deadband settings for this measurement. |
| Integration time | 0...10 000 ms | 1 ms | 0 ms | Determines the integration time of the protocol. If this parameter is set to "0 ms", no integration time is in use. |
| GOOSE Ethernet port | 0: All 1: COM A 2: Double ethernet card | - | 0: All | Determines which ports can use GOOSE communication. Visible if double ethernet option card is found in the device. |

For more information on the IEC 61850 communication protocol support, please refer to the conformance statement documents (www.arcteq.fi/downloads/ → AQ-200 series → Resources).

6.3.2 Modbus/TCP and Modbus/RTU

The device supports both Modbus/TCP and Modbus/RTU communication. Modbus/TCP uses the Ethernet connection to communicate with Modbus/TCP clients. Modbus/RTU is a serial protocol that can be selected for the available serial ports.

The following Modbus function types are supported:

- Read multiple holding registers (function code 3)
- Write single holding register (function code 6)
- Write multiple holding registers (function code 16)
- Read/Write multiple registers (function code 23)

The following data can be accessed using both Modbus/TCP and Modbus/RTU:

- Device measurements
- Device I/O
- Commands
- Events
- Time

Once the configuration file has been loaded, the user can access the Modbus map of the relay via the AQtivate software (*Tools* → *Communication* → *Modbus Map*). Please note that holding registers start from 1. Some masters might begin numbering holding register from 0 instead of 1; this will cause an offset of 1 between the relay and the master. Modbus map can be edited with Modbus Configurator (*Tools* → *Communication* → *Modbus Configurator*).

Table. 6.3.2 - 60. Modbus/TCP settings.

| Parameter | Range | Description |
|-------------------|--|---|
| Enable Modbus/TCP | 0: Disabled 1: Enabled | Enables and disables the Modbus/TCP on the Ethernet port. |
| IP port | 0...65 535 | Defines the IP port used by Modbus/TCP. The standard port (and the default setting) is 502. |
| Ethernet port | 0: All 1: COM A 2: Double Ethernet card | Defines which ethernet ports are available for Modbus connection. Visible if any double ethernet option card is installed in the device. |
| Event read mode | 0: Get oldest available 1: Continue previous connection 2: New events only | 0: Get oldest event possible (Default) 1: Continue with the event idx from previous connection 2: Get only new events from connection time and forward. |

Table. 6.3.2 - 61. Modbus/RTU settings.

| Parameter | Range | Description |
|---------------|---------|--|
| Slave address | 1...247 | Defines the Modbus/RTU slave address for the unit. |

Reading events

Modbus protocol does not support time-stamped events by standard definition. This means that every vendor must come up with their own definition how to transfer events from the device to the client. In AQ-200 series devices events can be read from HR17...HR22 holding registers. HR17 contains the event-code, HR18...20 contains the time-stamp in UTC, HR21 contains a sequential index and HR22 is reserved for future expansion. See the Modbus Map for more information. The event-codes and their meaning can be found from Event list (*Tools → Events and Logs → Event list* in setting tool). The event-code in HR17 is 0 if no new events can be found in the device event-buffer. Every time HR17 is read from client the event in event-buffer is consumed and on following read operation the next un-read event information can be found from event registers. HR11...HR16 registers contains a back-up of last read event. This is because some users want to double-check that no events were lost

6.3.3 GOOSE

Arcteq relays support both GOOSE publisher and GOOSE subscriber. GOOSE subscriber is enabled with the "GOOSE subscriber enable" parameter at *Communication → Protocols → IEC 61850/GOOSE*. The GOOSE inputs are configured using either the local HMI or the AQtivate software.

There are up to 64 GOOSE inputs available for use. Each of the GOOSE inputs also has a corresponding input quality signal which can also be used in internal logic. The quality is good, when the input quality is low (that is, when the quality is marked as "0"). The value of the input quality can increase as a result of a GOOSE time-out or a configuration error, for example. The status and quality of the various logical input signals can be viewed at the *GOOSE IN status* and *GOOSE IN quality* tabs at *Control → Device I/O → Logical signals*.

General GOOSE setting

The table below presents general settings for GOOSE publisher.

Table. 6.3.3 - 62. General GOOSE publisher settings.

| Name | Range | Description |
|--------------------------------------|-----------------------|---|
| GOOSE control block 1 simulation bit | 0: Disabled (Default) | The publisher will publish frames with simulation bit active if enabled. For GOOSE simulation testing purposes. |
| GOOSE control block 2 simulation bit | 1: Enabled | |

The table below presents general settings for GOOSE subscriber

Table. 6.3.3 - 63. General GOOSE subscriber settings.

| Name | Range | Description |
|--|---|--|
| GOOSE subscriber enable | 0: Disabled (Default) 1: Enabled | Enables or disables GOOSE subscribing for the device. |
| Not used GOOSE input Quality | 1: Bad quality (1) 2: Good quality (0) | Defines what state should GOOSE input quality signal to be in the logic if the input has been set as "disabled". |
| Subscriber checks GoCRef | 0: No (Default) 1: Yes | When subscriber sees GOOSE frame it checks APPID and Conf. Rev but can also check if GoCRef or SqNum match. |
| Subscriber checks SqNum | | |
| Subscriber process simulation messages | 0: No (Default) 1: Yes | Subscriber can be set to process frames which are published with simulation bit high if enabled |

GOOSE input settings

The table below presents the different settings available for all 64 GOOSE inputs.

Table. 6.3.3 - 64. GOOSE input settings.

| Name | Range | Description |
|------------------------------------|--|--|
| In use | 0: No (Default) 1: Yes | Enables and disables the GOOSE input in question. |
| Application ID ("AppID") | 0x0...0x3FFF | Defines the application ID that will be matched with the publisher's GOOSE control block. |
| Configuration revision ("ConfRev") | 1...2 ³² -1 | Defines the configuration revision that will be matched with the publisher's GOOSE control block. |
| Data index ("DataIdx") | 0...99 | Defines the data index of the value in the matched published frame. It is the status of the GOOSE input. |
| NextIdx is quality | 0: No (Default) 1: Yes | Selects whether or not the next received input is the quality bit of the GOOSE input. |
| Data type | 0: Boolean (Default) 1: Integer 2: Unsigned 3: Floating point | Selects the data type of the GOOSE input. |

| Name | Range | Description |
|-------------------------|-------|--|
| Control block reference | - | GOOSE subscriber can be set to check the GCB reference of the published GOOSE frame. This setting is automatically filled when Ed2 GOOSE configuration is done by importing cid file of the publisher. |

GOOSE input descriptions

GOOSE inputs can be given a description. The user defined description are displayed in most of the menus (logic editor, matrix, block settings etc.).

Table. 6.3.3 - 65. GOOSE input user description.

| Name | Range | Default | Description |
|--------------------------------|-------------------|------------|---|
| User editable description GI x | 1...31 characters | GOOSE IN x | Description of the GOOSE input. This description is used in several menu types for easier identification. |

GOOSE events

GOOSE signals generate events status changes. The user can select which event messages are stored in the main event buffer: ON, OFF, or both. The events triggered by the function are recorded with a time stamp and with process data values. The time stamp resolution is 1 ms.

Table. 6.3.3 - 66. GOOSE event

| Event block name | Event name |
|------------------|--|
| GOOSE1...GOOSE2 | GOOSE IN 1...64 ON/OFF |
| GOOSE3...GOOSE4 | GOOSE IN 1...64 quality Bad/Good |
| GOOSE5...GOOSE6 | GOOSE Subscription status 1...64 Active/Not active |
| GOOSE7...GOOSE8 | GOOSE Processing simulated messages 1...64 True/False |
| GOOSE9...GOOSE10 | GOOSE Subscription needs commissioning 1...64 True/False |

Setting the publisher

The configuration of the GOOSE publisher is done using the IEC 61850 tool in AQtivate (*Tools* → *Communication* → *IEC 61850*). Refer to *AQtivate-200 Instruction manual* for more information on how to set up GOOSE publisher.

6.3.4 IEC 103

IEC 103 is the shortened form of the international standard IEC 60870-5-103. The AQ-200 series units are able to run as a secondary (slave) station. The IEC 103 protocol can be selected for the serial ports that are available in the device. A primary (master) station can then communicate with the AQ-200 device and receive information by polling from the slave device. The transfer of disturbance recordings is not supported.

NOTE: Once the configuration file has been loaded, the IEC 103 map of the relay can be found in the AQtivate software (*Tools* → *IEC 103 map*).

The following table presents the setting parameters for the IEC 103 protocol.

| Name | Range | Step | Default | Description |
|---------------|---------|------|---------|---|
| Slave address | 1...254 | 1 | 1 | Defines the IEC 103 slave address for the unit. |

| Name | Range | Step | Default | Description |
|----------------------|---------------|------|---------|---|
| Measurement interval | 0...60 000 ms | 1 ms | 2000 ms | Defines the interval for the measurements update. |

6.3.5 IEC 101/104

The standards IEC 60870-5-101 and IEC 60870-5-104 are closely related. Both are derived from the IEC 60870-5 standard. On the physical layer the IEC 101 protocol uses serial communication whereas the IEC 104 protocol uses Ethernet communication. The IEC 101/104 implementation works as a slave in the unbalanced mode.

For detailed information please refer to the IEC 101/104 interoperability document (www.arcteq.fi/downloads/ → AQ-200 series → Resources → "AQ-200 IEC101 & IEC104 interoperability").

IEC 101 settings

Table. 6.3.5 - 67. IEC 101 settings.

| Name | Range | Step | Default | Description |
|---------------------------------|------------|------|---------|--|
| Common address of ASDU | 0...65 534 | 1 | 1 | Defines the common address of the application service data unit (ASDU) for the IEC 101 communication protocol. |
| Common address of ASDU size | 1...2 | 1 | 2 | Defines the size of the common address of ASDU. |
| Link layer address | 0...65 534 | 1 | 1 | Defines the address for the link layer. |
| Link layer address size | 1...2 | 1 | 2 | Defines the address size of the link layer. |
| Information object address size | 2...3 | 1 | 3 | Defines the address size of the information object. |
| Cause of transmission size | 1...2 | 1 | 2 | Defines the cause of transmission size. |

IEC 104 settings

Table. 6.3.5 - 68. IEC 104 settings.

| Name | Range | Step | Default | Description |
|------------------------|---|------|-------------|--|
| IEC 104 enable | 0: Disabled 1: Enabled | - | 0: Disabled | Enables and disables the IEC 104 communication protocol. |
| IP port | 0...65 535 | 1 | 2404 | Defines the IP port used by the protocol. |
| Ethernet port | 0: All 1: COM A 2: Double Ethernet card | - | 0: All | Defines which ethernet ports are available for Modbus connection. Visible if any double ethernet option card is installed in the device. |
| Common address of ASDU | 0...65 534 | 1 | 1 | Defines the common address of the application service data unit (ASDU) for the IEC 104 communication protocol. |

Measurement scaling coefficients

The measurement scaling coefficients are available for the following measurements, in addition to the general measurement scaling coefficient:

Table. 6.3.5 - 69. Measurements with scaling coefficient settings.

| Name | Range |
|------------------|--|
| Active energy | 0: No scaling 1: 1/10 2: 1/100 3: 1/1000 4: 1/10 000 5: 1/100 000 6: 1/1 000 000 7: 10 8: 100 9: 1000 10: 10 000 11: 100 000 12: 1 000 000 |
| Reactive energy | |
| Active power | |
| Reactive power | |
| Apparent power | |
| Power factor | |
| Frequency | |
| Current | |
| Residual current | |
| Voltage | |
| Residual voltage | |
| Angle | |

Deadband settings.

Table. 6.3.5 - 70. Analog change deadband settings.

| Name | Range | Step | Default | Description |
|----------------------------|------------------|---------|---------|---|
| General deadband | 0.1...10.0% | 0.1% | 2% | Determines the general data reporting deadband settings. |
| Active energy deadband | 0.1...1000.0kWh | 0.1kWh | 2kWh | Determines the data reporting deadband settings for this measurement. |
| Reactive energy deadband | 0.1...1000.0kVar | 0.1kVar | 2kVar | |
| Active power deadband | 0.1...1000.0kW | 0.1kW | 2kW | |
| Reactive power deadband | 0.1...1000.0kVar | 0.1kVar | 2kVar | |
| Apparent power deadband | 0.1...1000.0kVA | 0.1kVA | 2kVA | |
| Power factor deadband | 0.01...0.99 | 0.01 | 0.05 | |
| Frequency deadband | 0.01...1.00Hz | 0.01Hz | 0.1Hz | |
| Current deadband | 0.01...50.00A | 0.01A | 5A | |
| Residual current deadband | 0.01...50.00A | 0.01A | 0.2A | |
| Voltage deadband | 0.01...5000.00V | 0.01V | 200V | |
| Residual voltage deadband | 0.01...5000.00V | 0.01V | 200V | |
| Angle measurement deadband | 0.1...5.0deg | 0.1deg | 1deg | |
| Integration time | 0...10 000ms | 1ms | - | Determines the integration time of the protocol. If this parameter is set to "0 ms", no integration time is in use. |

6.3.6 SPA

The device can act as a SPA slave. SPA can be selected as the communication protocol for the RS-485 port (Serial COM1). When the device has a serial option card, the SPA protocol can also be selected as the communication protocol for the serial fiber (Serial COM2) ports or RS-232 (Serial COM3) port. Please refer to the chapter "Construction and installation" in the device manual to see the connections for these modules.

The data transfer rate of SPA is 9600 bps, but it can also be set to 19 200 bps or 38 400 bps. As a slave the device sends data on demand or by sequenced polling. The available data can be measurements, circuit breaker states, function starts, function trips, etc. The full SPA signal map can be found in AQtivate (*Tools* → *SPA map*).

The SPA event addresses can be found at *Tools* → *Events and logs* → *Event list*.

Table. 6.3.6 - 71. SPA setting parameters.

| Name | Range | Description |
|---------------|---------------------------|--|
| SPA address | 1...899 | SPA slave address. |
| UTC time sync | 0: Disabled 1: Enabled | Determines if UTC time is used when synchronizing time. When disabled it is assumed time synchronization uses local time. If enabled it is assumed that UTC time is used. When UTC time is used the timezone must be set at <i>Commands</i> → <i>Set time zone</i> . |

NOTE!



To access SPA map and event list, an .aqs configuration file should be downloaded from the relay.

6.3.7 DNP3

DNP3 is a protocol standard which is controlled by the DNP Users Group (www.dnp.org). The implementation of a DNP3 slave is compliant with the DNP3 subset (level) 2, but it also contains some functionalities of the higher levels. For detailed information please refer to the DNP3 Device Profile document (www.arcteq.fi/downloads/ → AQ-200 series → Resources).

Settings

The following table describes the DNP3 setting parameters.

Table. 6.3.7 - 72. Settings.

| Name | Range | Step | Default | Description |
|-----------------|---|------|-------------|--|
| Enable DNP3 TCP | 0: Disabled 1: Enabled | - | 0: Disabled | Enables and disables the DNP3 TCP communication protocol when the Ethernet port is used for DNP3. If a serial port is used, the DNP3 protocol can be enabled from <i>Communication</i> → <i>DNP3</i> . |
| IP port | 0...65 535 | 1 | 20 000 | Defines the IP port used by the protocol. |
| Ethernet port | 0: All 1: COM A 2: Double Ethernet card | - | 0: All | Defines which ethernet ports are available for Modbus connection. Visible if any double ethernet option card is installed in the device. |

| Name | Range | Step | Default | Description |
|-----------------------------------|------------------------|------|---------|--|
| Slave address | 1...65 519 | 1 | 1 | Defines the DNP3 slave address of the unit. |
| Master address | 1...65 534 | 1 | 2 | Defines the address for the allowed master. |
| Link layer time-out | 0...60 000ms | 1ms | 0ms | Defines the length of the time-out for the link layer. |
| Link layer retries | 1...20 | 1 | 1 | Defines the number of retries for the link layer. |
| Diagnostic - Error counter | 0...2 ³² -1 | 1 | - | Counts the total number of errors in received and sent messages. |
| Diagnostic - Transmitted messages | 0...2 ³² -1 | 1 | - | Counts the total number of transmitted messages. |
| Diagnostic - Received messages | 0...2 ³² -1 | 1 | - | Counts the total number of received messages. |

Default variations

Table. 6.3.7 - 73. Default variations.

| Name | Range | Default | Description |
|----------------------------------|--|----------|---|
| Group 1 variation (BI) | 0: Var 1 1: Var 2 | 0: Var 1 | Selects the variation of the binary signal. |
| Group 2 variation (BI change) | 0: Var 1 1: Var 2 | 1: Var 2 | Selects the variation of the binary signal change. |
| Group 3 variation (DBI) | 0: Var 1 1: Var 2 | 0: Var 1 | Selects the variation of the double point signal. |
| Group 4 variation (DBI change) | 0: Var 1 1: Var 2 | 1: Var 2 | Selects the variation of the double point signal. |
| Group 20 variation (CNTR) | 0: Var 1 1: Var 2 2: Var 5 3: Var 6 | 0: Var 1 | Selects the variation of the control signal. |
| Group 22 variation (CNTR change) | 0: Var 1 1: Var 2 2: Var 5 3: Var 6 | 2: Var 5 | Selects the variation of the control signal change. |
| Group 30 variation (AI) | 0: Var 1 1: Var 2 2: Var 3 3: Var 4 4: Var 5 | 4: Var 5 | Selects the variation of the analog signal. |
| Group 32 variation (AI change) | 0: Var 1 1: Var 2 2: Var 3 3: Var 4 4: Var 5 5: Var 7 | 4: Var 5 | Selects the variation of the analog signal change. |

Setting the analog change deadbands

Table. 6.3.7 - 74. Analog change deadband settings.

| Name | Range | Step | Default | Description |
|----------------------------|------------------|---------|---------|---|
| General deadband | 0.1...10.0% | 0.1% | 2% | Determines the general data reporting deadband settings. |
| Active energy deadband | 0.1...1000.0kWh | 0.1kWh | 2kWh | Determines the data reporting deadband settings for this measurement. |
| Reactive energy deadband | 0.1...1000.0kVar | 0.1kVar | 2kVar | |
| Active power deadband | 0.1...1000.0kW | 0.1kW | 2kW | |
| Reactive power deadband | 0.1...1000.0kVar | 0.1kVar | 2kVar | |
| Apparent power deadband | 0.1...1000.0kVA | 0.1kVA | 2kVA | |
| Power factor deadband | 0.01...0.99 | 0.01 | 0.05 | |
| Frequency deadband | 0.01...1.00Hz | 0.01Hz | 0.1Hz | |
| Current deadband | 0.01...50.00A | 0.01A | 5A | |
| Residual current deadband | 0.01...50.00A | 0.01A | 0.2A | |
| Voltage deadband | 0.01...5000.00V | 0.01V | 200V | |
| Residual voltage deadband | 0.01...5000.00V | 0.01V | 200V | |
| Angle measurement deadband | 0.1...5.0deg | 0.1deg | 1deg | |
| Integration time | 0...10 000ms | 1ms | 0ms | Determines the integration time of the protocol. If this parameter is set to "0 ms", no integration time is in use. |

6.3.8 Modbus I/O

The Modbus I/O protocol can be selected to communicate on the available serial ports. The Modbus I/O is actually a Modbus/RTU master implementation that is dedicated to communicating with serial Modbus/RTU slaves such as RTD input modules. Up to three (3) Modbus/RTU slaves can be connected to the same bus polled by the Modbus I/O implementation. These are named I/O Module A, I/O Module B and I/O Module C. Each of the modules can be configured using parameters in the following two tables.

Table. 6.3.8 - 75. Module settings.

| Name | Range | Description |
|----------------------|------------------------------------|---|
| I/O module X address | 0...247 | Defines the Modbus unit address for the selected I/O Module (A, B, or C). If this setting is set to "0", the selected module is not in use. |
| Module x type | 0: ADAM-4018+ 1: ADAM-4015 | Selects the module type. |
| Channels in use | Channel 0...Channel 7 (or None) | Selects the number of channels to be used by the module. |

Table. 6.3.8 - 76. Channel settings.

| Name | Range | Step | Default | Description |
|-------------------|--|------|----------------|--|
| Thermocouple type | 0: +/- 20mA 1: 4...20mA 2: Type J 3: Type K 4: Type T 5: Type E 6: Type R 7: Type S | - | 1: 4...20mA | Selects the thermocouple or the mA input connected to the I/O module. Types J, K, T and E are nickel-alloy thermocouples, while Types R and S are platinum/rhodium-alloy thermocouples. |
| Input value | -101.0...2000.0 | 0.1 | - | Displays the input value of the selected channel. |
| Input status | 0: Invalid 1: OK | - | - | Displays the input status of the selected channel. |

6.4 Analog fault registers

At *Communication* → *General I/O* → *Analog fault registers* the user can set up to twelve (12) channels to record the measured value when a protection function starts or trips. These values can be read in two ways: locally from this same menu, or through a communication protocol if one is in use.

The following table presents the setting parameters available for the 12 channels.

Table. 6.4 - 77. Fault register settings.

| Name | Range | Step | Default | Description |
|-----------------------|---|------|----------------|--|
| Select record source | Not in use I>, I>>, I>>>, I>>>> (IL1, IL2, IL3) Id>, Id>>, Id>>>, Id>>>> (IL1, IL2, IL3) IO>, IO>>, IO>>>, IO>>>> (IO) IOd>, IOd>>, IOd>>>, IOd>>>> (IO) FLX (Fault locator) | - | Not in use | Selects the protection function and its stage to be used as the source for the fault register recording. The user can choose between non-directional overcurrent, directional overcurrent, non-directional earth fault, directional earth fault, and fault locator functions. |
| Select record trigger | TRIP signal START signal START and TRIP signals | - | 0: TRIP signal | Selects what triggers the fault register recording: the selected function's TRIP signal, its START signal, or either one. |
| Recorded fault value | - 1000 000.00...1 000 000.00 | 0.01 | - | Displays the recorded measurement value at the time of the selected fault register trigger. |

6.5 Real-time measurements to communication

With the *Real-time signals to communication* menu the user can report measurements to SCADA in a faster interval. The real measurement update delay depends on the used communication protocol and equipment used. Up to eight (8) magnitudes can be selected. The recorded value can be either a per-unit value or a primary value (set by the user).

Measurable values

Function block uses analog current and voltage measurement values. The relay uses these values as the basis when it calculates the primary and secondary values of currents, voltages, powers, impedances and other values.

Table. 6.5 - 78. Available measured values.

| Signals | Description |
|---|---|
| Currents | |
| IL1 (ff), IL2 (ff), IL3 (ff), IO1 (ff), IO2 (ff) | Fundamental frequency (RMS) current measurement values of phase currents and residual currents. |
| IL1 (TRMS), IL2 (TRMS), IL3 (TRMS), IO1 (TRMS), IO2 (TRMS) | TRMS current measurement values of phase currents and residual currents. |
| IL1, IL2, IL3, IO1, IO2 & 2 nd h., 3 rd h., 4 th h., 5 th h., 7 th h., 9 th h., 11 th h., 13 th h., 15 th h., 17 th h., 19 th h. | Magnitudes of the phase current components: 2 nd harmonic, 3 rd harmonic, 4 th harmonic, 5 th harmonic 7 th , harmonic 9 th , harmonic 11 th , harmonic 13 th , harmonic 15 th , harmonic 17 th , harmonic 19 th harmonic current. |
| I1, I2, IOZ | Positive sequence current, negative sequence current and zero sequence current. |
| IOCalcMag | Residual current calculated from phase currents. |
| IL1Ang, IL2Ang, IL3Ang, IO1Ang, IO2Ang, IOCalcAng I1Ang, I2Ang | Angles of each measured current. |
| Voltages | |
| UL1Mag, UL2Mag, UL3Mag, UL12Mag, UL23Mag, UL31Mag, U0Mag, U0CalcMag | Magnitudes of phase voltages, phase-to-phase voltages and residual voltages. |
| U1 Pos.seq V mag, U2 Neg.seq V mag | Positive and negative sequence voltages. |
| UL1Ang, UL2Ang, UL3Ang, UL12Ang, UL23Ang, UL31Ang, U0Ang, U0CalcAng | Angles of phase voltages, phase-to-phase voltages and residual voltages. |
| U1 Pos.seq V Ang, U2 Neg.seq V Ang | Positive and negative sequence angles. |
| Powers | |
| S3PH P3PH Q3PH | Three-phase apparent, active and reactive power. |
| SL1, SL2, SL3, PL1, PL2, PL3, QL1, QL2, QL3 | Phase apparent, active and reactive powers. |
| tanfi3PH tanfiL1 tanfiL2 tanfiL3 | Tan (ϕ) of three-phase powers and phase powers. |
| cosfi3PH cosfiL1 cosfiL2 cosfiL3 | Cos (ϕ) of three-phase powers and phase powers. |
| Impedances and admittances | |
| RL12, RL23, RL31 XL12, XL23, XL31 RL1, RL2, RL3 XL1, XL2, XL3 Z12, Z23, Z31 ZL1, ZL2, ZL3 | Phase-to-phase and phase-to-neutral resistances, reactances and impedances. |

| Signals | Description |
|---|--|
| Z12Ang, Z23Ang, Z31Ang, ZL1Ang, ZL2Ang, ZL3Ang | Phase-to-phase and phase-to-neutral impedance angles. |
| Rseq, Xseq, Zseq RseqAng, XseqAng, ZseqAng | Positive sequence resistance, reactance and impedance values and angles. |
| GL1, GL2, GL3, G0 BL1, BL2, BL3, B0 YL1, YL2, YL3, Y0 | Conductances, susceptances and admittances. |
| YL1angle, YL2angle, YL3angle, Y0angle | Admittance angles. |
| Others | |
| System f. | Used tracking frequency at the moment. |
| Ref f1 | Reference frequency 1. |
| Ref f2 | Reference frequency 2. |
| M thermal T | Motor thermal temperature. |
| F thermal T | Feeder thermal temperature. |
| T thermal T | Transformer thermal temperature. |
| RTD meas 1...16 | RTD measurement channels 1...16. |
| Ext RTD meas 1...8 | External RTD measurement channels 1...8 (ADAM module). |


Settings

Table. 6.5 - 79. Settings.

| Name | Range | Step | Default | Description |
|---------------------------------|---|-------|-------------|--|
| Measurement value recorder mode | 0: Disabled 1: Activated | - | 0: Disabled | Activates and disables the real-time signals to communication. |
| Scale current values to primary | 0: No 1: Yes | - | 0: No | Selects whether or not values are scaled to primary. |
| Slot X magnitude selection | 0: Currents 1: Voltages 2: Powers 3: Impedance (ZRX) and admittance (YGB) 4: Others | - | 0: Currents | Selects the measured magnitude category of the chosen slot. |
| Slot X magnitude | Described in table above ("Available measured values") | - | - | Selects the magnitude in the previously selected category. |
| Magnitude X | -10 000 000.000...10 000 000.000 | 0.001 | - | Displays the measured value of the selected magnitude of the selected slot. The unit depends on the selected magnitude (either amperes, volts, or per-unit values). |

6.6 Modbus Gateway

Figure. 6.6 - 22. Example setup of Modbus Gateway application.

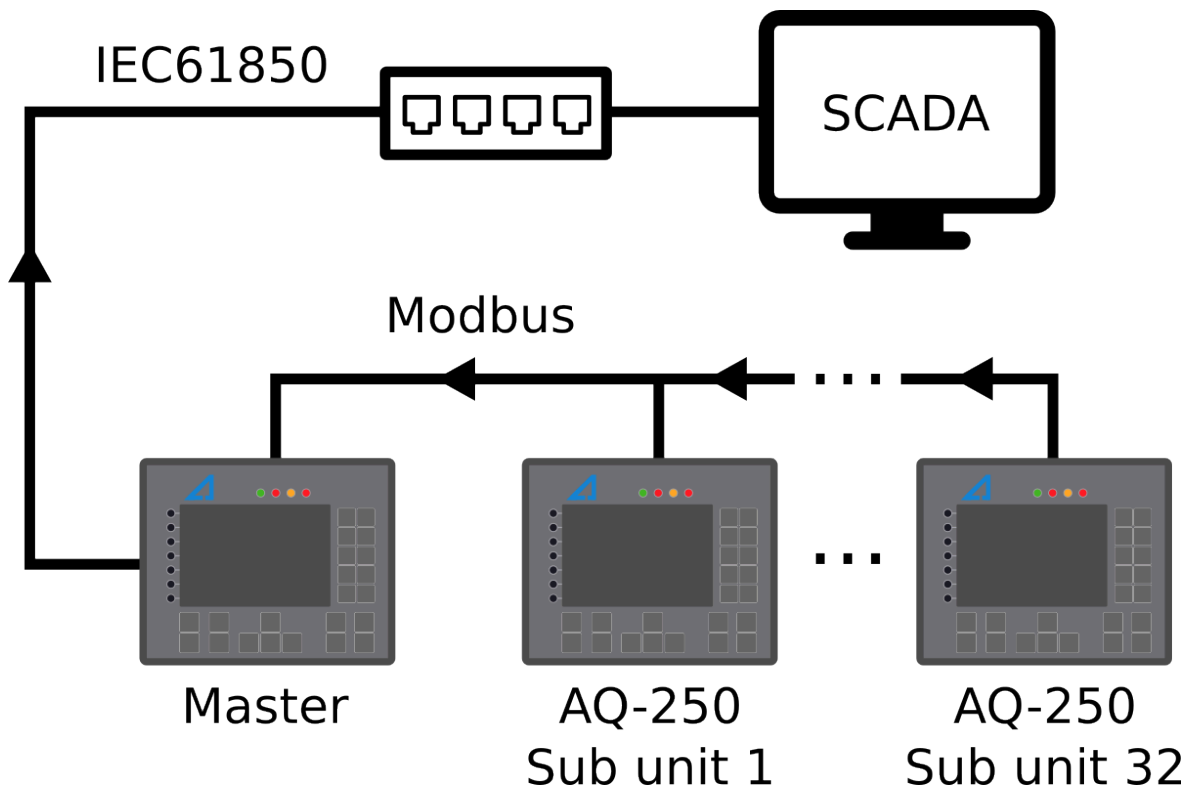

Any AQ-250 device can be setup as a Modbus Gateway (i.e. master). Modbus Gateway device can import messages (measurements, status signals etc.) from external Arcteq and third-party devices. RS-485 serial communication port. Up to 32 sub units can be connected to an AQ-200 master unit. These messages can then be used for controlling logic in the master device, display the status in user created mimic. Binary signals can be reported forward to SCADA with IEC61850, IEC101, IEC103, IEC104, Modbus, DNP3 or SPA.

Modbus Gateway and its basic settings can be found from *Communication* → *Modbus Gateway*. General settings-menu displays the health of connection to each sub unit.

Table. 6.6 - 80. General settings

| Name | Range | Description |
|-----------------------------------|--|---|
| Modbus Gateway mode | 0: Disabled (Default) 1: Enabled | Enables or disables Modbus Gateway. |
| Modbus Gateway reconfigure | 0: - 1: Reconfigure | Setting this parameter to "Reconfigure" takes new settings into use. Parameter returns back to "-" automatically. |
| Quality of Modbus Sub unit 1...32 | 0: OK 1: Old data 2: Data questionable 3: Modbus error 4: Send fail 5: Receive fail | Quality of each connected sub unit. |

Imported signals

Modbus Gateway supports importing of measurements, bits, double bits, counters and integer signals. Up to 128 signals can be imported of each signal type with the exception of double bits (32).

Table. 6.6 - 81. Imported signals

| Name | Range |
|-------------------------------|--------------------------|
| Imported measurement 1-128 | -3.4E+38...3.4E+38 |
| Imported bit signal 1-128 | 0...1 |
| Imported double bit data 1-32 | 0...3 |
| Imported counter data 1-128 | 0...4294967295 |
| Imported integer signal 1-128 | -2147483648...2147483647 |

To assign the signals use Modbus Gateway editor (*Tools → Communication → Modbus Gateway*). Detailed description of this tool can be found in *AQtivate 200 Instruction manual* (arcteq.fi/downloads/).

All imported signals can be given a description. The description will be displayed in most of menus with the signal (logic editor, matrix, block settings etc.).

Table. 6.6 - 82. Imported signal user description.

| Name | Range | Default | Description |
|------------------------------|-------------------|----------------|---|
| Describe measurement x | 1...31 characters | Acq. Meas x | User settable description for the signal. This description is used in several menu types for easier identification. |
| Describe bit signal x | | Acq. Bit x | |
| Describe double bit signal x | | Acq. Binary x | |
| Describe counter signal x | | Acq. Counter x | |
| Describe integer signal x | | Acq. Integer x | |

Events

The Modbus Gateway generates events the status changes in imported bits and double bits. The user can select which event messages are stored in the main event buffer: ON, OFF, or both.

Table. 6.6 - 83. Event messages

| Event block name | Event names |
|------------------|---|
| MGWB1 | Bit 1...Bit 32 (ON, OFF) |
| MGWB2 | Bit 33...Bit 64 (ON, OFF) |
| MGWB3 | Bit 65...Bit 96 (ON, OFF) |
| MGWB4 | Bit 97...Bit 128 (ON, OFF) |
| MGWD1 | Double Bit 1... Double bit 16 (ON/ON, OFF/OFF, ON/OFF, OFF/ON) |
| MGWD2 | Double Bit 17... Double bit 32 (ON/ON, OFF/OFF, ON/OFF, OFF/ON) |

7 Connections and application examples

7.1 Connections of AQ-S254

Figure. 7.1 - 23. AQ-S254 variant without add-on modules.

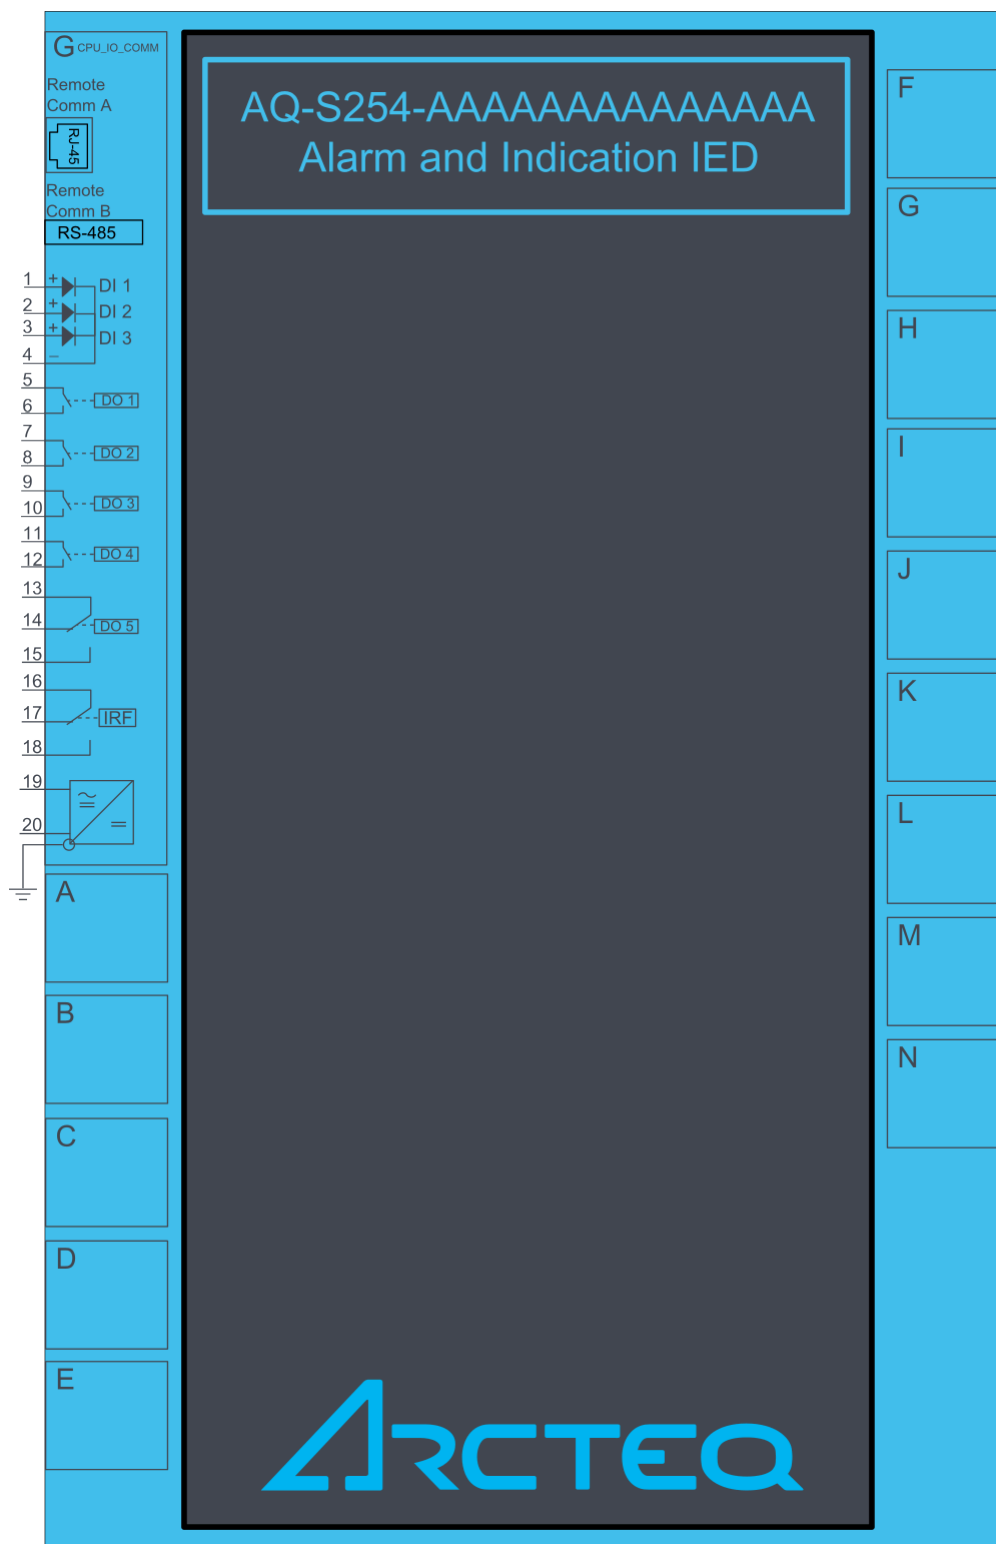


Figure. 7.1 - 24. AQ-S254 variant with digital input and output modules.


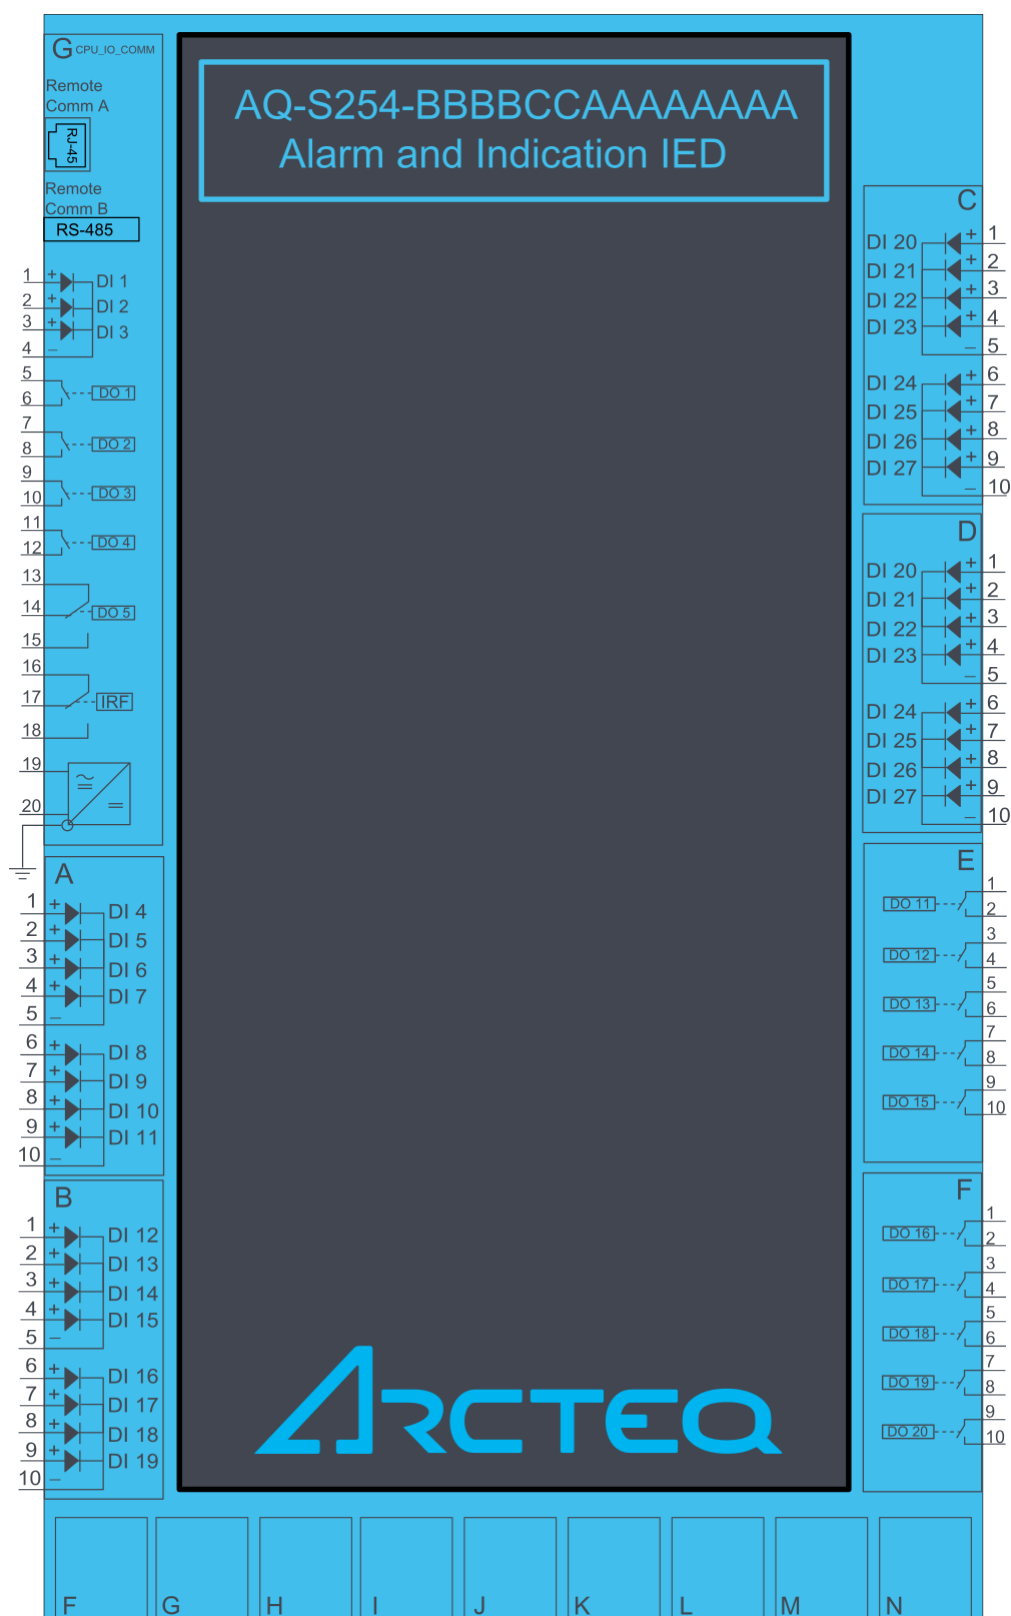


Figure. 7.1 - 25. AQ-S254 application example.

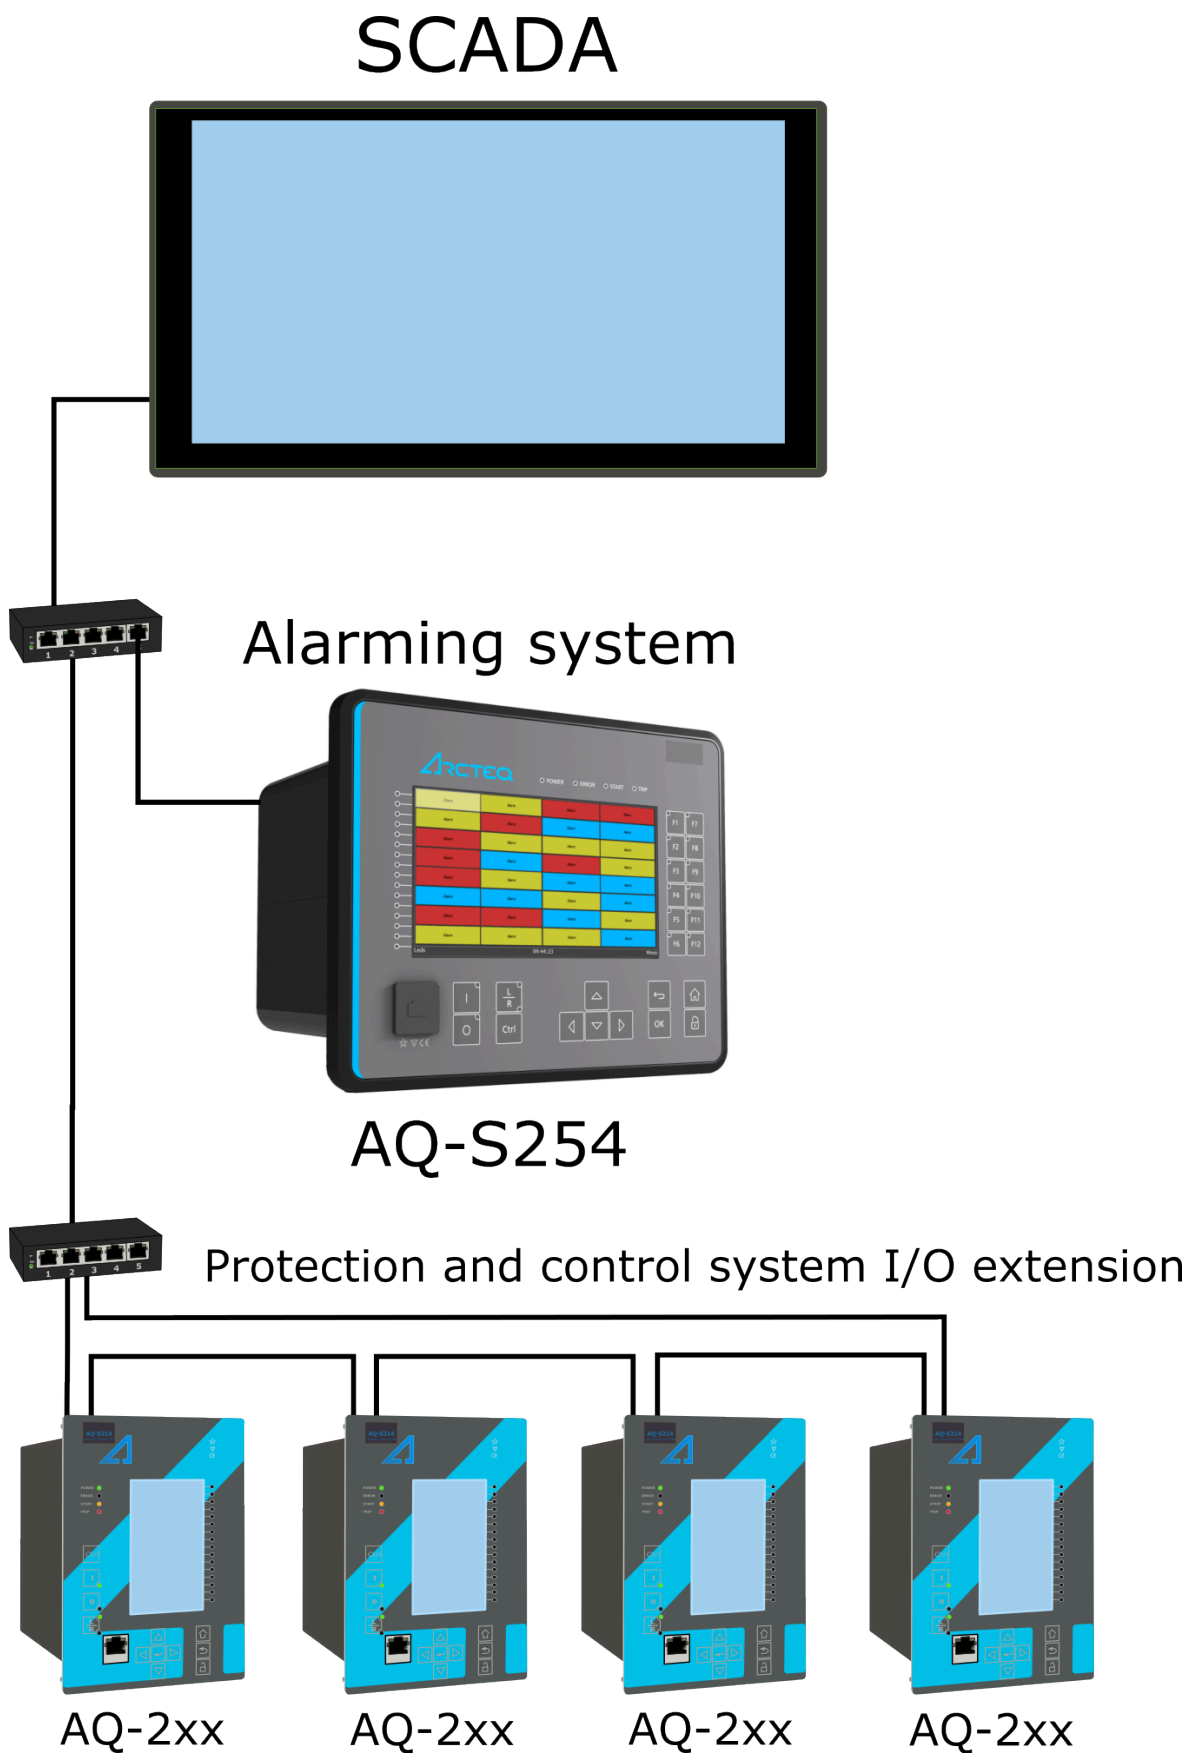

8 Construction and installation

8.1 Construction

AQ-X254 is a member of the modular and scalable AQ-200 series, and it includes 14 configurable and modular add-on card slots. As a standard configuration the device includes the CPU module (which consists of the CPU, a number of inputs and outputs, and the power supply).

The images below present the modules of both the non-optioned model (AQ-X254-XXXXXXX-AAAAAAAAAAAAA) and the almost fully optioned model (AQ-X254-XXXXXXX-BBBBBBBBBBBBCAJ).

Figure. 8.1 - 26. Modular construction of AQ-X254-XXXXXXX-AAAAAAAAAAAAA


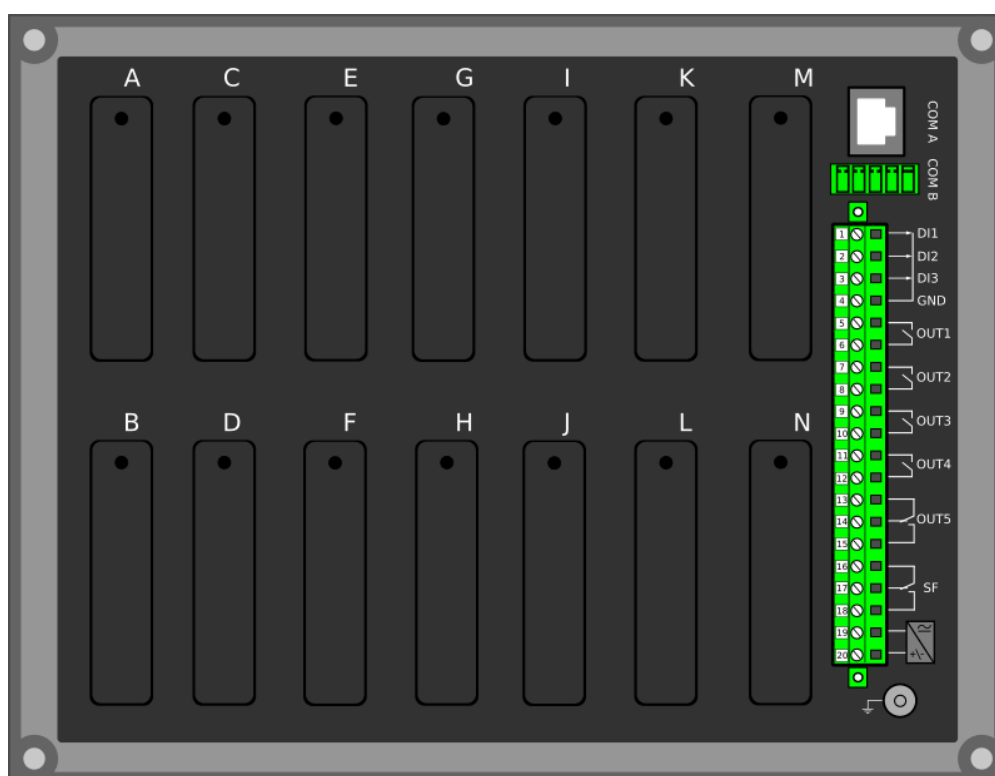


Figure. 8.1 - 27. Modular construction of AQ-X254-XXXXXXX-BBBBBBBBBBBBCAJ

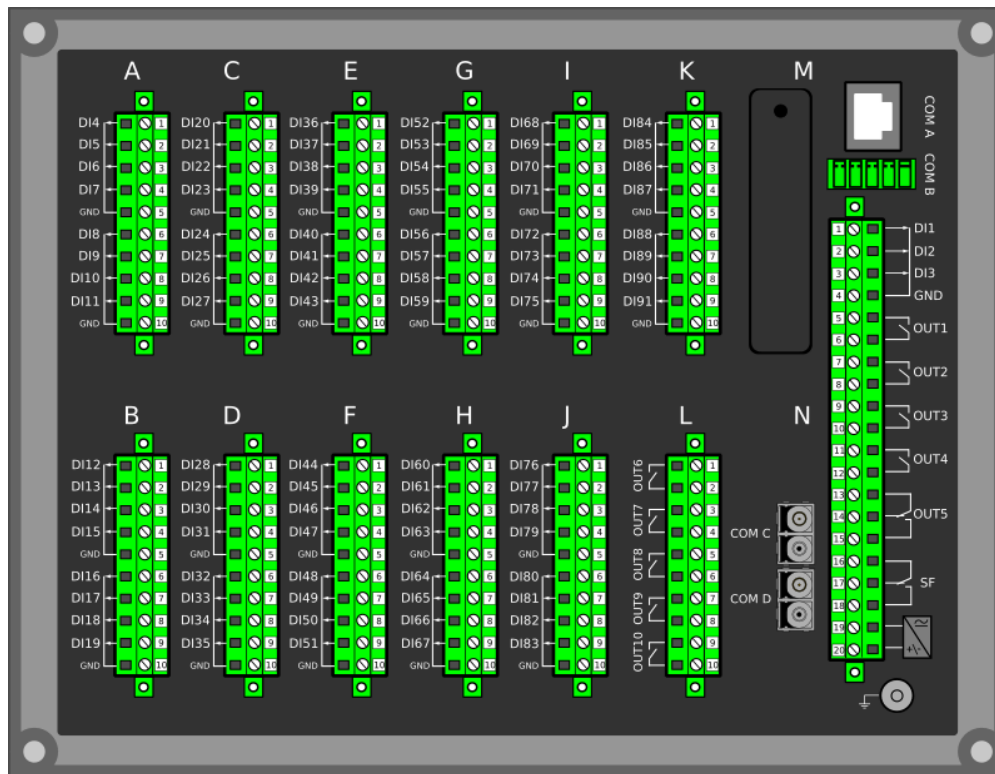


The modular structure of AQ-X254 allows for scalable solutions for different application requirements. In non-standard configurations Slots A to N accept all available add-on modules, such as digital I/O modules and other special modules. The only difference between the slots affecting device scalability is that Slots M and N also support communication options.

Start-up scan searches for modules according to their type designation code. If the module content is not what the device expects, the IED issues a hardware configuration error message. In field upgrades, therefore, add-on modules must be ordered from Arcteq Relays Ltd. or its representative who can then provide the module with its corresponding unlocking code to allow the device to operate correctly once the hardware configuration has been upgraded.

When an I/O module is inserted into the device, the module location affects the naming of the I/O. The I/O scanning order in the start-up sequence is as follows: the CPU module I/O, Slot A, Slot B, Slot C, and so on. This means that the digital input channels DI1, DI2 and DI3 as well as the digital output channels OUT1, OUT2, OUT3, OUT4 and OUT5 are always located in the CPU module. If additional I/O cards are installed, their location and card type affect the I/O naming.

The figure below presents the start-up hardware scan order of the device as well as the I/O naming principles.

Figure. 8.1 - 28. Hardware scanning and IO naming principle in AQ-X254 IED

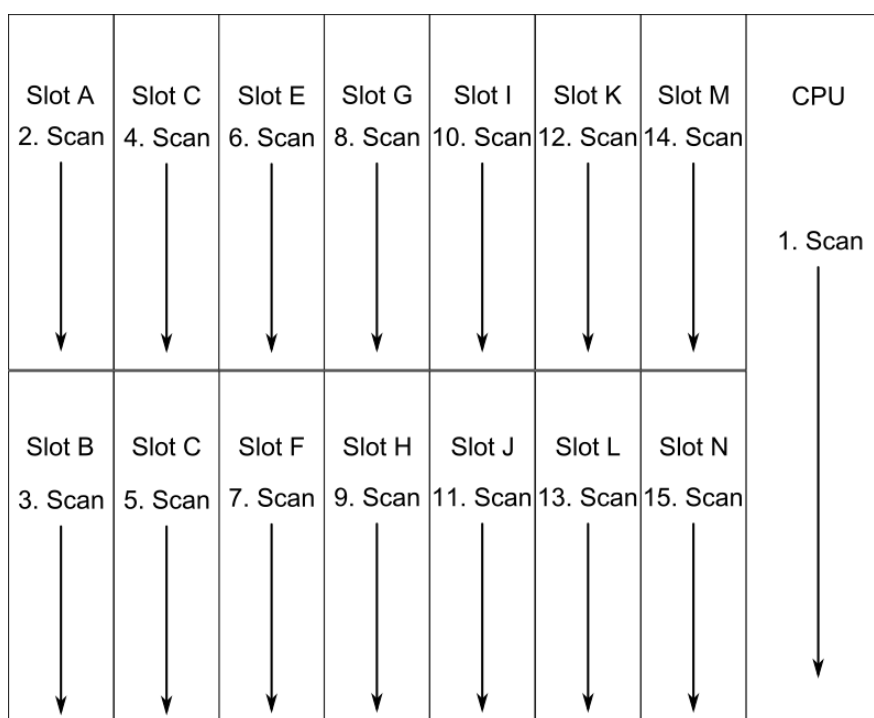


1. Scan
The start-up system; detects and self-tests the CPU module, voltages, communication and the I/O; finds and assigns "DI1", "DI2", "DI3", "OUT1", "OUT2", "OUT3", "OUT4" and "OUT5".
2. Scan
Scans Slot A, and moves to the next slot if Slot A is empty. If the scan finds an 8DI module (that is, a module with eight digital inputs), it reserves the designations "DI4", "DI5", "DI6", "DI7", "DI8", "DI9", "DI10" and "DI11" to this slot. If the scan finds a DO5 module (that is, a module with five digital outputs), it reserves the designations "OUT6", "OUT7", "OUT8", "OUT9" and "OUT10" to this slot. The I/O is then added if the type designation code (e.g. AQ-P215-PH0AAAA-BBC) matches with the existing modules in the device. If the code and the modules do not match, the device issues an alarm. An alarm is also issued if the device expects to find a module here but does not find one.
3. Scan
Scans Slot B, and moves to the next slot if Slot B is empty. If the scan finds an 8DI module, it reserves the designations "DI4", "DI5", "DI6", "DI7", "DI8", "DI9", "DI10" and "DI11" to this slot. If Slot A also has an 8DI module (and therefore has already reserved these designations), the device reserves the designations "DI12", "DI13", "DI14", "DI15", "DI16", "DI17", "DI18" and "DI19" to this slot. If the scan finds a 5DO module, it reserves the designations "OUT6", "OUT7", "OUT8", "OUT9" and "OUT10" to this slot. Again, if Slot A also has a 5DO and has therefore already reserved these designations, the device reserves the designations "OUT11", "OUT12", "OUT13", "OUT14" and "OUT15" to this slot.
4. -15. Scan
A similar operation to Scan 3 (checks which designations have been reserved by modules in previous slots and numbers the new ones accordingly).

Thus far this chapter has only explained the installation of I/O add-on cards to the option module slots. This is because all other module types are treated in a same way. For example, when an additional communication port is installed into the upper port of the communication module, its designation is Communication port 3 or higher, as Communication ports 1 and 2 already exist in the CPU module (which is scanned, and thus designated, first). After a communication port is detected, it is added into the device's communication space and its corresponding settings are enabled.

The almost fully optioned example case of AQ-X254-XXXXXXX-BBBBBBBBBBBBCAJ (the first image pair, on the right) has a total of 91 digital input channels available: three (DI1...DI3) in the CPU module, and the rest in Slots A...K in groups of eight. It also has a total of 10 digital output channels available: five (DO1...DO5) in the CPU module, and five (DO6...DO10) in Slot L. These same principles apply to all non-standard configurations in the AQ-X254 IED family.

8.2 CPU module

Figure. 8.2 - 29. CPU module.

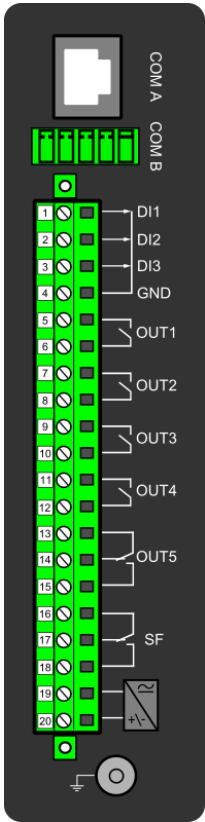

| Connector | Description |
|-------------|---|
| COM A | Communication port A, or the RJ-45 port. Used for the setting tool connection and for IEC 61850, Modbus/TCP, IEC 104, DNP3 and station bus communications. |
| COM B | Communication port B, or the RS-485 port. Used for the SCADA communications for the following protocols: Modbus/RTU, Modbus I/O, SPA, DNP3, IEC 101 and IEC 103. The pins have the following designations: Pin 1 = DATA +, Pin 2 = DATA -, Pin 3 = GND, Pins 4 & 5 = Terminator resistor enabled by shorting. |
| X1-1 | Digital input 1, nominal threshold voltage 24 V, 110 V or 220 V. |
| X1-2 | Digital input 2, nominal threshold voltage 24 V, 110 V or 220 V. |
| X1-3 | Digital input 3, nominal threshold voltage 24 V, 110 V or 220 V. |
| X1-4 | Common GND for digital inputs 1, 2 and 3. |
| X1-5:6 | Output relay 1, with a normally open (NO) contact. |
| X1-7:8 | Output relay 2, with a normally open (NO) contact. |
| X1-9:10 | Output relay 3, with a normally open (NO) contact. |
| X1-11:12 | Output relay 4, with a normally open (NO) contact. |
| X1-13:14:15 | Output relay 5, with a changeover contact. |
| X1-16:17:18 | System fault's output relay, with a changeover contact. Pins 16 and 17 are closed when the unit has a system fault or is powered OFF. Pins 16 and 18 are closed when the unit is powered ON and there is no system fault. |

| Connector | Description |
|-----------|--|
| X1-19:20 | Power supply IN. Either 85...265 VAC/DC (model A; order code "H") or 18...75 DC (model B; order code "L"). Positive side (+) to Pin 20. |
| GND | The relay's earthing connector. |

By default, the CPU module (combining the CPU, the I/O and the power supply) includes two standard communication ports and the relay's basic digital I/O.

The current consumption of the digital inputs is 2 mA when activated, while the range of the operating voltage is 24 V/110 V/220 V depending on the ordered hardware. All digital inputs are scanned in 5 ms program cycles. Their pick-up and release thresholds depend on the selection of the order code. Their delays and NO/NC selection, however, can be set with software. The digital output controls are also set by the user with software. By default, the digital outputs are controlled in 5 ms program cycles. All output contacts are mechanical. The rated voltage of the NO/NC outputs is 250 VAC/DC.

The auxiliary voltage is defined in the ordering code: the available power supply models available are A (85...265 VAC/DC) and B (18...75 DC). The power supply's minimum allowed bridging time for all voltage levels is above 150 ms. The power supply's maximum power consumption is 15 W. The power supply allows a DC ripple of below 15 % and the start-up time of the power supply is below 5 ms. For further details, please refer to the "Auxiliary voltage" chapter in the "Technical data" section of this document.

Digital input settings

The settings described in the table below can be found at *Control* → *Device I/O* → *Digital input settings* in the relay settings.

Table. 8.2 - 84. Digital input settings.

| Name | Range | Step | Default | Description |
|----------------------|--|---------|-------------|--|
| Dlx Polarity | 0: NO (Normally open) 1: NC (Normally closed) | - | 0: NO | Selects whether the status of the digital input is 1 or 0 when the input is energized. |
| Dlx Activation delay | 0.000...1800.000 s | 0.001 s | 0.000 s | Defines the delay for the status change from 0 to 1. |
| Dlx Drop-off time | 0.000...1800.000 s | 0.001 s | 0.000 s | Defines the delay for the status change from 1 to 0. |
| Dlx AC mode | 0: Disabled 1: Enabled | - | 0: Disabled | Selects whether or not a 30-ms deactivation delay is added to account for alternating current. |

Digital input and output descriptions

CPU card digital inputs and outputs can be given a description. The user defined description are displayed in most of the menus (logic editor, matrix, block settings etc.).

Table. 8.2 - 85. Digital input and output user description.

| Name | Range | Default | Description |
|--------------------------------|-------------------|---------|--|
| User editable description Dlx | 1...31 characters | Dlx | Description of the digital input. This description is used in several menu types for easier identification. |
| User editable description OUTx | | OUTx | Description of the digital output. This description is used in several menu types for easier identification. |

Scanning cycle

All digital inputs are scanned in a 5 ms cycle, meaning that the state of an input is updated every 0...5 milliseconds. When an input is used internally in the device (either in group change or logic), it takes additional 0...5 milliseconds to operate. Theoretically, therefore, it takes 0...10 milliseconds to change the group when a digital input is used for group control or a similar function. In practice, however, the delay is between 2...8 milliseconds about 95 % of the time. When a digital input is connected directly to a digital output (T1...Tx), it takes an additional 5 ms round. Therefore, when a digital input controls a digital output internally, it takes 0...15 milliseconds in theory and 2...13 milliseconds in practice.




NOTE!

The mechanical delay of the relay is not included in these approximations!

8.3 Digital input module (optional)

Figure. 8.3 - 30. Digital input module (DI8) with eight add-on digital inputs.

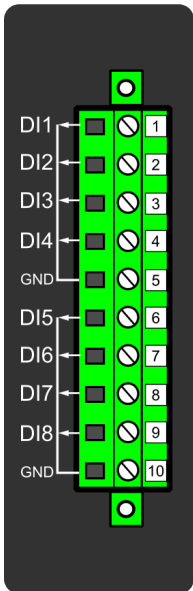

| Connector | Description (x = the number of digital inputs in other modules that preceed this one in the configuration) |
|-----------|--|
| X 1 | Dlx + 1 |
| X 2 | Dlx + 2 |
| X 3 | Dlx + 3 |
| X 4 | Dlx + 4 |
| X 5 | Common earthing for the first four digital inputs. |
| X 6 | Dlx + 5 |
| X 7 | Dlx + 6 |
| X 8 | Dlx + 7 |
| X 9 | Dlx + 8 |
| X 10 | Common earthing for the other four digital inputs. |

The DI8 module is an add-on module with eight (8) galvanically isolated digital inputs. This module can be ordered directly to be installed into the device in the factory, or it can be upgraded in the field after the device's original installation when required. The properties of the inputs in this module are the same as those of the inputs in the main processor module. The current consumption of the digital inputs is 2 mA when activated, while the range of the operating voltage is from 0...265 VAC/DC. The activation and release thresholds are set in the software and the resolution is 1 V. All digital inputs are scanned in 5 ms program cycles, and their pick-up and release delays as well as their NO/NC selection can be set with software.

For the naming convention of the digital inputs provided by this module please refer to the chapter titled "Construction and installation".

For technical details please refer to the chapter titled "Digital input module" in the "Technical data" section of this document.

Setting up the activation and release delays

The settings described in the table below can be found at *Control → Device I/O → Digital input settings* in the relay settings.


Table. 8.3 - 86. Digital input settings of DI8 module.

| Name | Range | Step | Default | Description |
|--------------------------|--|---------|-------------|--|
| Dlx Polarity | 0: NO (Normally open) 1: NC (Normally closed) | - | 0: NO | Selects whether the status of the digital input is 1 or 0 when the input is energized. |
| Dlx Activation threshold | 16.0...200.0 V | 0.1 V | 88 V | Defines the activation threshold for the digital input. When "NO" is the selected polarity, the measured voltage exceeding this setting activates the input. When "NC" is the selected polarity, the measured voltage exceeding this setting deactivates the input. |
| Dlx Release threshold | 10.0...200.0 V | 0.1 V | 60V | Defines the release threshold for the digital input. When "NO" is the selected polarity, the measured voltage below this setting deactivates the input. When "NC" is the selected polarity, the measured voltage below this setting activates the input. |
| Dlx Activation delay | 0.000...1800.000 s | 0.001 s | 0.000 s | Defines the delay when the status changes from 0 to 1. |
| Dlx Drop-off time | 0.000...1800.000 s | 0.001 s | 0.000 s | Defines the delay when the status changes from 1 to 0. |
| Dlx AC Mode | 0: Disabled 1: Enabled | - | 0: Disabled | Selects whether or not a 30-ms deactivation delay is added to take the alternating current into account. The "Dlx Release threshold" parameter is hidden and forced to 10 % of the set "Dlx Activation threshold" parameter. |
| Dlx Counter | 0...2 ³² -1 | 1 | 0 | Displays the number of times the digital input has changed its status from 0 to 1. |
| Dlx Clear counter | 0: - 1: Clear | - | 0: - | Resets the Dlx counter value to zero. |

The user can set the activation threshold individually for each digital input. When the activation and release thresholds have been set properly, they will result in the digital input states to be activated and released reliably. The selection of the normal state between normally open (NO) and normally closed (NC) defines whether or not the digital input is considered activated when the digital input channel is energized.

The diagram below depicts the digital input states when the input channels are energized and de-energized.

Figure. 8.3 - 31. Digital input state when energizing and de-energizing the digital input channels.

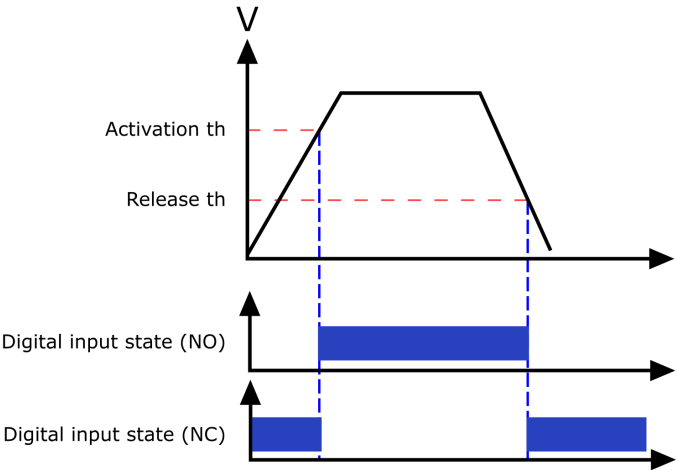

Digital input descriptions

Option card inputs can be given a description. The user defined description are displayed in most of the menus (logic editor, matrix, block settings etc.).

Table. 8.3 - 87. Digital input user description.

| Name | Range | Default | Description |
|-------------------------------|-------------------|---------|---|
| User editable description Dlx | 1...31 characters | Dlx | Description of the digital input. This description is used in several menu types for easier identification. |

Digital input voltage measurements


Digital input option card channels measure voltage on each channel. The measured voltage can be seen at *Control → Device IO → Digital inputs → Digital input voltages*.

Table. 8.3 - 88. Digital input channel voltage measurement.

| Name | Range | Step | Description |
|-----------------|-------------------|---------|---|
| Dlx Voltage now | 0.000...275.000 V | 0.001 V | Voltage measurement of a digital input channel. |

8.4 Digital output module (optional)

Figure. 8.4 - 32. Digital output module (DO5) with five add-on digital outputs.

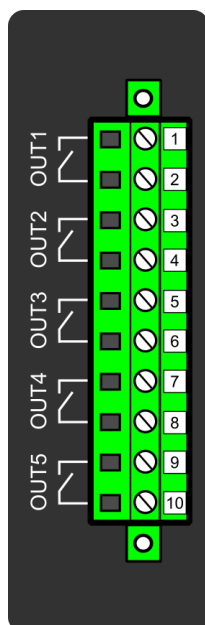

| Connector | Description |
|-----------|--|
| X 1-2 | OUTx + 1 (1 st and 2 nd pole NO) |
| X 3-4 | OUTx + 2 (1 st and 2 nd pole NO) |
| X 5-6 | OUTx + 3 (1 st and 2 nd pole NO) |
| X 7-8 | OUTx + 4 (1 st and 2 nd pole NO) |
| X 9-10 | OUTx + 5 (1 st and 2 nd pole NO) |

The DO5 module is an add-on module with five (5) digital outputs. This module can be ordered directly to be installed into the device in the factory, or it can be upgraded in the field after the device's original installation when required. The properties of the outputs in this module are the same as those of the outputs in the main processor module. The user can set the digital output controls with software. All digital outputs are scanned in 5 ms program cycles, and their contacts are mechanical in type. The rated voltage of the NO/NC outputs is 250 VAC/DC.

For the naming convention of the digital inputs provided by this module please refer to the chapter titled "Construction and installation".

For technical details please refer to the chapter titled "Digital output module" in the "Technical data" section of this document.

Digital output descriptions


Option card outputs can be given a description. The user defined description are displayed in most of the menus (logic editor, matrix, block settings etc.).

Table. 8.4 - 89. Digital output user description.

| Name | Range | Default | Description |
|--------------------------------|-------------------|---------|--|
| User editable description OUTx | 1...31 characters | OUTx | Description of the digital output. This description is used in several menu types for easier identification. |


8.5 RTD input module (optional)

Figure. 8.5 - 33. RTD input module connectors.

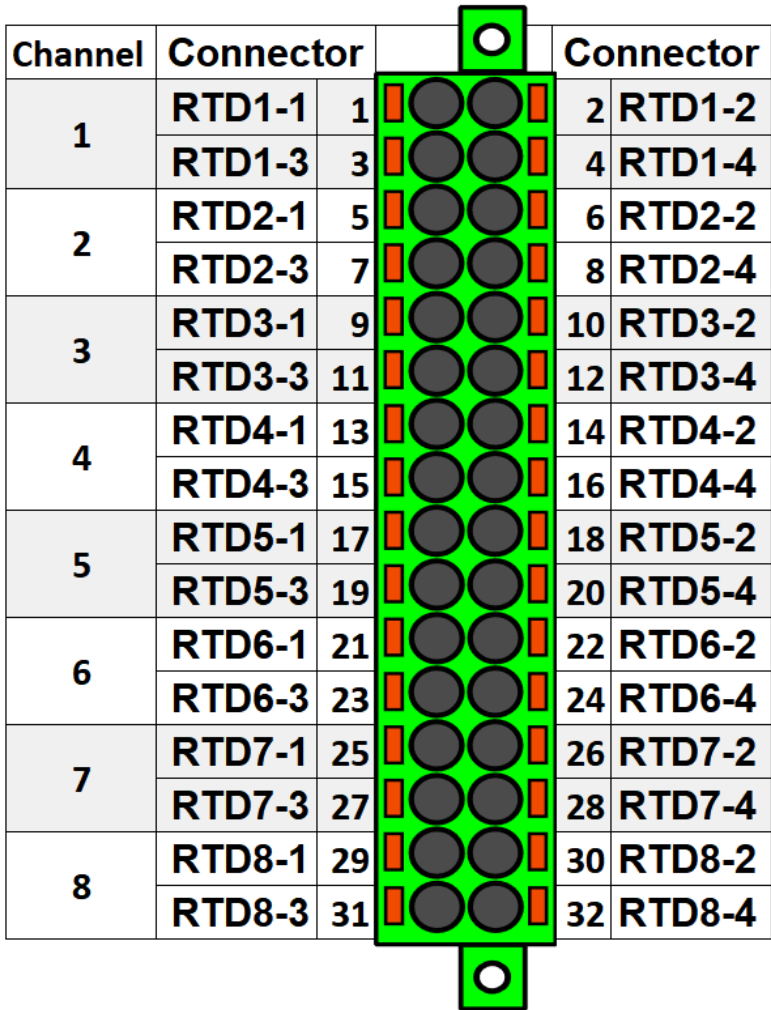


The RTD input module is an add-on module with eight (8) RTD input channels. Each input supports 2-wire, 3-wire and 4-wire RTD sensors. The sensor type can be selected with software for two groups, four channels each. The card supports Pt100 and Pt1000 sensors

Figure. 8.5 - 34. RTD sensor connection types.

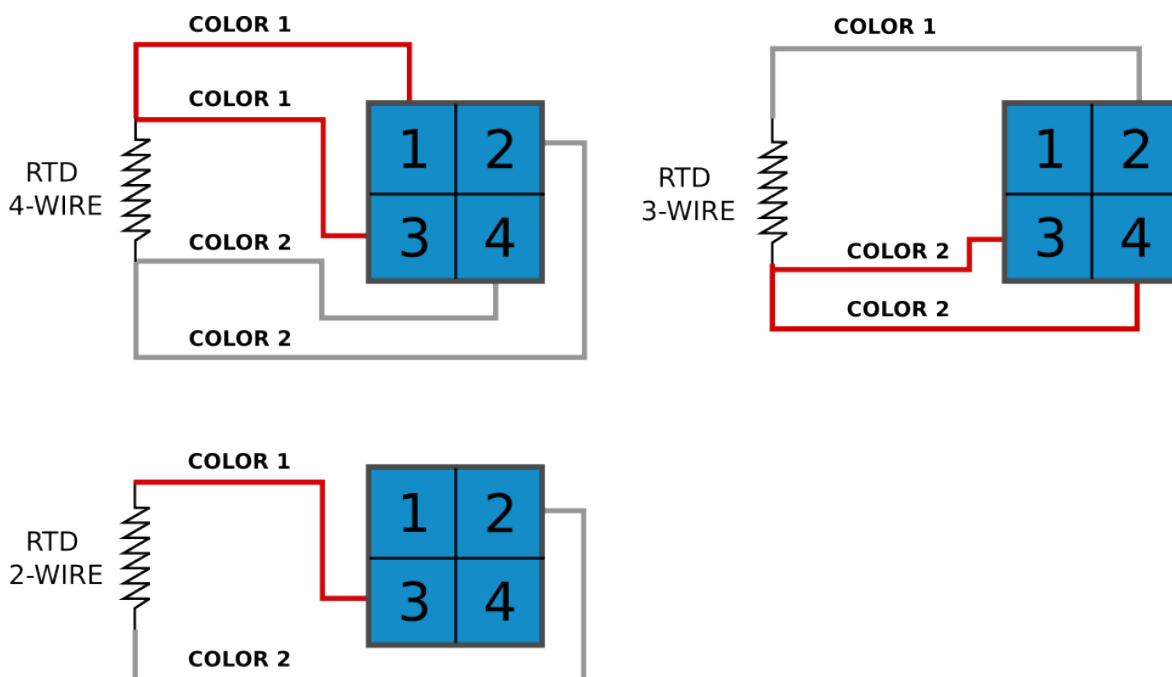

8.6 Serial RS-232 communication module (optional)

Figure. 8.6 - 35. Serial RS-232 module connectors.

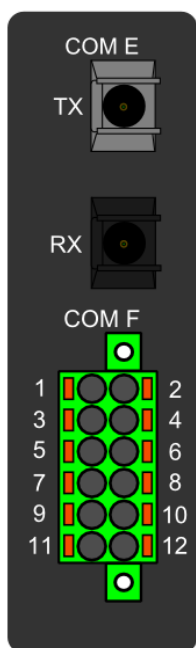


| Connector | Name | Description |
|-----------|----------------------------|---|
| COM E | Serial fiber (GG/PP/GP/PG) | <ul style="list-style-type: none"> Serial-based communications Wavelength 660 nm Compatible with 50/125 μm, 62.5/125 μm, 100/140 μm, and 200 μm Plastic-Clad Silica (PCS) fiber Compatible with ST connectors |

| Connector | Name | Description |
|----------------|-----------------------|--|
| COM F – Pin 1 | +24 V input | Optional external auxiliary voltage for serial fiber |
| COM F – Pin 2 | GND | Optional external auxiliary voltage for serial fiber |
| COM F – Pin 3 | - | - |
| COM F – Pin 4 | - | - |
| COM F – Pin 5 | RS-232 RTS | Serial based communications |
| COM F – Pin 6 | RS-232 GND | Serial based communications |
| COM F – Pin 7 | RS-232 TX | Serial based communications |
| COM F – Pin 8 | RS-232 RX | Serial based communications |
| COM F – Pin 9 | - | - |
| COM F – Pin 10 | +3.3 V output (spare) | Spare power source for external equipment (45 mA) |
| COM F – Pin 11 | - | - |
| COM F – Pin 12 | - | - |

The option card includes two serial communication interfaces: COM E is a serial fiber interface with glass/plastic option, COM F is an RS-232 interface.

8.7 LC or RJ45 100 Mbps Ethernet communication module (optional)

Figure. 8.7 - 36. LC and RJ45 100 Mbps Ethernet module connectors.

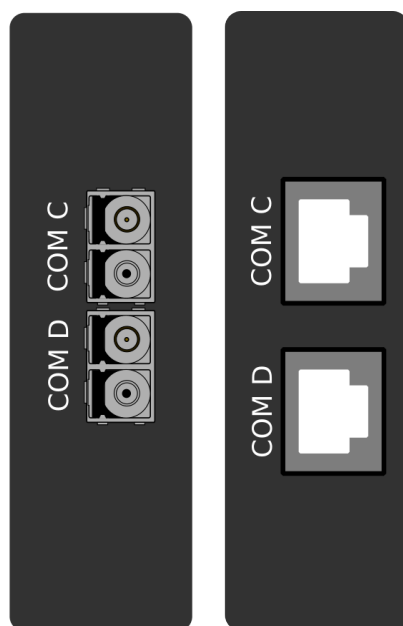


| Connector | Description (LC ports) | Description (RJ45) |
|-----------|--|---|
| COM C: | <ul style="list-style-type: none"> Communication port C, 100 Mbps LC fiber connector. 62.5/125 μm or 50/125 μm multimode (glass). Wavelength 1300 nm. | <ul style="list-style-type: none"> RJ-45 connectors 10BASE-T and 100BASE-TX |
| COM D: | <ul style="list-style-type: none"> Communication port D, 100 Mbps LC fiber connector. 62.5/125 μm or 50/125 μm multimode (glass). Wavelength 1300 nm. | <ul style="list-style-type: none"> RJ-45 connectors 10BASE-T and 100BASE-TX |

Both cards support both HSR and PRP protocols.

8.8 Double ST 100 Mbps Ethernet communication module (optional)

Figure. 8.8 - 37. Double ST 100 Mbps Ethernet communication module connectors.

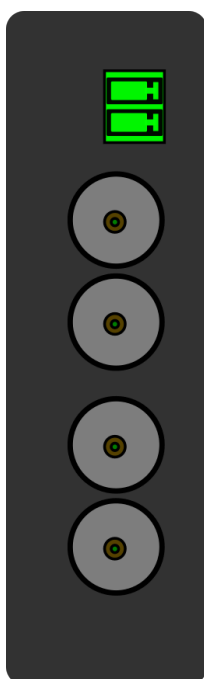

| Connector | Description |
|-------------------|--|
| Two-pin connector | <ul style="list-style-type: none"> IRIG-B input |
| ST connectors | <ul style="list-style-type: none"> Duplex ST connectors 62.5/125 μm or 50/125 μm multimode fiber Transmitter wavelength: 1260...1360 nm (nominal: 1310 nm) Receiver wavelength: 1100...1600 nm 100BASE-FX Up to 2 km |

This option cards supports redundant ring configuration and multidrop configurations. Please note that each ring can only contain AQ-200 series devices, and any third party devices must be connected to a separate ring.

For other redundancy options, please refer to the option card "LC 100 Mbps Ethernet communication module".

The images below present two example configurations: the first displays a ring configuration (note how the third party devices are connected in a separate ring), while the second displays a multidrop configuration.

Figure. 8.8 - 38. Example of a ring configuration.



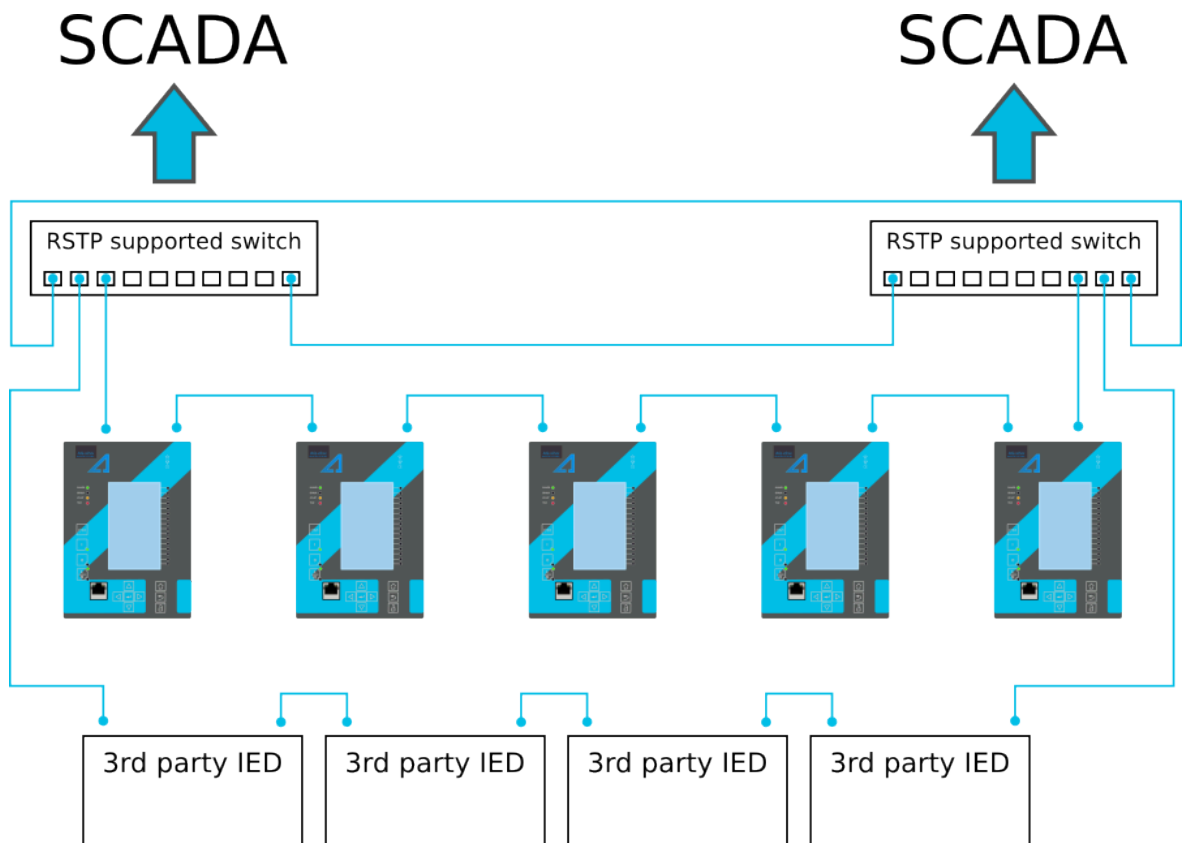


Figure. 8.8 - 39. Example of a multidrop configuration.

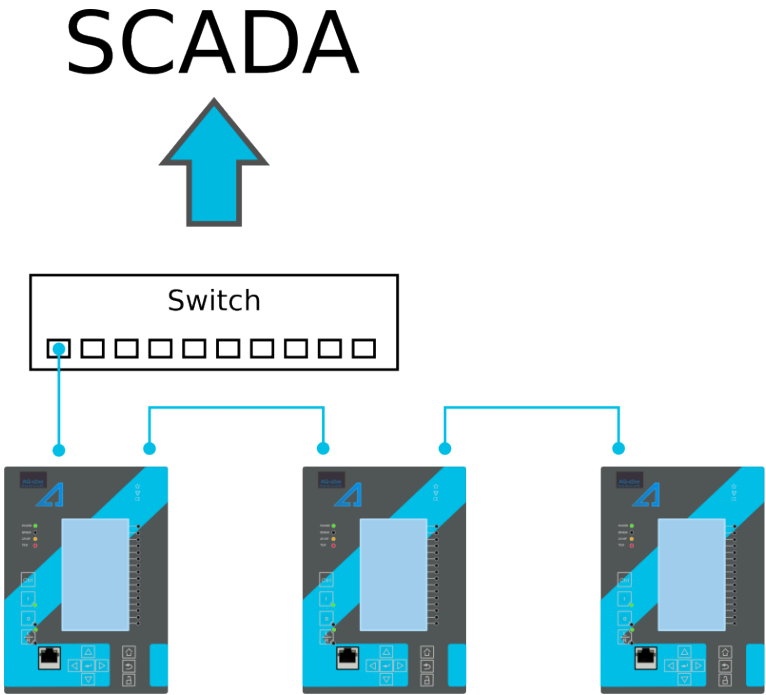

8.9 Double RJ45 10/100 Mbps Ethernet communication module (optional)

Figure. 8.9 - 40. Double RJ-45 10/100 Mbps Ethernet communication module.

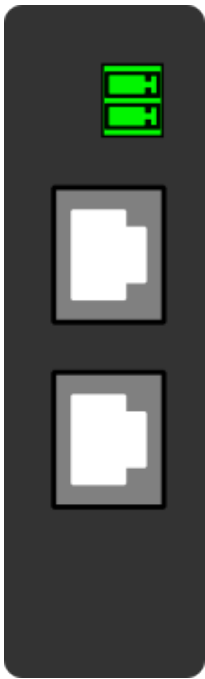


| Connector | Description |
|-------------------|--|
| Two-pin connector | <ul style="list-style-type: none">IRIG-B input |

| Connector | Description |
|------------------|---|
| RJ-45 connectors | <ul style="list-style-type: none"> Two Ethernet ports RJ-45 connectors 10BASE-T and 100BASE-TX |

This option card supports multidrop configurations.

For other redundancy options, please refer to the option card "LC 100 Mbps Ethernet communication module".

Figure. 8.9 - 41. Example of a multidrop configuration.

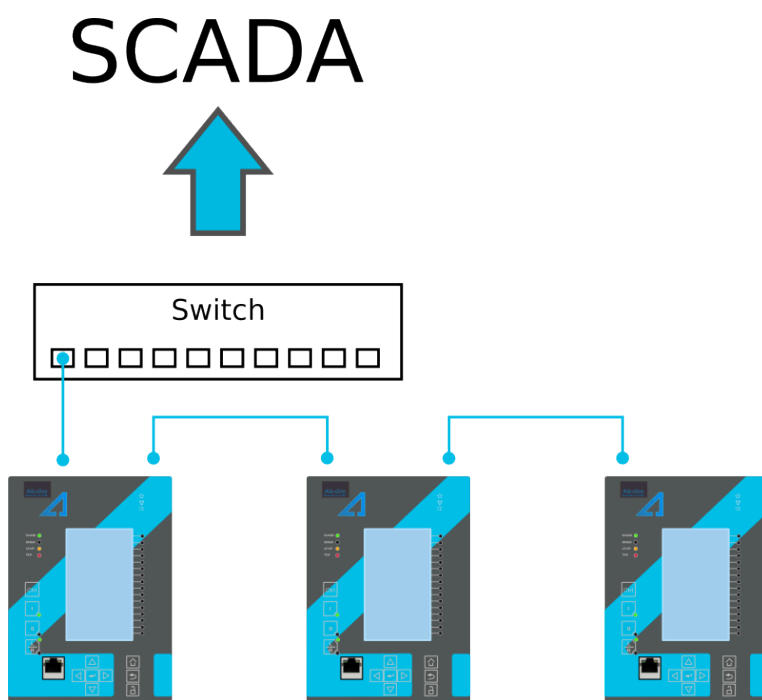

8.10 Dimensions and installation

The device can be installed either to a standard 19" rack or to a switchgear panel with cutouts. The desired installation type is defined in the order code. When installing to a rack, the device takes a half (1/2) of the rack's width, meaning that a total of two devices can be installed to the same rack next to one another.

The figures below describe the device dimensions (first figure), the device installation (second), and the panel cutout dimensions and device spacing (third).

Figure. 8.10 - 42. Device dimensions.

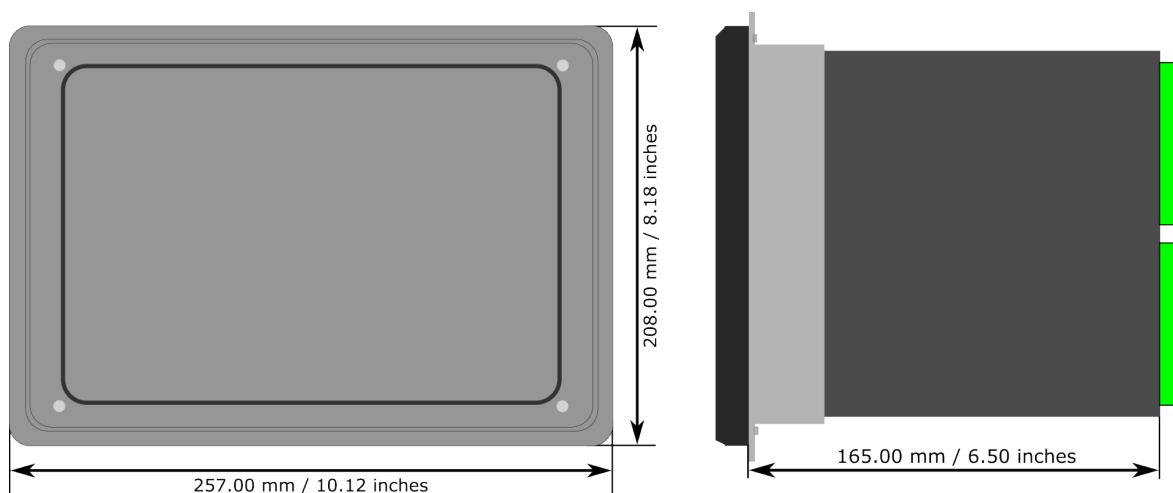


Figure. 8.10 - 43. Device installation.


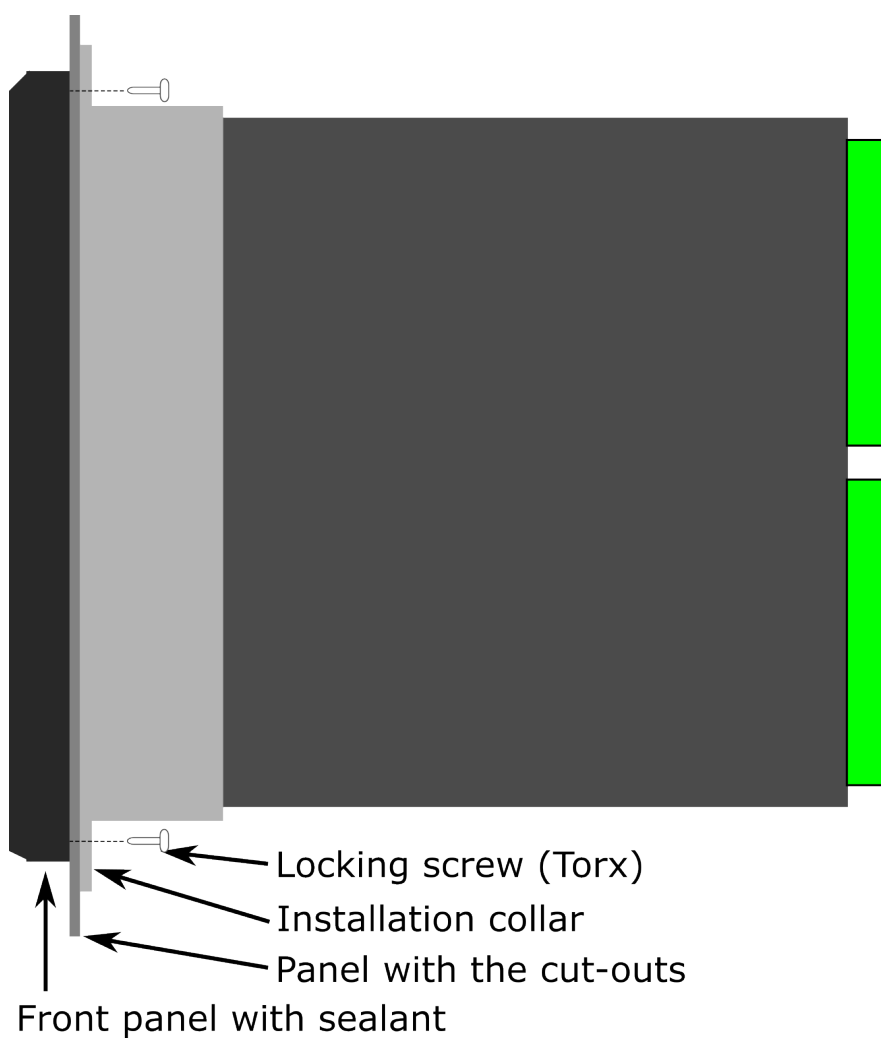


Figure. 8.10 - 44. Panel cut-out and spacing of the IED.

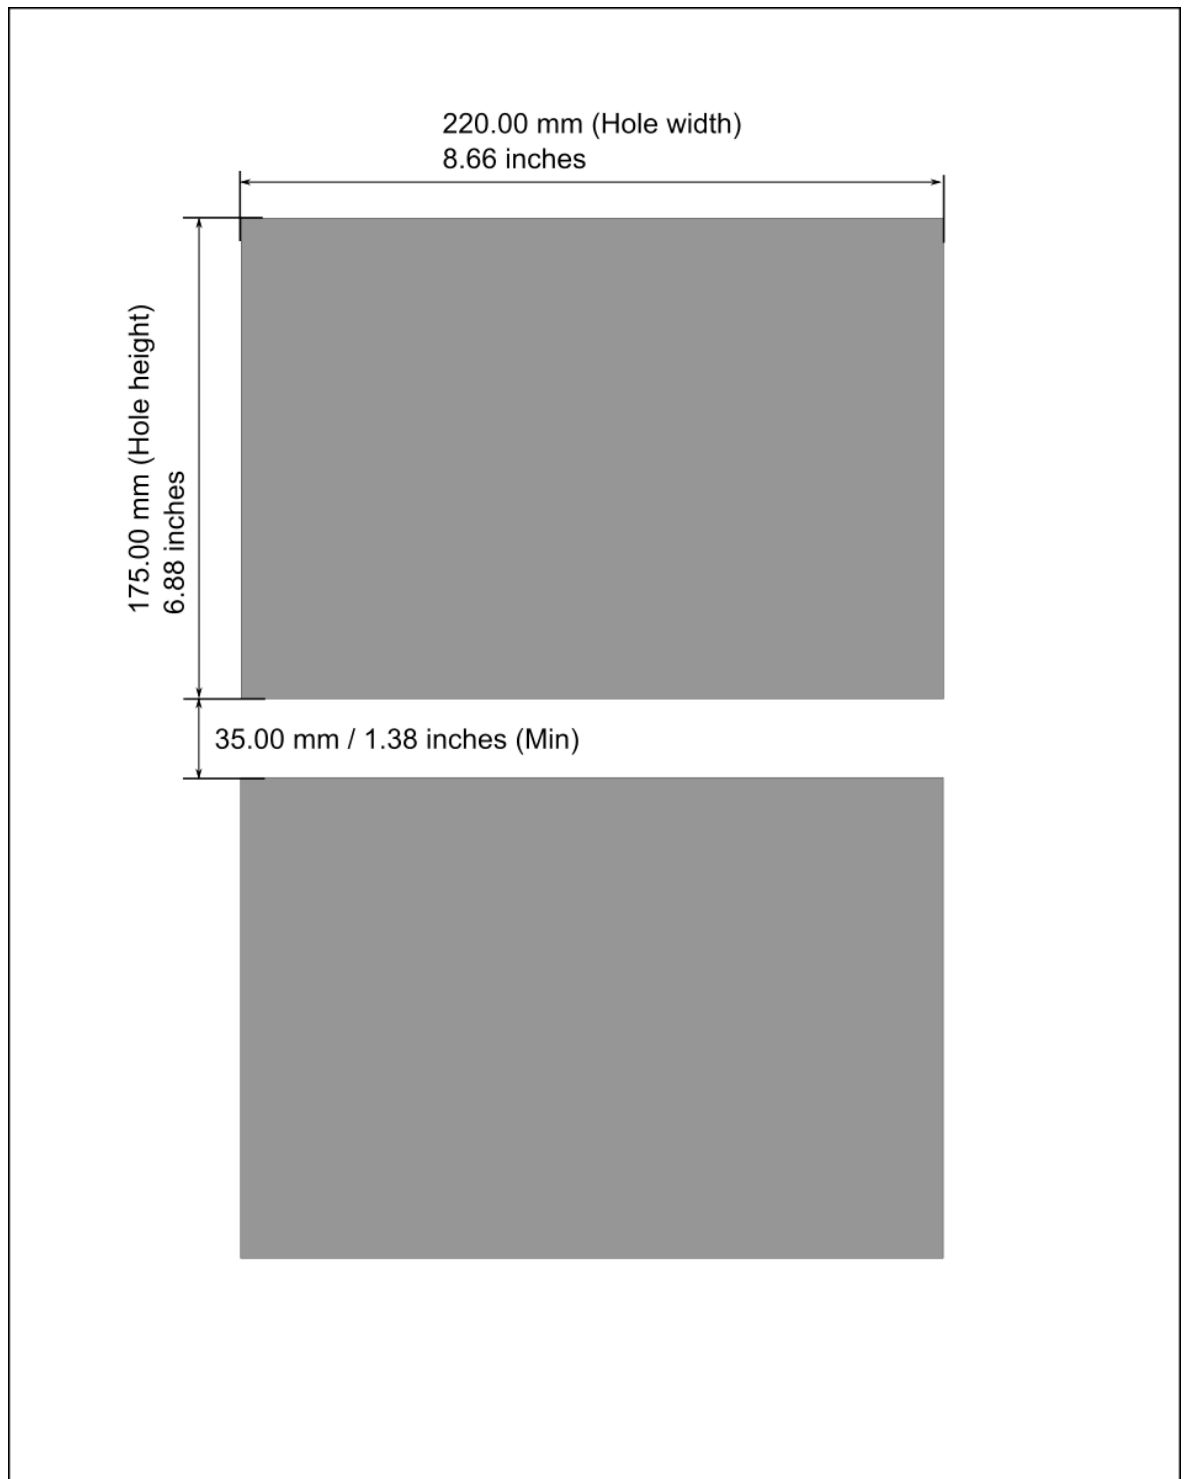

9 Technical data

9.1 Hardware

9.1.1 CPU & Power supply

9.1.1.1 Auxiliary voltage

Table. 9.1.1.1 - 90. Power supply model A

| Rated values | |
|----------------------------------|------------------------------------|
| Rated auxiliary voltage | 85...265 V (AC/DC) |
| Power consumption | < 20 W |
| | < 40 W |
| Maximum permitted interrupt time | < 40 ms with 110 VDC |
| DC ripple | < 15 % |
| Terminal block connection | |
| Terminal block | Phoenix Contact MSTB 2,5/5-ST-5,08 |
| Solid or stranded wire | 2.5 mm ² |
| Maximum wire diameter | |
| Other | |
| Minimum recommended fuse rating | MCB C2 |

Table. 9.1.1.1 - 91. Power supply model B

| Rated values | |
|----------------------------------|------------------------------------|
| Rated auxiliary voltage | 18...72 VDC |
| Power consumption | < 20 W |
| | < 40 W |
| Maximum permitted interrupt time | < 40 ms with 24 VDC |
| DC ripple | < 15 % |
| Terminal block connection | |
| Terminal block | Phoenix Contact MSTB 2,5/5-ST-5,08 |
| Solid or stranded wire | 2.5 mm ² |
| Maximum wire diameter | |
| Other | |
| Minimum recommended fuse rating | MCB C2 |

9.1.1.2 CPU communication ports

Table. 9.1.1.2 - 92. Front panel local communication port.

| Port | |
|------------|-----------------------|
| Port media | Copper Ethernet RJ-45 |

| | |
|--------------------|---|
| Number of ports | 1 |
| Port protocols | PC-protocols FTP Telnet |
| Features | |
| Data transfer rate | 100 MB |
| System integration | Cannot be used for system protocols, only for local programming |

Table. 9.1.1.2 - 93. Rear panel system communication port A.

| | |
|--------------------|---|
| Port | |
| Port media | Copper Ethernet RJ-45 |
| Number of ports | 1 |
| Features | |
| Port protocols | IEC 61850 IEC 104 Modbus/TCP DNP3 FTP Telnet |
| Data transfer rate | 100 MB |
| System integration | Can be used for system protocols and for local programming |

Table. 9.1.1.2 - 94. Rear panel system communication port B.

| | |
|--------------------|---|
| Port | |
| Port media | Copper RS-485 |
| Number of ports | 1 |
| Features | |
| Port protocols | Modbus/RTU IEC 103 IEC 101 DNP3 SPA |
| Data transfer rate | 65 580 kB/s |
| System integration | Can be used for system protocols |

9.1.1.3 CPU digital inputs

Table. 9.1.1.3 - 95. CPU model-isolated digital inputs, with thresholds defined by order code.

| | |
|-------------------------|--|
| Rated values | |
| Rated auxiliary voltage | 265 V (AC/DC) |
| Nominal voltage | Order code defined: 24, 110, 220 V (AC/DC) |

| | |
|---|--|
| Pick-up threshold Release threshold | Order code defined: 19, 90, 170 V Order code defined: 14, 65, 132 V |
| Scanning rate | 5 ms |
| Settings | |
| Pick-up delay | Software settable: 0...1800 s |
| Polarity | Software settable: Normally On/Normally Off |
| Current drain | 2 mA |
| Terminal block connection | |
| Terminal block | Phoenix Contact MSTB 2,5/5-ST-5,08 |
| Solid or stranded wire Maximum wire diameter | 2.5 mm ² |

9.1.1.4 CPU digital outputs

Table. 9.1.1.4 - 96. Digital outputs (Normally Open)

| | |
|--|---|
| Rated values | |
| Rated auxiliary voltage | 265 V (AC/DC) |
| Continuous carry | 5 A |
| Make and carry 0.5 s Make and carry 3 s | 30 A 15 A |
| Breaking capacity, DC (L/R = 40 ms) at 48 VDC at 110 VDC at 220 VDC | 1 A 0.4 A 0.2 A |
| Control rate | 5 ms |
| Settings | |
| Polarity | Software settable: Normally On/Normally Off |
| Terminal block connection | |
| Terminal block | Phoenix Contact MSTB 2,5/5-ST-5,08 |
| Solid or stranded wire Maximum wire diameter | 2.5 mm ² |

Table. 9.1.1.4 - 97. Digital outputs (Change-Over)

| | |
|--|---|
| Rated values | |
| Rated auxiliary voltage | 265 V (AC/DC) |
| Continuous carry | 5 A |
| Make and carry 0.5 s Make and carry 3 s | 30 A 15 A |
| Breaking capacity, DC (L/R = 40 ms) at 48 VDC at 110 VDC at 220 VDC | 1 A 0.4 A 0.2 A |
| Control rate | 5 ms |
| Settings | |
| Polarity | Software settable: Normally On/Normally Off |

| Terminal block connection | |
|---|------------------------------------|
| Terminal block | Phoenix Contact MSTB 2,5/5-ST-5,08 |
| Solid or stranded wire Maximum wire diameter | 2.5 mm ² |

9.1.2 Option cards

9.1.2.1 Digital input module

Table. 9.1.2.1 - 98. Technical data for the digital input module.

| Rated values | |
|---|--|
| Rated auxiliary voltage | 5...265 V (AC/DC) |
| Current drain | 2 mA |
| Scanning rate Activation/release delay | 5 ms 5...11 ms |
| Settings | |
| Pick-up threshold Release threshold | Software settable: 16...200 V, setting step 1 V Software settable: 10...200 V, setting step 1 V |
| Pick-up delay | Software settable: 0...1800 s |
| Drop-off delay | Software settable: 0...1800 s |
| Polarity | Software settable: Normally On/Normally Off |
| Terminal block connection | |
| Terminal block | Phoenix Contact MSTB 2,5/5-ST-5,08 |
| Solid or stranded wire Maximum wire diameter | 2.5 mm ² |

9.1.2.2 Digital output module

Table. 9.1.2.2 - 99. Technical data for the digital output module.

| Rated values | |
|--|---|
| Rated auxiliary voltage | 265 V (AC/DC) |
| Continuous carry | 5 A |
| Make and carry 0.5 s Make and carry 3 s | 30 A 15 A |
| Breaking capacity, DC (L/R = 40 ms) at 48 VDC at 110 VDC at 220 VDC | 1 A 0.4 A 0.2 A |
| Control rate | 5 ms |
| Settings | |
| Polarity | Software settable: Normally On/Normally Off |
| Terminal block connection | |
| Terminal block | Phoenix Contact MSTB 2,5/5-ST-5,08 |
| Solid or stranded wire Maximum wire diameter | 2.5 mm ² |

9.1.2.3 RTD input module

Table. 9.1.2.3 - 100. Technical data for the RTD input module.

| |
|-----------------|
| Channels 1-8 |
| 2/3/4-wire RTD |
| Pt100 or Pt1000 |

9.1.2.4 RS-232 & serial fiber communication module

Table. 9.1.2.4 - 101. Technical data for the RS-232 & serial fiber communication module.

| |
|----------------------------|
| Ports |
| RS-232 |
| Serial fiber (GG/PP/GP/PG) |
| Serial port wavelength |
| 660 nm |
| Cable type |
| 1 mm plastic fiber |

9.1.2.5 Double LC 100 Mbps Ethernet communication module

Table. 9.1.2.5 - 102. Technical data for the double LC 100 Mbps Ethernet communication module.

| | |
|--------------------------|--|
| Protocols | |
| Protocols | HSR and PRP |
| Ports | |
| Quantity of fiber ports | 2 |
| Communication port C & D | LC fiber connector Wavelength 1300 nm |
| Fiber cable | 50/125 µm or 62.5/125 µm multimode (glass) |

9.1.2.6 Double ST 100 Mbps Ethernet communication module

Table. 9.1.2.6 - 103. Technical data for the double ST 100 Mbps Ethernet communication module.

| | |
|------------------------|--|
| General information | |
| Ports | ST connectors (2) and IRIG-B connector (1) |
| Protocols | |
| Protocols | IEC61850, DNP/TCP, Modbus/TCP, IEC104 & FTP |
| ST connectors | |
| Connector type | Duplex ST connectors 62.5/125 µm or 50/125 µm multimode fiber 100BASE-FX |
| Transmitter wavelength | 1260...1360 nm (nominal: 1310 nm) |
| Receiver wavelength | 1100...1600 nm |
| Maximum distance | 2 km |

| IRIG-B Connector | |
|------------------|---|
| Connector type | Phoenix Contact MC 1,5/ 2-ST-3,5 BD:1-2 |

9.1.3 Display

Table. 9.1.3 - 104. Technical data for the HMI TFT display.

| Dimensions and resolution | |
|---------------------------|------------------------------------|
| Number of dots/resolution | 800 x 480 |
| Size | 154.08 × 85.92 mm (6.06 × 3.38 in) |
| Display | |
| Type of display | TFT |
| Color | RGB color |

9.2 Functions

9.2.1 Control functions

9.2.1.1 Setting group selection

Table. 9.2.1.1 - 105. Technical data for the setting group selection function.

| Settings and control modes | |
|----------------------------|--|
| Setting groups | 8 independent, control-prioritized setting groups |
| Control scale | Common for all installed functions which support setting groups |
| Control mode | |
| Local | Any digital signal available in the device |
| Remote | Force change overrule of local controls either from the setting tool, HMI or SCADA |
| Operation time | |
| Reaction time | <5 ms from receiving the control signal |

9.2.1.2 Object control and monitoring

Table. 9.2.1.2 - 106. Technical data for the object control and monitoring function.

| Signals | |
|---|---|
| Input signals | Digital inputs Software signals |
| Output signals | Close command output Open command output |
| Operation time | |
| Breaker traverse time setting | 0.02...500.00 s, setting step 0.02 s |
| Max. close/open command pulse length | 0.02...500.00 s, setting step 0.02 s |
| Control termination time out setting | 0.02...500.00 s, setting step 0.02 s |
| Inaccuracy: - Definite time operating time | ±0.5 % or ±10 ms |
| Breaker control operation time | |

| | |
|--------------------------------------|--|
| External object control time | <75 ms |
| Object control during auto-reclosing | See the technical sheet for the auto-reclosing function. |

9.2.2 Monitoring functions

9.3 Tests and environmental

Electrical environment compatibility

Table. 9.3 - 107. Disturbance tests.

| | |
|--|--|
| All tests | CE-approved and tested according to EN 60255-26 |
| Emissions | |
| Conducted emissions: EN 60255-26 Ch. 5.2, CISPR 22 | 150 kHz...30 MHz |
| Radiated emissions: EN 60255-26 Ch. 5.1, CISPR 11 | 30...1 000 MHz |
| Immunity | |
| Electrostatic discharge (ESD): EN 60255-26, IEC 61000-4-2 | Air discharge 15 kV Contact discharge 8 kV |
| Electrical fast transients (EFT): EN 60255-26, IEC 61000-4-4 | Power supply input 4 kV, 5/50 ns, 5 kHz Other inputs and outputs 4 kV, 5/50 ns, 5 kHz |
| Surge: EN 60255-26, IEC 61000-4-5 | Between wires: 2 kV, 1.2/50 μ s Between wire and earth: 4 kV, 1.2/50 μ s |
| Radiated RF electromagnetic field: EN 60255-26, IEC 61000-4-3 | f = 80...1 000 MHz, 10 V/m |
| Conducted RF field: EN 60255-26, IEC 61000-4-6 | f = 150 kHz...80 MHz, 10 V (RMS) |

Table. 9.3 - 108. Voltage tests.

| | |
|--------------------------------------|-----------------------------|
| Dielectric voltage test | |
| EN 60255-27, IEC 60255-5, EN 60255-1 | 2 kV, 50 Hz, 1 min |
| Impulse voltage test | |
| EN 60255-27, IEC 60255-5 | 5 kV, 1.2/50 μ s, 0.5 J |

Physical environment compatibility

Table. 9.3 - 109. Mechanical tests.

| | |
|---|---|
| Vibration test | |
| EN 60255-1, EN 60255-27, IEC 60255-21-1 | 2...13.2 Hz, \pm 3.5 mm 13.2...100 Hz, \pm 1.0 g |
| Shock and bump test | |

| | |
|---|------------------------|
| EN 60255-1, EN 60255-27, IEC 60255-21-2 | 20 g, 1 000 bumps/dir. |
|---|------------------------|

Table. 9.3 - 110. Environmental tests.

| | |
|----------------------------|--|
| Damp heat (cyclic) | |
| EN 60255-1, IEC 60068-2-30 | Operational: +25...+55 °C, 93...97 % (RH), 12+12h |
| Dry heat | |
| EN 60255-1, IEC 60068-2-2 | Storage: +70 °C, 16 h Operational: +55 °C, 16 h |
| Cold test | |
| EN 60255-1, IEC 60068-2-1 | Storage: -40 °C, 16 h Operational: -20 °C, 16 h |

Table. 9.3 - 111. Environmental conditions.

| | |
|---|-----------------------------|
| IP classes | |
| Casing protection class | IP54 (front) IP21 (rear) |
| Temperature ranges | |
| Ambient service temperature range | -35...+70 °C |
| Transport and storage temperature range | -40...+70 °C |
| Other | |
| Altitude | <2000 m |
| Overvoltage category | III |
| Pollution degree | 2 |

Casing and package

Table. 9.3 - 112. Dimensions and weight.

| | |
|-------------------------|--|
| Without packaging (net) | |
| Dimensions | Height: 208 mm Width: 257 mm (½ rack) Depth: 165 mm (no cards or connectors) |
| Weight | 1.5 kg |
| With packaging (gross) | |
| Dimensions | Height: 250 mm Width: 343 mm Depth: 256 mm |
| Weight | 2.0 kg |

10 Ordering information

| | AQ - S 2 5 4 A - P X 8 A A X A - X X X X X X X X X X X X X X X X |
|---|--|
| Model | |
| S Alarm and indication IED | |
| Device size | |
| 5 1/2 of 19" rack | |
| Analog measurement | |
| 4 No analog measurements | |
| Functionality package | |
| A Standard | |
| Mounting | |
| P Panel mounting | |
| Auxiliary voltage | |
| H 80...265 VAC/DC | |
| L 18...72 VDC | |
| Measurement accuracy | |
| 8 N/A | |
| Terminals | |
| A Standard | |
| Reserved for future use | |
| A N/A | |
| Digital inputs on power supply module | |
| A 3 Digital inputs, 24 V nominal threshold | |
| B 3 Digital inputs, 110 V nominal threshold | |
| C 3 Digital inputs, 220 V nominal threshold | |
| Reserved for future use | |
| A N/A | |
| Slots A, B, C, D, E, F, G, H, I, J, K, L, M, N (14 pcs) | |
| A Empty | |
| B 8 Digital inputs | |
| C 5 Output relays **** | |
| F 2 x mA input - 8 x RTD input ** | |
| G 2 x RJ-45 100Mb Ethernet & IRI-G-B */*** | |
| H 2 x ST 100Mb Ethernet & IRI-G-B */*** | |
| J Double LC 100Mb Ethernet (HSR, PRP redundant protocols) */*** | |
| K Double RJ45 100Mb Ethernet (HSR, PRP redundant protocols) * | |
| L RS-232 - Serial fiber (Plastic-Plastic) */*** | |
| M RS-232 - Serial fiber (Plastic-Glass) */*** | |
| N RS-232 - Serial fiber (Glass-Plastic) */*** | |
| O RS-232 - Serial fiber (Glass-Glass) */*** | |

* One card at most per IED
 ** Two cards at most per IED
 *** Can only be applied to the last slot
 **** Six cards at most per IED

Accessories

| Order code | Description | Note | Manufacturer |
|---------------|--|-----------------------------------|-------------------|
| ADAM-4015-CE | External 6-channel 2 or 3 wires RTD Input module, pre-configured | Requires an external power module | Advanced Co. Ltd. |
| ADAM-4018+-BE | External 8-ch Thermocouple mA Input module, pre-configured | Requires an external power module | Advanced Co. Ltd. |
| AQX121 | Raising frame 120mm | | Arcteq Ltd. |
| AQX122 | Raising frame 40mm | | Arcteq Ltd. |
| AQX098 | Wall mounting bracket | | Arcteq Ltd. |

11 Contact and reference information

Manufacturer

Arcmaq Relays Ltd.

Visiting and postal address

Kvartsikatu 2 A 1

65300 Vaasa, Finland

Contacts

| | |
|--------------------|--|
| Phone: | +358 10 3221 370 |
| Website: | arcteq.fi |
| Technical support: | support.arcteq.fi |
| | +358 10 3221 388 (EET 9:00 – 17.00) |
| E-mail (sales): | sales@arcteq.fi |